

Pocket PC Phone Edition

PS05

SMART PDA PHONE

Quick Start Guide

 


Getting to know your P505

Front features (flip closed)



Rear features

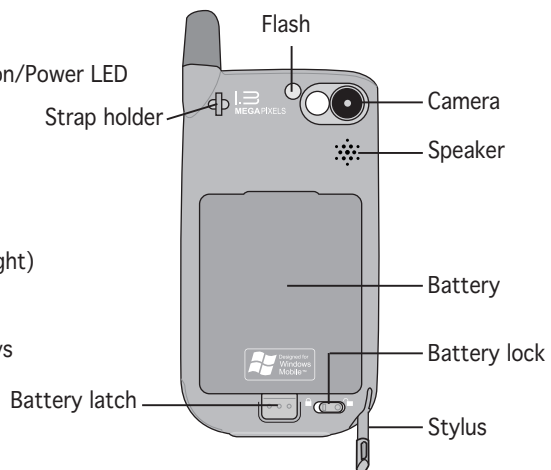

Bottom features



 
Right side features




Front features (flip open)



Top features

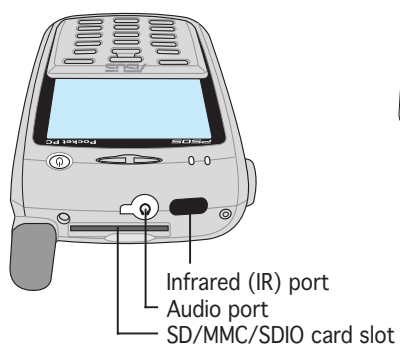


Left side features

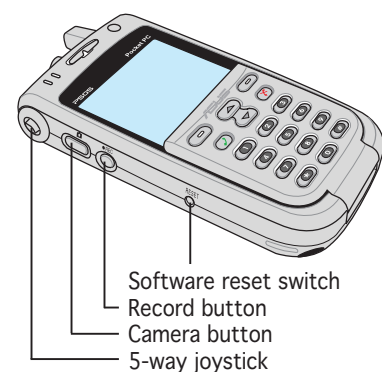 


Initial installation and setup

 
Installing the SIM card and battery

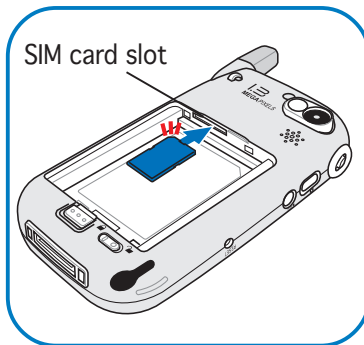

 1 Locate the SIM card slot, then insert the SIM card with its nicked corner on top and its contacts face down.

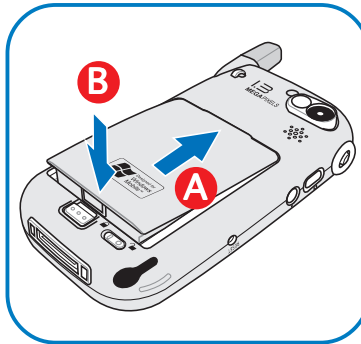

2 Install the battery by sliding it to the compartment (A), then press (B) to keep it in place.

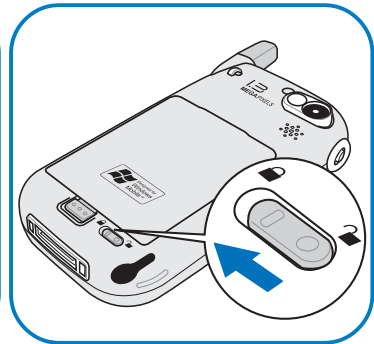

3 Use the stylus to move the battery lock to the left to secure the battery.

Charging the device battery

Using the AC adapter


1 Connect the AC adapter plug to the DC/USB cable plug.

2 (A) **With the cradle:** Connect the DC/USB cable plug to the system connector at the back of the cradle. The cradle base lights up blue when the device battery is charging.

You can charge a spare battery to the battery charger slot on the cradle. The cradle base lights up orange until the spare battery is fully charged.

(B) **Without the cradle:** Connect the DC/USB cable plug to the system connector at the bottom of the device.

3 Connect the AC power plug to a grounded wall socket.

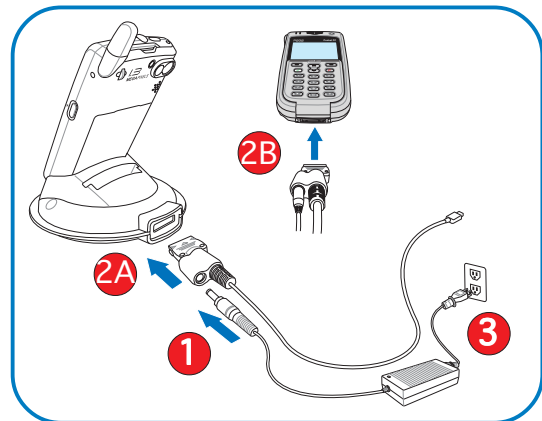

- The Power button LED lights up amber when the battery is charging and turns green when the battery is fully-charged. Initial charging takes four hours. It is strongly recommended that you fully charge the device before use.

Using the USB plug

1 Connect the DC/USB cable plug to the system connector at the bottom of the device.

2 Connect the USB plug of the DC/USB cable to an available USB port on your computer or notebook.

NOTE

 
If you charge the device battery using a notebook USB port, make sure that the notebook is connected to an AC power source.




Getting started

Activating and calibrating the device

Press the power button to turn on the device, then open the flip. The first time you start or reset the device, the screen prompts you to re-calibrate and set the local time zone. Follow onscreen instructions to proceed.

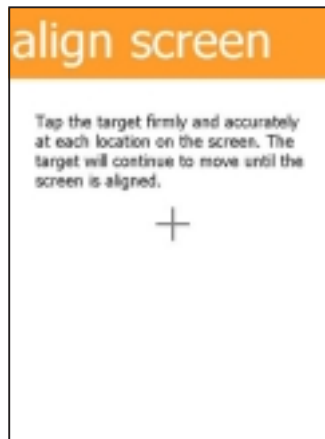


Aligning the screen

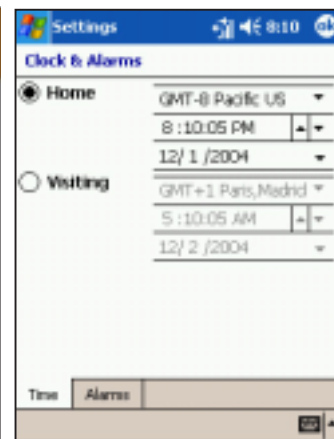 


Setting the local time zone

Today screen

The **Today** screen lets you see at a glance the summary of the important information for the day. The screen appears when you turn on your device and open the phone flip for the first time each day. Tap any of the listed items with the stylus to display the details.

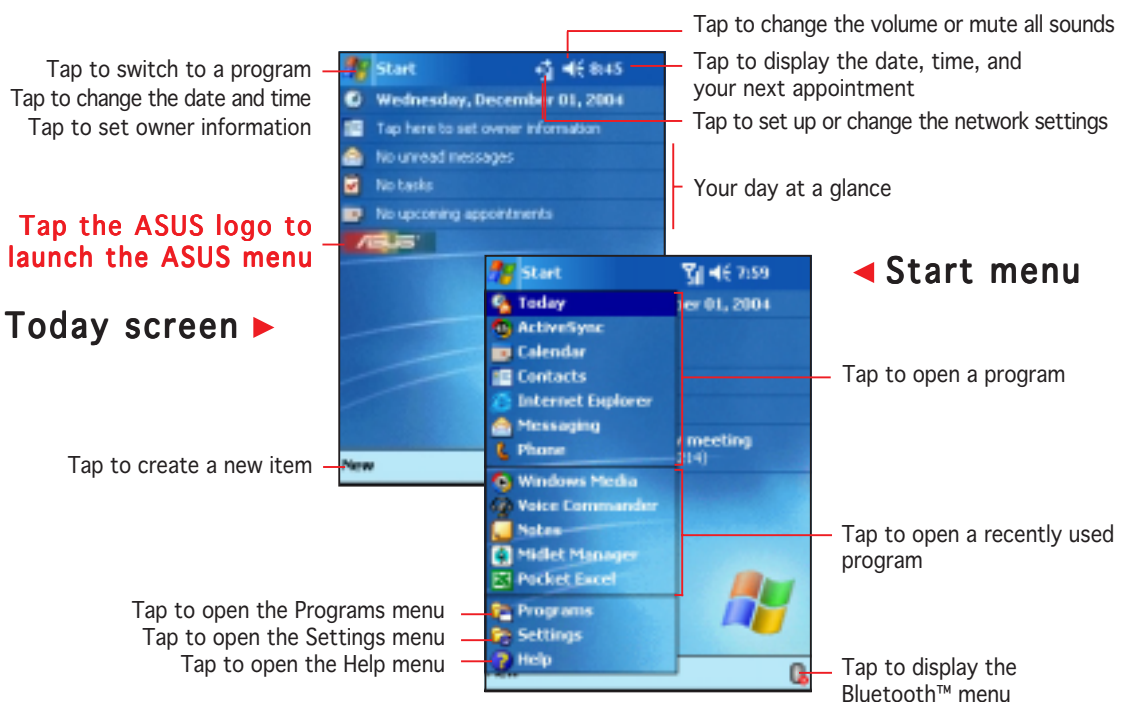


Start menu

The Start menu allows you to select programs, settings, and Help topics. Tap  from the top left corner of the screen to display the Start menu.

ASUS menu

The ASUS menu provides quick access to commonly used PDA and mobile phone applications. When the flip is open, you can launch the ASUS menu by tapping the **ASUS** logo in the Today screen. The ASUS menu in phone mode is designed for easy one-hand use.

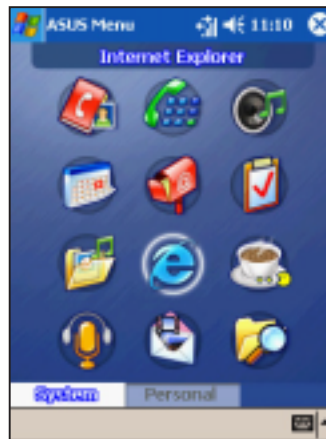

▲ Phone mode

◀ PDA mode

NOTE

- Refer to the user guide for details on how to enable, select and change icons, and launch applications in the ASUS menu.
- When the ASUS menu is in phone mode, the LCD touch screen is disabled. You can use the LCD touch screen by opening the flip to access the selected menu or application in PDA mode.

Entering information

 
Use any one of the following ways to enter information on your device.

- **Typing** Tap the arrow on the lower right corner of the screen, select Keyboard.
- **Writing** Tap the Pen button on the command bar, use the stylus to write.
- **Drawing** Tap the Pen button on the command bar, use the stylus to draw.
- **Recording** Press the Record button on the side of the device, or tap the Record button on the recording toolbar.

Typing




Writing

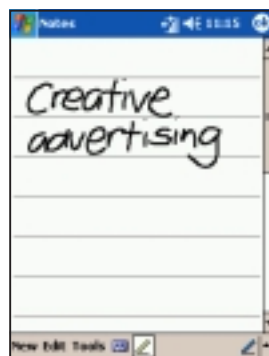

Drawing



 Recording

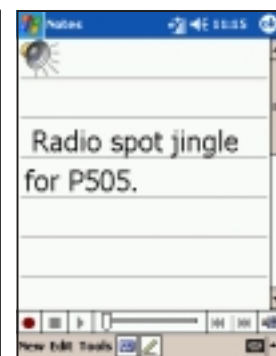



NOTE

 
Refer to the user guide for detailed instructions on entering information on your device.

Making a call

 
When the flip is close (Phone mode)


NOTE If you opened an application before you close the flip, you may have to press  (Home) before you make a call.

1 Enter the number of the party you wish to call, then press .

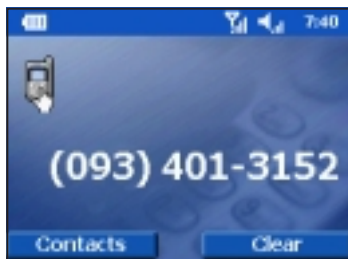

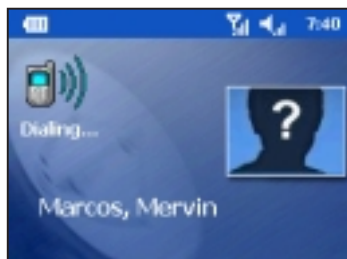

2 Talk to the called party when connected.




3 Press  anytime to end the call.

 


NOTE


- The screen displays the contact name and the photo of the person you are calling if you have saved their number and attached a photo for him/her in Contacts or in the SIM.
- During the call, long press  or press  (Options), then select **Speaker on** from the menu to switch to speaker phone mode.

When the flip is open (PDA mode)


1 Tap , then tap **Phone**. Tap the number of the party you wish to call, then tap **Talk**.

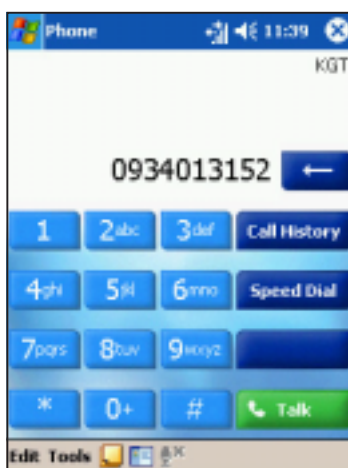

 2 Talk to the called party when connected.

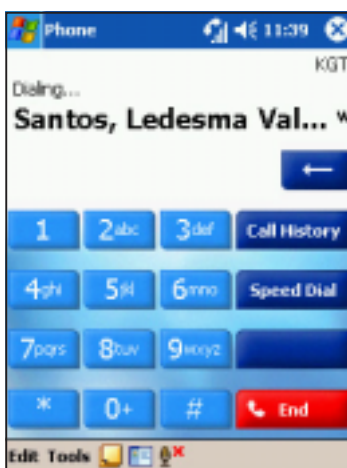


3 Tap **End** to terminate the call.

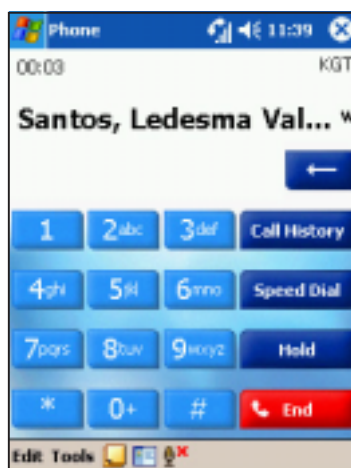 

Changing basic phone settings

- Changing and activating the SIM card security Personal Identification Number (PIN)

 
1 In the Phone screen, tap **Tools**, then select **Options**.

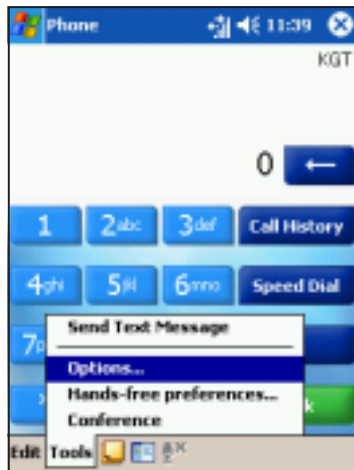

2 Check the option **Require PIN when phone is used**, then tap **Change PIN**.



 
3 Key-in the default PIN, then press **Enter**. When prompted, key-in the new PIN, then press **Enter**.

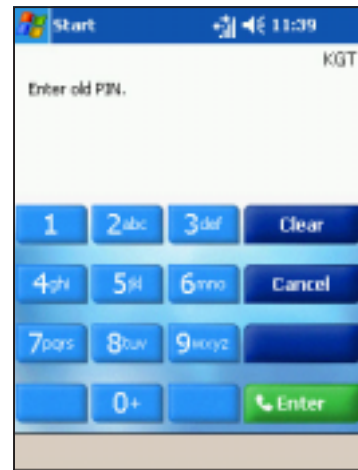


NOTE The default SIM card security PIN is printed in the SIM package.


- Changing the ring type and ring tone

 1 In the Phone screen, tap **Tools**, then select **Options**.

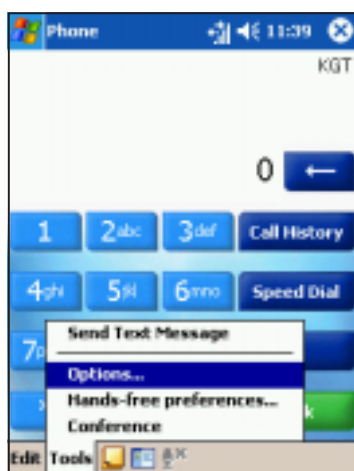

 2 In the **Ring Type** option, tap the down arrow button, then select a ring type from the menu.

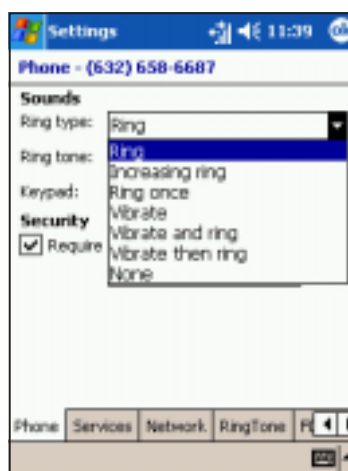

3 In the **Ring Tone** option, tap the down arrow button, then select a ring tone from the menu. Tap  when finished.



NOTE You can also access the phone settings from the Today screen. Tap **Start**, **Settings**, then tap the Phone icon to view the phone settings screen.

• Adjusting the volume in phone mode

 
System (device) volume

1. When the phone is in idle mode, press the 5-way joystick forward or backward to open the **System Volume** screen.
2. Press the 5-way joystick backward to decrease the system (device) volume. Press forward to increase. Refer to the 5-way joystick direction below.
3. Press the 5-way joystick to return to the previous phone menu.



Ring volume


1. When the phone is in idle mode, press the center button of the 5-way joystick for two seconds to open the **Ring Volume** screen.
2. Press the 5-way joystick backward to decrease the ring volume. Press forward to increase. Refer to the 5-way joystick direction below.
3. Press the 5-way joystick to return to the previous phone menu.

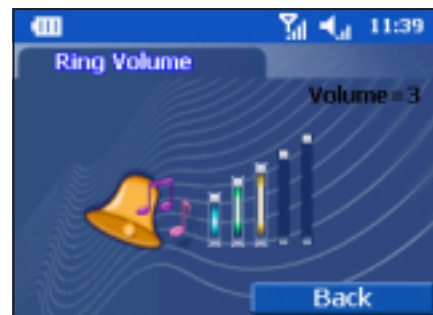

NOTE You can only adjust the system and ring volumes when the phone is not in use for an incoming or outgoing call.


In Call volume

 1. After getting connected to the other party during an incoming or outgoing call, press the 5-way joystick to open the **In Call Volume** screen.
2. Press the 5-way joystick backward to decrease the in call volume. Press forward to increase. Refer to the 5-way joystick direction below.
3. Press the 5-way joystick to return to the previous phone menu.

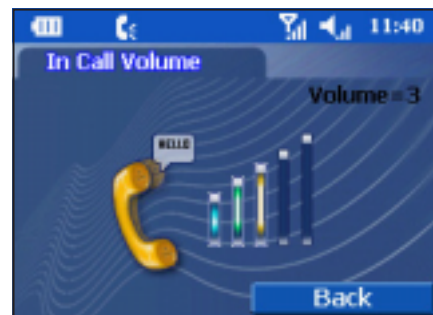



 NOTE You can only adjust the in call volume while you are talking to another party on the line.

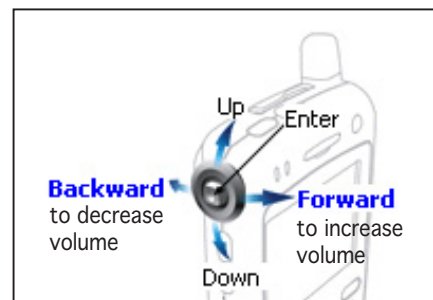5-way joystick direction





- **Locking the phone keypad and side keys**

Put the phone in idle mode, press , then press .



- **Unlocking the phone keypad and side keys**


Press , then press .



Changing the wake-up source

 
The device automatically wakes-up from sleep depending on the wake-up source you selected (i.e. pressing the side keys, application buttons, etc.) To save battery power, it is recommended that you select "Flip Open" as the device wake-up source.


To change the wake-up source:


1 In the Today screen, tap , then tap **Settings**.



2 Tap the **Wakeup Source** icon.

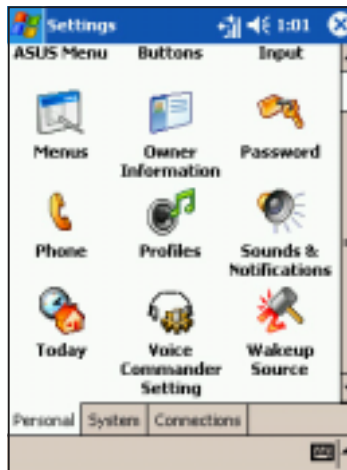

 3 Tap the box before a wake-up source to select, then tap .

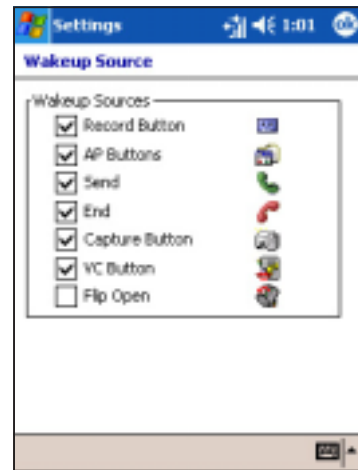


Using the camera



In PDA mode

1 Press the camera button to launch the P505 camera. Press up/down the 5-way joystick to zoom in/out your subject, then press the 5-way joystick to start/stop the capture.



2 During preview, press the camera button or tap  to select from six capture modes: Single Shot, MMS, Burst, Composition, Video, and Caller ID.




3 Tap  to select from nine themes: Auto, Sunlight, Fluorescent, Candle, Face, Landscape, Sepia, Night Scene, and Negative Art. Tap  to change the preview orientation.




NOTE Refer to the user guide for detailed camera features and functions.

In phone mode

1 Press the camera button to launch the P505 camera. Press up/down the 5-way joystick or the  to zoom in/out your subject, then press the 5-way joystick to capture the image. For video capture, press the 5-way joystick again to stop video recording.

2 During preview, press the camera button to select from six capture modes: Single Shot, MMS, Burst, Composition, Video, and Caller ID.

3 Press the record button to turn on or off the flash.

4 Press the Voice Commander button to select from nine themes: Auto, Sunlight, Fluorescent, Candle, Face, Landscape, Sepia, Night Scene, and Negative Art. Tap  to change the preview orientation.



Synchronizing your P505


Use the P505 Companion CD to install the Microsoft® ActiveSync® on your desktop computer. ActiveSync® is already installed on your device.

NOTE Do not connect your device to your computer until you have installed ActiveSync®.

Using the cradle

1 Place the device on the cradle, then connect the DC/USB cable plug to the system connector at the back of the cradle.


2 Connect the USB plug of the DC/USB cable to a USB port on your computer.

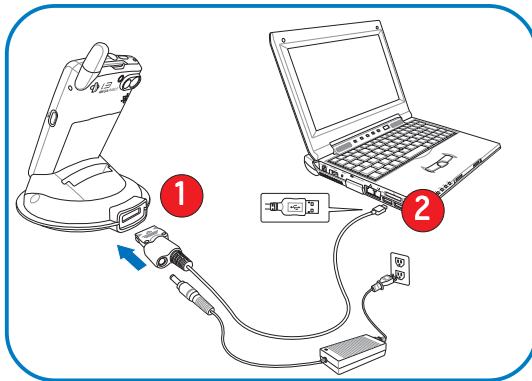

Without the cradle

1 Connect the DC/USB cable plug to the system connector at the bottom of the device.

2 Connect the USB plug of the DC/USB cable to an available USB port on your computer.

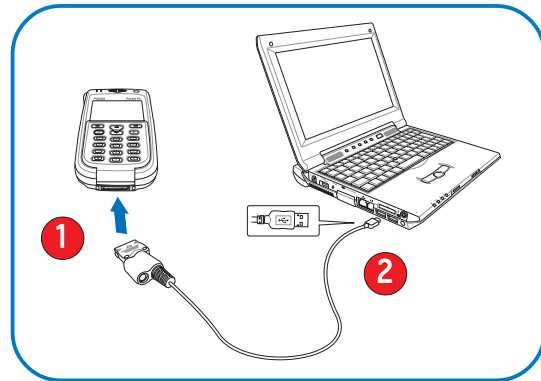


NOTE During synchronization, the battery is charged through the AC adapter (if you connected the AC adapter plug to the DC/USB cable plug) or through the USB port.

Synchronization status


Upon connection, your device is automatically synchronized with your computer.

▼ Synchronization status on P505

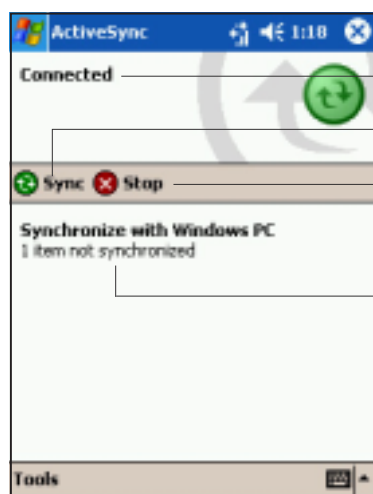


Tap to synchronize via IR or change synchronization settings

▼ Synchronization status on your computer

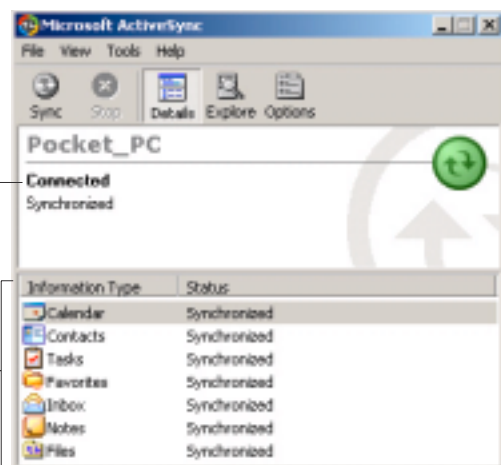


Copying SIM contacts to P505 Contacts

With **SIM Manager**, you can copy contact information from your SIM to the device Contacts and vice-versa. To copy a contact from the SIM to the device Contacts:

1 Tap , **Programs**, then tap the **SIM Manager** icon.



2 Tap the box before the SIM contact(s) you want to copy. To copy all SIM contacts, tap and hold the SIM Contacts section, then tap **Select All SIM Contacts** from the menu.

3 Tap . If you selected all SIM Contacts, tap and hold anywhere in SIM Contacts section, then tap **Copy All SIM Contacts** from the menu.

4 The screen displays the selected contact(s) to copy. Tap **Copy**.

5 A **Copy Done** window appears to indicate that you have successfully copied the SIM contact(s) to the device Contacts.

Tap  to close the window.

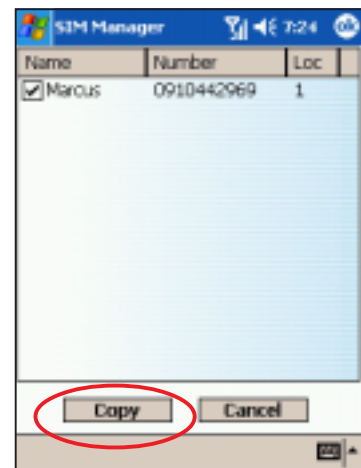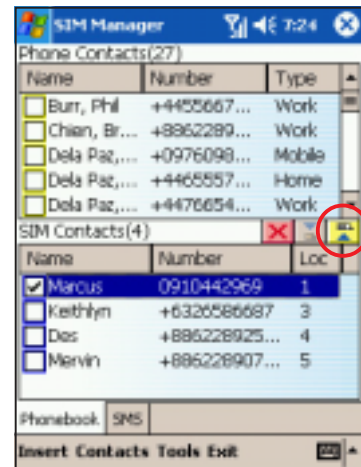

Reference information

Refer to the following sources of additional information for your P505.

Operation Online Help

P505 Smart PDA Phone User Guide
Windows® Pocket PC Help (*on your device*)
ActiveSync® Help (*on your computer*)

Web sites and technical support

Technical support Support fax Support e-mail Web site Software download Pocket PC web site

+886-2-2894-3447 ext. 7122
+886-2-2890-7698
tsd@asus.com.tw
www.asus.com.tw
download.asus.com.tw
www.microsoft.com/mobile/pocketpc