

BENQ-SIEMENS

S68



Issued by
BenQ Mobile GmbH & Co. OHG
Haidenauplatz 1
D-81667 Munich

© BenQ Mobile GmbH & Co. OHG 2005
All rights reserved. Subject to availability.
Rights of modification reserved.
Manufactured by BenQ Mobile GmbH & Co. OHG
under trademark license of Siemens AG

www.BenQ-Siemens.com/s68

| | | | |
|-----------------------------------|----|-----------------------------------|----|
| Safety precautions | 2 | Alarm clock | 29 |
| Phone overview | 5 | Ringtones | 29 |
| Display symbols | 7 | Extras | 29 |
| Getting started | 8 | My stuff | 31 |
| Switching on/off, PIN entry | 9 | Mobile Phone Manager | 32 |
| General instructions | 10 | Customer Care | 33 |
| Security | 11 | Care and maintenance | 34 |
| Calling | 13 | Product data | 35 |
| Phonebook | 14 | Guarantee certificate (UK) | 36 |
| Call records | 16 | Guarantee certificate (IRL) | 37 |
| Voice mailbox | 16 | SAR | 38 |
| Messages | 17 | License Agreement | 39 |
| Internet | 21 | Menu tree | 42 |
| Settings | 23 | Index | 47 |
| Organiser | 28 | | |

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. Whilst using the mobile phone, hold it to the ear furthest away from the pacemaker. For more information consult your doctor.



Tones, music and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Only use original batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Small parts such as the SIM card, dust cap, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheellie bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for re-use and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council, waste disposal service or the shop where you purchased the product.

Use only original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.



Permanent hearing loss may occur if you use ear- or headphones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. Set your volume to a safe level. If you experience ringing in your ears, reduce the volume or discontinue use of your system.

Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.

As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **2.0 cm** is required.



Bluetooth®

Your phone has a Bluetooth interface. This makes it possible to establish a wireless connection of your phone with a headset of a car kit, or with other Bluetooth-enabled devices.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves one time by using a password/PIN. To ensure sufficient security, you should choose a 16-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).
- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimize security risks.
- You should restrict the "visibility" of your phone if possible. This will make it much more difficult for unknown devices to establish a connection with your phone. To do this, in the Bluetooth menu, set the option **Visib.to others** of **Always visible** to **Not visible**.
- The name of your phone is transmitted in a Bluetooth connection. The factory default is the "Bluetooth ID". The first time Bluetooth is activated, or later in the Bluetooth menu, you can change this name (**My BT name**).
- If Bluetooth is not needed, this function should be deactivated.

Before using Bluetooth accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

Phone overview

① Call key

- Dial the number/name displayed/entered, accept calls.
- In standby mode, press to open the Call log lists.


② On/Off/End key


- Press and **hold** to switch on (when switched off).
- During a conversation or in an application: press **briefly** to finish.
- In menus: Press and **hold** to go back to standby mode.
- In standby mode, press and **hold** to switch off, press **briefly**: switch-off menu.

③ **Navi ring**

- In standby mode:

 Open the phonebook (page 14).

 Open profiles (page 23).

 Open the Inbox (page 19).

 Create new SMS (page 17).

- In lists, messages and menus:

 Scroll up and down.

 
 Scroll left and right.

④ Centre key


- Press the centre key to open the main menu or to start an application or function (page 10).


⑤ **Softkeys**

The current functions of these keys are shown in the bottom line of the display as **Text** / symbol.

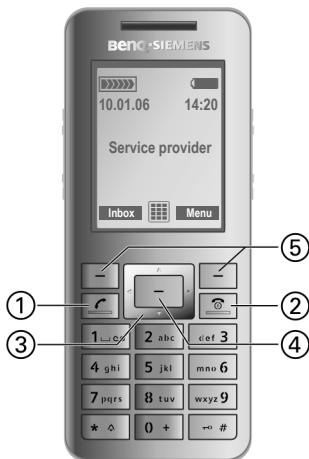


Pressing any key activates the display illumination.

 - ① **Earpiece/Loudspeaker**
- ② **Double loudspeaker** on both sides of the phone
- ③ **Dictating machine**
Start the dictating machine to record a short memo or call (page 28).
- ④ **Fast dialling key**
Dial number assigned as Fast dialling (Assignment: page 25).
- ⑤ **+ / - Volume control**
- ⑥ **Display**
- ⑦ **Ringtone** 
 - In standby mode, press and **hold** to switch ringtones and keytones on/off (e.g. alarm is still active). Vibration is activated automatically.
 - On incoming call, press and **hold** to switch off ringtone for this call.





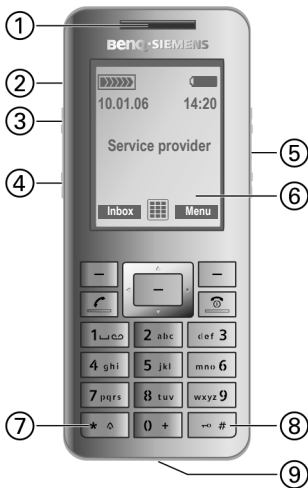










 





- ⑧ **Key lock** 

 In standby mode, press and **hold** to switch key lock on/off.
Only emergency numbers can be dialled.
- ⑨ **Connection socket**
For charger, headset and other accessories.






Display symbols





 

Display symbols (selection)

-  Signal strength
-  Charging
-  Battery charge level, e.g. 50%
-  Phonebook
-  Messages
-  Internet
-  Games
-  Voice mailbox
-  Call records
-  Alarm clock
-  Organiser
-  Extras
-  Ringtones
-  Settings
-  My stuff
-  All calls are diverted
-  Ringtone off
-  Alarm set
-  Keypad locked
-  Activated and available
-  Bluetooth activated

Events (selection)

-  SMS memory full
-  No network access
-  Phone memory full

Message symbols (selection)


-  Unread
-  Read
-  Sent
-  MMS with DRM content (page 11)
-  MMS notification received
-  Voice mail received

Getting started

Your phone's display is supplied with a protective film. Remove this film carefully before using the phone.


Inserting the SIM card

 The service provider supplies you with a SIM card on which all data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

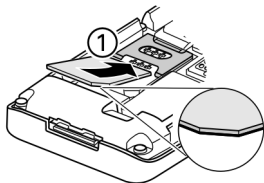


- Place the SIM card in front of the slot with the contact surface facing downwards. Then press the SIM card slightly to push it in ① (ensure that the chamfered corner is in the correct position).

 Inserting the battery

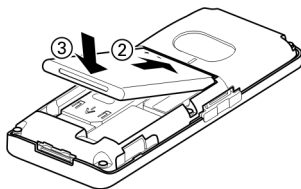

 - Insert the battery into the phone ②, press it downwards ③ until it engages.
- To remove, lift the battery up and out.

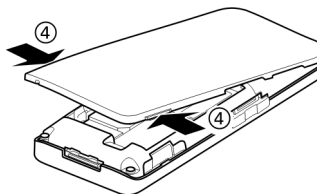


- After inserting SIM card and battery close the battery cover.
- To remove, take hold of the cover at the small dents ④ on either side of the phone and lift the cover up. Do not use the acoustics slots for opening the cover.

Please switch off your phone before removing the battery!

Charging the battery



The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a power socket and charge for at least **two hours**.

Display during charging: 

Charging time

An empty battery is fully charged after about 2 hours. The mains voltage specified on the power supply unit must not be exceeded. Charging is only possible within a temperature of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this range, the charge symbol flashes a warning.

Only use the plug-in power supply unit included in the box!

Operating temperature

The phone may slightly heat up during operation, especially during data transfer. This is normal and not dangerous!

Switching on/off, PIN entry

Switching on/off



Press and **hold** key.

Entering PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. Asterisks are displayed to ensure nobody can read your PIN. Correct with **⌫**.



Press to confirm. Logging on to the network will take a few seconds.

Emergency number (SOS)

Only to be used in real emergencies!


By pressing **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the time/date once.



Confirm. Press  again to start entry.



Enter the date (day/month/year) and time (24 hours).



Confirm. The time and date are updated.

Time zones



Select the desired time zone.



Select the city in the desired time zone.



Confirm.

General instructions

User guide

The following symbols are used to explain operation:



Enter numbers or letters.

Options

Displays a softkey option.



Press the centre key.



Press navi ring in the direction indicated.



Function dependent on service provider, may require special registration.

Main menu



Call up main menu from standby mode.



Select application symbol.



Press to start application.

Accessing menus

The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to switch on/off **Big letters** on the display:





This comprises the following steps:




Open the main menu.




Select  to open **Settings** menu. Confirm with .



Select **Display** function and confirm with .



Select **Big letters** function and change/toggle with .

Centre key

The symbol in the centre of the lower display line shows the current function when pressing centre key.



Main menu



Send



OK, confirm



View



Change



Save



Call



Play



Edit



Record



Insert



Pause



Options



Stop

Tabs

Tabs allow fast access to information and applications



Switch between the individual tabs.

If an input field is activated on a tab, it is only possible to navigate within the field using the navigation key.

Mark mode

You can mark several entries on the tab in order to perform multiple functions at once.

Options Open menu and select **Mark** to activate mark mode.



Select entry/entries.



Mark or remove mark.

Additional marking functions:

Options Open menu.

| | |
|----------------------|----------------------------|
| Mark all | Mark all entries. |
| Unmark all | Unmark all marked entries. |
| Delete marked | Delete marked entries. |

Digital Rights Management (DRM)

The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g., copy protection, use for a limited period of time only, number of times it can be used etc.

Security

The phone and SIM card are protected against misuse by security codes.

Keep these security codes in a safe place where you can access them again if required.

PIN codes

| | |
|---------------------|--|
| PIN | Protects your SIM card (personal identification number). |
| PIN2 | This is needed to set the charge detail display and to access additional functions on special SIM cards. |
| PUK PUK2 | Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly. |
| Phone code | Protects your phone. Must be entered at the first security setting. |

PIN control



→ Security → PIN codes




→ PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Press to change.



Enter PIN. Confirm with .

Change PIN codes



→ → Security → PIN codes
→ Select function.

Change PIN

You can change the PIN (4 to 8 digits) to a number you easily remember.



Press to change.



Enter **current** PIN and confirm with



Enter **new** PIN. Confirm.



Repeat **new** PIN. Confirm.

Change PIN2

Proceed as for **Change PIN**.

Change phonecode

Define the phone code (4–8 digits) when you start a phone-code protected function for the first time. It is then valid for all phone-code protected functions. To change the code proceed as with **Change PIN**.

Following the third incorrect attempt, access to the phone code functions is denied. Please contact Service (page 33).

Clearing SIM card barrings

If the PIN is entered incorrectly three times, the SIM card is barred.

Enter the PUK (MASTER PIN) provided by your service provider in accordance with the instructions.

If the PUK has been lost, contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (page 9) confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e.g. when carried in a pocket or whilst you are on an aircraft.



Press and **hold**.



Press.

Connection with PCs

You can connect your phone to a PC using Bluetooth or a data cable (accessories). The PC program MPM (Mobile Phone Manager) enables you to store data on PC and, e.g. synchronise the Addressbook with Outlook®, Lotus Notes™. You will find Mobile Phone Manager on the CD-ROM supplied or at:

www.BenQ-Siemens.com/s68

Calling

Dialling with number keys



Enter number (always with area/international dialling code).

◀ A **short** press clears the last digit, a **long** press clears the phone number.



Press to dial the displayed phone number.

International dialling codes


 


Press and **hold** until a "+" is displayed.



Open, then select **Country**.

Dialling with Fast dialling key / short cuts

Use the Fast dialling key  or the short cut keys (2 to 9) if numbers are assigned (see page 25). Press and **hold** number key or  to dial the number.

Setting the volume

+ / - Adjust the volume.

Last number redial



Press **twice**. The phone number **last** called is redialled.

Calling from the redial list see Call records, page 16.

Auto redial last number



Open, then **Auto dial**. The phone number is dialled ten times at increasing time intervals.

Accepting a call



Press.

Additional information

Accept the call before bringing the telephone to your ear in order to avoid ear damage caused by the ringtones.

Handsfree



Open, then activate/deactivate **Handsfr.**

Always switch off "handsfree talking" before holding the phone to your ear. Otherwise, you will damage your hearing!

Ending/Rejecting a call



Press **briefly**.

 
Establish a second call or conference

You can call another number during a call or link up a multi party call.




Open menu. Then select **Hold** option. The current call is put on hold.



Dial the new number and press .

When connection is established ...

Swap ... swap between 2 calls.
Confirm with .

Or

Conference

... select to start a multi party call. The held call is joined. Repeat procedure until all (up to 4) participants are linked together.

Receiving a second call

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call.

Swap / 

Accept the waiting call. The current call is put on hold.

Swap

Swap between calls.



Confirm the notification.

Tone sequences (Send DTMF)

Options

Open menu. Then select **Send DTMF** option. Enter tone sequences (numbers) for remote access to an answering machine.

Phonebook



Or



Press in standby mode.

You can store contacts with different phone and fax numbers as well as additional address details. Tabs are offered for fast access: **All contacts, Groups, Online status, SIM, Filter**



Switch between the tabs.



Select contact.



Call selected contact.

Or

Options

Open menu, then **Create message**, to create a message for the selected contact.

All contacts

Display all entries stored in the phone or on the SIM card in alphabetical order.

<New entry>



Confirm **<New entry>**. The tabs are displayed.



Switch between the tabs: **General sett., Private, Business, Person, Online status**



Select input fields on tabs.



Enter at least one name and phone number with dialling code.



Open menu. Select **Save**.

Viewing/editing entries



Select required entry.



Open current tab to edit.



Open options menu.

Groups

You are offered 10 groups to enable you to arrange your contacts clearly.

Editing group attributes



Select group.

Options Open menu and select **Attributes**.

Adding a contact

Start function in the **All contacts** tab.



Select contact, press **Options**. Select **Add to group**. A contact can only belong to one group.

Online status

Display all contacts that have WV addresses (Instant Messages).

SIM

Display contacts on the SIM card.

New entry



Confirm **New entry** and name. Enter phone number and select the storage location.

Viewing/editing entries



Select entry and edit.

Filter

See phone book options below.

Phonebook options

| | |
|----------------|---|
| Filter | Only those entries which match the filter criteria are displayed. |
| Create message | Create a message for the selected contact. |
| Search ID | Search for assigned Instant Message ID. |
| Internet | The URL assigned to the contact is visited via the WAP browser. |
| Open | Display own phone numbers (e.g. fax) for reference. |
| Add to group | Add entry to a group. |

| | |
|--------------------|---|
| Record sound, etc. | Create sound for a contact from scratch or add from My stuff. |
| More | Location, Sync., Capacity, Settings, As business card, Business card, Import, Add more fields |

Call records

Phone numbers are stored for easy redialling.



Select and open record.



Select phone number.



Dial phone number.

Calls missed



List of calls that you have received but not answered.



Symbol in the display.

Calls received

List of accepted calls.

Calls dialled

List of the numbers you have dialled.



Press in standby mode.

Delete records

Delete records.

Time/charge

Display charges and duration during a call.



Time/charge

Last call, All outg. calls, All incoming, Remaining units
Select and open area.

Options

Open, then **Reset** to reset the setting.

Voice mailbox



Voice mailbox

Most service providers offer a mailbox in which a caller can leave voice mail for you. If this service is not part of your service provider's standard package, you will need to register for it, and possibly set it manually.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

Call to listen to your voice messages.



Voice mailbox


Enter/edit the phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.

 →  → Call setup → Divert


Options Open, then select e.g. **Unanswered** and then **Set**.

 Enter phone number.


Options Open, then select **Save**.

Listening

A new voice message can be announced as follows, depending on the service provider:

 Symbol with beep/an SMS or a call with automatic announcement.

Call your mailbox and play the message(s) back.


 Press and **hold**. If necessary enter mailbox number. Confirm with **OK**.



Messages

Your phone can send and receive standard text messages (SMS) and multimedia messages (MMS). MMS enables you to send text, pictures and sounds in a combined message.


Writing/sending an SMS/MMS


 →  → Create new
→ SMS/MMS

 Enter text. Writing text with or without T9 (see below).

 Enter phone number or open menu, then select **Add from** , select recipient(s) from phonebook.


Options (for MMS) Open menu, select **Add item**, select item type or add attachment. You may choose a subject. Then


 Enter phone number or select from phonebook.

 Start sending process.

Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

 Press **briefly**: Select **T9abc**. Switch between the input modes: **T9Abc** for capital letters or **123** for numbers.

 Simply press the keys **once** where the relevant letter is located.

For "and", for example

 2 abc  mno 6  def 3 .

 A blank ends a word.

If several words are found in the dictionary for a key sequence (a word), the most probable is displayed first.



Press, if it is not the right one. Repeat until the correct word is displayed.

To enter a word in dictionary:



Press and enter the word manually, then **Save**.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, 6,636,162 and 6,646,573;

Australian Pat. Nos. 727539, 746674 and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595 and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959 and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide.

Text entry without T9



Press **briefly**: Select **abc**. Switch between the input modes: **Abc** for capital letters or **123** for numbers.



Press **once briefly** to write the letter **a**, twice to write **b** etc. Press and **hold** to write the number 2.



Press **briefly** to delete the letter left of the cursor. Press and **hold** to delete text quickly.



Press **briefly**: Special characters are shown.



Press to insert space. Press twice to insert line feed.

SMS/MMS options (selection)

| | |
|----------------|--|
| Add item | Add contents, such as Text, Pictures, Sound, Contact, Attachment. |
| Create item | Create contents. Sound recorder (page 30). |
| Preview | Play entire MMS in the display. |
| Text edit menu | Input language, Mark text, Copy, Insert |
| Insert text | Text modules, Signature, Opening sentence, Contact details, Bookmark |

Receiving SMS/MMS

If you have received a new message a notification is shown on the display.

View Opens the message.

In order to receive a complete MMS **later on**, open the notification.

Options Open, then select **View**.


Reply/Reply to all, Forward

Reading SMS/MMS

 →  → **Inbox**

Select the **SMS/MMS** tab.

 Select the message.

 Read the **SMS/MMS** or the MMS notification.

Message lists

Messages are displayed in separate lists. Select tab and read message(s).

 →  → **Drafts/Sent/Outbox/Msg. archive**

Drafts Save messages as draft while creating it. A message is saved automatically as draft if you accept an incoming call while creating the message.

Sent List of all sent messages.

Outbox List of messages that could not be sent yet or where transmission failed.

Msg. archive List of messages you want to keep permanently.

SMS/MMS settings

 →  → **Settings**
→ **SMS/MMS**
→ Select function.

The basic settings have normally already been made by the service provider.

Send options

Set send options for SMS (**Service centre**, **Recipient**, etc.) and MMS (**Delivery report**, **Validity period**, etc.).

Creation

Set layout options for SMS (**Add signature**, **Signature**, etc.) and MMS (**Creation mode**, **Opening sentence**, etc.).

Retrieval

Only for MMS. Settings for receipt of the message, such as **Retriev.(roam.)**, **Allow deliv.rep.**, **Allow read rep.**, etc.

Connect. sett.

Only for MMS. Select the required MMS profile in which the connection attributes are specified.


You can obtain the data you need for this from the service provider or at: www.BenQMobile.com/customercare

E-mail



Your phone has an e-mail program (client).

Writing/sending


 →  → Create new → E-mail

 Enter text.

Options Open menu, then select **Add item**. Select item type and/or add an attachment. Insert a subject, then select **Add subject**.

 Enter e-mail address(es) or open menu, then select recipient(s) via **Add from** .


Call up additional fields such as **Subject**:, **Cc**:, **BCc**: via the options menu.



 Send e-mail.

Receiving/reading

 →  → Inbox

Select the E-mail tab.

 Open menu. Select **Retrieve e-mail/Retrieve body**.

 Select message and confirm with .

Additional options include **Reply**, **Forward**, **Save attach..**

Draft/Sent/Archive



 →  → Draft/Sent/Outbox/Msg. archive → E-mail

The tab for the messages not sent yet/sent/failed to send/archived is displayed.

Setting

 →  → Settings
→ E-mail → Accounts

Before using this service, set the server access and your e-mail parameters. You will receive the necessary data from the service provider or at: www.BenQMobile.com/customercare

 Select existing account and activate with .

Or

Options Open. Select **Edit**. Complete settings as indicated by the service provider (page 24).

Inst. messaging



→ → Inst. messaging

The function allows text-based conversation with one or more users who are also registered.

Your dialogue partners are entered in the contact lists. When a connection has been established, these lists show who is available, whether or not they want to be disturbed, etc.

Please refer to your service provider for further information.

WAP push

→ → WAP push

WAP push messages are transmitted from special service centres. If, e.g. you have requested configuration data from your service provider this will be transmitted via WAP push.



Select the required message.



Read the message about the transmitted data and, if applicable, trigger a download.

Additional options include **Execute**, **Install**, **Accept/Reject**.

CB services



→ → CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your **Topic list**.

Internet

→ → Select function.

Download games, applications, sounds, graphics etc. for your phone at **wap.siemens.com** (Downloads). Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Downl. assist.

You will not be left on your own during the download.


Enter URL

On input the browser is started and the page displayed.

Bookmarks

Display list of stored pages.



Select a bookmark and call up URL with .

Bookmark site

The current page is saved as a bookmark.

Internet

Start browser with pre-set option.

Browser options

| | |
|--------------|---|
| Homepage | Call up the pre-set homepage. |
| Bookmarks | Display stored list of bookmarks; save bookmark. |
| Go to... | Enter a URL |
| Reload | Reload current page. |
| Show URL | Display the URL of the current page for sending via SMS/MMS/e-mail. |
| History | Display most recently visited Internet sites. |
| Disconnect | Disconnect the Internet. |
| File | Save the object/complete page on the current page. Display saved pages. |
| Setup | Set or reset browser. |
| Exit browser | Close the browser. |

End connection



Press to end connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.
- One input field/link forward via the **Options** menu.
- One input field/link back with **Back** or via the **Options** menu.

Enter special characters



Select special characters.

Browser settings



Open menu, select **Setup**.

| | |
|---------------------|--|
| Browser | Set start option as well as handling of pictures/sounds plus send options. |
| Protocol parameters | Set protocol parameters, push messages. |
| Security | Set encryption. |
| Context | Reset session; delete cache, history and cookies. |
| About... | Display information about the browser. |

History/Saved websites

Display the list of last visited/stored internet sites.

Your Internet browser is licensed by:



OPENWAVE™



Settings

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- **General, Vibration, Meeting, Outdoor, Car Kit, Headset**
- You can name two personal profiles (<Name>).





Select profile.



Activate the profile.

Additional information

- To call up the list in standby mode:  profile list is displayed.
- The active profile is identified with .

Themes



Load a completely new visual presentation onto your phone, e.g.

Animations, Sounds, Colour skins, Font, Wallpaper



Select theme.



Activate; if required, view **Preview**.

Display



You can change display settings for your phone such as: **Wallpaper, Logo, Screensaver, Start up anim./Shutdown anim.** or the **Illumination**.

Vibration



The silent alert can be switched on in addition to the ringtone (e.g. in a noisy environment).

Connectivity



Bluetooth® (BT)

Activate/deactivate Bluetooth and manage the list of known Bluetooth devices.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by BenQ Corp. is under licence. Other trademarks and trade names are those of their respective owners. Bluetooth QDID (Qualified Design ID): B02422

Additional information

To increase the standby time deactivate Bluetooth if it is not used.

GPRS



With GPRS, data in the mobile radio network is transmitted more quickly.

Bluetooth sett.



Bluetooth activation.

My BT name: Give the phone a name the first time it is switched on.

Search

Specify which BT devices are to be searched for.

Device list

- **Known devices**

Record frequent BT partners in the list of known devices. If entries are "confidential", no password query is made.

- **Last connected**

List of most recently and/or still connected devices.

- **Reject list**

Attempts to make connections to devices in this list are rejected.

- **Last srch.result**

List of the last devices found.

My BT name

Give a device name (max. 20 characters) which the partner sees. If no name is given, the non-changeable device address is used.

- **Visib.to others**

Make settings to specify how your phone should "act" when in contact with other BT devices.

- **Not visible**

Your phone is not "visible" to other BT devices.

- **Auto mode**

Your phone is "visible" to other BT devices for five minutes. You will then be asked if "visibility" should continue.

- **Always visible**

Your phone is always "visible" to other BT devices.

Shown in the display



Bluetooth activated.



Bluetooth visible to others.

Online settings

Default setting and activation of the connection profiles for data transmission. The phone default setting depend on the service provider. Consult your service provider or go to: www.BenQMobile.com/customercare

Fax/data

Send voice/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

Rec. fax/data



The call is signalled by a special ringtone and the type of call (fax or data) is displayed. Now start the communication program in your PC to receive the fax/data.

Shortcuts

 →  → Shortcuts

Soft keys/Fast dialling key

You can assign one function to each of the two softkeys or a dialling number to the Fast dialling key.

Additional information

The service provider may have already assigned functions to all the keys (e.g. access to SIM services or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

Fast dialling key

You can assign a dialling number to the Fast dialling key.

Navigation keys

Assign a function to three directions of the navigation key (only effective in standby mode). The downwards movement is assigned to opening phonebook and cannot be modified.

Number keys

Use the number keys 2 to 9 as speed dialling numbers for fast access to functions. **Number key 1** is reserved for the mailbox number.

Assigning numbers or functions




Select the key.



Open the list.



Select <Phone number> from the list to assign a number or select an application to assign a function. Confirm with .

Call settings



→  → Call settings

Hide ID



If activated, your phone number will not appear on the other party's display.

Call waiting



Activate/deactivate call waiting.

Divert

Divert calls to your mailbox or other phone numbers.

Setting up call divert



Select e.g. **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**.) Confirm with

Set

Select. Enter a phone number to which the call is to be diverted. Confirm the notification with .

All calls



All calls are diverted.



Symbol in standby mode.

Other possibilities for divert:

Not reachable, **No reply**, **Busy**, **Receiving fax**, **Receiving data**

Alert calls from

Only calls from phone numbers that are in the phone book or in a group are signalled audibly. Other calls are only displayed.

Any key answer

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During the call, you (and only you) will hear a beep after each minute as a reminder of the time elapsed.

Phone settings



→ Phone settings

Change the phone's **Language**, **Key tones**, **Info tones**. Set that the phone switches off automatically each day at the same time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Device check

On the right-hand tab, a self-test as well as individual tests are offered.

Software version

* # 0 6 #, then press .

Master reset

Reset the phone to the default values (factory setting). This does not affect SIM card/network settings.

In standby mode enter:

* # 9 9 9 9 #

Clock



→ Clock

Time/date

Set the clock to the right time once at start-up.



Start editing and enter date/time.

Security



Auto key lock

The key pad is locked automatically if no key has been pressed for a specific time. You can still be called and make an emergency call.

Lock/unlock key pad in standby mode. In each case:



Press and **hold**.

Direct call

Only **one** phone number can be dialed.

Only



Restrict calls to SIM-protected numbers in the phone book.

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Certificates

Display certificates for secure data connections.

PIN codes

For description, see page 11:

PIN control, Change PIN, Change PIN2, Chg. phonecode

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Other settings: **Outgoing intl.** (outgoing international), **Out.int.x.home** (international outgoing without home country), **All incoming, When roaming, Status check, Clear all.**

Accessories



Car Kit

Only in combination with an original handsfree car kit. The car kit profile is activated automatically when the phone is inserted into the cradle.



Headset

Only in conjunction with an original headset. If an original headset is used the profile is automatically activated when the headset is plugged in.

USB charging



The phone can be connected with the USB cable to a PC. The battery can also be charged in this way (only with original accessories).

Organiser

 →  → Select function

Calendar

Enter appointments in the calendar. Set time and date (page 26) for the calendar to work correctly. The calendar offers three views: monthly view, weekly view and daily view.

 /  Scroll between weeks/days/hours.

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Category: Select Memo, Voice reminder, Call, Meeting, Holiday, Birthday.

Tasks

A task is displayed like an appointment in the agenda for the selected day. It does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.


Notes

Write and manage text notes. Protect confidential information using a phone code.

Dictat.machine

 →  → Dictat.machine

Or


 Press the side key.

Use the dictating machine to record short memos or record calls.

New recording


<Record new>

Select. A brief beep sounds.



 /  Pause/record.

 End recording.

Playback (via Media player)

 Select the recording.

 /  Playback/pause.

 /  **Press and hold**, for fast forward and rewind.

Warning!

The use of this feature may be subject to restrictions under criminal law. Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential. You may only use this feature if the other party to the conversation agrees.

Time zones

See page 10.

Remote synchronisation

Use this function remotely to synchronise the personal data on your phone (contacts, notes, calendar entries) with externally saved data.

Synchronisation

Before synchronisation you must select a profile (**Active account**) and a data area and enter the correct path to the data (**Server sett.**). Confidential notes are not transferred.

Sync The computer is selected and synchronisation started.

Two profiles can be set for synchronisation.

Alarm clock



The alarm sounds at the set time even when the ringtones or phone are switched off. The alarm clock is activated automatically after a change is made.

To deactivate the alarm press any number key.



Set the time for the alarm call (hh:mm).

Or



Activate/deactivate the alarm clock.

Setting the days for an alarm

Options Open the menu and select **Set days**.



Switch between the days of the week.



Mark or unmark the days for an alarm.

Save Save the alarm call time.

Ringtones



Set the volume for all tones or set the tones for the different functions, e.g SMS, alarm clock.

Extras



→ Select function.

SIM services (optional)

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.



Symbol for SIM services.

For further information, please contact your service provider.

My applications

See **My stuff** page 31.

Media player

All the media files on your phone are offered on tabs: **Sounds, Pictures**



Select tab.



Select file and confirm to start playback.

Sounds

Play back melodies.



Play or pause, depending on the situation.



Fast forward/rewind while key is pressed. This feature is not supported for all file/media types.



Load next/previous media file.



Set volume.



Switch to mute.



End playback.

Pictures



Zoom function. Zoom in/out with the (+/-) softkeys.



Move enlarged picture.



Centre picture.



Switch to full screen mode and back again.

Calculator

Use the calculator for a quick account on the way.

Unit converter

You can convert various measurement units in the decimal system into other measurement units.

Online status

The application can be called up from various other applications, such as **Inst. messaging** or from **Phonebook**. In **Online status** you can set such attributes as "Availability" or "Mood", which are visible to subscribers to **Inst. messaging**. You can also edit your status lists for the respective service here.

Sound recorder

Use the sound recorder to record noises and tones for use as ring-tones.

Recording and playback see **Dictat.machine**, page 28.

My menu

Create your own menu with frequently used functions, phone numbers or Internet pages.

My stuff

To organise your files, you can use the file system like a PC file manager. There are separate folders for the various data types in **My stuff**.



Display the list of folders and files.



Select file or folder.



Open folder. Select file or link.

Depending on the selection, the file with the associated application is opened or the download started.

Download

Melodies, pictures, games and other applications are offered on the Internet. Once downloaded, you can access these via the phone. Most applications include instructions. The appropriate folders contain the download function to download e.g. new pictures and sounds.

Remember that pictures and sounds may be protected (Digital Rights Management).

Some applications and games are already pre-installed on your phone.

Downloading can, if necessary, take place in two stages:

Description file only

The description file is loaded for information purposes only. The application/game itself must be loaded separately.

Complete download

The application/game is completely loaded.

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

BenQ Mobile excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The buyer bears the sole risk for loss, damage or faults to the phone or application as well as all damage and implications arising from the application. For technical reasons, such applications or the retrospective release for certain functions may be lost if the phone is exchanged/re-delivered or repaired. In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. BenQ Mobile does not warrant, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your PC using the "Mobile Phone Manager". You will find this on the supplied CD-ROM. You can download the relevant latest version of the MPM from the Internet at:

www.BenQ-Siemens.com/s68

Directory structure

Separate folders have already been created for different data types in **My stuff**. These folders cannot be changed. The structure and contents can vary, depending on the service provider.

| Folder | Description | Format |
|---------------|--------------------------------|--------------------------------------|
| Sounds | Sounds, ringtones | mid, amr wav |
| Pictures | Pictures | bmp, bmx jpg, jpeg png, gif |
| Themes | Loaded theme (zipped) | sdt |
| | Theme configuration (unzipped) | stc |
| Phone Pilot | Selection of a character | sda |
| Games | Java archive | jar |
| | Download info | jad |
| Applications | Applications | * |
| Miscellaneous | Text modules | tmo |
| | Voice recordings | vmo |
| | Internet pages | html wml |

Mobile Phone Manager

MPM (Mobile Phone Manager) enables you to use extended phone functions from your PC. The phone and PC communicate via a data cable or Bluetooth. MPM offers you a large number of functions.

You can manage your address data and contacts and synchronise them with other phones, dial at the press of a button, and manage phone conferences. Creating, reading, saving and sending SMS messages is also supported.

MPM, a detailed user guide, and online help are contained on the CD enclosed with this phone. You can download future versions of the software from the Internet at:

www.BenQ-Siemens.com/s68


Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.BenQMobile.com/customercare

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#, the software version (to display, press *#06#, then ) and if available, your Service customer number.

You can also get personal advice about our range of products on our Premium Hotline: **United Kingdom 0906 9597500** (0.75 £ per minute)

Qualified employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

| | |
|--------------------------|------------------|
| Abu Dhabi | 0 26 42 38 00 |
| Argentina | 0 81 02 22 66 24 |
| Australia | 13 00 66 53 66 |
| Austria | 05 17 07 50 04 |
| Bahrain | 40 42 34 |
| Bangladesh | 0 17 52 74 47 |
| Belgium | 0 78 15 22 21 |
| Bolivia | 0 21 21 41 14 |
| Bosnia Herzegovina | 0 33 27 66 49 |

| | |
|----------------------|----------------------------|
| Brunei | 02 43 08 01 |
| Bulgaria | 02 73 94 88 |
| Cambodia | 12 80 05 00 |
| Canada | 1 88 87 77 02 11 |
| Chile | 8 00 53 06 62 |
| China | 40 08 88 56 56 |
| Colombia | 01 80 07 00 66 24 |
| Croatia | 0 16 10 53 81 |
| Czech Republic | 2 33 03 27 27 |
| Denmark | 35 25 65 29 |
| Dubai | 0 43 96 64 33 |
| Ecuador | 18 00 10 10 00 |
| Egypt | 0 23 33 41 11 |
| Estonia | 56 64 54 00 |
| Finland | 09 22 94 37 00 |
| France | 01 56 38 42 00 |
| Germany | 0 18 05 33 22 26 |
| Greece | 80 11 11 11 16 |
| Hong Kong | 28 61 11 18 |
| Hungary | 06 14 71 24 44 |
| Iceland | 5 20 30 00 |
| India | 22 24 98 70 00 Extn: 70 40 |
| Indonesia | 0 21 46 82 60 81 |
| Ireland | 18 50 77 72 77 |
| Italy | 02 45 27 90 36 |
| Ivory Coast | 05 02 02 59 |
| Jordan | 0 64 39 86 42 |
| Kenya | 2 72 37 17 |
| Kuwait | 2 45 41 78 |
| Latvia | 7 50 11 18 |
| Lebanon | 01 44 30 43 |
| Libya | 02 13 50 28 82 |
| Lithuania | 8 70 07 07 00 |
| Luxembourg | 40 66 61 56 40 |
| Macedonia | 0 23 13 18 48 |
| Malaysia | + 6 03 77 12 43 04 |
| Malta | + 35 32 14 94 06 32 |
| Mauritius | 2 11 62 13 |
| Mexico | 01 80 07 11 00 03 |
| Morocco | 22 66 92 09 |
| Netherlands | 0 90 03 33 31 00 |
| New Zealand | 08 00 27 43 63 |
| Nigeria | 0 14 50 05 00 |
| Norway | 22 57 77 46 |
| Oman | 79 10 12 |

| | |
|----------------------|------------------|
| Pakistan | 02 15 66 22 00 |
| Paraguay | 8 00 10 20 04 |
| Peru | 0 80 05 24 00 |
| Philippines | 0 27 57 11 18 |
| Poland | 08 01 30 00 30 |
| Portugal | 8 08 20 15 21 |
| Qatar | 04 32 20 10 |
| Romania | 02 12 09 99 66 |
| Russia | 8 80 02 00 10 10 |
| Saudi Arabia | 0 22 26 00 43 |
| Serbia | 01 13 07 00 80 |
| Singapore | 62 27 11 18 |
| Slovak Republic | 02 59 68 22 66 |
| Slovenia | 0 14 74 63 36 |
| South Africa | 08 60 10 11 57 |
| Spain | 9 02 11 50 61 |
| Sweden | 08 57 92 90 49 |
| Switzerland | 08 48 21 20 00 |
| Taiwan | 02 23 96 10 06 |
| Thailand | 0 27 22 11 18 |
| Tunisia | 71 86 19 02 |
| Turkey | 0 21 64 59 98 98 |
| Ukraine | 8 80 05 01 00 00 |
| United Arab Emirates | 0 43 66 03 86 |
| United Kingdom | 0 87 05 33 44 11 |
| Uruguay | 00 04 05 46 62 |
| USA | 1 88 87 77 02 11 |
| Venezuela | 0 80 01 00 56 66 |
| Vietnam | 84 89 20 24 64 |
| Zimbabwe | 04 36 94 24 |

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

Product data

Declaration of conformity

BenQ Mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The relevant declaration of conformity (DoC) has been signed.

Please call the company hotline if you require a copy of the original:

www.BenQMobile.com/conformity

CE 0168

Technical data

| | |
|------------------|----------------------------------|
| GSM class: | 4 (2 watt) |
| Frequency range: | 880 - 960 MHz |
| GSM class: | 1 (1 watt) |
| Frequency range: | 1 710- 1 880 MHz |
| GSM class: | 1 (1 watt) |
| Frequency range: | 1 850- 1 990 MHz |
| Weight phone: | 78.5 g |
| Weight charger: | approx. 70 - 90 g |
| Size: | 107.5 × 44 × 13.2 mm (58 ccm) |
| Li-Ion battery: | 660 mAh |
| SIM card: | 3.0/1.8 V |

Phone ID

You will need the following details if you lose your phone or SIM card:

no. of the SIM card (on the card):

.....
15 digit serial number of the phone
(under the battery):

.....
the customer service number of the service
provider:

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating time

The operating time depends upon the respective network conditions and conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talk time

Up to 300 minutes.

Standby time

Up to 300 hours.

| Action taken | Time (min.) | Reduction of standby time by |
|----------------|-------------|------------------------------|
| Calling | 1 | 30–90 minutes |
| Light * | 1 | 40 minutes |
| Network search | 1 | 5–10 minutes |

* Key input, games, calendar etc.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only original batteries.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, BenQ Mobile shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to BenQ Mobile shall vest in BenQ Mobile.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by BenQ Mobile UK Ltd., Carmelite 50, Victoria, Embankment, London, EC4Y 0DX, U.K.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, BenQ Mobile reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet www.BenQMobile.com/customercare or the telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, BenQ Mobile shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads,

casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.

- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals.
- In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by BenQ Mobile.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by BenQ Mobile
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to BenQ Mobile shall vest in BenQ Mobile.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by BenQ Mobile UK, Branch Ireland, 1st Floor, Riverview House, 21–23 City Quay, Dublin–The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, BenQ Mobile reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet www.BenQMobile.com/customercare or the telephone service. The relevant number is to be found in the accompanying user guide.

SAR

European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.54 W/kg**¹. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **2.0 cm** is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (www.who.int/emf) or BenQ Mobile (www.BenQMobile.com).

¹ The tests are carried out in accordance with international guidelines for testing.

License Agreement

This License Agreement ("Agreement") is between You and BenQ Mobile GmbH & Co. OHG, Germany ("BenQ"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from BenQ Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if BenQ or any licensor of BenQ ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, BenQ and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related BenQ or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from BenQ Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by BenQ, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of BenQ, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** BenQ grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY BENQ, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by BenQ. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER BENQ NOR ANY

OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY BENQ OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND BENQ AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A BENQ REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of BenQ other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL BENQ, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND

WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF BENQ IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT BENQ'S LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. BenQ and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and BenQ or the applicable Licensor.

BenQ and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

 
11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which

 
the U.S. has restricted or prohibited the export of goods or services.

 
12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

 
13. MISCELLANEOUS. This Agreement represents the entire agreement between You and BenQ relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of BenQ may require You to agree to additional terms through an on-line "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, BenQ and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

 
Menu tree

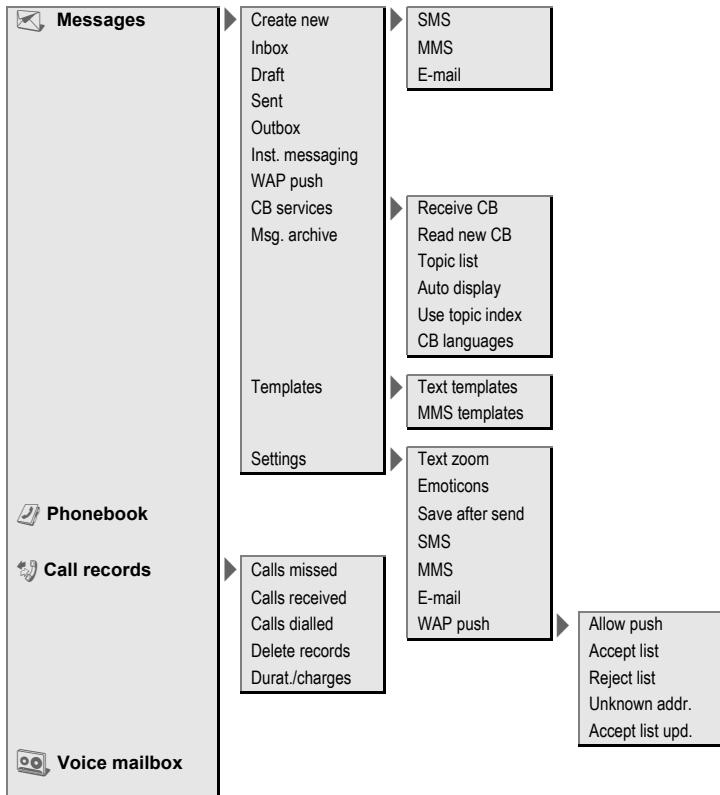

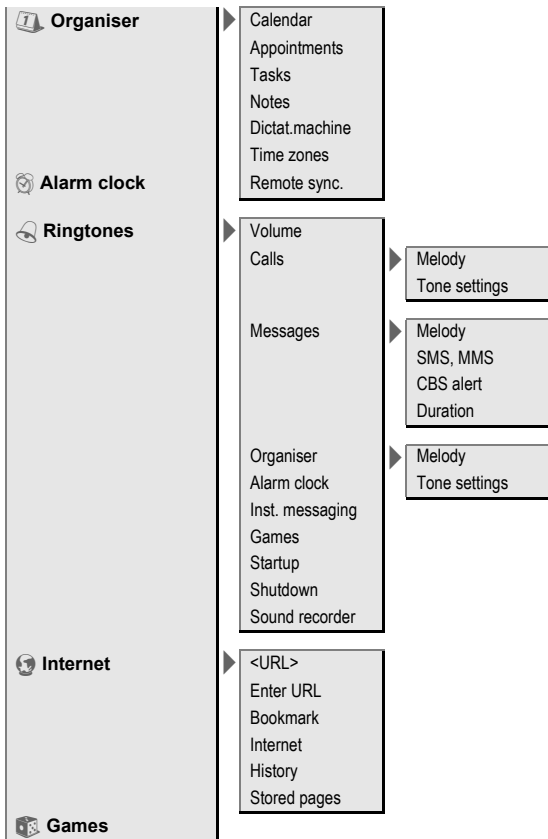

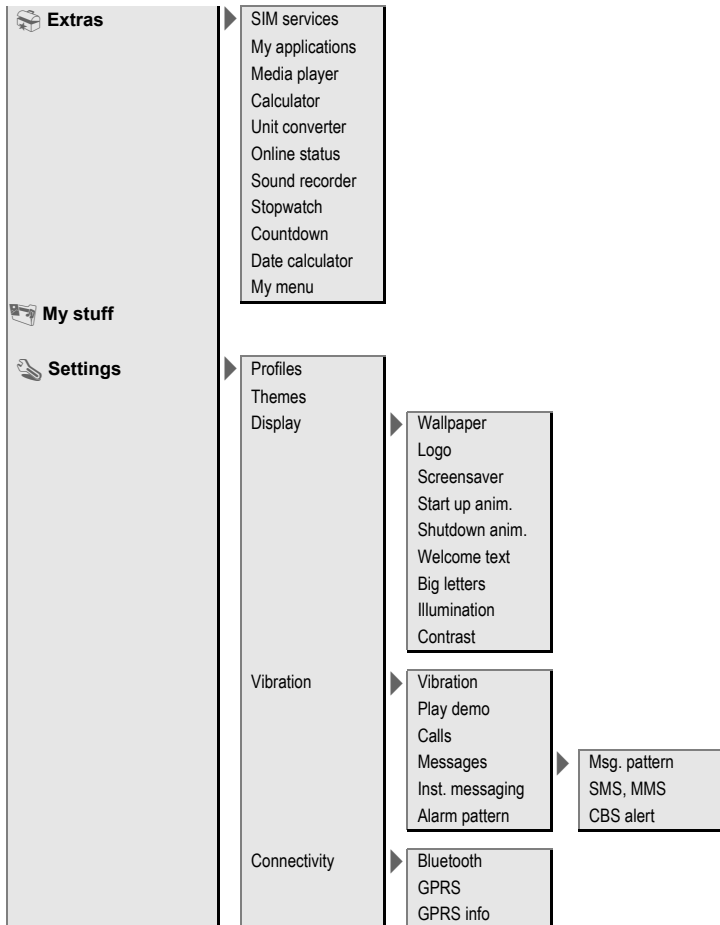

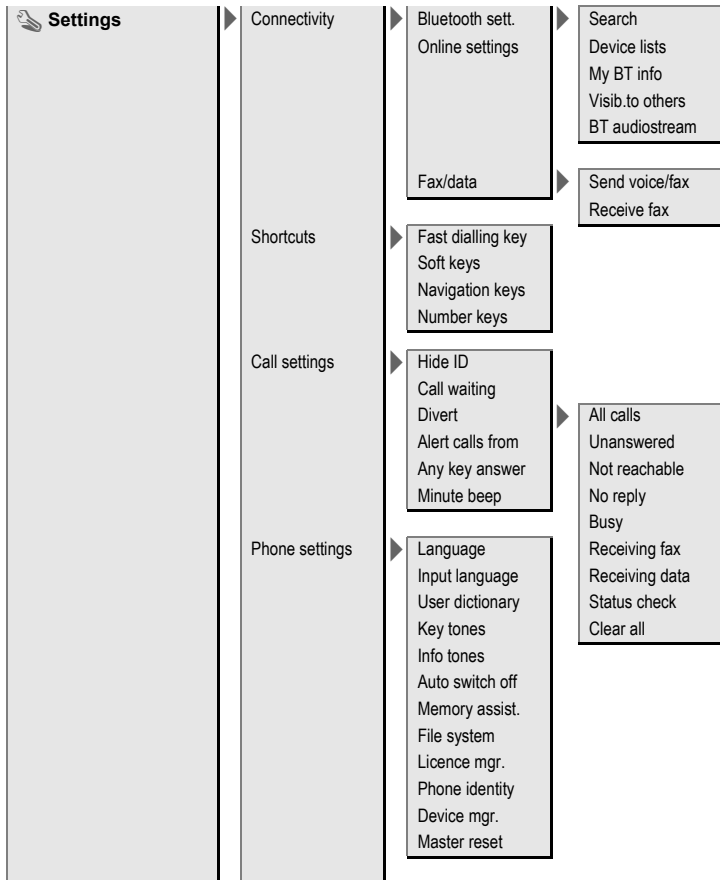

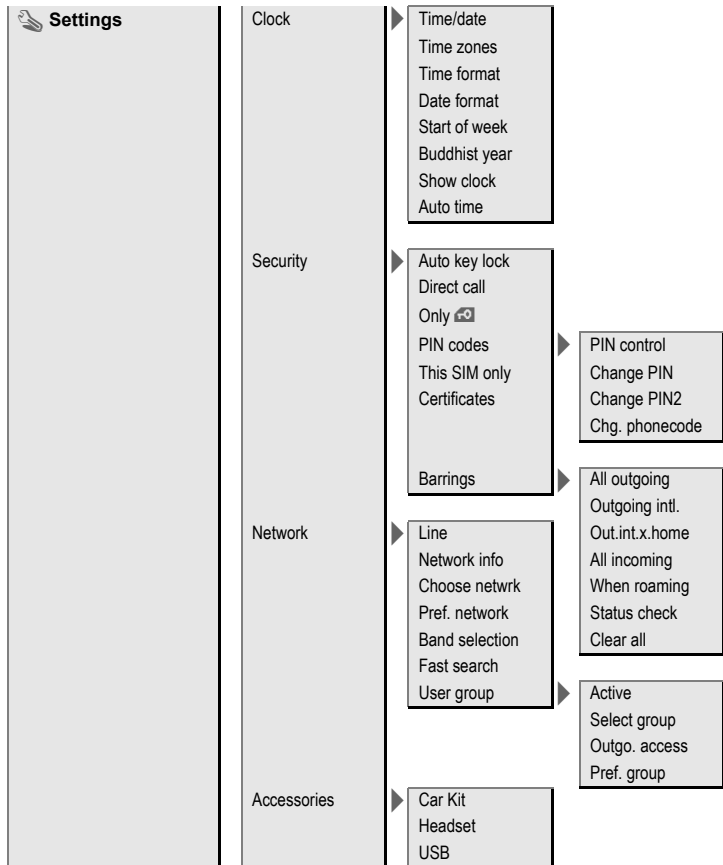

Index

A

| | |
|--------------------------------------|----|
| Alarm clock..... | 29 |
| All calls (diversion)..... | 26 |
| All incoming (network barrings)..... | 27 |
| Answering Machine..... | 16 |
| Any key to answer..... | 26 |
| Appointments..... | 28 |
| Auto key lock..... | 27 |
| Auto last number redial..... | 13 |

B

| | |
|--------------------------|--------|
| Battery | |
| Charge..... | 9 |
| Insert..... | 8 |
| Quality declaration..... | 36 |
| Bluetooth® (BT)..... | 23 |
| Bookmarks (WAP)..... | 21, 22 |
| Browser..... | 22 |

C

| | |
|-----------------------------------|--------|
| Calculator..... | 30 |
| Calendar..... | 28 |
| Call | |
| Accepting/ending..... | 13 |
| Blocked..... | 27 |
| Conference..... | 13 |
| Diverting..... | 25 |
| Hold..... | 13 |
| Rejecting..... | 13 |
| Swap (change)..... | 14 |
| Call divert..... | 25 |
| Call screening..... | 26 |
| Call waiting..... | 25 |
| Calling..... | 13 |
| Calls received (call record)..... | 16 |
| Car Kit..... | 27 |
| Case sensitivity (T9)..... | 17, 18 |
| Certificates..... | 27 |
| Charges..... | 16 |
| Charging time..... | 9 |
| Clock..... | 26 |
| Codes..... | 11 |
| Conference call..... | 13 |
| Connection profiles..... | 24 |
| Converter..... | 30 |
| Currency converter..... | 30 |
| Customer care..... | 33 |

D

| | |
|--------------------------------|----|
| Data connections..... | 23 |
| Declaration of conformity..... | 35 |
| Dialling code..... | 13 |
| Dialling with number keys..... | 13 |
| Dictating machine..... | 28 |
| Display | |
| Quality declaration..... | 36 |
| Symbols..... | 7 |
| Divert..... | 25 |

E

| | |
|------------------------|----|
| E-mail | |
| Receiving/reading..... | 20 |
| Settings..... | 20 |
| Writing..... | 20 |
| Emergency number..... | 9 |
| Extras..... | 29 |

F

| | |
|-----------------------|----|
| Factory settings..... | 26 |
| Fast access..... | 25 |

G

| | |
|----------------------------|----|
| GPRS..... | 24 |
| Guarantee certificate..... | 36 |

H

| | |
|------------------------|----|
| Handsfree talking..... | 13 |
| Headset..... | 27 |
| Hide ID..... | 25 |
| Hold call..... | 13 |
| Hotline..... | 33 |

I

| | |
|----------------------------------|----|
| Identity number (IMEI)..... | 26 |
| IMEI number..... | 26 |
| International dialling code..... | 13 |
| Internet..... | 22 |

K

| | |
|---------------|---|
| Key lock..... | 6 |
|---------------|---|

L

| | |
|------------------------------|----|
| Last number redial..... | 13 |
| License agreement..... | 39 |
| Lost of phone, SIM card..... | 35 |


M

| | |
|----------------------------------|----|
| Mailbox | 17 |
| Main menu | 10 |
| Maintenance of phone | 34 |
| Mark mode | 11 |
| Menu tree | 42 |
| Message | |
| Drafts | 19 |
| Outbox | 19 |
| Sent | 19 |
| Minute beep | 26 |
| Missed calls (call record) | 16 |
| My menu | 30 |

N

| | |
|-------------------------------------|----|
| Network | |
| Barring | 27 |
| Notes | 28 |
| Numbers dialled (call record) | 16 |

O

| | |
|--|----|
| Online settings | 24 |
| Only  | 27 |
| Operating time | 35 |
| Organiser | 28 |

P

| | |
|---------------------------------|----|
| PC connection | 12 |
| Phone | |
| Operating time | 35 |
| Technical data | 35 |
| Phone code | 11 |
| Phone ID (IMEI) | 26 |
| Phone number transmission | 25 |

PIN

| | |
|--|----|
| Changing | 12 |
| Entering | 9 |
| Use | 11 |
| PIN2 | 11 |
| Preventing accidental activation | 12 |
| Product data | 35 |
| Profiles | |
| Phone | 23 |
| PUK, PUK2 | 11 |

S

| | |
|---------------------------------------|-------|
| Safety precautions | 2 |
| Screensaver | 23 |
| Security | 11 |
| Setting time/date | 26 |
| Settings | 23 |
| Silent alert | 23 |
| SIM card | |
| Clearing barrings | 12 |
| Inserting | 8, 10 |
| SIM services (optional) | 29 |
| SMS/MMS | 17 |
| SOS | 9 |
| Sound recorder | 30 |
| Standby time | 35 |
| Stopwatch | 30 |
| Swap calls | 14 |
| Switching off the phone, manual | 9 |
| Switching on (phone) | 9 |
| Symbols | 7 |
| Synchronisation | 29 |

T

| | |
|----------------------|----|
| T9 text entry | 17 |
| Tabs | 11 |
| Tasks | 28 |
| Technical data | 35 |
| Text entry | |
| With T9 | 17 |
| Without T9 | 18 |
| Themes | 23 |
| This SIM only | 27 |
| Time zones | 10 |
| Toggling | 13 |

V

| | |
|-----------------------|----|
| Volume | |
| Earpiece volume | 13 |
| Keys | 6 |

W

| | |
|-----------|----|
| WAP | 21 |
|-----------|----|