

# Extended User's Guide

---



9356709

Issue 2

# CE 168

## DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product RH-19 is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found from [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

Copyright © 2003-2004 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2004. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you. Please dispose of batteries properly.

# Contents

---

<b>FOR YOUR SAFETY</b> .....	<b>11</b>
<b>General information</b> .....	<b>14</b>
Typographics used in this user's guide.....	14
Access codes.....	14
<b>Overview of the functions in the phone</b> .....	<b>16</b>
Multimedia messaging service (MMS).....	16
Polyphonic sound (MIDI).....	16
General Packet Radio Service (GPRS).....	17
MIDP Java™ applications.....	17
Nokia OTA settings service.....	18
Shared memory.....	18
<b>1. Your phone</b> .....	<b>19</b>
Keys and connectors .....	19
Standby mode .....	20
Wallpaper.....	21
Screen saver.....	21
Power saving.....	21
Essential indicators.....	21
<b>2. Getting started</b> .....	<b>24</b>
Installing the SIM card and the battery.....	24
Charging the battery.....	26
Switching the phone on and off.....	27
Normal operating position .....	27
Keypad lock (Keyguard).....	28

Changing the front and back cover .....	29
Charging the glow-in-the-dark cover .....	30
<b>3. Basic functions.....</b>	<b>31</b>
Making a call.....	31
Speed dialling a phone number.....	32
Making a conference call.....	32
Answering or rejecting an incoming call .....	33
Call waiting .....	33
Options during a call.....	33
Loudspeaker.....	34
<b>4. Writing text .....</b>	<b>35</b>
Setting predictive text input on or off.....	35
Using predictive text input.....	35
Writing compound words.....	36
Using traditional text input .....	37
Tips for writing text.....	37
<b>5. Using the menu.....</b>	<b>39</b>
Accessing a menu function.....	39
List of menu functions.....	40
Messages (Menu 1).....	45
Text messages.....	45
Writing and sending messages .....	45
Options for sending a message .....	47
Writing and sending a SMS e-mail.....	47
Reading and replying to a message or a SMS e-mail.....	48
Inbox and outbox folders.....	50
Templates .....	50

Archive folder and my folders .....	50
Distribution lists .....	50
Message counter .....	52
Multimedia messages.....	52
Writing and sending a multimedia message.....	53
Reading and replying to a multimedia message.....	54
Inbox, Outbox, Saved and Sent items folders .....	55
Multimedia messages memory full.....	55
Deleting messages.....	56
Voice messages .....	56
Info messages .....	57
Message settings .....	57
Settings for text and e-mail messages.....	57
Overwrite settings.....	58
Settings for the multimedia messages.....	58
Font size setting .....	59
Service commands.....	59
Call register (Menu 2).....	60
Recent calls lists .....	60
Call counters and call timers .....	61
Contacts (Menu 3).....	62
Selecting settings for contacts.....	62
Saving names and phone numbers (Add contact) .....	62
Saving multiple numbers and text items per contact .....	63
Changing the default number .....	64
Adding an image to a name or number in contacts .....	64
Searching for a contact.....	64
Editing a name, number or text item or changing an image.....	65
Deleting contacts.....	65

Deleting numbers, text items or images.....	65
Copying contacts.....	65
Sending and receiving a business card.....	66
Speed dials.....	67
Info numbers.....	67
Service numbers.....	67
My numbers.....	68
Caller groups.....	68
Profiles (Menu 4).....	69
Settings (Menu 5).....	70
Personal shortcuts.....	70
Screen saver.....	70
Time and date settings.....	71
Clock.....	71
Date.....	71
Auto update of date and time.....	72
Call settings.....	72
Call divert.....	72
Anykey answer.....	73
Automatic redial.....	73
Speed dialling.....	73
Call waiting.....	73
Summary after call.....	73
Send my caller identity.....	73
Line for outgoing calls.....	74
Phone settings.....	74
Phone language.....	74
Automatic keyguard.....	74
Cell info display.....	75

Welcome note.....	75
Network selection.....	75
Confirm SIM service actions.....	75
Help text activation.....	76
Start-up tone.....	76
Display settings.....	76
Wallpaper.....	76
Colour schemes.....	77
Operator logo.....	77
Display brightness.....	77
Tone settings.....	77
Enhancement settings.....	78
Security settings.....	80
Restore factory settings.....	81
Alarm clock (Menu 6).....	82
Gallery (Menu 7).....	83
Calendar (Menu 8).....	85
Making a calendar note.....	86
When the phone alarms for a note.....	86
Games (Menu 9).....	87
Launching a game.....	87
Other options available for a game or game set.....	87
Game downloads.....	87
Memory status for games.....	88
Game settings.....	88
Applications (Menu 10).....	89
Launching an application.....	89
Other options available for an application or application set.....	89
Downloading an application.....	90



Memory status for applications .....	92
Extras (Menu 11).....	93
Calculator.....	93
Making a currency conversion .....	93
Countdown timer.....	94
Stopwatch.....	94
Time observation and time splitting .....	94
Lap times .....	95
Viewing and deleting times.....	95
Services (Menu 12).....	96
Basic steps for accessing and using services.....	96
Setting up the phone for a service .....	96
Saving the service settings received as an OTA message.....	97
Keying in the service settings manually .....	97
Making a connection to a service.....	99
Browsing the pages of a service.....	100
Using the phone keys while browsing.....	101
Options while browsing.....	101
Direct calling .....	102
Disconnect from a service.....	102
Appearance settings of the multi-mode browser .....	102
Selecting Cookie settings.....	103
Bookmarks .....	103
Receiving a bookmark.....	104
Downloading.....	104
Service inbox.....	104
Service inbox settings.....	105
Clearing the cache memory.....	105
Authority certificates .....	106

Viewing the list of authority certificates .....	106
Security indicator .....	106
Go to (Menu 13) .....	107
SIM services (Menu 14) .....	107
<b>6. PC Connectivity.....</b>	<b>108</b>
PC Suite.....	108
<b>7. Battery statements .....</b>	<b>110</b>
Charging and Discharging .....	110
<b>CARE AND MAINTENANCE .....</b>	<b>111</b>
<b>IMPORTANT SAFETY INFORMATION .....</b>	<b>112</b>

# FOR YOUR SAFETY

---

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



#### ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



#### INTERFERENCE

All wireless phones may get interference, which could affect performance.



#### SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



#### SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



#### SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



#### SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

**USE SENSIBLY**

Use only in the normal position. Don't touch the antenna unnecessarily.

**QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment.

**ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries. Do not connect incompatible products.

**CONNECTING TO OTHER DEVICES**

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

**BACKUP COPIES**

Remember to make backup copies of all important data.

**WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

**CALLING**

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .

**EMERGENCY CALLS**

Ensure the phone is switched on and in service. Press as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

## ■ Network Services

The wireless phone described in this guide is approved for use on the EGSM 900, GSM 1800 and GSM 1900 network. Triband is a network dependent feature. Check with your local service provider if you can subscribe to and use this feature.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.



**Note:** Some networks may not support all language-dependent characters and/or services.

## ■ About accessories

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7, ACP-12 and LCH-12.



**Warning:** Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

# General information

---

## ■ Typography used in this user's guide

The texts that appear on the phone display are printed in blue, for example *Insert SIM card*.

The display texts related to the selection keys  are printed in bold blue, for example **Menu**.

## ■ Access codes

- **Security code (5 to 10 digits):** The security code protects your phone against unauthorised use, and is supplied with the phone. The preset code is 12345. Change the code, and keep the new code secret and in a safe place separate from your phone. To change the code, and to set the phone to request the code, see Security settings on page 80.

- **PIN code and PIN2 code (4 to 8 digits):** The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. Set the phone to request the PIN code each time the phone is switched on, see Security settings on page 80.

The PIN2 code may be supplied with the SIM card and is required to access some functions, such as charging unit counters.

If you key in an incorrect PIN code several times, the phone may display *SIM blocked* and ask you to key in the PUK code. Contact your service provider to get the PUK code.

- **PUK and PUK2 codes (8 digits):** The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.  
If the codes are not supplied with the SIM card, contact your local service provider for the codes.
- **Barring password (4 digits):** The barring password is needed when using the [Call barring service](#), see Security settings on page 80. You can obtain the password from your service provider.

## Overview of the functions in the phone

---

The Nokia 3100 phone provides many functions which are practical for daily use, such as Calendar, Clock, Alarm clock, Profiles, and many more. Also a range of Xpress-on™ covers are available for your phone. To change the cover, see Changing the front and back cover on page 29.

### ■ Multimedia messaging service (MMS)

The phone is able to send multimedia messages made up of text and a picture, and to receive messages containing text, pictures and sounds. You can save the pictures and sounds for personalising your phone. See Multimedia messages on page 52.

### ■ Polyphonic sound (MIDI)

Polyphonic sound consists of several sound components played at the same time like a real melody through a speaker. Polyphonic sounds are used in ringing tones and message alert tones. Your phone has sound components from over 40 instruments that can be used for polyphonic sounds but the phone can play four instruments simultaneously. The phone supports the Scalable Polyphonic MIDI (SP-MIDI) format.

You can receive polyphonic ringing tones via multimedia service, see Reading and replying to a multimedia message on page 54, or download them via the gallery menu, see Gallery (Menu 7) on page 83 or via the PC suite, see PC Suite on page 108.



## ■ General Packet Radio Service (GPRS)

GPRS technology is a network service that allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP) -based network. GPRS is a data bearer that enables wireless access to data networks such as the Internet. The applications that may use GPRS are MMS and SMS messaging (SMS, Short Message Service), browsing sessions and Java application downloading. Note that your phone supports two simultaneous GPRS connections. For example, you can receive multimedia messages and, at the same time, have an ongoing browsing session.

### Before you can use GPRS technology

- Contact your network operator or service provider for availability and subscription to the GPRS service.
- Save the GPRS settings for each of the applications used over GPRS.

See Setting up the phone for a service on page 96 and Message settings on page 57.

### Pricing for GPRS and applications

Both the active GPRS connection and the applications used over GPRS are priced. For more detailed information on pricing, contact your network operator or service provider.

## ■ MIDP Java™ applications

Your phone supports Java technology and includes some MIDP Java™ games that have been specially designed for mobile phones. You can download applications and new games to your phone, see Applications (Menu 10) on page 89.

## ■ Nokia OTA settings service

Several services need proper settings in your phone. You may receive the settings directly as an OTA (Over The Air) message and you only need to save the settings. For more information and availability of the settings, contact your nearest authorised Nokia dealer.

## ■ Shared memory

The following features in this phone share memory: phone's contacts directory, text and multimedia messages, images and ringing tones in gallery, calendar, bookmarks, Java games and applications. Using any such features may reduce the memory available for any features sharing memory. This is especially true with heavy use of any of the features. For example, saving many images, Java applications, etc. may take all of the shared memory and your phone may display a message that the memory is full. In this case, delete some of the applications or entries stored in the shared memory features before continuing.

# 1. Your phone

## ■ Keys and connectors



 
 
 

### 1. Power key

Switches the phone on and off. For example, when the keypad is locked, pressing the power key briefly turns the phone's display lights on for approximately 15 seconds.

### 2. Selection keys and


The function of the keys depends on the guiding text shown on the display above the keys, for example, **Menu** and **Contacts** in standby mode.



### 3. 4-way scroll key with , , and

Enables scrolling through names, phone numbers, menus or settings and in the calendar. In standby mode, pressing  opens the **Create message** menu, pressing  opens the **Calendar** menu. During a call pressing  and  adjusts the volume. In standby mode and during a call pressing  or  opens the contacts list.


### 4. dials a phone number, and answers a call. In standby mode it shows the most recently called number.

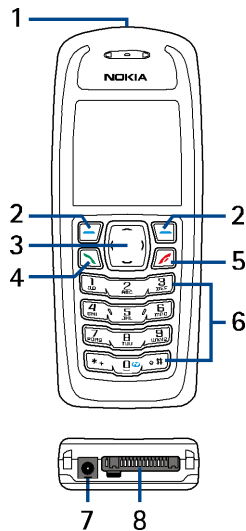
### 5. ends an active call. Exits from any function.



6.  -  key in numbers and characters.

\*+ and #\* are used for various purposes in different functions.

In standby mode, pressing and holding  calls your voice mailbox.

In standby mode, pressing and holding the Internet key  opens the homepage of the active service, see Making a connection to a service on page 99.


7. Charger connector

8. Pop-Port™ connector for headset and data cable, for example

## ■ Standby mode

When the phone is ready for use, and you have not keyed in any characters, the phone is in standby mode.

1. Indicates the operator logo.
2. Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal.
3. Shows the battery charge level. The higher the bar, the more power in the battery.
4. The left selection key in standby mode is [Menu](#).
5. The right selection key in standby mode is [Contacts](#) or [Go to](#) (personal shortcut). If you press the right selection key when it is
  - [Contacts](#), you can access the [Contacts](#) menu.

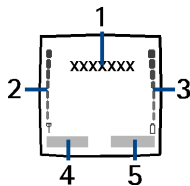

- **Go to**, you can scroll to the specific function (personal shortcut) and select it. To set the functions for your personal shortcut, see Personal shortcuts on page 70. Same functions can also be activated if you select the menu *Go to*, see Go to (Menu 13) on page 107.

See also Essential indicators on page 21.

## Wallpaper

You can set your phone to display a background picture, wallpaper, when the phone is in standby mode. See Wallpaper on page 76.

## Screen saver

You can set your phone to display a screen saver, when the phone is in standby mode. See Screen saver on page 70.

## Power saving

For power saving a digital clock view overwrites the display when no function of the phone has been used for a certain period of time. Press any key to deactivate the screen saver.

If you have not set the time, 00:00 is displayed. To set the time, see Clock on page 71.












 


In addition you can set a screen saver from *Gallery*. See also Screen saver on page 70.





## Essential indicators



You have received one or several text or picture messages. See Reading and replying to a message or a SMS e-mail on page 48.

-  You have received one or several multimedia messages. See Reading and replying to a multimedia message on page 54.
-  You have received one or several voice messages. See Voice messages on page 56.
-  The phone's keypad is locked. See Keypad lock (Keypguard) on page 28.
-  The phone does not ring at an incoming call or text message when *Incoming call alert* is set to *Off* and *Message alert tone* is set to *Off*. See Tone settings on page 77.
-  The alarm clock is set to *On*. See Alarm clock (Menu 6) on page 82.
-  The phone has registered a missed call. See Call register (Menu 2) on page 60.
-  The countdown timer is running. See Countdown timer on page 94.
-  The stopwatch timer is running in the background. See Stopwatch on page 94.
-  A GPRS dial-up connection is established. The indicator is shown on the top left of the display.
-  There is an incoming or outgoing call or a text message during a GPRS dial-up connection. The GPRS connection is suspended.
-  All your calls are diverted to another number, *Divert all voice calls*. If you have two phone lines, the divert indicator for the first line is  and for the second line . See Call divert on page 72.
- 1 or 2** Indicates the selected phone line, if you have two phone lines. See Line for outgoing calls on page 74.
-  The loudspeaker has been activated, see Loudspeaker on page 34.

 Calls are limited to a closed user group. See Security settings on page 80.

 The timed profile is selected. See Profiles (Menu 4) on page 69.

 ,  or 

Headset, handsfree or loopset enhancement is connected to the phone.

To set the phone to show the time and date in standby mode, see Clock on page 71 and Date on page 71.

## 2. Getting started

---

### ■ Installing the SIM card and the battery


Keep all miniature SIM cards out of the reach of small children.

- The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.
- Before installing the SIM card, always make sure that the phone is switched off and disconnected from any enhancement.

#### 1. To remove the back cover from the phone:


With the back of the phone facing you, push the back cover release button (1) and slide the back cover off (2).

Remove the battery by lifting it with the finger grip (3).

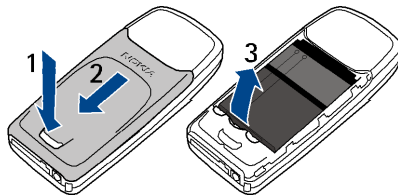





2. To release the SIM card holder, gently pull the locking clip of the card holder (4) and open it (5).

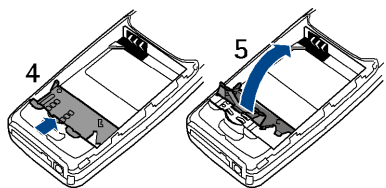


3. Insert the SIM card into the SIM card holder (6). Make sure that the SIM card is properly inserted and that the golden contact area on the card is positioned as shown.

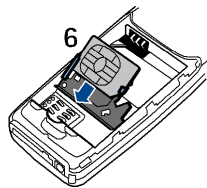

4. Close the SIM card holder (7) and press it until it snaps into position.

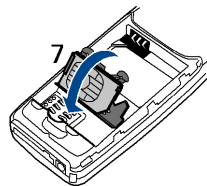

5. Insert the battery (8).
6. Slide the back cover into its place (9).

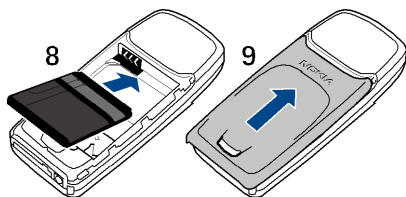


## ■ Charging the battery

1. Connect the lead from the charger to the socket on the bottom of your phone.
2. Connect the charger to an AC wall socket.

The text *Charging* is displayed briefly if the phone is switched on. If the battery is completely empty, it may take a few minutes before the charging indicator appears on the display or any calls can be made.

You can use the phone while the charger is connected.

The charging time depends on the charger and the battery used. For example, charging a BL-5C battery with the ACP-7 charger takes up to 3 hours in standby mode.

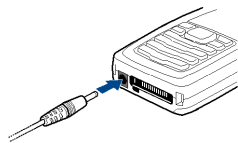

## ■ Switching the phone on and off



**Warning:** Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key

Note that if the phone displays *Insert SIM card* even though the SIM card is properly inserted, or *SIM card not supported*, contact your network operator or service provider. Your phone does not support 5 Volt SIM cards and the card may need to be changed.

- If the phone asks for a PIN code, key in the PIN code (displayed as \*\*\*\*), and press **OK**.  
See also *PIN code request* in Security settings on page 80 and Access codes on page 14.
- If the phone asks for a security code, key in the security code (displayed as \*\*\*\*\*), and press **OK**.  
See also Access codes on page 14.



## ■ Normal operating position

Use the phone only in its normal operating position.

Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.



## ■ Keypad lock (Keyguard)

You can lock the keypad to prevent the keys being accidentally pressed, for example, when your phone is in your handbag.

- **Locking the keypad**

In standby mode, press **Menu** and then **\*+** within 1.5 seconds.

- **Unlocking the keypad**


Press **Unlock** and then **\*+** within 1.5 seconds.

To answer a call when the keypad is locked, press . During a call, the phone can be operated normally. When you end or reject the call, the keypad will automatically be locked again.

For automatic keypad lock, see Automatic keyguard on page 74.

For locking the keypad during a call, see Options during a call on page 33.




**Note:** When the keypad is locked, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

## ■ Changing the front and back cover


Before changing the front cover, always switch off the power and disconnect the phone from the charger or any other device. Avoid touching electronic components while changing covers. Always store and use the phone with the covers attached.

1. Remove the back cover of the phone.


With the back of the phone facing you, push the back cover release button (1) and slide the back cover off (2).

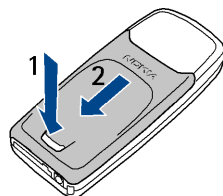


2. To remove the front cover, gently prise the back part of the phone away from the front cover beginning at the bottom of the phone.
3. Insert the key mat on the new front cover.

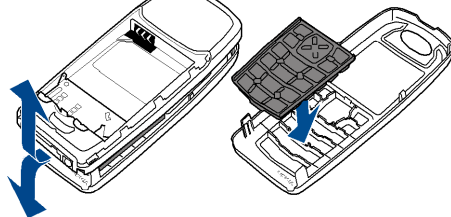

4. To attach the front cover, first place the phone and the front cover properly together and then gently push on the top of the phone until the catch is locked properly.

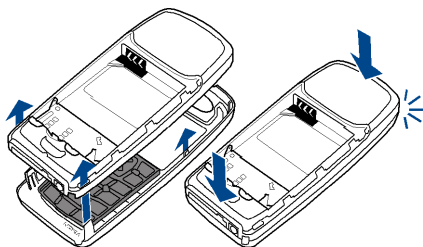

5. Place the back cover and the phone properly together (1) and slide the back cover into its place (2) until the back cover release button is properly locked.

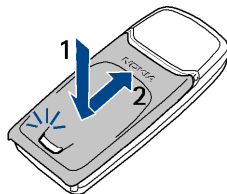

Getting started

## ■ Charging the glow-in-the-dark cover

The front cover of your Nokia 3100 phone has a glow-in-the-dark element. To make the cover glow you need to expose it to a bright light source for at least 15 minutes.



## 3. Basic functions

---

### ■ Making a call




1. Key in the phone number, including the area code. If you key in a wrong character, press **Clear** to delete it.

For international calls, press \* + twice for the international prefix (the + character replaces the international access code) and then key in the country code, area code without the leading 0, if necessary, and the phone number.



2. Press  to call the number.
3. Press  to end the call or to cancel the call attempt.

See also Options during a call on page 33.




### Making a call using the contacts directory

- In standby mode, press  or  to find the name or key in the first character(s) of the name you are looking for. See also Searching for a contact on page 64 and Saving names and phone numbers (Add contact) on page 62. Press  to call the number on the display.

### Last number redialling

- In standby mode, press  once to access the list of up to 20 numbers you last called or attempted to call. Scroll to the number or name you want, and press  to call the number.


### Calling your voice mailbox

- In standby mode, press and hold , or press  and .

If the phone asks for the voice mailbox number, key it in and press **OK**. See also Voice messages on page 56.


## Speed dialling a phone number

Assign a phone number to one of the speed dialling keys, from **2** ABC to **9** ШХУЗ, see Speed dials on page 67. Call the number in either of the following ways:

- Press the speed dialling key you want and then press .
- If *Speed dialling* is set to on, press and hold a speed dialling key until the call is started. See Speed dialling on page 73.



## Making a conference call


Conference calling is a network service that allows up to six persons to take part in a conference call.

1. Make a call to the first participant.
2. To make a call to a new participant, press **Options** and select *New call*.
3. Key in, or retrieve from the contacts list, the phone number of the new participant and press **Call**.  
The first call is put on hold.
4. When the new call has been answered, join the first participant in the conference call. Press **Options** and select *Conference*.
5. To add a new participant to the call, repeat steps 2 to 4.
6. To have a private conversation with one of the participants:  
Press **Options** and select *Private* and select the desired participant. Rejoin the conference call as described in step 4.
7. To end the conference call, press .



## ■ Answering or rejecting an incoming call

Press  to answer the incoming call and press  to end the call.



Press  to reject the incoming call.

Press **Silence**, if available, to mute the ringing tone. Then either answer or reject the call.



**Tip:** If the *Divert if busy* function is activated to divert the calls, for example to your voice mailbox, rejecting an incoming call will also divert the call. See Call divert on page 72.

## Call waiting

During a call, press  to answer the waiting call. The first call is put on hold. Press  to end the active call. To activate the *Call waiting* function, see Call waiting on page 73.

## ■ Options during a call

Many of the options that you can use during a call, are network services.

Press **Options** during a call for some of the following options:

*Mute* or *Unmute*, *End call*, *End all calls*, *Contacts*, *Menu* and *Hold* or *Unhold*, *New call*, *Conference*, *Private*, *Answer*, *Reject* and *Loudspeaker* or *Handset*.

*Lock keypad* to activate the keypad lock.

*Send DTMF* to send DTMF tone strings, for example, passwords or bank account numbers. Key in the DTMF string or search for it in contacts and press **OK**. Note that you can key in the wait character w and the pause character p by repeatedly pressing **\*+**.

*Swap* to switch between the active call and the call on hold, *Transfer* to connect a call on hold to an active call, and disconnect yourself from the calls.

## Loudspeaker

You can use the integrated loudspeaker during a call to have the handsfree function of your phone.



**Warning:** Do not hold the phone near to your ear when the loudspeaker is in use, because the volume may be extremely loud.




 
To activate the loudspeaker, press **Options** and select *Loudspeaker*, or press selection key **Loudsp.**, if available.

To deactivate the loudspeaker during a call, press **Options** and select *Handset*, or press selection key **Handset**, if available.

If you have connected the handsfree unit CARK126 or the headset to the phone, *Handset* in the options list is replaced with *Handsfree* or *Headset* and the selection key **Handset** with **Handsfr.** or **Headset**, respectively.

## 4. Writing text

---


You can key in text, for example when writing messages, using the traditional or predictive text input. When you are writing text, the predictive text input is indicated by  and the traditional text input by  at the top left of the display. The character case is indicated by **Abc**, **abc**, or **ABC** next to the text input indicator. You can change the character case by pressing **#** . The number mode is indicated by **123**, and you can change between the letter and number mode by pressing and holding **#** .

### ■ Setting predictive text input on or off

When writing text, press **Options** and select *Dictionary*.

- To set the predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages on the list.
- To change back to the traditional text input, select *Dictionary off*.



**Tip:** To quickly set the predictive text input on or off when writing text, press **#**  twice, or press and hold **Options**.

### ■ Using predictive text input

You can key in any letter with a single keypress. The predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word by using the keys **2** **Abc** to **9** **wXyZ**. Press each key only once for one letter. The word changes after each keystroke.




**Example:** To write **Nokia** when the English dictionary is selected, press **6**<sup>mno</sup> once for N, **6**<sup>mno</sup> once for o, **5**<sup>jkl</sup> once for k, **4**<sup>ghi</sup> once for i and **2**<sup>abc</sup> once for a:



To insert a number while in letter mode, press and hold the desired number key.

More instructions for writing text, see [Tips for writing text](#) on page 37.

- When you have finished writing the word and it is correct, confirm it by adding a space with **0**  or by pressing any of the scroll keys. Pressing a scroll key also moves the cursor.

If the word is not correct, press **\*+** repeatedly or press **Options** and select **Matches**. When the word you want appears, confirm it.

If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**, key in the word (traditional text input is used) and press **Save**. When the dictionary becomes full, the new word replaces the oldest one that was added.

- Start writing the next word.

## Writing compound words

Key in the first part of the word and confirm it by pressing **)**. Write the last part of the word and confirm the word.

## ■ Using traditional text input

Press a number key, **100** to **9WXYZ**, repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the language selected in the *Phone language* menu, see Phone language on page 74.


To insert a number while in letter mode, press and hold the desired number key.

- If the next letter you want is located on the same key as the present one, wait until the cursor appears, or press any of the scroll keys and then key in the letter.
- The most common punctuation marks and special characters are available under the number key **100**.

More instructions for writing text, see Tips for writing text on page 37.

## ■ Tips for writing text

The following functions may also be available for writing text:

- To insert a space, press **□** .
- To move the cursor to the left, right, down or up, press the scroll keys **(, )**, **↵** or **↶**, respectively.
- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly.

To delete all the characters at once when writing a message, press **Options** and select **Clear text**.

- To insert a word when using the predictive text input, press **Options** and select **Insert word**. Write the word using the traditional text input and press **Save**. The word is also added to the dictionary.
- To insert a special character, press **Options** and select **Insert symbol** or when using the traditional text input, press **\*+**, or when using the predictive text input, press and hold **\*+**.

Press any of the scroll keys to scroll to a character and press **Use** to select the character.

You can also scroll to a character by pressing **2**<sub>ABC</sub>, **4**<sub>GHI</sub>, **6**<sub>MNO</sub> or **8**<sub>TUV</sub>, and select the character by pressing **5**<sub>JKL</sub>.

- To insert a smiley, press **Options** and select *Insert symbol* or when using the traditional text input, press **\*+** twice or when using the predictive text input, press and hold **\*+** to get the table with special characters, then press **\*+** again.

Press any of the scroll keys to scroll to a smiley and press **Use** to insert the selected smiley.

You can also scroll to a smiley by pressing **2**<sub>ABC</sub>, **4**<sub>GHI</sub>, **6**<sub>MNO</sub> or **8**<sub>TUV</sub>, and select the smiley by pressing **5**<sub>JKL</sub>.

- To insert a number while in letter mode, press **Options** and select *Insert number*. Key in the phone number or search it in contacts and press **OK**.
- To insert a name from contacts, press **Options** and select *Insert contact*. To insert a phone number or a text item attached to the name, press **Options** and select *View details*. Select the desired detail and press **Select**.



## 5. Using the menu

---

The phone offers you an extensive range of functions which are grouped in menus. Most of the menu functions are provided with a brief help text. To view the help text, scroll to the menu function you want and wait for approximately 15 seconds. To exit the help text, press **Back**. See Help text activation on page 76.

### ■ Accessing a menu function



#### By scrolling

1. To access the menu, press **Menu**.
2. Scroll with  or  through the menu and select, for example, *Settings* by pressing **Select**.
3. If the menu contains submenus, select the one that you want, for example *Call settings*.
4. If the selected submenu contains further submenus, repeat step 3. Select the next submenu, for example *Anykey answer*.
5. Select the setting of your choice.
6. Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

#### By using a shortcut

The menus, submenus and setting options are numbered and you can access some of them by using their shortcut number.

To access the menu, press **Menu**. Key in quickly, within two seconds, the index number of the menu function you want to access. Note that to access the menu functions in menu 1, press **Menu** and key in

 and  and then key in the rest of the desired shortcut number.

Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

## List of menu functions

### 1. Messages



#### 1. Text messages

1. Create message
2. Inbox
3. Create SMS e-mail
4. Sent items
5. Archive
6. Templates
7. My folders
8. Distribution lists
9. Delete messages
10. Message counter

#### 2. Multimedia msgs.

1. Create message
2. Inbox
3. Outbox
4. Sent items
5. Saved items
6. Delete messages

#### 3. Voice messages

1. Listen to voice messages
2. Voice mailbox number

### 4. Info messages

1. Info service
2. Topics
3. Language
4. Info topics saved on SIM card
5. Read<sup>1</sup>

#### 5. Message settings

1. Text messages
2. Multimedia msgs.
3. Other settings

#### 6. Service commands

### 2. Call register



#### 1. Missed calls

#### 2. Received calls

#### 3. Dialed numbers


#### 4. Delete recent call lists


1. All
2. Missed
3. Received
4. Dialed

---

1. This menu is shown only if any info messages are received.



5. Call duration
  1. Last call duration
  2. Received calls' duration
  3. Dialed calls' duration
  4. All calls' duration
  5. Clear timers
6. Call costs
  1. Last call units
  2. All calls' units
  3. Call cost settings
7. GPRS data counter
  1. Data sent in last session
  2. Data received in last session
  3. All sent data
  4. All received data
  5. Clear counters
8. GPRS connection timer
  1. Duration of last session
  2. Duration of all sessions
  3. Clear timers
3. **Contacts**

  1. Search
  2. Add contact

3. Delete
4. Copy
5. Settings
  1. Memory in use
  2. Contacts view
  3. Memory status
6. Speed dials
7. Info numbers<sup>1</sup>
8. Service numbers<sup>1</sup>
9. My numbers<sup>2</sup>
10. Caller groups<sup>2</sup>
4. **Profiles**

  1. General
    1. Activate
    2. Personalise
    3. Timed
  2. Silent (same submenus as in General)
  3. Discreet (same submenus as in General)
  4. Loud (same submenus as in General)
  5. My Style 1 (same submenus as in General)
  6. My Style 2 (same submenus as in General)

1. Only shown if supported by your SIM card. For availability, contact your network operator or service provider.

2. If Info numbers, Service numbers or both are not supported, the number of this menu item changes accordingly.

## 5. Settings



1. Personal shortcuts
  1. Right selection key
  2. Select Go to options
  3. Organise Go to options
2. Screen saver
  1. On
  2. Off
  3. Select s. saver
  4. Timeout
3. Time and date settings
  1. Clock
  2. Date
  3. Auto-update of date & time
4. Call settings
  1. Call divert
  2. Anykey answer
  3. Automatic redial
  4. Speed dialling
  5. Call waiting
  6. Summary after call
  7. Send my caller identity
  8. Line for outgoing calls<sup>1</sup>

5. Phone settings
  1. Phone language
  2. Automatic keyguard
  3. Cell info display
  4. Welcome note
  5. Network selection
  6. Confirm SIM service actions
  7. Help text activation
  8. Start-up tone
6. Display settings
  1. Wallpaper
  2. Colour schemes
  3. Operator logo
  4. Display brightness
7. Tone settings
  1. Incoming call alert
  2. Ringing tone
  3. Ringing volume
  4. Vibrating alert
  5. Message alert tone
  6. Keypad tones
  7. Warning tones
  8. Rhythmic backlight alert
  9. Alert for

---

1. For availability, contact your network operator or service provider.

8. Enhancement settings<sup>1</sup>

1. Headset
2. Handsfree
3. Loopset
4. Gaming cover

## 9. Security settings

1. PIN code request
2. Call barring service
3. Fixed dialling
4. Closed user group
5. Security level
6. Access codes

## 10. Restore factory settings

## 6. Alarm clock

1. Alarm time
2. Alarm tone



## 7. Gallery

1. View folders
  1. Images
  2. Tones
2. Add folder



3. Delete folder
4. Rename folder
5. Gallery downloads

## 8. Calendar

1. Day notes
2. Make a note
3. Go to date
4. Settings



## 9. Games

1. Select game
2. Game downloads
3. Memory
4. Settings
  1. Game sounds
  2. Game lights
  3. Shakes



## 10. Applications

1. Select application
2. App. downloads
3. Memory



1. This menu is shown only if the phone is or has been connected to a compatible headset, handsfree unit, Gaming cover or loopset available for the phone.

## 11.Extras

1. Calculator
2. Countdown timer
3. Stopwatch



## 12.Services

1. Home
2. Bookmarks
3. Download links
  1. Tone downloads
  2. Image downloads
  3. Game downloads
  4. App. downloads



## 4. Service inbox

5. Settings
  1. Connection settings
  2. Appearance settings
  3. Security settings
  4. Service inbox settings

## 6. Go to address

## 7. Clear the cache

## 13.Go to

## 14.SIM services<sup>1</sup>



---

1. Only shown if supported by your SIM card. The name and contents vary depending on the SIM card

## ■ Messages (Menu 1)



You can read, write, send and save text, multimedia, and e-mail messages. All the messages are organised in folders.

Before you can send any text, picture, and e-mail messages, you need to save your message centre number, see Message settings on page 57.

### Text messages

Using SMS (Short Message Service), your phone can send and receive multi-part messages, which consist of several ordinary text messages (network service). Invoicing may be based on the number of parts needed for your message. If you use special (Unicode) characters, more parts may be needed for the message than otherwise. Note that predictive text input may use Unicode characters.

You can also send and receive text messages that contain pictures.



**Note:** Picture message function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.


### Writing and sending messages

1. Press **Menu**, and select *Messages*, *Text messages* and *Create message*.



**Tip:** To quickly open the *Create message* menu, press **Ⓜ** in standby mode.

2. Key in a message. See Writing text on page 35. The number of available characters / the current part number of a multi-part message are shown on the top right of the display, for example 120/2.
  - To insert a text templates, press **Options** and select *Use template*. Select the template you want to insert.

- To insert a picture, press **Options**. Select *Insert picture* and select a picture to view it. Press **Insert** to insert the picture into your message. The  indicator in the header of the message indicates that a picture has been attached. The number of characters that you can key in in a message, depends on the size of the picture. Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.

To view the text and the picture together before sending the message, press **Options** and select *Preview*.

- To insert a smiley, press **Options** and select *Insert smiley*. Select the smiley you want to insert.
  - To insert a name, press **Options** and select *Insert contact*. Search for a name in *Contacts*. and select the name you want to insert.
  - To insert a number, press **Options** and select *Insert number*. Key in the number or search for a phone number in *Contacts*.
3. To send the message, press **Options** and select *Send*.
  4. Key in the recipient's phone number or search for the phone number in contacts.

Press **OK** to send the message.

Copyright protection may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.



**Note:** When sending messages via the SMS network service, your phone may display the words *Message sent*. This is an indication that the message has been sent by your phone to the message centre number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.

## Options for sending a message

After you have written a message, press **Options** and select *Sending options*.

- To send a message to several recipients, select *Send to many*. When you have sent the message to everyone you want to send it to, press **Done**.
- To send a message to a predefined distribution list, select *Send to list*. While sending the message to the recipients, the phone displays the progress with the number of messages left to send.

To define and edit distribution lists, see Distribution lists on page 50.

- To send a message using a message profile, first select *Sending profile* and then the desired message profile.

To define a message profile, see Message settings on page 57.

## Writing and sending a SMS e-mail

Before you can send any e-mails via SMS you need to save the settings for e-mail sending, see Message settings on page 57. For availability and subscription to the e-mail service, contact your network operator or service provider. To save an e-mail address in the contacts list, see Saving multiple numbers and text items per contact on page 63.

1. Press **Menu**, and select *Messages*, *Text messages* and *Create SMS e-mail*.
2. Key in the recipient's e-mail address or search for it in the contacts list and press **OK**. To key in the character @, press **\*+** and select the character from the list.
3. You can key in the subject for the e-mail if you want and press **OK**.
4. Key in the e-mail message. See Writing text on page 35. The number of characters you can key in, is shown at the top right of the display. E-mail address and subject are included in the total number of characters.

- To insert a text templates, press **Options** and select *Use template*. Select the template you want to insert.
- To insert a smiley, press **Options** and select *Insert smiley*. Select the smiley you want to insert.
- To insert a name, press **Options** and select *Insert contact*. Search for a name in *Contacts*. and select the name you want to insert.
- To insert a number, press **Options** and select *Insert number*. Key in the number or search for a phone number in *Contacts*.

Inserting a picture is not possible.


5. To send the e-mail, press **Options** and select *Send e-mail*. If you have not saved the settings for e-mail sending, the phone asks for the e-mail server number.

Press **OK** to send the e-mail.




**Note:** When sending e-mails via the SMS network service, your phone may display the words *Message sent*. This is an indication that the e-mail has been sent by your phone to the e-mail server. This is not an indication that the e-mail has been received at the intended destination. For more details about e-mail services, check with your service provider.

## Reading and replying to a message or a SMS e-mail

When you have received a message or an e-mail, the indicator  and the number of new messages followed by *messages received* is shown.

Received messages are automatically stored in shared memory, see Shared memory on page 18.


The blinking  indicates that the message memory is full. Before you can receive new messages, delete old messages.

1. Press **Show** to view the message, or press **Exit** to view it later.



### Reading the message later:

Press **Menu**, and select *Messages*, *Text messages* and *Inbox*.

2. If more than one message is received, select the message you want to read. An unread text message is indicated by  in front of it.
3. While reading or viewing the message, press **Options**.

You can select, for example, an option to delete, forward or edit the message as a text message or an e-mail, move and rename the message you are reading.

Select *Copy to calendar* to copy text from the beginning of the message to your phone's calendar as a reminder note.

Select *Message details* to view the sender's name and phone number, the message centre used, reception date and time.

Select *Use detail* to extract numbers, e-mail addresses and website addresses from the current message.

When reading a picture message, select *Save picture* to save the picture in the *Templates* folder.

4. Select *Reply* to reply to a message. Select *Original text* to include the original message in the reply, or select a standard answer to be included in the reply, or select *Empty screen*.

When replying to an e-mail, first confirm or edit e-mail address and subject. Write your reply message.



5. Press **Options**, select *Send*, and press **OK** to send the message to the displayed number.

## Inbox and outbox folders

The phone saves the incoming text messages in the *Inbox* folder and the sent messages in the *Sent items* folder of the *Text messages* submenu.

The text messages you want to send later, can be saved in the *Archive*, *My folders* or *Templates* folder.

## Templates

Your phone offers you text templates, indicated with , and picture templates, indicated with .

To access the template list, press **Menu**, and select *Messages*, *Text messages* and *Templates*.

## Archive folder and my folders

To organise your messages, you can move some of your messages to the *Archive* folder, or add new folders for your messages.

While reading a message, press **Options**. Select *Move*, scroll to the folder where you want to move the message and press **OK**.

To add or delete a folder, press **Menu**, and select *Messages*, *Text messages* and *My folders*.

- To add a folder, press **Options** and select *Add folder*.
- To delete a folder, scroll to the folder you want to delete, press **Options** and select *Delete folder*.

## Distribution lists

If you need to send messages more often to a fixed group of recipients, you can define a distribution list containing those recipients and use this list, when sending a message. You can define up to 7 distribution lists containing up to 20 recipients.



**Note:** In creating a distribution list, contacts entries that are stored in your phone's contacts directory are used. Contacts entries that are stored on your SIM can be copied to your phone memory, see Copying contacts on page 65.

To view and edit distribution lists, press **Menu**, and select *Messages*, *Text messages* and *Distribution lists*.

Press **Options** to get the following options to edit a distribution list:

- *View list* to view the names in the selected distribution list.

Press **Options** to edit the content of a distribution list:

- *Add contact* to add a name to the distribution list.
- *View details* to view the details of the selected name.
- *Delete contact* to delete the selected name in the distribution list.
- *Add list* to add a new distribution list.
- *Rename list* to rename the selected distribution list.
- *Clear list* to delete all names in the selected distribution list.
- *Delete list* to delete the selected distribution list.

If a message failed to send to one or more recipients, the message is stored in *Undelivered*, which you can find in the list of *Distribution lists*. *Undelivered* is shown only if there is any failed message. Select *Undelivered* and press **Options** to get the following options to handle the undelivered message:

- *Resend to list* to resend the message to the failed recipients.
- *View list* to view the list of failed recipients.
- *Delete list* to delete the list of failed recipients.
- *View message* to view the undelivered message.

## Message counter

With the message counter you have an overview about the sent and received text messages.

To view a counter, press **Menu**, and select *Messages*, *Text messages*, *Message counter* and *Sent messages* or *Received messages*.

To clear the counters select *Clear counters*.

## Multimedia messages



**Note:** This function can be used only if it is supported by your network operator or service provider. Only phones that offer multimedia message features can receive and display multimedia messages.

A multimedia message can contain text, picture and sound. The phone supports multimedia messages of size up to 45 kB. If that maximum size is exceeded, the phone may not be able to receive or send the message. Depending on the network, you may receive a text message including an Internet address where you can view the multimedia message.

If the message contains a picture, the phone scales them down to fit the display area.



**Note:** If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive.

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, PNG, and BMP.
- Sound: Scalable Polyphonic MIDI (SP-MIDI) and monophonic ringing tones.



If the received message contains any unsupported elements, they may be replaced with the file name and the text *Object format not supported*.

 
Note that you are not able to receive any multimedia messages if you have a call in progress, a game or another Java application running, or an active service connection over GSM data (see Keying in the

service settings manually on page 97). Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.

## Writing and sending a multimedia message



To set the settings needed for multimedia messaging, see Settings for the multimedia messages on page 58. For availability and subscription to the multimedia messaging service, contact your network operator or service provider.


1. Press **Menu**, and select *Messages, Multimedia msgs.* and *Create message*.
2. Key in a message. See Writing text on page 35.
  - To insert a picture or a sound clip, press **Options**, and select *Insert image* or *Insert sound clip*, respectively. The list of available folders in the *Gallery* is shown. Open a specific folder, scroll to the desired picture or sound, press **Options** and select *Insert*. The  or  indicator in the header of the message indicates that a picture or sound has been attached.  
Copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.
  - To insert a name from contacts, press **Options** and select *More options* and *Insert contact*. Scroll to the desired name, press **Options** and select *Insert contact*.
  - To insert a number, press **Options** and select *More options* and *Insert number*. Key in the number or search it in contacts, and press **OK**.
3. To view the message before sending it, press **Options** and select *Preview*.
4. To send the message, press **Options** and select *Send to number* (or *Send to e-mail* or *Send to many*).
5. Key in the recipient's phone number (or e-mail address) or search for the phone number (or e-mail address) in contacts. Press **OK** and the message is moved to the *Outbox* folder for sending.

Sending a multimedia message takes more time than sending a text message. During sending the animated indicator  is displayed and you can use the other functions of the phone. If the sending is interrupted, the phone tries to resend it for a few times. If the sending fails, the message remains in the *Outbox* folder and you can try to resend it later.

The sent messages will be saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See Settings for the multimedia messages on page 58.

## Reading and replying to a multimedia message

When your phone is receiving a multimedia message, the animated indicator  is displayed. When the message is received, the indicator  and the text *Multimedia message received* is shown.

The blinking  indicates that the memory for multimedia messages is full, see Multimedia messages memory full on page 55.

1. Press **Show** to view the message, or press **Exit** to view it later.

Reading the message later: Press **Menu**, and select *Messages*, *Multimedia msgs.* and *Inbox*.

2. Scroll to view the message. Press **Options** and some of the following options may be available.
  - *Delete message* to delete a saved message.
  - *Reply* or *Reply to all* to reply to a message. To send the reply message, refer to Writing and sending a multimedia message on page 53.
  - *Forward to no.* or *Forward to e-mail* or *Send to many* to forward the message.
  - *Edit* to edit a message. You can only edit messages you have created. See Writing and sending a multimedia message on page 53.
  - *Message details* to view the message subject, size and class.
  - *Details* to view the details of the attached image or sound.

- *Play* to listen to the sound in the message.
- *Save sound clip* to save the sound in the *Gallery*.
- *Save image* to save the picture in the *Gallery*.

Refer also to the file options in *Gallery*, see *Gallery* (Menu 7) on page 83.

## Inbox, Outbox, Saved and Sent items folders

The phone saves the received multimedia messages in the *Inbox* folder of the *Multimedia msgs.* submenu.


Multimedia messages to be sent are moved to the *Outbox* folder of the *Multimedia msgs.* submenu.

The multimedia messages you want to send later, can be saved in the *Saved items* folder of the *Multimedia msgs.* submenu.

The sent multimedia messages are saved in the *Sent items* folder of the *Multimedia msgs.* submenu.

## Multimedia messages memory full

Received messages are automatically stored in the shared memory, see *Shared memory* on page 18.

When you have an incoming multimedia message and the memory for the messages is full, the indicator  is blinking and *Multimedia memory full, view waiting msg.* is shown. To view the waiting message, press **Show**. To save the message, press **Options**, select *Save message* and delete old messages by first selecting the folder and then an old message to be deleted.

To discard the waiting message, press **Exit** and **Yes**. If you press **No**, you can view the message.

## Deleting messages


1. To delete the text messages, press **Menu**, and select *Messages*, *Text messages* and *Delete messages*.  
To delete the multimedia messages, press **Menu**, and select *Messages*, *Multimedia msgs.* and *Delete messages*.
2. To delete all messages from a folder, select the folder where you want to delete the messages and press **OK**. If the folder contains unread messages, the phone will ask whether you want to delete them also.  
To delete all messages from all text message folders, select *All messages* and when *Delete all messages from all folders?* is displayed, press **OK**. If the folders contain unread messages, the phone will ask whether you want to delete them also.

## Voice messages


Voice mailbox is a network service and you may need to subscribe to it first. For more information and for the voice mailbox number, contact your service provider.

Press **Menu**, and select *Messages* and *Voice messages*. Select

- *Listen to voice messages* to call your voice mailbox at the phone number you have saved within the *Voice mailbox number* menu.  
Each phone line may have its own voice mailbox number, see Line for outgoing calls on page 74.
- *Voice mailbox number* to key in, display or edit your voice mailbox number and press **OK** to save it.

If supported by the network, the indicator  will indicate new voice messages. Press **Listen** to call your voice mailbox number.



**Tip:** In standby mode, pressing and holding  calls your voice mailbox.



## Info messages

With the info message network service you can receive messages on various topics, for example weather or traffic conditions, from your service provider. For available topics and relevant topic numbers, contact your service provider.

If the *GPRS connection* is set to *Always online*, the info messages may not be received. In that case, set the *GPRS connection* to *When needed*, see Settings when GPRS is the selected data bearer on page 99.

## Message settings

The message settings affect the sending, receiving or viewing of the messages.

### Settings for text and e-mail messages

1. Press **Menu**, and select *Messages*, *Message settings*, *Text messages* and *Sending profile*.
2. If more than one message profile set is supported by your SIM card, select the set you want to change.
  - Select *Message centre number* to save the phone number of the message centre needed for sending text messages. You receive the number from your service provider.
  - Select *Messages sent via* to select the message type *Text* or *E-mail*, *Paging* and *Fax*.
  - Select *Message validity* to select the time for how long the network should attempt to deliver your message.
  - For message type *Text*, select *Default recipient number* to save a default number to send messages for this message profile.

For message type *E-mail*, select *E-mail server* to save the e-mail server number.

- Select *Delivery reports* to request the network to send delivery reports on your messages (network service).
- Select *Use GPRS* to set GPRS as the preferred SMS bearer.
- Select *Reply via same centre* to allow the recipient of your message to send you a reply message via your message centre (network service).
- Select *Rename sending profile* to change the name of the selected message profile. The message profile sets are displayed only if your SIM card supports more than one set.

## Overwrite settings

When the text message memory is full, the phone cannot receive or send any new messages. However, you can set the phone to automatically replace old text messages in the *Inbox* and *Sent items* folders with the new ones.

Press *Menu*, and select *Messages*, *Message settings*, *Text messages* and *Overwriting in inbox* or *Overwriting in sent items*. Select *Allowed* to set the phone to replace the old text messages with new ones in the *Inbox* or the *Sent items* folder, respectively.

## Settings for the multimedia messages

Press *Menu*, and select *Messages*, *Message settings* and *Multimedia msgs.*. Select

- *Save sent messages*. Select *Yes* to set the phone to save the sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.
- *Delivery reports* to ask the network to send delivery reports about your messages (network service).
- *Allow multimedia reception*. Choose *No*, *Yes* or *In home network* to use multimedia service. If you choose *In home network*, you cannot receive multimedia messages when outside your home network.

- *Incoming multimedia messages.* Select *Retrieve* to set the phone automatically to fetch received multimedia messages, or select *Reject* if you do not wish to receive multimedia messages.
- *Connection settings.* Define service connection settings for retrieving multimedia messages. Activate the set where you want to save the connection settings to and then edit the settings. You may be able to receive the service settings as an OTA message from the service provider that offers the service that you want to use. For details, contact your service provider. See Setting up the phone for a service on page 96.
- *Allow adverts.* You can choose to allow or to reject advertisement.

### Font size setting

To select the font size for reading and writing messages, press *Menu*, and select *Messages*, *Message settings*, *Other settings* and *Font size*.

### Service commands

Press *Menu*, and select *Messages* and *Service commands*. Key in and send service requests (also known as USSD commands) such as activation commands for network services, to your service provider.



## ■ Call register (Menu 2)

The phone registers the phone numbers of missed, received and dialled calls, and the approximate length and cost of your calls.

The phone registers missed and received calls only if the network supports these functions, the phone is switched on and within the network's service area.


When you press **Options** in the *Missed calls*, *Received calls* and *Dialled numbers* menu, you can, for example, view the date and the time of the call, edit or delete the phone number from the list, save the number in contacts, or send a message to the number.

### Recent calls lists

Press **Menu**, and select *Call register* and then select

- *Missed calls* to view the list of the last ten phone numbers from which somebody has tried to call you (network service). The number in the front of the (name or) phone number indicates the amount of call attempts from that caller.



**Tip:** When a note about missed calls is being displayed, press **List** to access the list of phone numbers. Scroll to the number you would like to call back and press .

- *Received calls* to view the list of the last ten phone numbers from which you have most recently accepted calls (network service).
- *Dialled numbers* to view the list of the 20 phone numbers that you have most recently called or attempted to call. See also Last number redialling on page 31.
- *Delete recent call lists* to delete the recent calls lists. Select whether you want to delete all the phone numbers in the recent call lists, or only those numbers in the missed calls, received calls or dialled numbers lists. You cannot undo the operation.

## Call counters and call timers



**Note:** The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding-off for billing, taxes and so forth.

Press **Menu**, and select *Call register* and then select

- *Call duration*, scroll to view the approximate duration of your incoming and outgoing calls in hours, minutes and seconds. To clear the timers, the security code is needed.

Each phone line has its own call timers and the timers of the selected line are displayed. See Line for outgoing calls on page 74.

- *Call costs* (network service). Select *Last call units* or *All calls' units* to check the cost of your last call or all calls in terms of units specified within the *Show costs in* function.

Select *Call cost settings* and select *Clear counters* to clear the counters, or select *Show costs in* to set the phone to show the remaining talk time in terms of charging units, *Units*, or units of currency, *Currency*. Contact your service provider for charging unit prices.

Select *Call cost limit* to limit the cost of your calls to a certain amount of charging units or units of currency. The PIN2 code is needed for the call cost settings.




**Note:** When no more charging units or currency units are left, calls may only be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number).

- *GPRS data counter* and scroll to check the amounts of sent and received data in last session, data sent and received in total, and to clear the counters. The counters unit is a byte. To clear the counters, the security code is needed.
- *GPRS connection timer* scroll to check the duration of the last GPRS connection or the total GPRS connection. You can also clear the timers. To clear the timers, the security code is needed.



## ■ Contacts (Menu 3)

You can save names and phone numbers in the phone's contacts directory and in the SIM card's memory.

- The phone's contacts directory may save names with numbers and textual notes for each name. You can also save an image for a certain number of names. How many names can be saved depends on the length of the names, and the number and length of phone numbers and text items.  
The phone's contacts directory uses shared memory, see Shared memory on page 18.
- The phone supports SIM cards that can save up to 250 names and phone numbers. Names and numbers saved in the SIM card's memory, are indicated by .

## Selecting settings for contacts

Press **Menu**, and select *Contacts* and *Settings*. Select

- *Memory in use* to select the contacts list you want to use. To recall names and numbers from both contacts lists, select *Phone and SIM*. The names and numbers will be saved in the phone's contacts directory.
- *Contacts view* select how the names, numbers and images in contacts are displayed.
- *Memory status* to view the free and used memory capacity for contacts.

## Saving names and phone numbers (Add contact)

Names and numbers will be saved in the used memory, see Selecting settings for contacts above.

1. Press **Menu**, and select *Contacts* and *Add contact*.
2. Key in the name and press **OK**. See Using traditional text input on page 37.


3. Key in the phone number, and press **OK**. To key in the numbers, see Making a call on page 31.
4. When the name and number are saved, press **Done**.














**Tip: Quick save** In standby mode, key in the phone number. Press **Options**, and select **Save**. Key in the name, press **OK** and **Done**.



## Saving multiple numbers and text items per contact

You can save different types of phone numbers and short text items per name in the phone's contacts directory.

The first number saved is automatically set as the default number and it is indicated with a frame around the number type indicator, for example . When you select a name from contacts, for example to make a call, the default number is used unless you select another number.


1. Make sure that the memory in use is either *Phone* or *Phone and SIM*. See Selecting settings for contacts on page 62.
2. To access the list of names and phone numbers, press  or  in standby mode.
3. Scroll to the name to which you want to add a new number or text item, and press **Details**.
4. Press **Options** and select *Add number* or *Add detail*. If the name is stored in the SIM card's memory, the name will be moved to the phone's contacts directory.
5. Select one of the following number types  *General*,  *Mobile*,  *Home*,  *Office* and  *Fax*, or text types  *E-mail address*,  *Web address*,  *Postal address* and  *Note*.  
To change the type of a number or text, select *Change type* in the options list.
6. Key in the number or text item and press **OK** to save it.
7. Press **Back** and then **Exit** to return to standby mode.

## Changing the default number


 
 
 
Press  or  in standby mode, scroll to the name you want and press **Details**. Scroll to the number you want to set as the default number. Press **Options** and select *Set as default*.

## Adding an image to a name or number in contacts


 
You can add an image in supported format to a name or number saved in the phone's contact directory. The image is shown when you receive a call from the given phone number.

Press  in standby mode, scroll to the name (and number) you want to add an image to and press **Details**. Press **Options** and select *Add image*. The phone opens the list of folders in the *Gallery*. Scroll to the desired image, press **Options** and select *Save to contacts*. A copy of the image is added to the contact.

## Searching for a contact

1. Press **Menu**, and select *Contacts* and *Search*.
2. You can key in the first characters of the name you are searching for in the pop-up window.  
Press  and  to scroll through the names in the list, and  (and ) to move the cursor in the pop-up window.
3. Scroll to the name you want, and press **Details**. Scroll to view the details of the selected name.



**Tip:** To quickly find a name and phone number, press  or  in standby mode. Key in the first letter(s) of the name, and/or scroll to the name you want.



## Editing a name, number or text item or changing an image


Search for the name (and number) you want to edit and press **Details**. Scroll to the name, number or text item you want to edit, and press **Options**. Select *Edit name*, *Edit number*, *Edit detail*, or *Change image*, and edit the name, number, or text or change the image and press **OK**.

## Deleting contacts

Press **Menu** and select *Contacts* and *Delete*.

- To delete contacts one by one, select *One by one* and scroll to the contact you want to delete. Press **Delete** and press **OK** to confirm.
- To delete contacts all at once, select *Delete all* and then scroll to either of the memories *Phone* or *SIM card* and press **Delete**. Press **OK** and confirm with the security code.

## Deleting numbers, text items or images

Press  in standby mode, scroll to the desired name (and number) and press **Details**. Scroll to the number or text item you want to delete, press **Options** and select *Delete number* or *Delete detail*, respectively. If you have an image attached to the name or number and you want to delete it, press **Options** and select *Delete image*. Deleting an image from contacts does not delete it from *Gallery*.

## Copying contacts

You can copy names and phone numbers from the phone's contact directory to your SIM card's memory and vice versa.

1. Press **Menu**, and select *Contacts* and *Copy*.
2. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.

3. Select *One by one*, *All* or *Default numbers*.
  - If you select *One by one*, scroll to the name you want to copy and press **Copy**.  
*Default numbers* is shown if you copy from the phone to the SIM card. Only the default numbers will be copied.
4. To choose whether you want to keep or delete the original contact, select *Keep original* or *Move original*.
  - If you select *All* or *Default numbers*, press **OK** when *Start copying?* or *Start moving?* is displayed.

## Sending and receiving a business card

You can send and receive a person's contact information as a business card an OTA message if supported by the network.

### Receiving a business card

When you have received a business card, press **Show**. Press **Save** to save the business card in the phone's contact directory. To discard the business card, press **Exit** and then **OK**.

### Sending a business card

You can send a business card to a compatible phone or other handheld device which supports the vCard standard.

Search for contact you want to send from the contacts list, press **Details** and **Options** and select *Send bus. card* and *Via text message*.

## Speed dials

To make a call by using the speed dialling keys, see Speed dialling a phone number on page 32.


### Assigning a number to a speed dialling key

Press **Menu**, and select *Contacts* and *Speed dials* and scroll to the speed dialling key number you want.

Press **Assign**, press **Search**, and select first the name and then the number you want to assign. If a number is already assigned to the key, press **Options**, and you can view, change or delete the assigned number.


## Info numbers

You can call the information numbers of your service provider if the numbers are included in your SIM card.

Press **Menu**, and select *Contacts* and *Info numbers*. Scroll in a category to an information number and press  to call the number.

## Service numbers

You can call the service numbers of your service provider if the numbers are included in your SIM card.

Press **Menu**, and select *Contacts* and *Service numbers*. Scroll to a service number and press  to call the number.

## My numbers

The phone numbers assigned to your SIM card are saved in *My numbers* if this is allowed by the card. To view the numbers press **Menu**, and select *Contacts* and *My numbers*. Scroll to the desired name or number, and press **View**.

## Caller groups

You can arrange the names and phone numbers saved in contacts into caller groups. For each caller group, you can set the phone to play a specific ringing tone and show a selected logo on the display when you receive a call from a phone number in the group, see below. To set the phone to ring only upon calls from phone numbers belonging to a selected caller group, see *Alert for* in Tone settings on page 77.

Press **Menu**, and select *Contacts* and *Caller groups* and select the desired caller group. Select

- *Group name*, key in a new name for the caller group and press **OK**.
- *Group ringing tone* and select the ringing tone for the group. *Default* is the ringing tone selected for the currently active profile.
- *Group logo* and select *On* to set the phone to display the group logo, *Off* not to display it, or *View* to view the logo.
- *Group members* to add a name to the caller group, press **Options** and select *Add contact*. Scroll to the name you want to add to the group and press **Add**.

To remove a name from a caller group, scroll to the name you want to remove, and press **Options** and select *Remove contact*.



## ■ Profiles (Menu 4)

Your phone has various setting groups, profiles, for which you can customise the phone tones for different events and environments. At first, personalise the profiles to your liking and then you only need to activate a profile to use it. Available profiles are *General*, *Silent*, *Discreet*, *Loud*, *Mystyle 1* and *Mystyle 2*.

Press **Menu**, and select *Profiles*. Scroll to a profile and press **Select**.

- To activate the selected profile, select *Activate*.
- To set the profile to be active until a certain time up to 24 hours, select *Timed* and set the time the profil setting shall end. When the time set for the profile expires, the previous profile that was not timed, becomes active.
- To personalise the profile, select *Personalise*. Select the setting you want to change and make the changes.

The tone settings can also be changed in the *Tone settings* menu, see Tone settings on page 77.

The gaming cover settings can also be changed in *Enhancement settings* menu, see Enhancement settings on page 78.

In addition you can rename a profile, *Profile name*. The *General* profile can not be renamed.



**Tip:** To change the profile quickly in standby mode, press the power key **(I)**, scroll to the profile you want to activate and press **Select**.

## ■ Settings (Menu 5)



### Personal shortcuts

You can add some specific functions to your personal shortcut list and activate them either in standby mode by pressing the right selection key (**Go to**) or accessing the *Go to* menu. Refer to Standby mode on page 20 and Go to (Menu 13) on page 107.

To select the name for the right selection key and the functions for your personal shortcut list, press **Menu**, and select *Settings* and *Personal shortcuts*.

- To select the name for the right selection key displayed in standby mode, select *Right selection key*. Select *Go to* or *Contacts*.
- To select the desired functions for your personal shortcut list, select *Select Go to options* and the list of available functions is shown.

Scroll to the desired function and press **Mark** to add it to the shortcut list.

To remove a function from the list, press **Unmark**.

- To rearrange the functions on the list, select *Organise Go to options* and the desired function. Press **Move** and select where you want to move the function.

### Screen saver

The screen saver is activated when the phone is in standby mode and none of the phone's functions has been used for a certain time. Press any key to deactivate the screen saver. The screen saver is also deactivated when the phone is out of the network coverage area.

Press **Menu**, and select *Settings* and *Screen saver*.

- With *Select s. saver* you can choose an animation or a still image as screen saver from *Gallery*.
- Select in *Timeout* after which time the screen saver will be activated. In *Other* you can set the length of the timeout from 5 seconds to 10 minutes (minutes:seconds).
- Select *On* to activate the screen saver.

Independent of the screen saver settings, for power saving a digital clock view will be activated when for a certain time no function of the phone has been used. See Power saving on page 21.

Note that the screen saver overrides all the graphics and texts on the display in standby mode.

## Time and date settings

### Clock

Press *Menu*, and select *Settings, Time and date settings* and *Clock*.

Select *Show clock* to show the clock on the top right of the display in standby mode. Select *Set the time*, to adjust the clock to the right time, and *Time format* to select the 12-hour or 24-hour time format.

The clock serves the functions *Messages, Call register, Alarm clock*, timed *Profiles, Calendar* and *Screen saver*, for example.

If the battery is removed from the phone for a long time, you may need to set the time again.

### Date

Press *Menu*, and select *Settings, Time and date settings* and *Date*. Select

- *Show date* and the date is shown on the display when the phone is in standby mode.
- *Set the date* to adjust the date.

- *Date format* to select the date format.
- *Date separator* to select the separator in the selected date format.

## Auto update of date and time

Press **Menu**, and select *Settings, Time and date settings* and *Auto-update of date & time* (network service). To set the phone to automatically update the time and date according to the current time zone, select *On*. To set the phone to ask for a confirmation before the update, select *Confirm first*.

Automatic update of date and time does not change the time you have set for the alarm clock, calendar or the alarm notes. They are in local time. Updating may cause some alarms you have set to expire.

## Call settings

### Call divert

Press **Menu**, and select *Settings, Call settings* and *Call divert* (network service). With call divert you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Divert options not supported by your SIM card or your network operator may not be shown.

Select the divert option you want, for example, select *Divert if busy* to divert the voice calls when your number is busy or when you reject an incoming call.





To set the divert setting to on, select *Activate*, and then select the timeout after which the call is diverted, if this is available for the divert option. Select *Cancel*, or *Check status* to check whether the divert is activated or not. Several divert options may be active at the same time.

To cancel all the active call diverts at once, select the option *Cancel all diverts*.

To see the divert indicators in standby mode, see Standby mode on page 20.



## Anykey answer

Press **Menu**, and select *Settings, Call settings* and then *Anykey answer*. Select *On* and you can answer an incoming call by briefly pressing any key, except , selection keys  and , and .

## Automatic redial

Press **Menu**, and select *Settings, Call settings* and *Automatic redial*. Select *On* and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

## Speed dialling

Press **Menu**, and select *Settings, Call settings* and *Speed dialling*. Select *On* and the names and phone numbers assigned to the speed dialling keys, from **2ABC** to **9WXYZ**, can be dialled by pressing and holding the corresponding number key.

## Call waiting

Press **Menu**, and select *Settings, Call settings* and *Call waiting*. Select *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See Call waiting on page 33.

## Summary after call

Press **Menu**, and select *Settings, Call settings* and *Summary after call*. Select *On* and the phone will briefly display the duration and cost (network service) of the last call.

## Send my caller identity

Press **Menu**, and select *Settings, Call settings* and *Send my caller identity*. Select *Yes* and your phone number will be displayed to the person you are calling (network service). Select *Set by network* and the setting agreed upon with your service provider is used.


## Line for outgoing calls

Line for outgoing calls is a network service to select the phone line 1 or 2, that is subscriber number, for making calls.

Press **Menu**, and select *Settings, Call settings* and *Line for outgoing calls*. If you select *Line 2* and have not subscribed to this network service, you will not be able to make calls. However, calls on both lines can be answered regardless of the selected line.

If supported by your SIM card, you can prevent the line selection by selecting the option *Lock*.

For more information on availability, contact your network operator or service provider.

 **Tip:** In standby mode you can switch from one line to the other by pressing and holding **#\*0**.


## Phone settings

### Phone language

Select the language the phone shall display. Press **Menu**, and select *Settings, Phone settings* and *Phone language*. If you select *Automatic* the phone selects the language according to the information on the SIM card.

### Automatic keyguard



**Note:** When the keypad is locked, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

You can set the keypad of your phone to lock automatically after a preset time delay. You can set the delay time (minutes:seconds) from 10 seconds up to 60 minutes and when the time is up, the keypad locks automatically preventing accidental keypresses.

Press **Menu**, and select *Settings, Phone settings* and *Automatic keyguard*.

- To activate the automatic keyguard, select *On* and the phone displays *Set delay*: Key in the time and press **OK**.
- To deactivate the automatic keyguard, select *Off*.

See also Keypad lock (Keyguard) on page 28.

## Cell info display

Press **Menu**, and select *Settings, Phone settings* and *Cell info display* (network service). Select *On* to set the phone to indicate when it is used in a cellular network based on Micro Cellular Network (MCN) technology.

If the *GPRS connection* is set to *Always online*, the info messages may not be received. In that case, set the *GPRS connection* to *When needed*, see Settings when GPRS is the selected data bearer on page 99.

## Welcome note

Press **Menu**, and select *Settings, Phone settings* and *Welcome note*. Key in the note you would like to be shown briefly when the phone is switched on. To save the note, press **Options**, and select *Save*.

## Network selection

Press **Menu**, and select *Settings, Phone settings* and *Network selection*. Select *Automatic* and the phone automatically selects one of the cellular networks available in your area.

If you select *Manual*, you can select a network that has a roaming agreement with your home network operator. If *No network access* is displayed, you must select another network. The phone stays in manual mode until the automatic mode is selected or another SIM card is inserted into the phone.

## Confirm SIM service actions

See SIM services (Menu 14) on page 107.

## Help text activation

To set the phone to show or not to show the help texts, press **Menu**, and select *Settings, Phone settings* and *Help text activation*.

See also Using the menu on page 39.

## Start-up tone

To set the phone to play or not to play a start-up tone when the phone is switched on, press **Menu**, and select *Settings, Phone settings* and *Start-up tone*.

## Display settings

### Wallpaper

You can set your phone to display a background picture, wallpaper, when the phone is in standby mode. Some pictures are preserved in the *Gallery* menu. You can also receive pictures via multimedia message, download them from service pages or transfer them with PC Suite from your PC and then save them in *Gallery*. Your phone supports JPEG, GIF, BMP and PNG formats.

To select a wallpaper picture

1. Press **Menu**, and select *Settings, Display settings* and *Wallpaper*.
2. Select *Select image* and the folder list in the *Gallery* menu will be shown.
3. Select the folder and scroll to the desired picture.
4. To set the picture as wallpaper, press **Options** and select *Set as wallpaper*.

To activate or deactivate the wallpaper

Press **Menu**, and select *Settings, Display settings* and *Wallpaper*. To activate/deactivate the wallpaper, select *On/Off*, respectively.

## Colour schemes

You can change the colour in some display components, for example, indicators and signal bars. Press **Menu**, and select *Settings*, *Display settings* and *Colour schemes*. Select the desired colour scheme.

## Operator logo

To set your phone to display or hide the operator logo, press **Menu**, and select *Settings*, *Display settings* and *Operator logo*.

Note that the operator logo is not displayed when the phone activates the screen saver.

For more information and availability of an operator logo via SMS, MMS or Internet, contact your network operator and/or service provider, and see also PC Suite on page 108.

## Display brightness

You can change the display brightness used on the phone display.

Press **Menu**, and select *Settings*, *Display settings* and *Display brightness*. Scroll with ( and ) to decrease and increase the brightness, and press **OK** to accept it.

## Tone settings

Press **Menu**, and select *Settings* and then *Tone settings*. You can find the same settings in the *Profiles* menu, see Profiles (Menu 4) on page 69. Note that the settings you make, change the settings in the active profile. Select

- *Incoming call alert* to select how the phone notifies you of an incoming voice call. The options are *Ringing*, *Ascending*, *Ring once*, *Beep once* and *Off*.

- *Ringtone* for incoming voice calls. To select ringtones saved in the *Gallery*, select *Open gallery* from the ringing tone list.
- *Ringtone volume* for incoming voice calls and incoming messages.
- *Vibrating alert* for incoming voice calls and incoming messages. The vibrating alert does not work when the phone is connected to a charger, desktop stand, or a car kit.
- *Message alert tone* to set the alert tone for the incoming messages, *Keypad tones*, or *Warning tones* to set the phone to sound tones for example, when the battery is running out of power.
- *Keypad tones* to set the volume of the tone.
- *Warning tones* to set the phone to sound tones for example, when the battery is running out of power.
- *Rhythmic backlight alert* to set the lights of the phone to flash, following the rhythm of the current SMS alert tone, or the current incoming call alert tone, whenever you receive a message or incoming call.
- *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group. Scroll to the caller group you want or *All calls* and press *Mark*.



**Tip:** If you receive a ringing tone via OTA or by downloading, you can save the ringing tone in the *Gallery*.

## Enhancement settings

This menu is shown only if the phone is or has been connected to one of the following enhancements: headset HDB-4, handsfree unit CARK126, Xpress-on™ Gaming cover or mobile inductive loopset LPS-4.

Press **Menu**, and select *Settings* and *Enhancement settings*. You can select *Headset*, *Handsfree*, *Loopset* or *Gaming cover* if the corresponding enhancement is or has been connected to the phone. Select

- *Default profile* to select the profile you want to be automatically activated when you connect the selected enhancement. You can select another profile while the enhancement is connected.
- *Automatic answer* to set the phone to answer an incoming call automatically after five seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer is not available
- *Lights* to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a keypress. The *Lights* option is available only when *Handsfree* is selected.
- *Cover lights* to activate and deactivate the lights when using a Xpress-on™ Gaming cover. Note that activation of the cover lights may consume the phone's battery faster.



**Note:** Always deactivate the cover lights where they may cause distraction.

## Security settings



**Note:** When security features that restrict calls are in use (call barring, closed user group and fixed dialling), calls may be possible to certain emergency numbers in some networks (e.g. 112, 911 or other official emergency numbers).

Press **Menu**, and select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to ask for your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.
- *Fixed dialling* to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card. The PIN2 code is required. When the fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number must be included in the fixed dialling list.
- *Closed user group*. Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information contact your network operator or service provider.
- *Security level*. The preset security code is 12345.

Select *Phone* and the phone will ask for the security code whenever a new SIM card is inserted into the phone.

Select *Memory* and the phone will ask for the security code when the SIM card's memory is selected and you want to change the memory in use, (see Selecting settings for contacts on page 62) or copy from one memory to another (Copying contacts on page 65).



- *Access codes* to change the security code, PIN code, PIN2 code or barring password. Codes can only include numbers from 0 to 9.

## Restore factory settings

To reset some of the menu settings to their original values, press **Menu**, and select *Settings* and *Restore factory settings*. Key in the security code and press **OK**. Note that the data you have keyed in or downloaded, for example, the names and phone numbers saved in the contacts list are not deleted.

## ■ Alarm clock (Menu 6)



The alarm clock uses the time format set for the clock.

Press **Menu**, and select *Alarm clock*.

- To set the alarm, select *Alarm time* and key in the alarm time. To change the time when the alarm time is set, select *On*.
- To set a tone for the alarm, select *Alarm tone* and the desired tone.

### When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display.

Press **Stop** to stop the alarm. If you let the phone continue to alarm for a minute or press **Snooze**, the alarm stops for about ten minutes and then resumes.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone, *Switch the phone on?* Press **No** to switch off the phone or **Yes** to switch on the phone.



**Note:** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.



## ■ Gallery (Menu 7)

You can save images and ringing tones, for example, if received in a multimedia message, in the folders of the gallery, see Reading and replying to a multimedia message on page 54.

The gallery uses shared memory, see Shared memory on page 18.



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

1. Press **Menu** and select **Gallery**. The list of options is displayed.
2. Select **View folders** to open the list of folders.

Other options available are:

- **Add folder** to add a new folder. Key in a name for the folder and press **OK**.
- **Delete folder** to select the folder you want to delete. You can not delete the original folders in the phone.
- **Rename folder** to select the folder you want to give a new name. You can not rename the original folders in the phone.
- **Gallery downloads** to download more images and tones. Select **Image downloads** or **Tone downloads**, respectively. The list of available bookmarks is shown. Select **More bookmarks** to access the list of bookmarks in the **Services** menu, see Bookmarks on page 103.

Select the appropriate bookmark to connect to the desired page. If the connection fails, you may not be able to access the page from the service whose connection settings are currently active. In this case, key in the **Services** menu and activate another set of service settings, see Making a connection to a service on page 99. Try again to connect to the page.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider.

3. Select the desired folder and the list of files in the folder is shown. *Images* and *Tones* are the original folders in the phone.
4. Scroll to the desired file. Press **Options** and some of the following options may be available:
  - *Open* to open the selected file.
  - *Delete* to delete the selected file.
  - *Send* to send a file with a multimedia message.
  - *Move* to move a file to another folder.
  - *Rename* to give a new name for the file.
  - *Set as wallpaper* to set the selected file as wallpaper.
  - *Set as ring tone* to set the selected file as ringing tone.
  - *Details* to see the details of the file, the size, for example.
  - *Sort* to sort the files and folders by date, type, name or size.

## ■ Calendar (Menu 8)

The calendar helps you to keep track of reminders, calls that you need to make, and birthdays.



The calendar uses shared memory, see [Shared memory](#) on page 18.



**Note:** Your phone must be switched on to use the functions in the [Calendar](#) menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press [Menu](#), and select [Calendar](#).



**Tip:** To quickly open the [Calendar](#) menu, press **Ⓜ** in standby mode.

Scroll to the day you want. The current day is indicated with a frame around the day. If there are any notes set for the day, the day is bolded. To view the day notes, press [Options](#) and select [Day notes](#).



**Tip:** To scroll in the notes list through the notes day by day press **( or )**.

To view a single note, scroll to the note you want to view, press [Options](#) and select [View](#). The note view allows you to view the details of the selected note. You can scroll through the note.



**Tip:** To scroll through the day notes in the note view note by note press **( or )**.

The other options for the calendar views may include:




- Options for making a note, sending a note to another phone or copying a note to another day.
- Options for deleting, editing, moving and repeating a note.


- **Settings** to set the date, time, date or time format, or the first day of the week. In the **Auto-delete** option you can set the phone to delete old notes automatically after a specified time. However, the repeat notes, for example, birthday notes, will not be deleted.

## Making a calendar note



For keying in letters and numbers, see Writing text on page 35.

Press **Menu**, and select **Calendar**. Scroll to the date you want, press **Options** and select **Make a note**. Select one of the following note types:

-  **Reminder** - Key in the subject for the reminder, press **Options** and select **Save**. To set the alarm for the note, select **Alarm on** and then set the alarm time.
-  **Call** - Key in the phone number, press **Options** and select **Save**. Key in the name, press **Options** and select **Save**. (Instead of keying in the phone number, you can press **Options** to search for the name and number in the contacts.) Then key in the time for the call and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Birthday** - Key in the person's name (or press **Options** to search for it in contacts), press **Options** and select **Save**. Then key in the year of birth, and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.

When you have set the alarm, the indicator  is displayed when you view the notes.

## When the phone alarms for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing . To stop the alarm and view the note, press **View**. To stop the alarm without viewing the note, press **Exit**.


## ■ Games (Menu 9)


Your phone software includes some games specially designed for this Nokia phone.



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Launching a game

1. Press **Menu**, and select *Games* and *Select game*.
2. Scroll to a game or a game set (name depends on the game).
3. Press **Options** and select *Open* or press . If the selection is a single game it will be launched.

Otherwise, a list of games in the selected game set is displayed. To launch a single game, scroll to the desired game and press **Options** and select *Open*, or press .

Note that running some games may consume the phone's battery faster (and you may need to connect the phone to the charger).

### Other options available for a game or game set

Options for games, see Other options available for an application or application set on page 89.

### Game downloads

Press **Menu**, and select *Games* and *Game downloads*. The list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *Services* menu, see Bookmarks on page 103.

Select the appropriate bookmark to connect to the desired service. If the connection fails, you may not be able to access the service whose connection settings are currently active. In this case, key in the

*Services* menu and activate another set of service settings, see Making a connection to a service on page 99. Try again to connect to the service.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider.

Note that when downloading a game or an application, it may be saved in *Applications* menu instead of the *Games* menu.



Note that Nokia does not warrant for applications from non-Nokia sites. If you choose to download applications from them, you should take the same precautions, for security or content, as you would with any site.

## Memory status for games

To view the size of memory available for game and application installations, press **Menu**, and select *Games* and *Memory*.

The games use shared memory, see Shared memory on page 18.

## Game settings

Press **Menu**, and select *Games* and *Settings* to set sounds, lights and shakes for the game.






## ■ Applications (Menu 10)


This menu allows the management of Java applications installed on your phone. Your phone software includes some Java applications specially designed for this Nokia phone. Various service providers offer other applications. Before you can use one of these applications you have to download it to your phone.



**Note:** The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

### Launching an application

1. Press **Menu**, and select *Applications* and *Select application*.
2. Scroll to an application or an application set (name depends on the application).
3. Press **Options** and select *Open* or press . If the selection is a single application it will be launched.

Otherwise, a list of applications in the selected application set is displayed. To launch a single application, scroll to the desired application and press **Options** and select *Open*, or press .

Note that running some applications may consume the phone's battery faster (and you may need to connect the phone to the charger).

### Other options available for an application or application set

- *Delete* to delete the application or application set from the phone.  
Note that if you delete a pre-installed application or an application set from your phone, you may download it back to your phone from the Nokia Software Market, [www.softwaremarket.nokia.com](http://www.softwaremarket.nokia.com).
- *Web access* to restrict the application for accessing the network. Select *Ask first* and the phone asks for net access, *Allowed* to allow the net access, or *Not allowed* not to allow the net access.

- [Update version](#) to check if a new version of the application is available for download from the services if supported by the application.
- [Web page](#) to provide further information or additional data for the application from an Internet page. This feature needs to be supported by the network. It is only shown if an Internet address has been provided with the application.
- [Connect via](#) the specific default settings that some applications need for the browser.
- [Details](#) to give additional information about the application.

## Downloading an application

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.

You can download new Java applications in different ways:

- Press [Menu](#), and select [Applications](#) and [App. downloads](#) and the list of available bookmarks is shown. Select [More bookmarks](#) to access the list of bookmarks in the [Services](#) menu, see Bookmarks on page 103.

Select the appropriate bookmark to connect to the desired service. If the connection fails, you may not be able to access the service whose connection settings are currently active. In this case, key in the [Services](#) menu and activate another set of service settings, see Making a connection to a service on page 99. Try again to connect to the service.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider.

- Press [Menu](#), and select [Services](#) to find a page to download an appropriate Java application. See Browsing the pages of a service on page 100.

- Use the game download functionality, see Game downloads on page 87.
- Use the Nokia Application installer from PC Suite to download the applications from a compatible PC in your phone.



Note that Nokia does not warrant for applications from non-Nokia sites. If you choose to download Java applications from them, you should take the same precautions, for security or content, as you would with any site.

Note that when downloading a game or an application, it may be saved in *Games* menu instead of the *Applications* menu.

The following texts may appear during a download or during an operation of a Java application:

- *Action failed*, an error occurs during the operation.
- *Application error*, an error occurs in the running application.
- *Application not supported*, the application is incompatible with the phone.
- *Call in progress*, the application tries to establish a web connection while the phone is already in call.
- *File format unknown*, the file format is unknown to the phone.
- *File too large*, a file is too large to run on the phone or the gateway does not support large files.
- *Invalid file*, the application is invalid.
- *Unable to start*, the phone couldn't start the application. Please try again.
- *Unable to run application*, there is insufficient resource to run the application. End any active calls or features and try to open the application again.
- *Unknown* (appearing in the Application's list), the application is invalid.

## Memory status for applications

To view the size of memory available for game and application installations, press **Menu**, and select *Applications* and *Memory*.

The applications use shared memory, see Shared memory on page 18.



## ■ Extras (Menu 11)

Your phone provides some practical functions with this menu.



**Note:** Your phone must be switched on to use the functions in *Extras* menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Calculator

The calculator in your phone adds, subtracts, multiplies, divides, counts the square and the square root and converts currency values.

This calculator has a limited accuracy and rounding errors may occur, especially in long divisions.

1. Press **Menu**, and select *Extras* and *Calculator*.
2. When '0' is displayed on the screen, key in the first number in the calculation, press **#** **.** for a decimal point.
3. Press **Options** and select *Add*, *Subtract*, *Multiply*, *Divide*, *Square*, *Square root* or *Change sign*.



**Tip:** Alternatively, press **\*** **+** once to add, twice to subtract, three times to multiply or four times to divide.

4. Key in the second number.
5. For a total, press **Options** and select *Equals*. Repeat steps 3 to 5 as many times as is necessary.
6. To start a new calculation, first press and hold **Clear**.

### Making a currency conversion

1. Press **Menu**, and select *Extras* and *Calculator*.
2. To save the exchange rate, press **Options** and select *Exchange rate*. Select either of the displayed options. Key in the exchange rate, press **#** **.** for a decimal point, and press **OK**. The exchange rate remains in the memory until you replace it with another one.

3. To make the currency conversion, key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.



**Tip:** You can also make the currency conversion in standby mode. Key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.


## Countdown timer

Press **Menu**, and select *Extras* and *Countdown timer*. Key in the alarm time in hours and minutes and press **OK**. If you wish, write your own note text which is displayed when the time expires, and press **OK** to start the countdown timer.

- To change the countdown time, select *Change time*, or to stop the timer, select *Stop timer*.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note text if it is set or else *Countdown time up*. Stop the alarm by pressing any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and to delete the note text, press **OK**.

## Stopwatch

You can measure time, take intermediate times or lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the timing in the background, press .

Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

## Time observation and time splitting

1. Press **Menu**, and select *Extras*, *Stopwatch* and *Split timing*. You can select *Continue* if you have set the timing in the background.

2. Press **Start** to start the time observation. Press **Split** every time you want to take an intermediate time. The intermediate times are listed below the running time on the display. Scroll to view the times.
3. Press **Stop** to stop the time observation.
4. Press **Options** and select
  - Start* to start the time observation again. The new time is added to the previous time.
  - Save* to save the time. Key in a name for the measured time and press **OK**. If no name is keyed in, the total time is used as a title.
  - Reset* to reset the time without saving it.

## Lap times

Press **Menu**, and select *Extras*, *Stopwatch* and *Lap timing*. Press **Start** to start the time observation and *Lap* to take a lap time. Press **Stop** to stop the lap timing. Press **Options** and you can save or reset the lap times. Refer to Time observation and time splitting above.

## Viewing and deleting times

Press **Menu**, and select *Extras*, and *Stopwatch*.

If the stopwatch is not reset, you can select *Show last* to view the latest measured time. Select *View times* and a list of names or final times of the time sets is shown, select the time set you want to view.

To delete the saved times, select *Delete times*. Select *Delete all* and press **OK**, or select *One by one*, scroll to the times you want to delete, press **Delete** and press **OK**.



## ■ Services (Menu 12)

You can access various services on the Internet. For example, these services may include weather reports, news or flight times and financial information.

Check the availability of these services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service provider will also give you instructions on how to use their services.



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

With your phone's multi-mode browser you can view the services that use Wireless Mark-Up Language (WML) or extensible HyperText Markup Language (xHTML) on their pages. Since the phone's display and the memory capacity are much smaller than in a computer, Internet content is displayed differently on the phone's display. Note that you may not be able to view all details on the Internet pages.

### Basic steps for accessing and using services

1. Save the service settings that are required to access the service that you want to use. See page 96.
2. Make a connection to the given service. See page 99.
3. Start browsing the pages of the service. See page 100.
4. Once you are finished browsing, end the connection to the service. See page 102.

### Setting up the phone for a service

You may receive the service settings as an OTA message from the network operator or service provider that offers the service that you want to use. You can also key in the settings manually or add and edit the settings with PC Suite.



For more information and for appropriate settings, contact your network operator or service provider that offers the service that you want to use. The settings may be available, for example, on their website.

### Saving the service settings received as an OTA message

When you may be able to receive the service settings as an OTA message, *Service settings received* is displayed.

- To save the received settings, press **Options** and select *Save*.

If no settings are saved in *Active service settings*, the settings are saved under the first free connection set and are also activated.

If there are settings saved in *Active service settings*, *Activate saved service settings?* will be displayed. To activate the saved settings, press **Yes**, or to save them only, press **No**.

- To view the received settings first, press **Options** and select *View*. To save the settings, press **Save**.
- To discard the received settings, press **Options** and select *Discard*.

### Keying in the service settings manually

1. Press **Menu**, and select *Services*, *Settings* and *Connection settings*.
2. Select *Active service settings*.
3. Scroll to the connection set you would like to activate and press **Activate**.

You need to activate the connection set where you want to save the service settings. A connection set is a collection of settings required to make a connection to a service.

4. Select *Edit active service settings*.

Select each of the settings one by one and key in all the required settings according to the information you have received from your network operator or service provider.

- *Settings' name* - Key in the new name for the connection set.
- *Homepage* - Key in the homepage address (start page) of the service that you want to use, press **1** for a dot.
- *Session mode* - Select *Permanent* or *Temporary*.
- *Connection security* - Select *On* or *Off*.

When the connection security is *On*, the phone tries to use a secure connection with the service. If a secure connection is not available, the connection will not be made. If you wish to connect anyway, with a non-secure connection, you must set the connection security to *Off*.

- *Data bearer* - Select *GSM data* or *GPRS*. Settings for the selected bearer, see Settings when GSM data is the selected data bearer and Settings when GPRS is the selected data bearer below.  
For pricing, connection speed and other information, contact your network operator or service provider.

#### Settings when GSM data is the selected data bearer

- *Dial-up number* - Key in the phone number.
- *IP address* - Key in the address, press **\*+** for a dot.
- *Authentication type* - Select *Secure* or *Normal*.
- *Data call type* - Select *Analogue* or *ISDN*.
- *Data call speed* - Select the speed you want to use, or select *Automatic*. *Automatic* is available only if the current selected data call type is *Analogue*. The actual data call speed depends on the service provider.
- *Login type* - Select *Manual* or *Automatic*.
- *User name* - Key in the user name.
- *Password* - Key in the password.

### Settings when GPRS is the selected data bearer


- *GPRS connection* - Select *When needed* or *Always online*.
- *GPRS access point* - Key in the access point name.

An access point name is needed to establish a connection to a GPRS network. You obtain the access point name from your network operator or service provider.

- *IP address* - Key in the address, press \*+ for a dot. You obtain the IP address from your network operator or service provider.
- *Authentication type* - Select *Secure* or *Normal*.
- *Login type* - Select *Manual* or *Automatic*. If you select *Automatic*, the login type uses the user name and password keyed in the following settings. If you select *Manual*, the login information is required when establishing a connection.
- *User name* - Key in the user name.
- *Password* - Key in the password.

## Making a connection to a service

1. Firstly, make sure that the service settings of the service you want to use are activated. To activate the settings:
  - Press **Menu**, and select *Services*, *Settings* and *Connection settings*. Select *Active service settings* and scroll to the connection set you want to activate and press **Activate**.
2. Secondly, make a connection to the service. There are three ways to connect:
  - Open the startpage, for example, the homepage of the service provider:

Press **Menu**, and select *Services* and *Home*, or in standby mode press and hold the Internet key .

- Select a bookmark of the service:

Press **Menu**, and select *Services*, *Bookmarks*, and select a bookmark.

If the bookmark does not work with the current active service settings, activate another set of service settings and try again.



- Key in the address of the service:

Press **Menu**, and select *Services* and then *Go to address*. Key in the address of the service and press **OK**.




Note that it is not necessary to add the prefix `http://` in front of the address since it will be added automatically.

## Browsing the pages of a service

After you have made a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Note that if GPRS is selected as the data bearer, the indicator  is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a GPRS connection, the indicator  will be shown on the top right of the display to indicate that the GPRS connection is suspended (on hold). After the call, for example, the phone tries to reconnect the GPRS connection.

## Using the phone keys while browsing

- Use any of the scroll keys to browse through the page.
- To select a highlighted item, press .
- To key in letters and numbers, press the keys  -  and to key in special characters, press the key **\*+**.

## Options while browsing

Press **Options** and the following options may be available. The service provider may also offer other options. Select

- *Home* to return to the startpage of the selected service.
- *Bookmarks*. See Bookmarks on page 103.
- *Add bookmark* to save the page as a bookmark.
- *Download links* to show the list of bookmarks for downloading.
- *Shortcuts* to open a new list of options that are, for example, specific to the page.
- *View image* or *View images* to view images and animations from the page.
- *Call | Edit | Open row | Open | Open list* to call, to key in text or to select a highlighted item on the page.
- *Go to address* to key in the address of the service you want to access.
- *Service inbox*. See Service inbox on page 104.
- *Appear. settings*. See Appearance settings of the multi-mode browser on page 102.
- *Cookie settings*. See Selecting Cookie settings on page 103.
- *Use detail* to extract numbers, e-mail addresses and website addresses from the current page.

- [Reload](#) to reload and update the current page.
- [Clear the cache](#). See Clearing the cache memory on page 105.
- [Security info](#) to view security information about the current connection and the server.
- [Quit](#). See Disconnect from a service on page 102.



**Note:** If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.



To empty the cache, see Clearing the cache memory on page 105.

## Direct calling

The multi-mode browser supports functions that you can access while browsing. You can make a voice call, send DTMF tones while a voice call is in progress, and save in contacts a name and a phone number from a page.

## Disconnect from a service

To quit browsing and to end the connection, press [Options](#) and select [Quit](#). When [Quit browsing?](#) is shown, press [Yes](#).

Alternatively, press . If [GSM data](#) is the selected data bearer, press  twice. The phone ends the connection to the service.

## Appearance settings of the multi-mode browser

1. While browsing, press [Options](#), and select [Other options](#) and [Appear. settings](#), or in standby mode, press [Menu](#), and select [Services](#), [Settings](#) and [Appearance settings](#).

2. Select *Text wrapping*. Select *On* and the text continues on the next line if it cannot be shown on one line. If you select *Off*, the text is abbreviated if it is too long to be shown on one line.  
Select *Show images*. Select *No* and any pictures appearing on the page are not shown. This can speed up the browsing of pages that contain a lot of pictures.

## Selecting Cookie settings

A cookie is data that a site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see *Clearing the cache memory* on page 105.

1. While browsing, press *Options*, and select *Other options*, *Security* and *Cookies*,  
or in standby mode, press *Menu*, and select *Services*, *Settings*, *Security settings* and *Cookies*.
2. Select *Allow* or *Reject* to allow or prevent the phone receiving cookies.

## Bookmarks

You can save page addresses as bookmarks in the phone's memory.

1. While browsing, press *Options* and select *Bookmarks*,  
or in standby mode, press *Menu*, and select *Services* and *Bookmarks*.
2. Scroll to the bookmark you want to use and press *Options*.
3. Select *Go to* to make a connection to the page associated with the bookmark. You can also view the title and the address of the selected bookmark, edit or delete the selected bookmark, or send it directly to another phone as a bookmark, or as an OTA message, or create a new bookmark.



Note that your phone may have some pre-installed bookmarks for sites not affiliated to Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

## Receiving a bookmark

When you have received a bookmark (sent as a bookmark) *1 bookmark received* is displayed. Press **View**, then press **Options** and select **View** to view the bookmark, **Save** to save the bookmark, or **Discard** to discard it.

## Downloading

1. To download more tones, images, games or applications to your phone, press **Menu**, and select **Services** and **Download links**.
2. Select **Tone downloads**, **Image downloads**, **Game downloads** or **App. downloads** to download tones, images, games or applications, respectively.

Download content only from the sources you trust. See also Game downloads on page 87 and Downloading an application on page 90.

## Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider. Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a service.

To access the **Service inbox** in standby mode, when you have received a service message, press **Show**.

- If you press **Exit** the message is moved to the **Service inbox**. To access the **Service inbox** later, press **Menu**, and select **Services**, **Settings** and **Service inbox**.



To access the *Service inbox* while browsing, press **Options** and select *Other options* and *Service inbox*. Scroll to the message you want, press **Options**. Select *Retrieve* to activate the multi-mode browser and download the marked content, or *Details* to display detailed information on the service notification, or select *Delete* to delete it.

## Service inbox settings

Press **Menu**, and select *Services*, *Settings* and *Service inbox settings*.

- Select *Service messages* and *On* (or *Off*) to set the phone to receive (or not to receive) service message.
- Select *Automatic connection*. If you have set the phone to receive service messages and select *Automatic connection on*, the phone will automatically activate the browser when the phone has received a service message.

If you select *Automatic connection off*, the phone will activate the browser only after you have selected *Retrieve* when the phone has received a service message.

## Clearing the cache memory

The information or services you have accessed are stored in the cache of your phone. A cache is a buffer memory, which is used to store data temporarily. To empty the cache:

- while browsing, press **Options**, and select *Other options* and *Clear the cache*, or
- in standby mode, press **Menu**, and select *Services* and *Clear the cache*.

## Authority certificates

For using some services, such as banking services, you need security certificates. Using the certificates can help you improve the security of connections between your phone and a gateway or server, if the *Connection security* is set to *On*.

You can download authority certificate from a page, if the service supports the use of authority certificates. After the download, you can view the certificate and then save or delete it. Saved certificates are added to the certificate list in the phone.


The phone indicates if the identity of the server or gateway cannot be verified, if the server or gateway certificate is not authentic or if you do not have the correct authority certificate in your phone.

### Viewing the list of authority certificates

Press **Menu**, select *Services*, *Settings*, *Security settings* and *Authority certificates*.

See also *Security info* in Using the phone keys while browsing on page 101.

### Security indicator

If the security indicator  is displayed during a connection, the data transmission between the phone and the gateway or server (identified by the *IP address* in the *Edit active service settings*) is encrypted. However, the security indicator does not indicate that the data transmission between the gateway and the content server (the location where the requested resource is stored) is secure. It is up to the service provider to secure the data transmission between the gateway and the content server.

## ■ Go to (Menu 13)

To access some specific functions quickly, press **Menu** and select *Go to* and select the desired function from the list.

If you wish to add some functions to the list, press **Add**, scroll to the function that you want to add and press **Mark**.

To remove or add more functions on the list, see Personal shortcuts on page 70.



## ■ SIM services (Menu 14)

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu. It is shown only if it is supported by your SIM card. The name and contents of the menu depends on the available services.



**Note:** For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

You can set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option *Yes* within the menu *Confirm SIM service actions*, menu 4-3-6.

Note that accessing these services may involve sending a text message (SMS) or making a phone call for which you may be charged.



## 6. PC Connectivity

---

With the PC suite you can, for example, send text and picture messages, synchronise contacts and calendar between your phone and a compatible PC.

Connect the connectivity adapter cable DKU-5 to the USB port on the back of your computer and to the connector on your phone.

You may find more information and downloadable files, e.g. PC suite in the support area on the Nokia's web site, [www.nokia.com](http://www.nokia.com).

### ■ PC Suite

The PC Suite contains the following applications:

- **Nokia Application Installer** to install Java applications from the PC to the phone.
- **Nokia Image Converter** to make images usable for multimedia messages or wallpapers and to transfer them to your phone.
- **Nokia Sound Converter** to edit polyphonic ringing tones to be compatible with your phone and to transfer them to your phone.
- **Nokia Content Copier** to copy information or back-up information from your phone to the PC or to another compatible Nokia phone.
- **Nokia PC WAP Manager** to edit and send your bookmarks or update the connection sets to your phone.

- **Nokia Phone Editor** to send text messages and edit the contacts directory and message settings of your phone.
- **Nokia PC Sync** to synchronise the contacts directory and calendar between your phone and a compatible PC.
- **Nokia Connection Manager** to select the connection type between the PC and the phone.
- **Nokia Phone Browser** to copy images and tones from your phone to your PC and vice versa.



**Note:** Copyright protection may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.

## 7. Battery statements

---

### ■ Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire !

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

# CARE AND MAINTENANCE

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

# IMPORTANT SAFETY INFORMATION

---

## ■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

## ■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

## ■ Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:



- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

### Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air-bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted facilities

Switch your phone off in any facility where posted notices so require.

## ■ Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## ■ Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.



## ■ Emergency calls



**Important:** This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions. Because of this, connections in all conditions can not be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

### To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength.  
Some networks may require that a valid SIM card is properly inserted in the phone.
2. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
3. Key in the emergency number for your present location (e.g. 112, 911 or other official emergency number).  
Emergency numbers vary by location.
4. Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

## ■ Certification information (SAR)

THIS MODEL PHONE MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radiofrequency (RF) energy recommended by The Council of the European Union. These limits are part

of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg.\* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this model phone when tested for use at the ear is 0.76 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

This product meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 2.2 cm away from your body.

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at [www.nokia.com](http://www.nokia.com).

# LIMITED MANUFACTURER'S WARRANTY

## PART OF EUROPE & AFRICA REGION

This limited warranty shall apply in part of Nokia Mobile Phones' Europe & Africa Region unless a local warranty exists. Nokia Corporation, Nokia Mobile Phones ("Nokia") warrants that this NOKIA product ("Product") is at the time of its original purchase free of defects in materials, design and workmanship subject to the following terms and conditions:

1. This limited warranty is given to the end-purchaser of the Product ("Customer"). It shall neither exclude nor limit i) any mandatory statutory rights of the Customer or ii) any of the Customer's rights against the seller/dealer of the Product.
2. The warranty period is twelve (12) months from the date on which the first Customer purchased the Product. In case of a subsequent purchase or other change of owner/user, such warranty period shall continue for the remaining part of the twelve (12) month period and otherwise remain unaffected. This limited warranty is only valid and enforceable in the following countries: Bosnia, Bulgaria, Croatia, Cyprus, the Czech Republic, Estonia, any member state of the European Union, Hungary, Iceland, Israel, Latvia, Lithuania, Macedonia, Malta, Norway, Poland, Romania, the Slovak Republic, Slovenia and Switzerland.
3. During the warranty period Nokia or its authorized service company will repair or replace, at Nokia's sole discretion, a defective Product. Nokia will return the repaired Product or another Product to the Customer in good working condition. All parts or other equipment for which replacements have been provided shall become the property of Nokia.
4. A repaired or replaced Product will not be given a prolonged or renewed warranty period.
5. This limited warranty will not cover painted covers or other similar personalized parts. In all cases that require unlocking or locking of an operator SIM-lock, Nokia will first direct the Customer to such operator for unlocking or locking of the operator SIM-lock before repairing or replacing the Product.
6. This limited warranty shall not apply to deterioration due to normal wear and tear. This limited warranty shall further not apply if:

(i) the defect was caused by the fact that the Product has been subjected to a use in contradiction with the owner's/user manual, rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or rapid changes in such conditions, corrosion, oxidation, unauthorized modifications or connections, unauthorized opening or repair, repair by use of unauthorized spare parts, misuse, improper installation, accident, forces of nature, spillage of food or liquid, influence from chemical products or other acts beyond the reasonable control of Nokia (including but not limited to deficiencies in consumable parts, such as batteries which all by their nature have a limited lifetime, and breakage or damage to antennas) unless the defect was caused directly by defects in materials, design or workmanship;

(ii) Nokia or its authorized service company was not notified by the Customer of the defect within thirty (30) days after the appearance of the defect within the warranty period;

(iii) the Product was not returned to Nokia or its authorized service company within thirty (30) days after the appearance of the defect within the warranty period;

(iv) the Product serial number, the accessory date code or the IMEI number has been removed, erased, defaced, altered or is illegible;

(v) the defect was caused by a defective function of the cellular network;

(vi) the defect was caused by the fact that the Product was used with or connected to an accessory not manufactured and supplied by Nokia or used in other than its intended use;

(vii) the defect was caused by the fact that the battery was short-circuited or seals of the battery enclosure or cells were broken or show evidence of tampering or the battery was used in equipment other than for which it has been specified; or

(viii) the Product software needs to be upgraded due to changes in cellular network parameters.

7. To claim this limited warranty the Customer shall present either i) a legible and non-modified original warranty card which clearly indicates the name and address of the seller, the date and place of purchase, the product type and the IMEI or other serial number or alternatively ii) a legible and non-modified original purchase receipt which contains the same information, if such purchase receipt is presented to the seller/dealer of the Product.

8. This limited warranty is the Customer's sole and exclusive remedy against Nokia and Nokia's sole and exclusive liability against the Customer for defects or malfunctions of the Product. This limited warranty replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise. Nokia is in no event liable for any incidental, consequential or indirect damage, costs or expenses. Neither is Nokia in any event liable for any direct damage, costs or expenses, if the Customer is a legal person.

9. Any change or amendment to this limited warranty requires Nokia's prior written consent.

# WARRANTY CARD

**FILL IN WITH BLOCK LETTERS**

Purchaser's Name: \_\_\_\_\_

Address: \_\_\_\_\_

Country: \_\_\_\_\_

Phone: \_\_\_\_\_

Date of Purchase (dd/mm/yy):  /  /

Product Type (on phone type label under battery):  -

Product Model (on phone type label under battery):

Phone Serial No (on phone type label under battery):

/  /

Place of Purchase: \_\_\_\_\_

Store Name: \_\_\_\_\_

Store Address: \_\_\_\_\_



ITEM:  
IMEI:

B

Stamp