

Nokia 7070 Prism

用戶指南

一致性聲明

CE 0434

諾基亞公司聲明本 RH-116 產品符合 1999/5/EC 指引的基本要求和和其他相關規定。一致性聲明的副本可於 http://www.nokia.com/phones/declaration_of_conformity/ 內找到。

© 2008 Nokia. 版權所有，翻印必究。

諾基亞、Nokia、Nokia Connecting People 和 Navi 是諾基亞公司的商標或註冊商標。Nokia tune 是諾基亞公司的聲音標誌。本文件中所提及的其他產品及公司名稱可能分別為其各自擁有者之商標或商號名稱。

未事先取得諾基亞的書面同意，嚴禁以任何形式複製、傳輸、分發或儲存本文件的部份或全部內容。

美國專利號碼 5818437，其他專利正在申請中。T9 文字輸入軟件
Copyright © 1997-2008. Tegic Communications, Inc. 版權所有。



包括 RSA BSAFE 密碼編譯或來自 RSA Security 的安全協定軟件。



Java

POWERED

Java 及所有基於 Java 的商標是 Sun Microsystems, Inc 的商標或註冊商標。

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

本產品擁有 MPEG-4 視覺專利組合許可證，(i) 在消費者參與個人和非商業活動下符合 MPEG-4 視覺準則提供的資料，這些資料只作個人和非商業性使用，以及 (ii) 與 MPEG-4 影像連接一起使用，影像由持牌的影像供應商提供。未授與、亦未包含其他方面的使用許可。包括推廣性、內部及商業用途在內的附加資料可從 MPEG LA, LLC 獲得。請瀏覽 <http://www.mpegla.com>。

諾基亞奉行持續研發的政策。諾基亞保留對本文所描述之任何產品進行更改及改進的權利，恕不預先通知。

在適用法律許可的最大範圍內，任何情況下對資料遺失、收益損失或因此所引致的任何特別的、意外的、連帶的或間接的損失，諾基亞恕不負責。

本文件的內容以「現有形式」提供。除所適用的法律外，諾基亞不對本文件的正確性、可靠性或其內容提供任何保證，不論是明示或暗示的，包括但不限於適銷性及針對特定目的的適用性的暗示保證。諾基亞保留隨時修訂或收回本文件的權利，恕不預先通知。

如需最新產品的資料，請參閱 www.nokia.com.hk。

特定產品、產品應用程式及服務的供應情況可能根據地區的不同而有所分別。請向您的諾基亞經銷商查詢以獲取詳細資料及提供的語言選項。

出口控制

本裝置可能含有受美國及其他國家出口法律及法規約束的物品、技術或軟件。禁止與法律相抵觸的改動。

本裝置中提供的第三方應用程式由不從屬於或關聯於諾基亞的個人或團體建立和擁有。對於這些第三方的應用程式，諾基亞並不擁有版權或知識產權。因此，諾基亞並沒有責任向終端用戶提供支援或保證這些應用程式的功能，亦不會對這些應用程式或物件上的資料負責。諾基亞對這些第三方應用程式不負任何擔保責任。

如您使用這些應用程式，表示您清楚知道應用程式以「現有形式」提供，不論明示或暗示及在法律覆蓋範圍下均沒有保證。您亦清楚無論諾基亞及其附屬機構均沒有發表任何陳述或保證，不論明示或暗示，包括但不限於標題的保證、能切合特定目的或達致特定目的的经营能力，或應用程式不會侵犯第三者的專利、版權、商標或其他權利。

目錄

安全規定7

1. 一般資料.....9

關於本裝置.....9
網絡服務.....9
增強配套.....10
密碼功能.....10
諾基亞網上支援.....11

2. 快速入門.....12

安裝 SIM 卡和電池.....12
為電池充電.....12
天線.....13
按鍵及插孔.....14
開機和關機.....15
待機模式15
鍵盤鎖定 (鍵盤鎖).....15
不插入 SIM 卡亦可使用的 功能.....16

3. 通話.....17

撥打電話及接聽來電17
喇叭.....17
撥號快捷操作.....17

4. 中文輸入.....18

在輸入法之間互相切換18
拼音輸入法.....19
拼音輸入法.....19
歧義拼音.....19
筆劃輸入法.....19
詞組輸入.....20
開啟或關閉智慧預測型英 文輸入法.....21
傳統英文輸入法.....22
智慧預測型英文輸入法22
輸入文字的秘訣.....22

5. 導覽功能表.....24

6. 訊息.....25

文字訊息與多媒體訊息25
文字訊息.....25
多媒體訊息及多媒體 Plus 訊息.....25
建立文字或多媒體訊息26

電子郵件.....	27	配置.....	37
電郵設定精靈.....	27	恢復原廠設定.....	38
編寫及發送電子郵件	27	10. 多媒體資料.....	39
下載電子郵件.....	28	11. 影音工具.....	40
快顯訊息.....	28	錄音機.....	40
Nokia Xpress 聲音短訊	28	12. 應用程式.....	41
即時訊息.....	29	13. 電子秘書.....	42
留言訊息.....	29	鬧鐘.....	42
訊息設定.....	29	日曆和待辦事項.....	42
7. 通訊錄.....	31	字典.....	43
8. 通話記錄	33	14. 網絡	44
9. 設定.....	34	連接至服務.....	44
操作模式.....	34	外觀設定.....	45
鈴聲.....	34	快取記憶體.....	45
螢幕.....	34	服務信箱.....	46
日期和時間.....	35	瀏覽器安全.....	46
快捷操作.....	35	15. SIM 服務.....	47
數據連線.....	35		
分組數據.....	35		
數據傳送.....	36		
通話和手機.....	36		
配套.....	37		

目錄

16. 諾基亞原廠配套.....48

增強配套.....48

電池.....49

17. 電池資料.....50

充電及放電.....50

諾基亞電池認證指引
.....51

 認證全息影像.....52

 如果您的電池不是可靠
 的電池怎麼辦?52

保養及維修.....53

附加安全資料.....55

兒童.....55

操作環境.....55

醫療設備.....55

 植入式醫療設備.....56

 助聽器.....56

汽車.....56

可能發生爆炸的環境
.....57

緊急電話.....58

許可證明(SAR).....58

索引.....60

安全規定

請閱讀下列簡易的使用準則。違反這些準則可能會引致危險或觸犯法律。請閱讀完整的用戶指南以獲取進一步資料。



安全規定

當禁止使用無線電話，或可能因此造成干擾或危險時，請勿開機。



行車安全第一

請遵守當地所有法律。駕車時請保持雙手活動自如，以便控制車輛。行車安全是駕駛車輛時優先考慮的因素。



干擾

所有無線裝置都可能受到干擾，影響效能。



在醫院內請關機

請遵守所有限制。位處醫療儀器附近時請關機。



在飛機上請關機

請遵守所有限制。無線裝置會對飛機飛行造成干擾。



加油時請關機

請勿在加油站使用手機。請勿在燃料或化學品附近使用手機。

安全規定



位處爆破作業附近時請關機

請遵守所有限制。進行爆破作業時請勿使用手機。



合格服務

僅容許合格的服務人員安裝或維修本產品。



增強配套與電池

請僅使用經認可的增強配套及電池。請勿連接不兼容的產品。



防水性

本裝置並不防水。請保持乾燥。

1. 一般資料

關於本裝置

本指南中描述的無線裝置已獲許用於 GSM 900 和 1800 網絡。請向您的服務供應商查詢，獲取有關網絡的詳情。

當使用本裝置的功能時，請遵守所有法律並尊重當地習俗，他人的隱私和合法權利 (包括版權)。

版權保護可以防止一些圖像、鈴聲及其他內容被複製、修改、傳送或轉發。



警告： 要使用本裝置內的任何一項功能 (鬧鐘功能除外)，裝置必須開啟。當使用無線裝置可能會造成干擾或危險時，請勿開機。

網絡服務

要使用手機，必須享有無線服務供應商提供的服務。部份功能要求特殊網絡功能。並非所有網絡均支援這些功能；某些網絡可能要求您在使用網絡服務前先向服務供應商作特殊申請。您的服務供應商會為您提供指引，並說明要收取的費用。一些網絡可能有限制，影響您使用網絡服務。例如，有些網絡可能無法支援所有受語言影響的字符和服務。

服務供應商可能會要求您關閉或不要啟動裝置的某些功能。這樣，這些功能便不會顯示於您裝置的功能表中。本裝置可能已經過特殊配置，例如：功能表名稱、功能表次

一般資料

序及圖標的更改。請向您的服務供應商查詢以獲取更多資料。

增強配套

使用配件及增強配套時的注意事項

- 請將所有附件及增強配套置於兒童無法觸及之處。
- 切斷任何配件或增強配套的電源時，請握住插頭拔出，不要拉電線。
- 請定期檢查汽車中的增強配套是否安裝妥當並且操作正常。
- 僅容許合格的人員安裝複雜的車用增強配套。

密碼功能

保密碼有助於保護手機避免未經授權的使用。您可以建立及更改密碼，並將手機設定為要求輸入密碼。請勿向他人透露密碼，並將密碼與手機分別放在不同的安全地方。如果您忘記密碼而您的手機亦已鎖定，您的手機可能會要求服務，並可能因此而產生附加收費。如要獲取更多資料，請向諾基亞客戶服務中心或您手機的經銷商查詢。

PIN 碼隨 SIM 卡一起提供，可防止他人未經授權使用您的 SIM 卡。PIN2 碼會隨某些 SIM 卡一起提供，在存取某些服務時需要輸入此密碼。如果您連續三次輸入錯誤的 PIN 碼或 PIN2 碼，裝置會要求您輸入 PUK 碼或 PUK2 碼。如果您沒有這些密碼，請向您的服務供應商查詢。

存取您 SIM 卡安全模組內的資料時要求模組 PIN 碼。執行數碼簽名時，可能需要輸入簽名 PIN 碼。在使用限制密碼服務時需要輸入限制密碼。

要設定您手機使用密碼功能和安全設定的方式，選擇**功能表 > 設定 > 保密**。

諾基亞網上支援

請瀏覽諾基亞網站 www.nokia.com.hk/support 以獲取本指南的最新版本、與您的諾基亞產品相關的附加資料、下載內容及其他服務等。

配置設定服務

為您的手機型號下載免費的配置設定 (如 MMS、GPRS、電子郵件及其他服務)，網址為：www.nokia.com.hk/settings。

客戶服務

如果您需要聯絡客戶服務部門，請瀏覽以下網址以獲取當地 Nokia Care 聯絡中心的清單：www.nokia.com.hk/contactus。

NOKIA
Care

維修

如要獲取維修服務，請瀏覽以下網址以查看距您最近的諾基亞服務中心：<http://www.nokia.com.hk/repair>。

2. 快速入門

安裝 SIM 卡和電池

移除電池前務必關閉裝置並斷開與充電器的連接。

SIM 卡及其觸點很容易因刮擦或彎曲而損壞，因此處理、插入或取出 SIM 卡時要加倍小心。



1. 要移除後蓋，按住後蓋並朝手機底部方向滑動 (1)。
2. 移除電池 (2)。
3. 插入 SIM 卡 (3) 及 (4)。
4. 插入電池 (5)，然後放回後殼 (6)。

為電池充電

使用充電器為本裝置充電之前，請先檢查該充電器的型號。本裝置適用於 AC-3 充電器。

具體的充電器型號可能根據插頭的類型而不同。例如：AC-3 充電器的型號可能為 AC-3C、AC-3U、AC-3X 或其他類似型號。



警告： 僅使用經諾基亞認可、適用於本特定型號的電池、充電器及增強配套。使用其他未經許可的增強配套，可能會令手機的保養失效，甚至造成危險。

有關認可的增強配套的供應情況，請向經銷商查詢。切斷任何增強配套的電源時，請握住插頭拔出，不要拉電線。

1. 將充電器連接至電源插座。
2. 將充電器的導線插入手機的充電器插孔內。

如果電池已完全沒電，可能要過幾分鐘後，充電指示符號才會出現在螢幕上或才能撥打電話。



天線



 
注意： 本裝置備有內置及外部天線。如同任何其他無線電發送裝置一樣，使用時盡量避免接觸天線。接觸此類天線會影響通話品質，並使裝置的耗電量增加，亦可能會縮短電池壽命。



圖中灰色標記的位置為天線區域。

按鍵及插孔

1	聽筒
2	螢幕
3	麥克風
4	選擇鍵
5	Navi™ 鍵：以下稱為瀏覽鍵
6	通話鍵
7	結束鍵和電源鍵

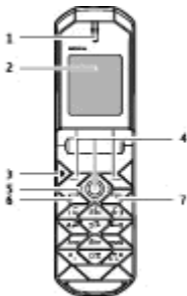


8	耳機插孔
9	充電器插孔
10	喇叭





 注意： 避免接觸此插孔，因其僅供獲授權的服務人員使用。



開機和關機

要開啟或關閉手機，按住電源鍵。

待機模式

當手機已準備就緒，且您未輸入任何字元時，手機處於待機模式下。

1	網絡訊號強度	
2	電池電量	
3	網絡名稱或網絡標誌	
4	選擇鍵的功能	

左選擇鍵為**捷徑**，可顯示個人快捷操作清單中的功能。顯示此清單時，選擇**操作** > **選擇操作**可查看可用的功能，而選擇**操作** > **組織**可整理您快捷操作清單中的功能。

鍵盤鎖定 (鍵盤鎖)

要防止意外按下按鍵，選擇**功能表**，並在 3.5 秒鐘內按 * 以鎖定鍵盤。

快速入門

要為鍵盤開鎖，選擇**開鎖**，並在 1.5 秒鐘內按*。如果**安全鍵盤鎖**為開，請在系統請求時輸入保密碼。

要設定當手機處於待機模式超過預定時間後自動鎖定鍵盤，選擇**功能表 > 設定 > 手機 > 自動鍵盤鎖 > 開**。

要在鍵盤鎖定的情況下接聽電話，按通話鍵。結束通話或拒絕來電後，鍵盤會自動鎖定。

當鍵盤鎖定時，可能仍可撥打已編入本裝置內的官方緊急號碼。

不插入 SIM 卡亦可使用的功能

在未插入 SIM 卡的情況下，手機中的有些功能可以使用，如電子秘書功能和遊戲。而在功能表中有些功能會呈現為灰色，而且無法使用。

3. 通話

撥打電話及接聽來電

要撥打電話，輸入電話號碼 (如有必要，輸入國家和地區代碼)。按通話鍵以撥打該號碼。通話期間，向右捲動可提高聽筒或耳機的音量，或者向左捲動可降低它們的音量。

要接聽來電，按通話鍵。要拒絕接聽來電，按結束鍵。

喇叭

如果適用，您可以選擇**喇叭**或**普通**以在通話期間使用手機的喇叭或聽筒。



警告：當喇叭正在使用時，請勿把裝置靠近您的耳朵，因為音量可能非常響亮。

撥號快捷操作

要將電話號碼設定給其中一個數字鍵 (2 至 9)，選擇**功能表** > **通訊錄** > **單鍵撥號**，捲動至所需的電話號碼，然後選擇**設定**。輸入所需的電話號碼，或選擇**尋找**以及儲存的聯絡人。

要啟動單鍵撥號功能，選擇**功能表** > **設定** > **通話** > **單鍵撥號** > **開**。

要使用單鍵撥號方式撥打電話，在待機模式下，按住所需的數字鍵。

4. 中文輸入

手機中可用的輸入法是根據手機銷售市場預先設定的。

本手機支援簡體中文輸入法。

要在書寫文字時切換書寫語言，按住 #，然後選擇書寫語言及想要的語言。

在輸入法之間互相切換

輸入法指示符將顯示在螢幕的上方：

拼音	
筆劃	
大寫	
小寫	
數字輸入	

並非所有的輸入法都可以在任何情況下使用。請經常查看指示符號，獲知使用的是哪一種輸入法。

要在提供的輸入法之間進行切換，反復按 #，直至顯示需要的輸入法指示符。

拼音輸入法

拼音輸入法

拼音符號印於數字鍵上。您僅需按鍵一次，而不用考慮符號在數字鍵上的位置。手機將進行拼音符號的邏輯組合。

要使用拼音輸入法輸入字元：

1. 按數字鍵一次輸入您想要輸入的每個拼音符號 (使用「v」輸入「ü」)。
2. 重複按 **1** 鍵直至出現您想要的聲標。
3. 必要時反復按 * 以突出顯示需要的拼音組合。
4. 捲動至需要的中文字元，選擇**確認**。

歧義拼音

使用此功能，您的手機可容許提供某些拼音對的歧義拼音：c/ch、z/zh、s/sh、n/l、r/l、f/h、an/ang、in/ing 及 en/eng。要選擇想使用的歧義組合，當沒有顯示輸入法符號或預測列表時，選擇**操作** > **近似拼音**。

筆劃輸入法

組成中文字元的筆劃分為五類：橫、豎、撇、點及勾。每種筆劃分別對應一個從 **1** 至 **5** 的數字鍵。

筆劃分類如下表所示：

按鍵	1	2	3	4	5
基本筆劃	一	丨	丿	丶	㇇

1. 按相應的數字鍵，以輸入詞組第一個字元的音節或拼音首字母，或者前幾個筆劃。
2. 按 **0** 可輸入分隔符號；或者，在拼音模式下，重複按 **1** 可輸入字元的聲調標記。
3. 輸入下一個中文字元的音節或拼音首字母，或者前幾個筆劃。
4. 如有必要，重複步驟 2 和 3，以輸入詞組中所有字元的音節或拼音首字母，或者前幾個筆劃。
5. 如果在拼音模式下，可根據需要重複按 *****，以突出顯示您想要的拼音組合。
6. 在候選清單中捲動至想要的詞組，然後選擇**確認**。

並非所有詞組都儲存在手機中。要建立一個最多包含七個字元的詞組，當未顯示輸入符號或預想清單時，選擇**操作 > 用戶詞組 > 新增**。如果資料庫已滿，則新詞組會取代最久不用的詞組。

使用分隔符號，可分隔不同字元音節的拼音字串或不同字元的筆劃。當您輸入一個分隔符號時，手機會預想哪些字元或字元字串可以與您輸入的拼音或筆劃字串及分隔符號(如果有)組合的可能候選字元構成一個詞組。

開啟或關閉智慧預測型英文輸入法

當**書寫語言**設置為英文時，可以使用傳統或智慧預測型輸入法輸入文字。

當編寫英文時，要開啟或關閉智慧預測型英文輸入法，按 **#** 兩次，然後選擇**啟動預想**或**關閉預想**。

傳統英文輸入法

重複按數字鍵 **2** 至 **9**，直至出現需要的字元。可用的字元視乎所選書寫語言而定。

如果需要的下一個字母與現有字母在同一個按鍵上，請等候遊標出現，然後再輸入該字母。

要使用最常用的標點符號及特殊字元，重複按數字鍵 **1** 或按 ***** 選擇特殊字元。

智慧預測型英文輸入法

預測輸入基於內置的詞典，而且可在詞典中添加新詞。

1. 使用數字鍵 **2** 至 **9** 輸入文字。按一次按鍵可輸入一個字母。
2. 要透過加入空格確認單詞，選擇 **0**。
 - 如果單詞不正確，重複按 *****，並從列表選擇單詞。
 - 若在單字後面出現「？」號（問號），表示字典中沒有該字。要新增單詞至詞典，選擇**拼寫**。使用傳統文字輸入法輸入單詞，然後選擇**儲存**。
 - 要輸入複合字，先輸入該字的第一部分，並按右捲動鍵進行確認。寫入後半部份並確認該字。
3. 開始寫下一個字。

輸入文字的秘訣

編寫文字時也可能使用以下功能：

- 要在沒有顯示輸入法符號時插入數字，按住想要的數字鍵。
- 要在沒有顯示候選或智慧輸入法列表時插入空格，按 **0**。
- 要在已完成輸入一個單詞或字元後輸入特殊字符，按 *****。
- 要重複輸入編輯視窗中游標左邊的字元，按住 *****。
- 要結束智慧中文輸入法，選擇**返回**，或按相關鍵開始輸入新的文字。

5. 導覽功能表

手機功能會劃分到不同的功能表中。但並非所有的功能表功能或選項均在這裡進行說明。

在待機模式下，選擇**功能表**，然後選擇所需的**功能表**及子**功能表**。選擇**退出**或**返回**可退出當前**功能表**級別。按**結束**鍵可直接返回至待機模式。要更改**功能表**格式，選擇**功能表 > 操作 > 主功能表格式 > 清單**或**圖示**。

6. 訊息

您可以閱讀、編寫、發送及儲存文字訊息、多媒體訊息、聲音短訊及快顯訊息，以及電子郵件。僅當您的網絡或服務供應商支援時，才能使用這些訊息服務。

文字訊息與多媒體訊息

您可以編寫訊息，也許還要附加檔案 (例如，一張圖片)。附加檔案後，手機會自動將文字訊息改為多媒體訊息。

文字訊息

本裝置支援發送大小超過單個訊息限制的文字訊息。較長的訊息會作為兩個或兩個以上的訊息發送。服務供應商可能會收取相應的費用。使用重音符號或其他標記符號的字符及部份語言選項中的字符會佔用更多空間，並限制單個訊息可以發送的字符數。

螢幕上方的指示符號顯示剩餘的字符總數及發送所需的訊息數。

在您可以發送任何文字訊息或 SMS 電郵訊息前，您必須儲存訊息中心號碼。選擇**功能表 > 訊息 > 訊息設定 > 文字訊息 > 訊息中心 > 新增中心**，輸入服務供應商提供的名稱與號碼。

多媒體訊息及多媒體 Plus 訊息

多媒體 (MMS) 訊息可以包含文字、圖片、音效檔和短片。增強的多媒體訊息亦可以包含其他任意內容，即使是您手機不支援的檔案。

訊息

僅具備兼容功能的裝置才可接收及顯示多媒體訊息。訊息的顯示外觀視乎接收裝置而有所不同。

無線網絡可能對多媒體訊息的大小有限制。如果插入的圖片大小超過此限制，裝置可能會壓縮圖片，以便透過多媒體訊息傳送。



重要訊息： 開啟訊息時應加倍小心。訊息中可能包含惡意軟件或其他對本裝置或個人電腦造成損害的內容。要查詢多媒體訊息服務 (MMS) 的供應情況及要申請此項服務，請向您的服務供應商查詢。亦可手動下載配置設定。[請參閱「諾基亞網上支援」，第 11 頁。](#)

建立文字或多媒體訊息

1. 選擇**功能表** > **訊息** > **建立訊息** > **訊息**。
2. 要新增收訊人，捲動至**收訊人：**欄位，輸入收訊人的電話號碼或電子郵件位址；或選擇**新增**從可用選項中選擇收訊人。選擇**操作**以新增收訊人和主題並設定發送選項。
3. 捲動至**文字：**欄位，然後輸入訊息文字。
4. 要在訊息中附加內容，捲動至螢幕底部的附件工具列，然後選擇想要的內容類型。
5. 要傳送訊息，按**發送**。

將在螢幕頂部指示訊息類型，並根據訊息內容自動更改其類型。

服務供應商可能會根據訊息類型而收取不同的費用。請向服務供應商查詢以獲取詳細資料。

電子郵件

可以透過手機存取您的 POP3 或 IMAP4 電子郵件帳號，以便閱讀、編寫及發送電子郵件。此電子郵件應用程式不同於 SMS 電子郵件功能。

您必須擁有電子郵件帳號並正確設定，然後才能使用電子郵件。要查看您的電子郵件帳號的可用性及其設定，請與電子郵件服務供應商聯絡。您可能會接收到以配置訊息的形式提供的電子郵件配置設定。

電郵設定精靈

如果手機中沒有定義電郵設定，電郵設定精靈便會自動啟動。要啟動設定精靈以加入額外的電郵帳號，選擇**功能表** > **訊息**以及現有電郵帳號。選擇**操作** > **新增信箱**可啟動電郵設定精靈。遵從螢幕上的指引。

編寫及發送電子郵件

要編寫電子郵件，選擇**功能表** > **訊息** > **建立訊息** > **電子郵件訊息**。要在電子郵件中附加檔案，選擇**操作** > **插入**。要發送電子郵件，按通話鍵。如有必要，選擇需要的帳號。

下載電子郵件



重要訊息： 開啟訊息時應加倍小心。電郵訊息可能包含惡意軟件或其他對本裝置或個人電腦造成損害的內容。

要選擇提取模式，選擇**功能表 > 訊息 > 訊息設定 > 電子郵件訊息 > 編輯信箱**以及要使用的信箱，然後選擇**下載設定 > 提取模式**。

要下載電子郵件，選擇**功能表 > 訊息**，然後選擇要使用的信箱；如果需要，請確認請求連接的詢問。

快顯訊息

快顯訊息是可以立即顯示給收訊人的文字訊息。

1. 要編寫快顯訊息，選擇**功能表 > 訊息 > 建立訊息 > 快顯訊息**。
2. 輸入收訊人的電話號碼，編寫訊息 (最多 70 個字元)，然後選擇**發送**。

Nokia Xpress 聲音短訊

透過 MMS，可便捷地建立及發送聲音短訊。

1. 選擇**功能表 > 訊息 > 建立訊息 > 聲音短訊**。將打開錄音機。
2. 錄製您的訊息。
3. 在**收訊人**：欄位中輸入一個或多個電話號碼，或選擇**新增提取號碼**。

4. 要發送訊息，選擇**發送**。

即時訊息

透過即時訊息 (聊天室，網絡服務)，您可向線上用戶發送簡短的文字訊息。您必須申請該服務並註冊您要使用的聊天室服務。請向您的服務供應商查詢有關這些服務的供應情況、價格及指示說明。這些功能表可能視乎 IM 服務供應商而有所不同。

要連接至該服務，選擇**功能表** > **訊息** > **即時訊息**，然後按螢幕上的指示操作。

留言訊息

留言信箱是一項網絡服務，您必須先申請此項服務。如要獲取更多有關資料，請向您的服務供應商查詢。

要致電留言信箱，按住 **1** 鍵。

要編輯留言信箱號碼，選擇**功能表** > **訊息** > **留言訊息** > **留言信箱號碼**。

訊息設定

選擇**功能表** > **訊息** > **訊息設定**，設定訊息功能。


- **標準設定** — 將手機設定為儲存已發送訊息，容許訊息記憶體滿時覆蓋舊訊息，設定其他與訊息有關的喜好設定

訊息

- **文字訊息** — 容許訊息傳送狀況報告、設定短訊及短訊電郵的訊息中心、選擇支援的字元類型，以及設定其他與短訊有關的喜好設定
- **多媒體訊息** — 容許訊息傳送狀況報告、設定多媒體訊息的外觀、容許接收多媒體訊息及廣告、設定其他與多媒體訊息有關的喜好設定
- **電子郵件訊息** — 容許接收電郵、設定電郵中的圖像大小、設定其他與電郵有關的喜好設定

7. 通訊錄

選擇**功能表 > 通訊錄**。

您可以將姓名及電話號碼儲存在手機記憶體及 SIM 卡記憶體中。手機記憶體可以儲存含有電話號碼及文字項目的通訊錄。儲存於 SIM 卡記憶體中的姓名和電話號碼會以  指示。

通訊錄中的匹配清單不包含少於七位的號碼。

要新增聯絡人，選擇**姓名 > 操作 > 新增姓名**。要為聯絡人新增詳情，確定使用的記憶體是**手機**或**手機和 SIM 卡**。選擇**姓名**，捲動至姓名，然後選擇**詳情 > 操作 > 新增詳情**。

要尋找聯絡人，選擇**姓名 > 操作 > 尋找**。輸入該姓名的前幾個字元或字母，然後選擇**尋找**。或者，輸入要尋找的姓名的第一個輸入符號，然後從顯示的匹配姓名中選擇。這些姓名的列示次序可能與**姓名**中的次序不同。要更改尋找時採用的輸入法，按 #。

要在手機記憶體與 SIM 卡記憶體之間複製聯絡人訊息，選擇**姓名 > 操作 > 複製聯絡人**。SIM 卡記憶體只能為每個姓名儲存一個電話號碼。

要為通訊錄選擇 SIM 卡或手機記憶體，要選擇通訊錄中姓名及號碼的顯示方式，以及要顯示通訊錄可用及已用的記憶體容量，選擇**設定**。

通訊錄

本裝置可與支援 vCard 標準的兼容裝置相互以名片的方式發送和接收個人聯絡資料。要發送名片，選擇**姓名**，尋找您要發送其資料的聯絡人，然後選擇**詳情 > 操作 > 發送名片**。

8. 通話記錄

要查看有關通話的資料，選擇**功能表 > 記錄**。

- **通話記錄** — 同時查看您最近的未接來電、已接來電及已撥電話的電話號碼
- **未接來電、已接來電或已撥電話** — 查看有關最近通話的詳細資料
- **訊息收訊人** — 查看您最近向其發送過訊息的聯絡人
- **通話計時、分組數據計數器或分組數據連接計時器** — 查看有關最近通訊的一般資料
- **訊息記錄，或同步處理記錄** — 查看已發送及接收訊息或同步處理的號碼



注意： 您的服務供應商對通話和服務所列出的實際發票可能會不同，這視乎網絡功能、開單時數目的四捨五入、稅項等等因素而定。

9. 設定

操作模式

手機有各種設定分組，稱為操作模式，您可以為不同事件和環境自訂鈴聲。

選擇**功能表** > **設定** > **操作模式**及需要的操作模式，並從下列選項中選擇：

- **啟動** — 啟動所選擇的操作模式
- **個人化選擇** — 更改操作模式設定
- **定時** — 將操作模式設定為在結束時間之前一直為啟動狀態。對該操作模式設定的時間過後，未設定時間前的操作模式便會啟動。

鈴聲

您可以更改所選當前操作模式的鈴聲設定。

選擇**功能表** > **設定** > **鈴聲**。您可以在**操作模式**功能表內找到相同的設定。

如果選擇最高鈴聲級別，鈴聲會在幾秒鐘後達到最高級別。

螢幕

選擇**功能表** > **設定** > **螢幕**。

要在手機無操作狀態持續一段時間後讓螢幕自動變暗並顯示時鐘，選擇**省電螢幕保護**。

要在手機無操作狀態持續一段時間後自動關閉螢幕，選擇**睡眠模式**。

日期和時間

選擇**功能表 > 設定 > 日期和時間**。

要設定日期和時間，選擇**日期和時間設定**。

要設定日期與時間格式，選擇**日期與時間格式設定**。

要將手機設定為根據當前時區自動更新時間與日期，選擇**自動更新時間和日期 (網絡服務)**。

快捷操作

透過個人快捷操作，您可以快速存取常用的手機功能。選擇**功能表 > 設定 > 我的快捷操作**。

要為左選擇鍵或右選擇鍵指定一項手機功能，選擇**右選擇鍵**或**左選擇鍵**。

要為瀏覽鍵選擇快捷操作功能，選擇**導航鍵**。捲動至所需方向，並選擇**更改**或**設定**，然後從清單中選擇一項功能。

數據連線

本手機提供了多種功能，可連接至其他裝置以傳輸和接收數據。

分組數據

通用分組無線服務 (GPRS) 是一種網絡服務，可讓手機透過一種基於互聯網協定 (IP) 的網絡來發送和接收數據。

設定

要定義如何使用該服務，選擇**功能表 > 設定 > 數據連線 > 分組數據 > 分組數據連接**，並從以下選項中選擇：

- **當需要時** — 當應用程式需要時建立分組數據連接。當應用程式終止時中斷連接。
- **保持連線** — 開機時自動連接至分組數據網絡

數據傳送

您的手機可以與遠端互聯網伺服器相互傳送數據 (日曆、通訊錄數據和備註) (網絡服務)。

從伺服器同步處理

要使用遠端互聯網伺服器，需申請同步處理服務。如要獲取有關此服務的更多資料及所需設定，請與您的服務供應商聯絡。

要從您的手機啟動同步處理，選擇**功能表 > 設定 > 數據連線 > 數據傳送 > 伺服器同步**。

通話和手機

選擇**功能表 > 設定 > 通話**。

要轉接來電，選擇**來電轉接** (網絡服務)。如要獲取詳情，請與您的服務供應商聯絡。

要在試撥失敗後繼續試撥十次以接通電話，選擇**自動重撥 > 開**。

要讓網絡在您通話期間接收到其他來電時通知您，選擇**來電等待 > 啟動** (網絡服務)。

要設定是否向通話對方顯示您的電話號碼，選擇**發送本手機號** (網絡服務)。

要設定手機的顯示語言，選擇**功能表 > 設定 > 手機 > 語言設定 > 手機語言**。

配套

僅當手機連接有兼容的流動配套時，才會顯示該功能表及其各個選項。

選擇**功能表 > 設定 > 配套**。選擇一種配套，然後根據配套選擇相應的選項。

配置

您可以為手機配置某些服務所必需的設定。您的服務供應商也可能會向您發送這些設定。

選擇**功能表 > 設定 > 配置**並從以下選項中選擇：

- **預設配置設定** — 顯示手機中儲存的服務供應商並設定一個預設的服務供應商
- **在全部應用程式中啟動預設** — 為支援的應用程式啟動預設配置設定
- **首選接入點** — 顯示儲存的接入點
- **連接至服務供應商支援** — 從服務供應商處下載配置設定
- **個人配置設定** — 手動新增各種服務的個人帳號，以及啟動或刪除這些帳號。要新增個人帳號，選擇**新增或操作 > 新增**。選擇服務類型，並輸入需要的參數。要啟

設定

動某個個人帳號，捲動至該帳號，然後選擇**操作** > **啟動**。

恢復原廠設定

要將手機恢復為原廠設定，選擇**功能表** > **設定** > **恢復原廠設定**，然後從下列選項中選擇：

- **僅恢復設定** — 重設所有喜好設定而不刪除任何個人資料
- **全部恢復** — 重設所有喜好設定，並刪除所有個人資料，例如：通訊錄、訊息、媒體檔案及啟動鍵

10. 多媒體資料

版權保護可以防止一些圖像、音樂 (包括鈴聲) 及其他內容被複製、修改、傳送或轉發。

數碼權限管理 (DRM) 保護的內容隨相關啟動密鑰一起提供，該密鑰定義您使用該內容的權限。

本手機支援數位版權管理 (DRM) 系統以保護獲取的內容。在獲取任何內容及啟動密鑰之前，請先查閱相關的傳輸條款，因為獲取它們可能需要收取一定費用。

要檢視資料夾，選擇**功能表 > 多媒體資料**。

11. 影音工具

錄音機

要開始錄音，選擇**功能表** > **影音工具** > **錄音機**，然後選擇螢幕上的虛擬錄製按鈕。

要在通話時開始錄製，選擇**操作** > **錄製**。錄製通話時，以正常姿勢握住手機靠近耳朵即可。語音備忘會儲存在**多媒體資料** > **語音備忘**中。

要收聽最後的錄音，選擇**操作** > **播放最後錄音**。要使用多媒體訊息發送最後錄音，選擇**操作** > **發送最後錄音**。

12. 應用程式

手機軟件可能包含一些專為此款諾基亞手機設計的遊戲和 Java 應用程式。

選擇**功能表 > 應用程式**。

要啟動遊戲或應用程式，選擇**遊戲或集合**。捲動至一個遊戲或應用程式，然後選擇**打開**。

要顯示可用來安裝遊戲和應用程式的記憶體容量，選擇**操作 > 記憶體狀態**。

要下載遊戲或應用程式，選擇**操作 > 下載 > 遊戲下載**或**應用程式下載**。您的手機支援 J2ME™ Java 應用程式。請確保該應用程式與您的手機兼容，然後再進行下載。



重要訊息： 僅安裝及使用來自可靠來源的應用程式及其他軟件，例如由 Symbian 簽署或已通過 Java™ 驗證。下載的應用程式可能儲存於**多媒體資料**而非**應用程式**中。

13. 電子秘書

鬧鐘

選擇**功能表** > **電子秘書** > **鬧鐘**。

要開啟或關閉鬧鐘，選擇**鬧鐘**：。要為鬧鐘設定響鬧時間，選擇**響鬧時間**：。要將手機設定為在一星期中選定的日期提示您，選擇**重複**：。要選擇或個人化響鬧鈴聲，選擇**響鬧鈴聲**：。設定重響提示的逾時時間，選擇**重響逾時**：。

要停止響鬧，選擇**停止**。如果您要讓手機在一分鐘之後再繼續響鬧或選擇**重響**，響鬧會在重響逾時這段時間內暫時停止，然後恢復響鬧。

如果在裝置關閉的狀態下到了響鬧時間，裝置便會自動啟動並開始響鬧。如果您選擇**停止**，裝置詢問您是否要開機準備通話。選擇**取消**關閉裝置，或**確認**撥打及接聽電話。當無線裝置可能造成干擾或引致危險時，請勿選擇**確認**。

日曆和待辦事項

選擇**功能表** > **電子秘書** > **日曆**。當前日期以方框表示。如果為該日期設定了任何備註，則該日期會以粗體顯示。

要寫日曆備註內容，捲動至該日期，然後選擇**操作** > **寫備註內容**。

要顯示該日備註，選擇**顯示**。要刪除日曆中的全部備註，選擇月顯示格式或星期顯示格式，然後選擇**操作** > **刪除全部備註**。

要使用農曆，手機語言必須為中文。

要在月顯示格式中顯示所選日期的農曆詳情，選擇**操作 > 農曆**。要尋找節日，在農曆的日顯示格式中，選擇**節日**。要尋找節氣，或在公曆日期與農曆日期之間轉換，在農曆日顯示格式中選擇**操作**。

要顯示待辦事項，選擇**功能表 > 電子秘書 > 待辦事項**。螢幕上會顯示按優先級排列的待辦事項。要新增、刪除或發送備註，要將備註標記為完成狀態，或按最後期限將代辦事項排序，選擇**操作**。

字典

在**字典**中，您可以尋找中文字的英文翻譯，亦可尋找英文字體的中文翻譯。

1. 選擇**功能表 > 電子秘書 > 字典**。
2. 如有需要，切換至想要的輸入法模式。
3. 輸入中文或英文字。
4. 在顯示的字列表中捲動至想要的字，然後選擇該字查看翻譯。

要尋找英文單詞的同義詞或反義詞，選擇**操作 > 同義詞或操作 > 反義詞**。

要查看顯示的字列表中上一個或下一個字的翻譯，向左或向右捲動。

14. 網絡

您可以使用手機瀏覽器存取各種流動互聯網服務。外觀可能會因螢幕大小而有所不同。可能無法顯示互聯網網頁的所有詳情。



重要訊息： 請僅使用您信賴及對有害軟件提供充分安全防禦措施的服務。

請向您的服務供應商查詢有關這些服務的供應情況、價格及指示說明。

您可能會接收到服務供應商以配置訊息形式提供的瀏覽配置設定。

要設定服務，選擇**功能表 > 網絡 > 設定 > 配置設定**，然後選擇一項配置和一個帳號。

連接至服務

要連接至服務，選擇**功能表 > 網絡 > 主頁**；或在待機模式下按住 **0**；

要選擇書籤，選擇**功能表 > 網絡 > 書籤**。本裝置可能已預裝某些書籤或連結，用於允許進入由不從屬於諾基亞的第三方提供的網站。諾基亞不支持這些網站，亦不承擔任何責任。如果您選擇進入這些網站，您應像對待任何其他互聯網網站一樣，對其安全或內容採取預防措施。

要選擇最後瀏覽的 URL，選擇**功能表 > 網絡 > 上回瀏覽網址**。

要輸入服務位址，選擇**功能表 > 網絡 > 選擇位址**。輸入位址，然後選擇**確認**。

在您建立與服務的連接之後，您可以開始瀏覽網頁。手機按鍵的功能可能因服務的不同而有所分別。請遵照手機螢幕上的文字指示。如要獲取更多有關資料，請向您的服務供應商查詢。

外觀設定

瀏覽時，選擇**操作 > 其他選項 > 外觀設定**。可能會顯示以下選項：

- **文字換行** — 選擇文字的顯示方式。
- **提示** — 選擇**不安全連接提示 > 是**，如果在瀏覽時安全連接改為不安全連接，則會發出提示。選擇**不安全資料提示 > 是**，安全頁面中包含不安全的資料時會發出提示。這些提示並不能保證連接安全。
- **字元編碼** — 選擇**內容編碼**，設定瀏覽器頁面內容的編碼。

快取記憶體

快取記憶體是用來暫時儲存資料的記憶體位置。如果嘗試存取或存取過需要密碼的機密資料，請在每次使用後清空快取記憶體。您已存取的資料或服務會儲存於快取記憶體內。

網絡

要在瀏覽時清除快取記憶體，選擇**操作 > 其他選項 > 清除快取記憶體**。要允許或阻止手機接收 cookies，請在瀏覽時選擇**操作 > 其他選項 > 保密選項 > Cookie 設定**，或在待機模式下選擇**功能表 > 網絡 > 設定 > 保密設定 > Cookies**。

服務信箱

您的服務供應商可能會向您的手機發送服務訊息 (網絡服務)。服務訊息通常是一些通知 (例如，新聞標題)，其中可能包含文字訊息或服務地址。

要閱讀此服務訊息，選擇**顯示**。如果您選擇**退出**，訊息將移至**服務信箱**中。

要將手機設定為接收服務訊息，選擇**功能表 > 網絡 > 設定 > 服務信箱設定 > 服務訊息 > 開**。

瀏覽器安全

某些服務可能需要安全功能，例如銀行服務或線上購物。要進行此類連接，您需要安全證書，還可能需要安全模組 (可能在 SIM 卡上提供)。如要獲取更多資料，請與您的服務供應商聯絡。

15. SIM 服務

您的 SIM 卡可能會提供附加服務。僅當您的 SIM 卡支援時，您才能存取該功能表。此功能表的名稱及內容視乎可用的服務而定。

如要獲取有關 SIM 卡服務的供應及資料，請向您的 SIM 卡經銷商查詢。SIM 卡經銷商亦可以是服務供應商或其他經銷商。

16. 諾基亞原廠配套



警告： 僅使用經諾基亞許可、適用於本特定型號的電池、充電器及配件。使用其他未經許可的增強配套，可能會令手機的保養失效，甚至造成危險。

如要獲取經認可配套的供應情況，請向您的經銷商查詢。

您的裝置有更多齊備的配套可供選擇。請瀏覽

www.nokia.com.hk/enhancements

獲取更多詳細資料。



增強配套

使用配件及增強配套時的注意事項

- 請將所有附件及增強配套置於兒童無法觸及之處。
- 切斷任何配件或增強配套的電源時，請握住插頭拔出，不要拉電線。
- 請定期檢查汽車中的增強配套是否安裝妥當並且操作正常。
- 僅容許合格的人員安裝複雜的車用增強配套。

電池

類型	通話時間	待機時間
BL-4B	可達 5 小時	可達 17 天



重要訊息： 電池的通話及待機時間僅是一個估計的數值，並且僅在最優網絡的情況下成立。電池的實際通話及待機時間視乎 SIM 卡、所使用功能、電池使用年限及狀況、電池所處環境的溫度、網絡條件及許多其他因素而定，因此通話及待機時間可能明顯少於此處所提供的數值。鈴聲、免提通話操作、數字模式的使用以及其他功能均會消耗電量，並且裝置通話所用的時間亦影響其待機時間。同樣地，裝置開啟及處於待機模式下的總時間亦會影響其通話時間。

17. 電池資料

充電及放電

本手機由充電電池供電。電池可以充電、放電數百次，但最終亦會失效。當通話與待機時間明顯短於正常時間的時候，請更換電池。請僅使用諾基亞認可的電池，並僅使用諾基亞認可的指定用於本手機的充電器為電池充電。

如果替換的電池是第一次使用或如果電池長時間沒有使用，在開始為電池充電時，您可能需要將電池連接至充電器然後斷開，之後再連接。

不用充電器時將其從電源插座及手機上拔下。不要將完全充電的電池連接至充電器，因為過分充電可能會縮短其壽命。如果已完全充電的電池擱置不用，其本身便會不斷放電。

如果電池已完全沒電，可能要過幾分鐘充電指示符號才會出現在螢幕上或才能撥打電話。

請勿把電池作其他用途。請勿使用損壞的充電器或電池。

請勿使電池短路。當金屬物品 (如硬幣、萬字夾或筆) 直接接觸電池的正機 (+) 及負機 (-) 時，可能會發生意外短路。(它們看上去像電池上的小金屬條。) 例如當您將備用電池放在口袋或背包中時，就有可能發生這種情況。電極的短路將會造成電池或觸及物品的毀損。

把電池置於過熱或過冷的地方 (如在夏季或冬季時密閉車廂中)，會縮減電池電容量及壽命。請盡量把電池保持在 15° C 至 25° C (59° F 至 77° F) 之間。如果裝上過熱或過

冷之電池，即使電池電量充足，裝置亦可能暫時無法操作。電池的效能在冰點以下將大打折扣。

切勿將電池丟入火中，因其可能發生爆炸。電池受損壞時亦可能發生爆炸。請依當地的法例規定處理電池。請盡量回收以循環再用。請勿將電池當成家庭廢棄物丟棄。

請勿拆開或拆毀電池。在電池滲漏的情況下，盡量避免讓滲出的液體接觸皮膚或眼睛。如果上述滲漏情況發生，請立即用清水沖洗皮膚或眼睛，或尋求醫療協助。

諾基亞電池認證指引

 
為了您的安全，請堅持使用諾基亞原廠電池。要證實您購買的是一枚諾基亞的原廠電池，應向一間獲授權的諾基亞經銷商購買，及使用以下的步驟檢查全息影像標籤：

成功完成以下步驟並不能完全保證電池的可靠性。如果您有任何理由相信您的電池不是可靠的諾基亞原廠電池，便應該停止使用，然後將其帶往最近的諾基亞授權服務點或經銷商尋求協助。您的諾基亞授權服務點或經銷商將檢查電池的可靠性。如果不能確認可靠性，請將電池送回至您購買的地方。

電池資料

認證全息影像

1. 當您查看標籤上的全息影像，您應該從一個角度看到諾基亞的牽手符號，及從另一個角度看到諾基亞的原廠增強配套標誌。
2. 當您從左、右、下和上角度注視全息影像時，應該可以在每邊分別看到 1、2、3、4 點。

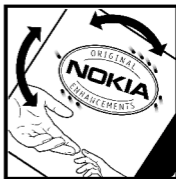

如果您的電池不是可靠的電池怎麼辦？

如果您不能透過您諾基亞電池標籤上的全息影像確認是否為可靠的 Nokia 電池，請不要使用此電池。將其帶往最近的諾基亞授權服務點或經銷商尋求協助。使用未經製造商許可的電池可能造成危險，並可能導致操作失效和對您的裝置及其增強配套造成損壞。這樣亦會令裝置的所有許可和保養失效。

要尋找更多有關原廠諾基亞電池的資料，請瀏覽 www.nokia.com/battery。

保養及維修

本裝置是採用優良技術設計的產品，務請小心使用。以下建議有助維護您裝置的保養。

- 請保持手機乾燥。雨水、濕氣與各種液體或水份可能含有腐蝕電路的礦物質。如果您的裝置被弄濕，請取出電池，等到裝置完全乾燥後再重新裝入電池。
- 請勿將裝置存放在佈滿灰塵、髒亂的地方或在此類地方使用裝置。活動式的零件和電子元件可能較容易損壞。
- 請勿將裝置存放在高溫之處。高溫可能會縮短電子裝置的壽命、損壞電池，並使某些塑膠零件變形或溶化。
- 請勿將裝置存放在低溫之處。當裝置升溫至其正常的溫度時，其內部可能會產生濕氣，損壞電路板。
- 請勿嘗試違反本指南的說明自行拆卸裝置。
- 請勿扔擲、敲擊或搖晃裝置。粗暴的使用方式可能會破壞內部的電路板及精密構造。
- 請勿使用刺激性的化學製品、清潔溶劑或腐蝕性的清潔劑來清潔裝置。
- 請勿為裝置塗上顏料。塗料可能會妨礙裝置的活動式零件，影響正常使用。
- 僅使用隨裝置提供或經許可的天線。未經授權的天線、改裝或其他附件可能會破壞裝置，並可能違反無線裝置管制法。
- 請在室內使用充電器。

保養及維修

- 經常為您希望保留的數據 (例如通訊錄及日曆備註) 建立備份。
- 要經常重設裝置以獲取最佳性能，關閉裝置並除下電池。

這些建議同樣適用於本裝置、電池、充電器或其他任何增強配套。若任何裝置不能正常工作，請到就近的授權服務處進行維修。

附加安全資料

兒童

手機及其增強配套可能包含較小配件。請將配件置於兒童無法觸及的地方。

操作環境

當您以對著耳朵的正常姿勢使用裝置或當其置於距離您身體至少 2.2 厘米 (7/8 英吋) 處時，此裝置便符合 RF 暴露指引。請勿隨身攜帶含金屬材料的便攜套、皮帶扣或機架，並應將裝置放在距離身體如上所述的位置。

要傳輸數據檔案或訊息，本裝置須與網絡建立良好連接。在一些情況下，數據檔案或訊息可能會被延遲直至這些連接可以使用。請確保遵守上述間距說明，直到傳輸順利完成。

裝置某些部件具有磁性。裝置可能會吸引金屬物件。請勿將信用卡或其他磁性儲存媒體放在裝置附近，因為該媒體所儲存的資料可能因此被清除。

醫療設備

任何無線傳輸裝置的操作，包括無線電話，都可能會干擾防護不足的醫療設備之功能。請詢問醫生或醫療設備的製造商，確認這些設備是否可充分阻擋外部 RF 能量，或您的其他問題。請在醫療診所等區域張貼的相關法規指示下關閉裝置。醫院或醫療診所可能正在使用容易受外部 RF 能量影響的設備。

附加安全資料

植入式醫療設備

醫療設備的製造商建議在無線裝置及植入式醫療設備 (如心律調校器或植入式心律去顫器) 之間保持最少 15.3 厘米 (6 英吋) 的距離，以避免對醫療設備產生的干擾。配戴此類設備的人應該遵守以下規定：

- 當無線裝置開啟時，裝置與醫療設備之間的距離經常保持在 15.3 厘米 (6 英吋) 以上。
- 不要將無線裝置放在胸前的口袋。
- 以沒有使用醫療設備那一邊的耳朵接聽電話，以減低干擾的可能性。
- 如果有任何理由懷疑產生干擾，請立即關閉裝置。
- 閱讀及遵循植入式醫療設備製造商的指引。

如果您對將無線裝置及植入式醫療設備一起使用有任何疑問，請向您的醫師查詢。

助聽器

某些數碼無線裝置可能會干擾助聽器。如果產生干擾，請向您的服務供應商查詢。

汽車

無線射頻 (RF) 訊號可能會影響汽車上未適當安裝或未妥善隔絕的電子系統 (如電子燃油噴注系統、電子防滑 (防鎖) 剎車系統、電子速控系統及安全氣袋系統)。如要獲取更多資料，請向您汽車的製造商或代表或已添加至您汽車的裝置製造商或其代表查詢。

應僅由合格的專業人員維修裝置，或是在汽車中裝設裝置。錯誤的安裝或維修可能會產生危險，而且可能使任何適用於該裝置的保養失效。請定期檢查汽車內所有的無線裝置設備是否安裝妥當並且操作正常。請勿將易燃液體、氣體或易爆物與裝置及其組件或增強配套置於同一汽車置物箱中。對於配備安全氣袋的汽車，請謹記會有一股巨大的力量充滿安全氣袋。請勿將物件(包括固定及可攜式的無線設備)放置在安全氣袋之上或安全氣袋可伸展到的地方。若車內的無線設備安裝不當，安全氣囊充氣脹大時可能會引致嚴重傷亡。

飛行中禁止使用手機。登機前請將關閉裝置。在飛機上使用無線電子裝置可能會危及飛機的操作安全、干擾無線通訊網絡，而且可能是違法的。

可能發生爆炸的環境

在任何可能發生爆炸環境的地方關閉您的裝置，並遵守所有告示及指示。可能發生爆炸的環境包括那些您通常會被建議關上您汽車引擎的地方，在這些地方出現火花可能會導致爆炸或火災，引致身體的損傷或甚至死亡。在油站加氣泵附近等加油地點關閉裝置，留意在油庫、燃油儲存及分發的地方；化學工廠；或者任何爆破進行中的地方就使用無線電器材的規限。可能發生爆炸環境的地方通常，但不一定會清楚地標示，這些地方包括船隻的甲板之下、化學運送或儲存的設施及任何空氣中包含化學物或微粒、塵埃或金屬粉末等粒子的地方。您應該向使用液化石油氣(例如丙烷或丁烷)的汽車製造商查詢以確定在該等車輛附近使用這裝置是否安全。

緊急電話



重要訊息： 無線電話，包括本手機，利用電波訊號、無線網絡、有線網絡及用戶可編制程式的功能進行操作。因此，無法保證這些功能在任何情況下都能使用。因此，您不應僅依賴任何無線電話機進行基本通訊 (例如，緊急就醫)。

要撥打緊急電話：

1. 若手機尚未開啟，請先開機。檢查訊號強度是否足夠。有些網絡可能需將有效的 SIM 卡正確地插入裝置中。
2. 視情況按結束鍵所需次數以清除螢幕，使裝置作好通話準備。
3. 輸入您目前所在地的官方緊急號碼。緊急號碼依所在地不同而有所分別。
4. 按通話鍵。

若某些功能正在使用中，撥打緊急電話之前，可能需要先關閉這些功能。詳情請查閱本指南或向服務供應商諮詢。

撥打緊急電話時，盡可能準確地提供所有必要的訊息。您的無線電話可能是發生意外情況時唯一的通訊途徑。當接到掛掉電話的指示後才可結束通話。

許可證明(SAR)

本流動裝置符合有關暴露於無線電波的國際準則。

本流動電話是一部無線電收發器。其設計不會超出由國際指引建議的無線電波暴露限制。這些指引是經由獨立的科學組織 (ICNIRP) 制定的，包括一個安全空間，以確保所有人的安全，不論其年齡和健康。

流動裝置的暴露指引運用了一組名為特別吸收率的測量數據，即 SAR。ICNIRP 指引中所述的 SAR 限制為平均每 10 克人體組織 2.0 瓦特/千克 (W/kg)。SAR 測試是以標準操作手機姿勢在所有測試頻帶中所檢定的最高功率之下進行的。裝置的實際 SAR 會遠遠低於其最大值，因為裝置的設計僅為使用達到接通網絡所需的功率。該數值由多項因素決定，例如：您與網絡基站之間的距離。在耳朵旁使用本裝置進行測試時，ICNIRP 準則規定的最高 SAR 值為 0.61 瓦特/千克。

使用裝置配件及增強配套可能會導致不同的 SAR 值。SAR 值可能視乎國際報告、測試需求和網絡帶寬而有所不同。附加的 SAR 資料可能在 www.nokia.com 上的產品資料中提供。

索引

符號/數字

- cookie 45
- PIN 10
- SIM 卡 12, 16

四劃

- 中文輸入 18
- 互聯網 44

六劃

- 字典 43

七劃

- 即時訊息 29
- 快取記憶體 45
- 快捷操作 35
- 快顯訊息 28

八劃

- 服務信箱 46

九劃

- 保密碼 10
- 客戶服務 11

- 拼音輸入法 19

十劃

- 留言訊息 29
- 訊息
 - 設定 29
 - 聲音短訊 28
- 訊息中心號碼 25
- 配套 37
- 配置 37

十一劃

- 密碼 10
- 密碼功能 10
- 聊天室 (IM) 29
- 設定 34
 - 手機 36
 - 日期 35
 - 原廠 38
 - 時間 35
 - 訊息 29
 - 配置 37
 - 鈴聲 34
 - 操作模式 34
 - 螢幕 34

通話 17
 通話記錄 33
十二劃
 單鍵撥號 17
 智慧預測型文字輸入
 法 22
 筆劃輸入法 19
十三劃
 傳統英文輸入法 22
 遊戲 41
 鈴聲 34
 電子秘書 42
 電子郵件 27
 電池 50
 充電 12
 安裝 12
十四劃
 網絡 44
十六劃
 操作模式 34
 螢幕 34
 諾基亞原廠配套 48

諾基亞聯絡人資料 11
 輸入法 18
 錄音機 40

十七劃
 應用程式 41
 聲音短訊 28
 聯絡人資料 11
 鍵盤鎖 15
 鍵盤鎖定 15

十八劃
 瀏覽器 44
 離線模式 16

Nokia 7070 Prism User Guide

DECLARATION OF CONFORMITY

CE 0434 Hereby, NOKIA CORPORATION declares that this RH-116 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

© 2008 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

US Patent No 5818437 and other pending patents. T9 text input software Copyright © 1997-2008. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java
POWERED

Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

For the most current product information, please refer to www.nokia.com.hk.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options.

Export controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

Contents

For your safety	9
------------------------	----------

1. General information	11
-------------------------------	-----------

About your device	11
Network services	11
Enhancements	12
Access codes	12
Nokia support	13

2. Get started	15
-----------------------	-----------

Install SIM card and battery	15
Charge the battery	15
Antenna	16
Keys and parts	17
Switch the phone on and off	18
Standby mode	18
Keypad lock (keyguard)	19
Functions without a SIM card	20

3. Calls	21
-----------------	-----------

Make and answer a call	21
Loudspeaker	21
Dialing shortcuts	21

4. Chinese input	23
-------------------------	-----------

Switch between input methods	23
Pinyin input method	24
Pinyin input	24
Ambiguous Pinyin	24
Stroke input method	25
Phrase input	27
Set predictive English on or off	28
Traditional text input	28
Predictive text input	29
Writing text tips	29

Contents

5. Navigate the menus.....31

6. Messaging.....32

Text and multimedia messages.....32

Text messages.....32

Multimedia messages and multimedia plus messages.....33

Create a text or multimedia message34

E-mail.....34

E-mail setup wizard35

Write and send an e-mail.....35

Download e-mail.....35

Flash messages.....36

Nokia Xpress audio messages.....36

Instant messaging.....36

Voice messages.....37

Message settings.....37

7. Contacts.....39

8. Call log41

9. Settings.....42

Profiles.....42

Tones.....42

Display.....42

Date and time.....43

Shortcuts.....43

Connectivity.....44

Packet data.....44

Data transfer.....44

Calls and phone.....45

Enhancements.....46

Configuration.....46

Restore factory settings47

10. Gallery.....48

11. Media.....49

Voice recorder.....49

12. Applications

.....50

13. Organizer.....51

Alarm clock.....51
 Calendar and to-do list
51
 Dictionary.....52

14. Web54

Connect to a service
54
 Appearance settings
55
 Cache memory.....56
 Service inbox.....56
 Browser security.....57

**15. SIM services
58**

**16. Nokia original
 enhancements.....59**

Enhancements.....59
 Battery.....60

**17. Battery
 information.....61**

Charging and
 discharging.....61

Nokia battery
 authentication
 guidelines.....63
 Authenticate hologram
63
 What if your battery is
 not authentic?.....64

**Care and
 maintenance.....65**

**Additional safety
 information.....67**

Small children.....67
 Operating environment
67
 Medical devices.....68
 Implanted medical
 devices.....68
 Hearing aids.....69
 Vehicles.....69
 Potentially explosive
 environments.....70
 Emergency calls.....71
 CERTIFICATION
 INFORMATION (SAR)
72

Contents

Index.....74

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

For your safety



SWITCH OFF WHEN REFUELING

Do not use the device at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your device is not water-resistant. Keep it dry.

1. General information

About your device

The wireless device described in this guide is approved for use on the GSM 900 and 1800 networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Your service provider can give you instructions and explain what charges will apply.

General information

Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

Enhancements

Practical rules about accessories and enhancements

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Access codes

The security code helps to protect your phone against unauthorised use. You can create and change the code, and

set the phone to request the code. Keep the code secret and in a safe place separate from your phone. If you forget the code and your phone is locked, your phone will require service and additional charges may apply. For more information, contact a Nokia Care point or your phone dealer.

The PIN code supplied with the SIM card protects the card against unauthorized use. The PIN2 code supplied with some SIM cards is required to access certain services. If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code. If you do not have them, contact your service provider.

The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature. The barring password is required when using the call barring service.

To set how your phone uses the access codes and security settings, select **Menu > Settings > Security**.

Nokia support

Check www.nokia.com.hk/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

General information

Configuration settings service

Download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at www.nokia.com.hk/settings.

Customer service

If you need to contact customer service, check the list of local Nokia Care contact centres at www.nokia.com.hk/contactus.



Maintenance

For maintenance services, check your nearest Nokia service centre at <http://www.nokia.com.hk/repair>.

2. Get started

Install SIM card and battery

Always switch the device off and disconnect the charger before removing the battery.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.



1. To remove the cover, press and slide the back cover toward the bottom of the phone (1).
2. Remove the battery (2).
3. Insert the SIM card (3) and (4).
4. Insert the battery (5), and replace the back cover (6).

Charge the battery

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the AC-3 charger.

Get started

The exact charger model number may vary depending on the type of plug. For example, the model numbers for the AC-3 charger can be AC-3C, AC-3U, AC-3X, or similar.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Connect the charger to a wall socket.
2. Connect the lead from the charger to the charger connector of your phone.



If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Antenna



Note: Your device may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna unnecessarily when the antenna is




in use. Contact with such an antenna affects the communication quality, may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life.

The picture shows the antenna area marked in grey.

Keys and parts

1	Earpiece	
2	Display	
3	Microphone	
4	Selection keys	
5	Navi™ key: hereafter referred to as scroll key	
6	Call key	
7	End key and power key	

Get started

8	Headset connector	
9	Charger connector	
10	Loudspeaker	



Note: Avoid touching this connector as it is intended for use by authorized personnel only.



Switch the phone on and off

To switch the phone on or off, press and hold the power key.

Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

1	Network signal strength	
2	Battery charge level	
3	Network name or operator logo	
4	Functions of selection keys	

The left selection key is **Go to** for you to view the functions in your personal shortcut list. When viewing the list, select **Options** > **Select options** to view the available functions, or select **Options** > **Organise** to arrange the functions in your shortcut list.

Keypad lock (keyguard)

To prevent accidental keypresses, select **Menu**, and press * within 3.5 seconds to lock the keypad.

To unlock the keypad, select **Unlock**, and press * within 1.5 seconds. If **Security keyguard** is on, enter the security code when requested.

To set the keypad to lock automatically after a preset time delay when the phone is in the standby mode, select **Menu** > **Settings** > **Phone** > **Automatic keyguard** > **On**.

Get started

To answer a call when the keypad is locked, press the call key. When you end or reject the call, the keypad automatically locks.

When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device.

Functions without a SIM card

Some functions of your phone may be used without inserting a SIM card, such as Organiser functions and games. Some functions appear dimmed in the menus and cannot be used.

3. Calls

Make and answer a call

To make a call, enter the phone number, including the country code and area code if necessary. Press the call key to call the number. Scroll right to increase or left to decrease the volume of the earpiece or headset during the phone call.

To answer an incoming call, press the call key. To reject the call without answering, press the end key.

Loudspeaker

If available, you may select **Loudsp.** or **Normal** to use the loudspeaker or the earpiece of the phone during a call.



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Dialing shortcuts

To assign a phone number to one of the number keys, 2 to 9, select **Menu** > **Contacts** > **Speed dials**, scroll to a desired number, and select **Assign**. Enter the desired phone number, or select **Search** and a saved contact.

Calls

To switch the speed dialing function on, select **Menu > Settings > Call > Speed dialling > On**.

To make a call using speed dialing, in the standby mode, press and hold the desired number key.

4. Chinese input

The input methods available in the phone are preset according to the market where it will be sold.

This phone supports simplified Chinese input methods.

To switch writing language when writing text, press and hold #, and select **Writing language** and the desired language.

Switch between input methods

Input method indicators are shown at the top of the display:

Pinyin	
Stroke	
Uppercase	
Lowercase	
Number input	

Not all the methods may be available in all circumstances. Always check the indicator to see which input method is in use.

Chinese input

To switch between the available input methods, press # repeatedly, until the indicator of the desired input method is displayed.

Pinyin input method

Pinyin input

The pinyin symbols are printed on the number keys. You only need to press a key once, regardless of the position of the symbol on the number key. The phone makes logical combinations of the pinyin symbols.

To input a character using the pinyin input method:

1. Press the number key once for each pinyin symbol you want to input (use "v" for "u").
2. Press **1** repeatedly until you get the desired tone mark.
3. If necessary, press * repeatedly to highlight the desired pinyin combination.
4. Scroll to the desired Chinese character, and select **OK**.

Ambiguous Pinyin

With this feature, your phone will tolerate ambiguity of certain pinyin pairs: c/ch, z/zh, s/sh, n/l, r/l, f/h, an/ang, in/ing, and en/eng. To select which ambiguous pinyin pairs to use, when no input symbol or prediction list is displayed, select **Options > Ambiguous pinyin**.

Stroke input method

The strokes constituting Chinese characters have been divided into five categories: horizontal, vertical, left-falling, dot, and turning. Each category corresponds to a number key from **1** to **5**, respectively.

The strokes are classified according to the following table:

按鍵	1	2	3	4	5
基本筆劃	一	丨	丿	丶	㇀

Chinese input

1. In the

數字鍵	基本筆劃	筆劃變形 舉例	例字	說明
1	橫 一	一 丿 フ	十、慧 七、冰 羽、輸、憂	提(フ)歸爲橫 基本運筆方向: 左→右
2	豎 丨	丨 冫	十 了、小、有	豎鉤(冫)歸爲豎 基本運筆方向: 上→下
3	撇 丿	丿	人、川、牛 小、常	基本運筆方向: 上→左下 (注意撇與捺的區別)
4	捺 ㇇	㇇ ㇇	主 心、家 入、邊	捺(㇇)歸爲點 基本運筆方向: 左上→右下 (注意左點也包括在內)
5	折 一	乙 一 冫 冫 冫 冫 冫 冫 冫 冫 冫 冫	乞 安 口、習、內 除、邊 興、昌 鳩、西 兒、飛 各 以、伯、備、肝 獨 代、心	包含各種帶轉折的筆劃 (注意左豎劃除外)

standard stroke order, press the number keys to input the strokes.

If you are not sure which stroke to use or which category it belongs to, press **6** to substitute that stroke, then continue with the subsequent strokes. A question mark appears in the input area to represent that stroke.

2. Scroll to the desired Chinese character, and select **OK**.

Phrase input

You may input a phrase of no more than seven Chinese characters at a time.

1. Press the relevant number keys to enter the syllable or pinyin initial, or first strokes for the first character of the phrase.
2. Press **0** to enter a separator; or, if in the pinyin mode, press **1** repeatedly to enter the tone mark of the character.
3. Enter the syllable or pinyin initial, or first strokes of the next Chinese character.
4. Repeat step 2 and 3, if necessary, to enter the syllables or pinyin initials, or first strokes of all the characters in the phrase.
5. If in the pinyin mode, press ***** repeatedly, if necessary, to highlight the pinyin combination you want.
6. Scroll through the candidate list to the desired phrase, and select **OK**.

Not all phrases are stored in your phone. To create a phrase of no more than seven characters, when no input symbol or prediction list is displayed, select **Options > User phrases > Add**. When the database becomes full, the new phrase replaces the phrase that has not been accessed for the longest time.

Chinese input

Use a separator to separate pinyin strings for syllables of different characters or the strokes of different characters. When you enter a separator, the phone predicts characters or character strings that can form a phrase with the possible candidates of the combination of pinyin or stroke strings and separators, if any, that you have entered.

Set predictive English on or off

When **Writing language** is English, you can use traditional or predictive text input to enter text.

When writing text in English, to switch predictive text input on or off, press and hold #, and select **Prediction on** or **Prediction off**.

Traditional text input

Press a number key, **2** to **9**, repeatedly until the desired character appears. The available characters depend on the selected writing language.

If the next letter you want is located on the same key as the present one, wait until the cursor appears and enter the letter.

To access the most common punctuation marks and special characters, repeatedly press the number key **1** or press * to select a special character.

Predictive text input

Predictive text input is based on a built-in dictionary to which you can also add new words.

1. Start writing a word, using the keys **2** to **9**. Press each key only once for one letter.
2. To confirm a word by adding a space, press **0**.
 - If the word is not correct, press ***** repeatedly, and select the word from the list.
 - If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.
 - To write compound words, enter the first part of the word, and press the scroll key right to confirm it. Write the last part of the word, and confirm the word.
3. Start writing the next word.

Writing text tips

The following functions may also be available for writing text:

- To insert a number when no input symbol is displayed, press and hold the desired number key.

Chinese input

- To insert a space when there is no candidate or prediction list displayed, press **0**.
- To enter a special character after you have finished entering a word or character, press *****.
- To repeat a character to the left of the cursor in the editing window, press and hold *****.
- To end the Chinese character prediction, select **Back**, or press the relevant keys to start entering new text.

5. Navigate the menus

The phone functions are grouped into menus. Not all menu functions or option items are described here.

In the standby mode, select **Menu** and the desired menu and submenu. Select **Exit** or **Back** to exit the current level of menu. Press the end key to return to the standby mode directly. To change the menu view, select **Menu > Options > Main menu view > List** or **Grid**.

6. Messaging

You can read, write, send, and save text, multimedia, audio, and flash messages, and e-mail. The messaging services can only be used if your network or service provider supports them.

Text and multimedia messages

You can create a message and optionally attach, for example, a picture. Your phone automatically changes a text message to a multimedia message when a file is attached.

Text messages

Your device supports the sending of text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents or other marks, and characters from some language options, take up more space, and limit the number of characters that can be sent in a single message.

An indicator at the top of the display shows the total number of characters left and the number of messages needed for sending.

Before you can send any text or SMS e-mail messages, you must save your message center number. Select **Menu** > **Messaging** > **Message settings** > **Text messages** >

Message centres > **Add centre**, enter a name, and the number from the service provider.

Multimedia messages and multimedia plus messages

A multimedia (MMS) message can contain text, pictures, sound clips, and video clips. A multimedia plus message can also contain any other content, even files not supported by your phone.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit the device may make it smaller so that it can be sent by MMS.



Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

To check availability and to subscribe to the multimedia messaging service (MMS), contact your service provider. You also may download the configuration settings. [See "Nokia support", p. 13.](#)

Messaging

Create a text or multimedia message

1. Select **Menu > Messaging > Create message > Message**.
2. To add recipients, scroll to the **To:** field, and enter the recipient's number or e-mail address, or select **Add** to select recipients from the available options. Select **Options** to add recipients and subjects and to set sending options.
3. Scroll to the **Text:** field, and enter the message text.
4. To attach content to the message, scroll to the attachment bar at the bottom of the display and select the desired type of content.
5. To send the message, press **Send**.

The message type is indicated at the top of the display and changes automatically depending on the content of the message.

Service providers may charge differently depending on the message type. Check with your service provider for details.

E-mail

Access your POP3 or IMAP4 e-mail account with your phone to read, write, and send e-mail. This e-mail application is different from the SMS e-mail function.

Before you can use e-mail, you must have an e-mail account and the correct settings. To check the availability

and the settings of your e-mail account, contact your e-mail service provider. You may receive the e-mail configuration settings as a configuration message.

E-mail setup wizard

The e-mail setup wizard starts automatically if no e-mail settings are defined in the phone. To start the setup wizard for an additional e-mail account, select **Menu** > **Messaging** and the existing e-mail account. Select **Options** > **Add mailbox** to start the e-mail setup wizard. Follow the instructions on the display.

Write and send an e-mail

To write an e-mail, select **Menu** > **Messaging** > **Create message** > **E-mail message**. To attach a file to the e-mail, select **Options** > **Insert**. To send the e-mail, press the call key. Select the desired account if necessary.

Download e-mail



Important: Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device or PC.

To select the retrieve mode, select **Menu** > **Messaging** > **Message settings** > **E-mail messages** > **Edit mailboxes** and the desired mailbox, and **Downloading settings** > **Retrieve mode**.

Messaging

To download e-mail, select **Menu > Messaging** and the desired mailbox; confirm the query for connection if necessary.

Flash messages

Flash messages are text messages that are instantly displayed upon reception.

1. To write a flash message, select **Menu > Messaging > Create message > Flash message**.
2. Enter the recipient's phone number, write your message (maximum 70 characters), and select **Send**.

Nokia Xpress audio messages

Create and send an audio message using MMS in a convenient way.

1. Select **Menu > Messaging > Create message > Audio message**. The voice recorder opens.
2. Record your message.
3. Enter one or more phone numbers in the **To:** field, or select **Add** to retrieve a number.
4. To send the message, select **Send**.

Instant messaging

With instant messaging (IM, network service) you can send short text messages to online users. You must subscribe to

a service and register with the IM service you want to use. Check the availability of these services, pricing, and instructions with your service provider. The menus may vary depending on your IM provider.

To connect to the service, select **Menu > Messaging > Instant messages** and follow the instructions on the display.

Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

To call your voice mailbox, press and hold **1**.

To edit your voice mailbox number, select **Menu > Messaging > Voice messages > Voice mailbox number**.

Message settings

Select **Menu > Messaging > Message settings** to set up your messaging features.


- **General settings** — to set your phone to save sent messages, to allow overwriting of older messages if the message memory is full, and to set up other preferences related to messages

Messaging

- **Text messages** — to allow delivery reports, to set up message centers for SMS and SMS e-mail, to select the type of character support, and to set up other preferences related to text messages
- **Multimedia msgs.** — to allow delivery reports, to set up the appearance of multimedia messages, to allow the reception of multimedia messages and adverts, and to set up other preferences related to multimedia messages
- **E-mail messages** — to allow e-mail reception, to set the image size in e-mail, and to set up other preferences related to e-mail

7. Contacts

Select **Menu > Contacts**.

You can save names and phone numbers in the phone memory and in the SIM card memory. The phone memory may save contacts with numbers and text items. Names and numbers saved in the SIM card memory are indicated by  .

Lists of matches in Contacts do not include numbers of fewer than 7 digits.

To add a contact, select **Names > Options > Add new contact**. To add details to a contact, ensure that the memory in use is **Phone** or **Phone and SIM**. Select **Names**, scroll to the name, and select **Details > Options > Add detail**.

To search for a contact, select **Names > Options > Search**. Enter the first characters or letters of the name, and select **Search**. Or, enter the first input symbol of the name you search for and select from the displayed matching names. The names may not be listed in the same order as in **Names**. To change the input method when searching, press #.

To copy a contact between the phone memory and SIM card memory, select **Names > Options > Copy contact**. The

Contacts

SIM card memory can save only one phone number for each name.

To select the SIM card or phone memory for your contacts, to select how the names and numbers in contacts are displayed, and to view the free and used memory capacity for contacts, select **Settings**.

You can send and receive a person's contact information as a business card from a compatible device that supports the vCard standard. To send a business card, select **Names**, search for the contact whose information you want to send, and select **Details** > **Options** > **Send bus. card**.

8. Call log

To view the information on your calls, select **Menu > Log**.

- **Call log** — to view your recently missed and received calls and dialed numbers chronologically
- **Missed calls, Received calls, or Dialed numbers** — for information about your recent calls
- **Message recipients** — to view the contacts to whom you most recently sent messages
- **Call duration, Packet data counter, or Packet data conn. timer** — to view the general information on your recent communications
- **Message log, or Sync log** — to view the number of sent and received messages or synchronizations



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

9. Settings

Profiles

Your phone has various setting groups called profiles, which you can customize with ringing tones for different events and environments.

Select **Menu** > **Settings** > **Profiles**, the desired profile, and from the following options:

- **Activate** — to activate the selected profile
- **Personalise** — to change the profile settings
- **Timed** — to set the profile to be active until an end time. When the time set for the profile expires, the previous profile that was not timed becomes active.

Tones

You can change the tone settings of the selected active profile.

Select **Menu** > **Settings** > **Tones**. You can find the same settings in the **Profiles** menu.

If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

Display

Select **Menu** > **Settings** > **Display**.

To dim the display automatically and to display a clock when the phone is not used for a certain time, select **Power saver**.

To switch off the display automatically when the phone is not used for a certain time, select **Sleep mode**.

Date and time

Select **Menu > Settings > Date and time**.

To set the date and time, select **Date and time settings**.

To set the formats for date and time, select **Date and time format settings**.

To set the phone to update the time and date automatically according to the current time zone, select **Auto-update of date & time** (network service).

Shortcuts

With personal shortcuts, you can get quick access to frequently used phone functions. Select **Menu > Settings > My shortcuts**.

To allocate one phone function to the right or left selection key, select **Right selection key** or **Left selection key**.

To select shortcut functions for the scroll key, select **Navigation key**. Scroll to the desired direction, and select **Change** or **Assign** and a function from the list.

Connectivity

Your phone provides several features to connect to other devices to transmit and receive data.

Packet data

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an internet protocol (IP)-based network.

To define how to use the service, select **Menu > Settings > Connectivity > Packet data > Packet data connection** and from the following options:

- **When needed** — to establish the packet data connection when an application needs it. The connection is closed when the application is terminated.
- **Always online** — to automatically connect to a packet data network when you switch the phone on

Data transfer

Your phone allows transfer of data (calendar, contacts data, and notes) with a remote internet server (network service).

Synchronize from a server

To use a remote internet server, subscribe to a synchronization service. For more information and the

settings required for this service, contact your service provider.

To start the synchronization from your phone, select **Menu > Settings > Connectivity > Data transfer > Server sync**.

Calls and phone

Select **Menu > Settings > Call**.

To divert your incoming calls, select **Call divert** (network service). For details, contact your service provider.

To make ten attempts to connect the call after an unsuccessful attempt, select **Automatic redial > On**.

To have the network notify you of an incoming call while you are in a call, select **Call waiting > Activate** (network service).

To set whether to show your number to the person you are calling, select **Send my caller ID** (network service).

To set the display language of your phone, select **Menu > Settings > Phone > Language settings > Phone language**.

Settings

Enhancements

This menu and its various options are shown only if the phone is or has been connected to a compatible mobile enhancement.

Select **Menu > Settings > Enhancements**. Select an enhancement, and an option depending on the enhancement.

Configuration

You can configure your phone with settings that are required for certain services. Your service provider may also send you these settings.

Select **Menu > Settings > Configuration** and from the following options:

- **Default configuration settings** — to view the service providers saved in the phone and set a default service provider
- **Activate default in all applications** — to activate the default configuration settings for supported applications
- **Preferred access point** — to view the saved access points
- **Connect to service provider support** — to download the configuration settings from your service provider
- **Personal configuration settings** — to manually add new personal accounts for various services and to

activate or delete them. To add a new personal account, select **Add new** or **Options > Add new**. Select the service type, and enter the required parameters. To activate a personal account, scroll to it, and select **Options > Activate**.

Restore factory settings

To restore the phone back to factory conditions, select **Menu > Settings > Restore factory sett.** and from the following options:

- **Restore settings only** — to reset all preference settings without deleting any personal data
- **Restore all** — to reset all preference settings and delete all personal data, such as contacts, messages, media files and activation keys

10. Gallery

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

Digital rights management (DRM) protected content comes with an associated activation key that defines your rights to use the content.

Your phone supports a digital rights management (DRM) system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

To view the folders, select **Menu > Gallery**.

11. Media

Voice recorder

To start recording, select **Menu > Media > Recorder** and the virtual record button on the display.

To start the recording during a call, select **Options > Record**. When you record a call, hold the phone in the normal position near to your ear. The recording is saved in **Gallery > Recordings**.

To listen to the latest recording, select **Options > Play last recorded**. To send the last recording using a multimedia message, select **Options > Send last recorded**.

12. Applications

Your phone software may include some games and Java applications specially designed for this Nokia phone.

Select **Menu > Applications**.

To launch a game or application, select **Games** or **Collection**. Scroll to a game or application, and select **Open**.

To view the amount of memory available for game and application installations, select **Options > Memory status**.

To download a game or application, select **Options > Downloads > Game downloads** or **App. downloads**. Your phone supports J2ME™ Java applications. Ensure that the application is compatible with your phone before downloading it.



Important: Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

Downloaded applications may be saved in **Gallery** instead of **Applications**.

13. Organizer

Alarm clock

Select **Menu** > **Organiser** > **Alarm clock**.

To set the alarm on or off, select **Alarm:**. To set the time for the alarm, select **Alarm time:**. To set the phone to alert you on selected days of the week, select **Repeat:**. To select or personalize the alarm tone, select **Alarm tone:**. To set the time out for the snooze alert, select **Snooze time-out:**.

To stop the alarm, select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the snooze time-out, then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless device use may cause interference or danger.

Calendar and to-do list

Select **Menu** > **Organiser** > **Calendar**. The current day is framed. If there are any notes set for the day, the day is in bold.

Organizer

To make a calendar note, scroll to the date, and select **Options > Make a note**.

To view the day notes, select **View**. To delete all notes in the calendar, select the month or week view, and **Options > Delete all notes**.

To use the lunar calendar, the phone language must be Chinese.

To view lunar details of the highlighted day in the month view, select **Options > Lunar calendar**. To search for a lunar festival, in the lunar day view, select **Lunar festival**. To search for a solar item, or to convert between Gregorian dates and lunar dates, in the lunar day view, select **Options**.

To view the to-do list, select **Menu > Organiser > To-do list**. The to-do list is displayed and sorted by priority. To add, delete, or send a note, to mark the note as done, or to sort the to-do list by deadline, select **Options**.

Dictionary

In **Dictionary**, you can look up a Chinese word for English translation, and look up an English word for Chinese translation.

1. Select **Menu > Organiser > Dictionary**.
2. Switch to the desired input mode if necessary.
3. Enter the Chinese or English word.

4. Scroll to the desired word in the displayed list of words, and select it to view the translation.

To look up synonyms or antonyms of an English word, select **Options** > **Synonyms** or **Options** > **Antonyms**.

To view the translation of the previous or next word in the displayed list of words, scroll left or right.

14. Web

You can access various mobile internet services with your phone browser. The appearance may vary due to screen size. You may not be able to view all details of the internet pages.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, and instructions with your service provider.

You may receive the configuration settings required for browsing as a configuration message from the service provider.

To set a service, select **Menu > Web > Settings > Configuration settings**, and select a configuration and an account.

Connect to a service

To make a connection to the service, select **Menu > Web > Home**; or in the standby mode, press and hold **0**.

To select a bookmark, select **Menu > Web > Bookmarks**. Your device may have some bookmarks or links preinstalled for or may allow access to sites provided by third parties not affiliated with Nokia. Nokia does not endorse or assume any liability for these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any internet site.

To select the last URL, select **Menu > Web > Last web address**.

To enter an address of a service, select **Menu > Web > Go to address**. Enter the address, and select **OK**.

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Appearance settings

While browsing, select **Options > Other options > Appear. settings**. Available options may include the following:

- **Text wrapping** — Select how the text is displayed.
- **Alerts** — Select **Alert for unsecure connection > Yes** to alert when a secure connection changes to an unsecure connection while browsing. Select **Alert for**

Web

insecure items > **Yes** to alert when a secure page contains an insecure item. These alerts do not guarantee a secure connection.

- **Character encoding** — Select **Content encoding** to set the encoding for the browser page content.

Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache.

To clear the cache while browsing, select **Options** > **Other options** > **Clear the cache**. To allow or prevent the phone from receiving cookies, while browsing select **Options** > **Other options** > **Security** > **Cookie settings**; or in the standby mode select **Menu** > **Web** > **Settings** > **Security settings** > **Cookies**.

Service inbox

Your service provider may push service messages (network service) to your phone. Service messages are notifications (such as news headlines) that may contain a text message or an address of a service.

To read the service message, select **Show**. If you select **Exit**, the message is moved to the **Service inbox**.

To set the phone to receive service messages, select **Menu > Web > Settings > Service inbox settings > Service messages > On**.

Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

15. SIM services

Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.

16. Nokia original enhancements



Warning: Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer.

An extensive range of enhancements is available for your device. Please visit www.nokia.com.hk/enhancements for more details.



Enhancements

Practical rules about accessories and enhancements

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.

Nokia original enhancements

- Installation of any complex car enhancements must be made by qualified personnel only.

Battery

Type	Talk time	Standby
BL-4B	Up to 5 hours	Up to 17 days



Important: Battery talk and stand-by times are estimates and only possible under optimal network conditions. Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringing tones, hands free call handling, use in digital mode, and other features will also consume the battery, and the amount of time a device is used for calls will affect its stand-by time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

17. Battery information

Charging and discharging

Your device is powered by a rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Battery information

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Do not dismantle or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorised Nokia dealer, and inspect the hologram label using the following steps:

Successful completion of the steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic, original Nokia battery, you should refrain from using it, and take it to the nearest authorised Nokia service point or dealer for assistance. Your authorised Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

 
Authenticate hologram

1. When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



Battery information

- When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.

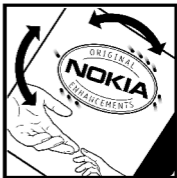

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorised Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokia.com/battery.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Care and maintenance

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorised service facility for service.

Additional safety information

Small children

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Additional safety information

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimeters (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimize the potential for interference.

Additional safety information

- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or

Additional safety information

explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include

Additional safety information

below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength.
Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

Additional safety information

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

CERTIFICATION INFORMATION (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest

Additional safety information

certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.61 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Index

A

- access code 12
- applications 50
- audio messages 36

B

- battery 61
 - charging 15
 - installing 15
- browser 54

C

- cache memory 56
- call log 41
- calls 21
- Chinese input 23
- configuration 46
- contact information 13
- cookies 56
- customer service 13

D

- dictionary 52

- display 42

E

- e-mail 34
- enhancements 46

F

- flash messages 36

G

- games 50

I

- IM 36
- input methods 23
- instant messaging 36
- internet 54

K

- keyguard 19
- keypad lock 19

M

- message centre number 32
- messages
 - settings 37
- messaging
 - audio messages 36

N

- Nokia contact information 13
- Nokia original enhancements 59

O

- offline mode 20
- organiser 51

P

- password 12
- PIN 12
- pinyin input 24
- predictive text input 29
- profiles 42

S

- security code 12
- service inbox 56
- settings 42
 - configuration 46
 - date 43
 - display 42
 - factory 47
 - messages 37
 - phone 45
 - profiles 42
 - time 43
 - tones 42
- shortcuts 43
- SIM card 15, 20
- speed dialing 21
- stroke input 25

T

- tones 42
- traditional text input 28

V

- voice messages 37
- voice recorder 49

Index

W

web 54