 
3 2

5 6 7 8

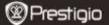

1. Packing List

1. Prestigio MultiPhone

2. AC Adapter

3. Earphones

USB Cable 7. Legal and Safety Notices 8. Battery

Earphone Jack

5. Quick Start Guide 6. Warranty Card

2. Device Overview

3

Vol +\ Vol - Button Adjust the volume level Turn on/off the device; Power

Suspend/Activate the device Earphones connection.

USB port Micro USB cable connection

5 Menu Display menu options Home Back to the Home screen

6 7 Back Back to the previous page

Search Search the web and your phone

8 9 Speaker Listen to phone calls or music

Camera Take photos

3. Uninstalling the back cover and battery

Uninstalling the back cover: hold the side of device tightly with one hand and lift up the back cover at its buckle





with the other hand.





 Taking out the battery: hold the side of device tightly with one hand and pull up the battery handle with the other hand.

4. Installing the SIM cards and Micro SD card



Insert SIM2



Insert SIM1



Insert SD Card

a. Insert SIM cards

• The slot at the bottom is card 2 slot for GSM card, the other is card 1 slot for 3G WCDMA card (compatible with



Quick Start Guide Prestigio MultiPhone PAP4040

2G card).

 
Please make sure the gold contact area on the SIM2 is facing upwards, and the SIM1 is facing downwards.

b. Insert Micro SD card

- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, pull the card out of the slot.

5. Charging

- Insert one end of USB cable into the USB port on the device and plug the power adapter to the electrical socket.
- Normally it takes approximately 3.5 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the charging time.

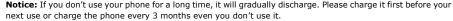



- Press and hold the Power Button for a few seconds. It will automatically enter the Home screen after start-up screen.
- Press the Power Button once to enter sleep mode and press it again to awake the device.
- Press and hold the Power Button, and then tap on Power off/Standby to power off the device or to enter sleep



픠

mode.

Technical Specifications

Processor Cortex A9 at 1 GHz

Memory 512MB RAM + 4GB eMMC, Micro SD slot supports up to 32GB

OS Android 4.0.3 (Ice Cream Sandwich)
Display 4" TFT LCD, Capacitive multi-touch

Resolution 480x 800 pixels

Net Mode WCDMA + GSM (UMTS:900/2100MHz; GSM:850/900/1800/1900MHz)

Interfaces USB 2.0, Micro SD (micro SDHC compatible), USB Host

 Communications
 WiFi (802.11 b/g/n), 3G

 Battery
 1500 mAh Li-Poly battery

 Dimensions
 124*64*10.95mm (L x W x H)

Weight 140g

EN-4 Prestigio PMP4040



Quick Start Guide Prestigio MultiPhone PAP4040

Disclaimer



As the Prestigio products are constantly updated and improved, your device's software and hardware may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.

Prestigio hereby states that this Smartphone complies to basic requirements and another relevant regulations given by the EU directive1999/5/ES. Full version of the declaration of conformity is available on http://www.prestigio.com/compliance.

PN-50 PAP4040 EN - 5