



Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

To install Kies (PC Sync) Kies

1. Download the latest version of Kies from the Samsung website (www.samsungmobile.com) and install it on your PC.
2. Select  or press [].
3. Select **Settings** → **System** → **USB Connection** → **Samsung Kies** → **OK**.
4. Using a PC data cable, connect your device to your PC.
Refer to the Kies help for more information.

GT-B7350 user manual



Using this manual

Thank you for purchasing this Samsung mobile device. This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards.

This user manual has been specially designed to guide you through the functions and features of your device.

Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this user manual may differ in appearance from the actual product.

- Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsungmobile.com for the latest version of the user manual.
- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this user manual is based on Windows operating systems and may vary depending on the user's operating system.
- Applications on this device may perform differently from comparable PC applications and may not include all functions available in the PC version.
- Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications.

- Samsung is not liable for performance issues or incompatibilities caused by user editing of registry settings.
- You may upgrade your mobile device's software by accessing www.samsungmobile.com.
- Sound sources, wallpapers, and images provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user.
- Please keep this manual for future reference.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others



Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information

- ▶ **Refer to**—pages with related information; for example: ▶ p.12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: From the Start menu, select **Settings** → **Bluetooth** (represents **Settings**, followed by **Bluetooth**)

- [] **Square brackets**—device keys; for example: [⏻] (represents the Power/End key)

Copyright

Copyright © 2010 Samsung Electronics

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- This product includes software licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Java™ is a trademark of Sun Microsystems, Inc.

Windows®
phone

- Google and Google Maps™ are trademarks of Google, Inc.
- XTRA is a registered trademark of Qualcomm, Inc.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license. Pat. 7,295,673; 7,460,668; 7,515,710; 7,519,274
- All other trademarks and copyrights are the property of their respective owners.



ABOUT DIVX VIDEO

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

DivX Certified® to play DivX® video up to 320x240 (LCD size : 320x320).

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.



CE0168!

Contents

Assembling 10

Unpack 10

Insert the SIM or USIM card and battery 11

Charge the battery 12

Insert a memory card (optional) 14

Getting started 16

Turn your device on and off 16

Get to know your device 17

Use the touch screen 22

Access menus 23

Customise your device 24

Enter text 28

Access the help system 29

Communication 30

Calling 30

Messaging 32

E-mail 34

Messenger 36

Entertainment 37

Camera	37
Windows Media	45
Media Browser	48
FM Radio	51
Games	53
Java	53

Personal information 55

Contacts	55
Calendar	57
Notes	58
Tasks	59
ActiveSync	60

Web 63

Internet Explorer	63
Streaming Player	65
RSS Reader	65
Podcast	66
Communities	68
Marketplace	69
Microsoft My Phone	69
MSN Money	70
MSN Weather	70
Windows Live	71
Google Maps	71

Google Search	72
Communicator Mobile	72
WebEx	73

Connectivity 74

Network connections	74
Bluetooth	75
Wi-Fi	78
AllShare	80
Internet Sharing	82
GPS	82
PC connections	83

Tools 86

Adobe Reader LE	86
Alarms	86
Calculator	87
Dictionary	88
File Explorer	89
Office Mobile 2010	89
Remote Desktop Mobile	91
Search Phone	92
Smart Converter	92
Smart Reader	93
Stopwatch	94
Timer	95
World Clock	95

Settings	96
Access the Settings menu	96
Power	96
Bluetooth	96
Clock & Alarms	96
Home	96
Lock	97
Sounds & Notifications	97
Connections	97
Personal	97
System	100
Microsoft My Phone	102

Troubleshooting	103
Safety precautions	109
Index	118

Assembling

Unpack

Your package contains the following items:

- Handset
- Battery
- Travel adapter (charger)
- Stereo headset
- PC data cable
- User manual



Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.




- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.
- You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

Insert the SIM or USIM card and battery


When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

To install the SIM or USIM card and battery,

1 Remove the back cover.

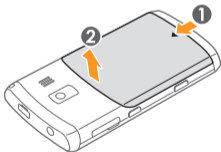


2 Insert the SIM or USIM card.

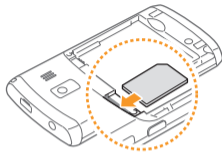


- Place the SIM or USIM card into the device with the gold-coloured contacts facing down.
- If you do not insert a SIM or USIM card, you can only use your device's non-network services and some menus.

3 Insert the battery.

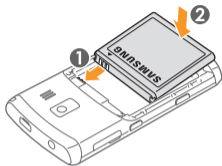

4 Replace the back cover.

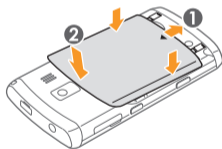

Charge the battery


Before using the device for the first time, you must charge the battery.

You can charge the device with the provided travel adapter or by connecting the device to a PC with a PC data cable.




Use only Samsung-approved chargers and cables. Unauthorised chargers or cables can cause batteries to explode or damage your device.



When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon  will also be empty and blinking. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.

Charge with the travel adapter

- 1 Open the cover to the multifunction jack on the top of the device.
- 2 Plug the small end of the travel adapter into the device.

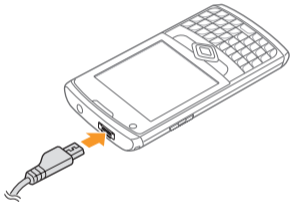

! Improperly connecting the travel adapter can cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

- 3 Plug the large end of the travel adapter into a power outlet.



- You can use the device while it is charging, but it may take longer to fully charge the battery.
 - While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
 - If your device is not charging properly, bring your device and the charger to a Samsung Service Centre.
- 4 When the battery is fully charged, unplug the travel adapter from the device and then from the power outlet.



Do not remove the battery before removing the travel adapter. Doing this may cause damage to the device.

Insert a memory card (optional)

By inserting a memory card, you can store multimedia files and messages or back up your important information. Your device accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).




Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.




- Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- 1 Open the cover to the memory card slot on the side of the device.
- 2 Insert the memory card with the gold-coloured contacts facing down.

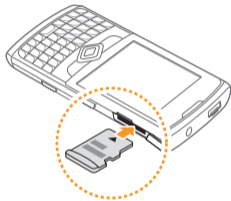

- 3 Close the cover to the memory card slot.


› Remove the memory card

- 1 Open the cover to the memory card slot on the side of the device.
 - 2 Push the memory card gently until it disengages from the device.
 - 3 Pull the memory card out of the memory card slot.
 - 4 Close the cover to the memory card slot.
-  Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

› Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.



Select  or press [>], and select **Settings** → **System** → **Hard Reset** → **Storage Card** → **Format** → **Yes**.

-  Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting user actions.


Getting started

Turn your device on and off





To turn on your device,

- 1 Press and hold [].
 - 2 Follow the on-screen instructions. Your device will automatically connect to the cellular network.
-  Follow all posted warnings and directions from official personnel when in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.

To turn off your device,

- 1 Press and hold [].
- 2 Select **OK**.



› Disable wireless functions

- 1 Select  or press [] to access the Start menu.
- 2 Select **Settings** → **Connections** → **Wireless Manager**.
- 3 Select  next to **Phone**.
Your device will show  on the Today screen.
- 4 Select **OK**.





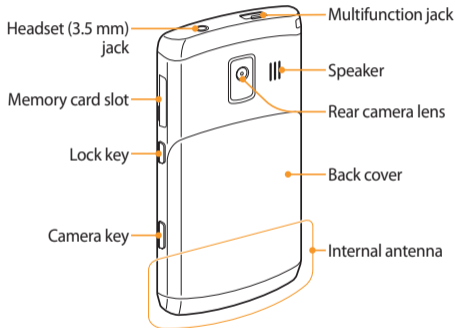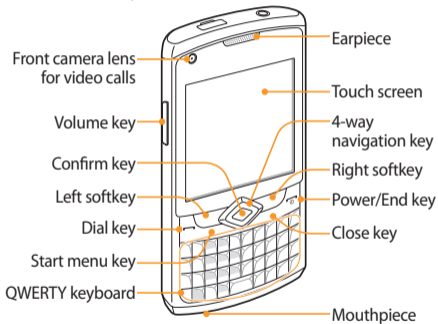

To enable wireless functions, repeat steps 1-4 above.





Get to know your device

› Device layout



› Keys






Key	Function
 Dial	Open the dialling screen; Make or answer a call; Redial the last number (press and hold).
 Softkeys	Perform actions indicated at the bottom of the display.
 Start menu	Access the Start menu; Access the task manager (press and hold).
 4-way navigation	Scroll through lists or menus; Move the cursor up, down, left, or right.
 Confirm	Select the highlighted menu option or confirm an input.
 Close	Close the current application.





Key	Function
 Power/End	Turn the device on or off (press and hold); End a call; Return to the Today screen.
 Volume	Adjust the device's volume.
 Lock	Turn off the touch screen and lock the keys and the screen; Unlock the keys and the touch screen (press and hold).
 Camera	Turn on the camera; In Camera mode, take a photo or record a video.

QWERTY keyboard

















The composition of the QWERTY keyboard may differ depending on your region.













Key	Function
 Alpa- numeric	Enter numbers, letters, and special characters.
 Shift	Change case in a text input field.
 Alt	Use characters on the upper half of the keys in a text input field.
 Symbol	Enter symbols in a text input field (press and hold); Change symbols.
 Space	Insert a space in a text input field; Switch to the silent mode (press and hold).













Key	Function
 Internet	Launch the internet browser.
 Messaging	Access Messaging ; Open a message composer screen (press and hold).
 Enter	Start a new line in a text input field.
 Backspace	Delete characters in a text input field.








› Icons

Icon	Function
	UMTS network available
	UMTS network available (data call unavailable)
	UMTS network connected

Icon	Function
	HSDPA network available
	HSDPA network connected
	EDGE network available
	EDGE network connected
	GPRS network available
	GPRS network connected
	ActiveSync in progress
	Battery level
	Low battery
	Battery charging
	Attempt to access via Bluetooth or Bluetooth activated

Icon	Function
	Bluetooth visibility activated
	Receiving data via Bluetooth
	Receiving data via Bluetooth FTP
	Receiving connection request for exchanging message via Bluetooth
	Bluetooth stereo headset connected
	Bluetooth hands-free connected
	Voice call in progress
	Call on hold
	Call forwarding activated
	Missed call
	Connected to PC
	Signal strength

Icon	Function
	No signal
	Data call in progress
	Searching for signal
	More status icons available (select the icon to see them)
	New text message
	New multimedia message
	New email message
	New voice mail message
	No SIM or USIM card
	Pending alarm
	Offline
	Ringer on

Icon	Function
	Ringer off (Silent mode)
	Ringer set to vibrate
	Roaming (outside of normal service area)
	Synchronisation error
	Urgent notification (select the icon to see the message)
	WLAN activated
	WLAN data call in progress

› Shortcuts panel

From the Today screen or while using an application, select the indicator icons area to open the shortcuts panel. You can quickly customise the device's settings and view notifications.

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.



For optimal use of the touch screen, remove the screen protection film before using your device.

- Tap: Touch the screen once to select commands or launch applications.

- Tap and hold: Tap and hold an item to see a list of available actions. Select the action you want to perform on the pop-up menu.
- Double-tap: Select twice quickly to zoom in or out while viewing photos or web pages or select an item.
- Drag: Tap and hold a scroll bar or text and then drag it to move the bar or select text.



- Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press [🔒].
- If your device does not respond accurately to your screen selects, realign your touch screen. To realign the screen, from the Start menu, select **Settings** → **System** → **Screen** → **Alignment** → **Align Screen**.

› Lock the keys and touch screen

You can lock the keys and the touch screen to prevent any unwanted device operations from accidentally pressing any of the keys and the screen. To lock the keys and the screen, press [🔒].

To unlock, press [🔒] and drag the lock icon left or right, or press [🔒] and press and hold the key.

Access menus

Learn to open applications or folders and switch between open applications.

› Open applications or folders

- 1 Select [🏠] or press [⌂] to access the Start menu.
- 2 Select an application icon to open the application.
To open a folder, select **File Explorer** and navigate to the desired folder.

› Switch applications

Your device allows you to multi-task by running multiple applications at the same time. To switch from one active application to another,


- 1 Press and hold [⌘], or select **Task Manager** from the Start menu.
Task Manager shows a list of all open applications.
- 2 Double-tap an application to switch to the application.

› Close applications

To send the current application to the background, press [⌘] or select [X] or **OK**.

To close an application,

- 1 Press and hold [⌘], or select **Task Manager** from the Start menu.

- 2 Select an application → **End Task**.
To close all applications, select **Menu** → **End All Tasks** → **Yes**.
- 3 Select .


Customise your device

Get more from your device by customising it to match your preferences.

➤ Set the current time and date

- 1 From the Start menu, select **Settings** → **Clock & Alarms** → **Time**.
- 2 Set the time zone and enter the current time and date.
- 3 Select **OK** → **Yes**.

➤ Change your theme or background image

- 1 From the Start menu, select **Settings** → **Home** → **Appearance**.
 - 2 Select a theme or image.
To select an image from memory, select **Use this picture as the background** → **Browse**.
 - 3 When you are finished, select **OK**.
-  Samsung is not responsible for any use of default images or wallpapers provided on your device.

➤ Add or remove items on the Today screen

- 1 From the Start menu, select **Settings** → **Home** → **Items**.

2 Select the check boxes next to each item to add or remove items.
To display predefined items, select **Samsung Today** or **Windows Default**.

3 Select **Move Up** or **Move Down** to change the order of the items.


4 When you are finished, select **OK**.

› Adjust the brightness of the display

1 From the Start menu, select **Settings** → **System** → **Backlight**.

2 Drag the slider to adjust the level of brightness.

3 Select **OK**.

 The brightness level of the display will affect how quickly the device consumes battery power.

› Adjust the system volume

To adjust the system volume, press the Volume key up or down.

To set the device to vibrate, press and hold the Volume key down. To deactivate the vibrate feature, press and hold the Volume key down again.

› Switch to the silent mode

From the Today screen, press and hold [Mute] to mute or unmute your device. Alternatively, press the Volume key and select **Off**.

› Set up sounds

1 From the Start menu, select **Settings** → **Sounds & Notifications**.

2 Select **Sounds** or **Notifications**.

- 3 Customise the sound options for incoming calls, incoming messages, and other device sounds. ► p. 97
- 4 When you are finished, select **OK**.

› Lock your device

You can lock your device by activating the device password.

- 1 From the Start menu, select **Settings** → **Lock**.
- 2 Select **Prompt if phone unused for**.
- 3 Select the length of time the device waits before locking itself.
- 4 Select a password type from the **Password type** drop-down menu.
- 5 Enter a new password, and then enter the new password again.
- 6 Select **OK** → **Yes**.



The first time you access a menu that requires a password, you will be prompted to create and confirm a password.

Once the device lock is enabled, you must enter the password after a specified length of time when you do not use the device or each time you turn on the device.




- If you forget your password, bring your device to a Samsung Service Centre to unlock it.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

› Lock your SIM or USIM card

You can lock your device by activating the PIN supplied with your SIM or USIM card.

- 1 From the Start menu, select **Settings** → **Personal** → **Phone** → **Security**.
- 2 Select **SIM PIN**.

- 3 Select  next to **Require PIN when phone is used** → **OK**.
- 4 Enter the PIN of your SIM or USIM card.
- 5 Select **OK**.


Once the PIN lock is enabled, you must enter the PIN each time you turn on the device or to use features supplied by the SIM or USIM card.



- If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.
- If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it.

› Activate the mobile tracker

When someone inserts a new SIM or USIM card in your device, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your device.

- 1 From the Start menu, select **Settings** → **Personal** → **Phone** → **Security**.
- 2 Select **View more** → **Mobile Tracker** → **Configuration**.
- 3 Enter your mobile tracker password and select **OK**.
- 4 Select **Enable Mobile Tracker**.
- 5 Select the recipient field and enter a phone number including a country code (with +).
To select one from the phonebook, select .
- 6 Select the sender input field and enter a sender's name.
- 7 Select **OK** → **OK**.

Enter text

You can enter text by pressing the alphanumeric keys on the QWERTY keyboard or by selecting characters on the virtual keyboard.

› Enter text using the QWERTY keyboard

Press appropriate alphanumeric keys to enter characters, numbers, and symbols.

You can also use the following keys:

Key	Function
⇧	Change case.
Alt	Enter characters on the upper half of the keys.
Sym	Switch to Symbol mode (press and hold).
⎵	Insert a space.
←	Clear your input.

Key	Function
↵	Start a new line.

› Enter text with the virtual keyboard

1 Select the input panel icon (📄) at the bottom centre of the screen.



Number	Function
1	Switch to Number/Symbol mode.
2	Switch to Caps Lock mode.
3	Change case.
4	Switch to Symbol mode.

Number	Function
5	Clear your input.
6	Start a new line.
7	Move the cursor.
8	Insert a space.

2 Select characters to enter your text.



You can select the input panel icon at any time to show or hide the input panel.


Copy and paste text

While you are entering text using the virtual keyboard, you can use the copy and paste feature to use text in other applications.

1 Drag your finger across the text you want to highlight.

- 2 Select **Ctrl** and **C** or tap and hold the text and select **Copy** to copy and paste the text onto the clipboard. To cut the text, select **Ctrl** and **X** or tap and hold the text and select **Cut**.
- 3 In another application, select the text input field.
- 4 Select **Ctrl** and **V** or tap and hold the text input field and select **Paste** to insert the text from the clipboard into the text field.

Access the help system


To access the help system of your device, from the Start menu, select **Help** → . The online help system appears.

Communication


Calling

Learn to make and receive calls, reject calls, and adjust the call volume.

› Make a call

- 1 From the Today screen, enter an area code and phone number.
 - 2 Press [↵].
For a video call, select  → **Video Call**.
 - 3 To end the call, press [⏏].
- Use the phonebook to save numbers you dial frequently. ► p. 55
 - To quickly access the call log to redial the numbers you dialed recently, press [↵].

› Answer a call

- 1 Press [↵].
 When the device is ringing, press the Volume key to adjust the volume, or press and hold the Volume key down to mute the ringtone.
- 2 For a video call, select **Show me** to allow the caller to see you via the front camera lens.
- 3 To end the call, press [⏏].

› Reject a call

Press [⏏]. When you reject a call, the caller will hear a busy tone.

› Call an international number

- 1 From the Today screen, press and hold [0] to insert the + character (this replaces the international access code).
- 2 Enter the complete number you want to dial (country code, area code, and phone number), and then press [↵] to dial.
- 3 To end the call, press [⏏].

› Use the headset

By plugging the supplied headset into the headset jack, you can make and answer calls:

- To redial the last call, press and hold the headset button.
- To answer a call, press the headset button.
- To end a call, press and hold the headset button.



The supplied headset is designed only for your device and may not be compatible with other phones and MP3 players.

› Use options during a voice call

You can use the following options while a voice call is in progress:

- To adjust the voice volume, press the Volume key up or down.
- To place a call on hold, select **Hold**. To retrieve a held call, select **Unhold**.
- To activate the speakerphone feature, select **Speaker On**.



In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

- To turn off the microphone so that the other party cannot hear you, select **Mute**.
- To record a voice call, select **Record**.
- To dial a second call, place the first call on hold and then dial a new number.

- To answer a second call, press [] when a call waiting tone sounds. The first call is automatically placed on hold. You must subscribe to the call waiting service to use this feature.
- To listen and talk to the other party via the headset, select → **Turn Hands-free On**.
- To make a multiparty call (conference call), make or answer a second call and select → **Conference** when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature.

› Access the call log

- 1 Press [].
- 2 Select → **Call Log**.
- 3 To view the call log by call type, select → **Filter** → a filter.

- 4 Select a call log.
 - To make a call, select .
 - To view call log details, select → **Open Call**.

Messaging




Learn to use text and multimedia messaging functions.


› Send a text message

- 1 From the Start menu, select **Messaging**.
 - 2 Select → **New**.
 - 3 Enter a recipient in the To field.
If you press the Confirm key in the To field, the recipient list will appear. You can add recipients from the phonebook or recent logs by selecting .
- When you enter digits, your device will search for and display the numbers that include the digits so that you can select one from the pop-up list.

- 4 Select the message field and enter your message text.
- 5 Select **Send** to send the message.

› Send a multimedia message

- 1 From the Start menu, select **Messaging**.
- 2 Select  → **New**.
- 3 Enter a recipient in the To field.
If you press the Confirm key in the To field, the recipient list will appear. You can add recipients from the phonebook or recent logs by selecting . You can also change the recipient type to Cc or Bcc by selecting **To**.
- 4 Select the message field and enter your message text.
- 5 Select  → **Insert** → a file type → **Yes**.
- 6 Select a file.




- 7 Select  → **Attach** → an option to attach other types of files (if necessary).
- 8 Select **Send** to send the message.

› View messages

You can access message folders for all your messaging accounts (email, SMS, and MMS). Messages you have received, sent or saved are sorted automatically into the following message folders.

- **Deleted Items:** Deleted messages; They will be stored until you delete them manually from this folder
- **Drafts:** Messages that you have saved for future use
- **Inbox:** Received messages
- **Outbox:** Messages that are currently sending or waiting to be sent
- **Sent Items:** Sent messages

To view messages,

- 1 From the Start menu, select **Messaging**.
- 2 Select a message folder from the drop-down menu at the top left of the screen.
- 3 Select a message to view.
- 4 Select  to resend or  to reply to the message. To access message options, select 



E-mail

Learn to use email messaging functions. You can access email messages from your desktop Microsoft Outlook account by synchronising your device and PC via ActiveSync or set up accounts to send or receive email messages directly via your email servers.

> Add an email account



- 1 From the Start menu, select **E-mail**.
- 2 Select **Setup E-mail**.
- 3 Enter your email address and password and select **Next**.
- 4 Follow the on-screen instructions to complete the account setup.

> Send an email message

- 1 From the Start menu, select **E-mail**.
- 2 Select the name of an email account.
- 3 Select  → **New**.
- 4 Enter a recipient's address in the To field or select  → **Add Recipient...** to select one from the phonebook.




The Cc and Bcc fields are located above the sender field.

- 5 Select the subject field and enter a message subject.
- 6 Select the message field and enter your message text.
- 7 Select  → **Insert** → an option to attach files (if necessary).
- 8 Select  to send the message.





› View messages

Messages you have received, sent or saved are sorted automatically into the following message folders.

- **Deleted Items:** Deleted messages; They will be stored until you delete them manually from this folder
- **Drafts:** Messages that you have saved for future use
- **Inbox:** Received messages
- **Outbox:** Messages that are currently sending or waiting to be sent
- **Sent Items:** Sent messages

 Additional message folders may be available depending on your e-mail account.

To view messages,

- 1 From the Start menu, select **E-mail**.
- 2 For Outlook E-mail, synchronise your device and PC via ActiveSync. ► p. 60
- 3 Select the name of an account.
- 4 Select  → **Send/Receive** to download messages from your email server.
- 5 Select a message folder from the drop-down menu at the top left of the screen.
- 6 Select a message to view.
- 7 Select  to resend or  to reply to the message. To access message options, select .

Messenger

With the Windows Live messenger, you can remain available to other users and stay up-to-date with your email messages without a constant connection to the wireless web. When a new message arrives or you want to access internet services, the connection will be restored.

› Sign in to Windows Live

- 1 From the Start menu, select **Messenger**.
- 2 Select **Sign in**.
- 3 Select **Accept** to confirm the privacy statement (if necessary).
- 4 Enter the user ID and password of your Windows Live account and select **Next**.
- 5 Follow the on-screen instructions to complete the setup.

› Chat with the messenger

- 1 From the Start menu, select **Messenger**.
- 2 Locate and select a contact's name, and select **Send IM**.
- 3 Enter a message in the text field at the bottom of the screen and select **Send**.
- 4 While chatting, you can perform the following actions:
 - To insert emoticons, select **Menu** → **Add emoticon**.
 - To transfer a file, select **Menu** → **Send** → a file type → a file.
 - To invite a contact to chat, select **Menu** → **Options** → **Add participant**.
 - To record and send a voice clip, select **Menu** → **Send** → **Voice clip**, record your voice clip, and select **Send**.
 - To switch between contact list and chat, scroll left or right.
- 5 To end the chat, select **Menu** → **End conversation**.

Entertainment

Camera

Your device allows you to take digital photos or record videos.


› Capture a photo

I Press [] to turn on the camera.





- Tap the screen to hide or display icons in the viewfinder.
- The camera automatically turns off when you do not use it for a specified period.
- The memory capacity may differ depending on the shooting scene or shooting conditions.

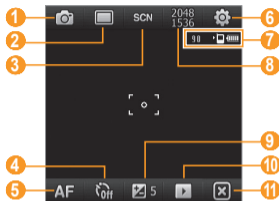2 Aim the lens at the subject and make any adjustments.




Number	Function
1	Switch to the camcorder.
2	Change the shooting mode.
3	Change the scene mode.
4	Select the length of the delay before the camera takes a photo.







Number	Function
5	Change the auto focus setting.
6	Change the camera settings.
7	Check the camera status and settings. <ul style="list-style-type: none"> • 90: Number of photos you can take (according to available memory) • : Default storage location • : Battery power level
8	Change the resolution option.
9	Adjust the brightness; Select + to increase or – to decrease.
10	View the photo you captured last.
11	End the camera.



3 Press [] or the Confirm key to capture the photo.

› View a photo



- 1 From the viewfinder, select .
- 2 Scroll left or right to the photo you want.

While viewing a photo, you can access the following options:



- To zoom in or out, tap and hold the screen. When the up and down arrows appear, scroll up or down.
- To send the photo via the messaging or Bluetooth wireless feature, select .
- To set the photo as a caller ID image or wallpaper, select .
- To delete the photo, select .
- To edit the photo, select  → **Photo Edit**.
- To add a memo to the photo, select  → **Photo memo**.
- To upload the photo to a community site, select  → **Upload to Web**.


- To record GPS information with the photo, select  → **GPS**.
- To view the details of the photo, select  → **Details**.

➤ Adjust the camera settings

Before capturing a photo, select  →  to access the following options:

Option	Function
White balance	Adjust the colour balance according to lighting conditions.
Effect	Apply a special effect, such as sepia or black and white tones.
ISO	Adjust the sensitivity of the camera imaging sensor.
Adjust	Adjust contrast, saturation, and sharpness.
Metering	Select a type of exposure metre.
Quality	Set the quality level for your photos.


Before capturing a photo, select  →  to access the following settings:

Setting	Function
Review Screen	Set the camera to display the captured image.
Guideline	Display guidelines on the preview screen.
GPS	<p>Set the camera to include location information for your photos.</p> <p> To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. Alternately, update the GPS functionality to improve GPS reception. ► p. 83</p>
Default storage	Select a memory location for storing captured photos.

Setting	Function
Shutter sound	Set the camera shutter to make a sound when capturing a photo.




> Record a video

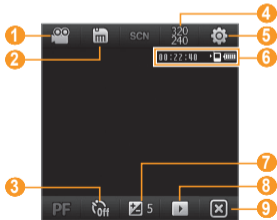- 1 Press [CAMERA] to turn on the camera.
- 2 Select [CAMERA] to launch the camcorder.
- 3 Aim the lens at the subject and make any adjustments.





Number	Function
1	Switch to the camera.
2	Change the recording mode.
3	Select the length of the delay before the camcorder starts recording a video.
4	Change the resolution option.
5	Change the camcorder settings.
6	Check the camcorder status and settings. <ul style="list-style-type: none"> • 00:22:40: Length of video that can be recorded (according to available memory) • [Folder icon]: Default storage location • [Battery icon]: Battery power level


Number	Function
7	Adjust the brightness; Select + to increase or – to decrease.
8	View the video you recorded last.
9	End the camcorder.


- Press [] or the Confirm key to begin recording.
- When you are finished, select , or press [] or the Confirm key to stop recording.

Play a video

- From the viewfinder, select .
- Scroll to the video you want.
- Select  to play the video.

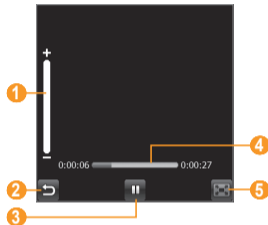

4 During playback, use the following controls:



Number	Function
1	Adjust the volume.
2	Stop playback and return to the previous screen.
3	Pause playback; Select  to resume playback.



Number	Function
4	Skip backward or forward by tapping on the progress bar.
5	Change the screen mode.

› Adjust the camcorder settings

Before recording a video, select  →  to access the following options:

Option	Function
White balance	Adjust the colour balance according to lighting conditions.
Effect	Apply a special effect, such as sepia or black and white tones.
ISO	Adjust the sensitivity of the camera imaging sensor.

Option	Function
Adjust	Adjust contrast, saturation, and sharpness.
Metering	Select a type of exposure metre.
Video Quality	Set the quality level for your videos.

Before recording a video, select  →  to access the following settings:

Setting	Function
Guideline	Display guidelines on the preview screen.
Audio Recording	Turn the audio on or off.
Default storage	Select a memory location for storing recorded videos.

› Capture a series of photos

You can easily take a series of photos of moving subjects. This is useful when you are photographing children at play or a sporting event.

- 1 Press [📷] to turn on the camera.
- 2 Select [☐] → **Continuous**.
- 3 Make any necessary adjustments.
- 4 Press and hold [📷] or the Confirm key. The camera will continue to take up to 6 photos until you release the key.

› Capture photos in Smile shot mode

- 1 Press [📷] to turn on the camera.
- 2 Select [☐] → **Smile**.

- 3 Aim the camera lens at your subject and press [📷] or the Confirm key.

The device recognises faces in an image and detects when your subjects smile. When all your subjects are smiling, the camera will automatically capture the photo.





In some cases, you may have to disable smile shot to capture a photo of your subject, even if he or she is smiling.

› Create a photo mosaic

- 1 Press [📷] to turn on the camera.
- 2 Select [☐] → **Mosaic**.
- 3 Select a mosaic type.
- 4 Aim the camera lens at your subject and press [📷] or the Confirm key to capture the first shot.




- 5 Repeat step 4 to capture the rest of the shots.
When you have captured all the shots necessary for the mosaic, the camera will automatically combine them into one photo.

▶ Capture panoramic photos

- 1 Press [] → **Panorama**.
- 3 Aim the camera lens at your subject and press [] or the Confirm key to capture the first shot.
- 4 Slowly move the device to a direction. The device captures the next photo automatically when the orange frame aligns to the white frame.
- 5 Repeat step 4 to capture the rest of the shots.
When you have captured all the shots necessary for the panoramic photo, the camera will automatically combine them into one panoramic photo.

▶ Capture photos in Action shot mode

In Action shot mode, you can capture shots of a moving subject and then combine them into a single photo that shows the action.

- 1 Press [] to turn on the camera.
- 2 Select [] → **Action**.
- 3 Aim the camera lens at your subject in motion and press [] or the Confirm key to capture the first shot.
- 4 Move the device to follow the moving subject. The device captures the next photo automatically.
- 5 Continue to follow the subject until the device has captured all the shots necessary for the action photo. The camera will automatically combine them into one photo.



- Move the device horizontally or vertically to track the moving subject.
- In Action shot mode, the part of the scene that is not captured appears black.
- The distance between the camera and subject should be at least 3 metres.
- For best results, capture photos in well-lit areas with plenty of contrast between the subject and the background.

Windows Media

Your device is equipped with Windows Media Player. The procedures that follow explain how to use Windows Media Player.

› Add music files to your device

Use any of the following methods to add music files to your device:

- Copy files to a memory card and insert the card into the device. ▶ p. 84
- Download files from the wireless web. ▶ p. 63
- Download from a PC with the optional Samsung Kies. ▶ p. 84
- Receive via Bluetooth. ▶ p. 77
- Synchronise with ActiveSync. ▶ p. 60

› Update the library


- 1 From the Start menu, select **Windows Media**.
- 2 Select **Menu** → **Update Library...** to locate and add new files to the Windows Media library.
- 3 When the library is updated, select **Done**.

› Play music or video files

- 1 From the Start menu, select **Windows Media**.
- 2 From the library, select a category → a file → **Play**.

3 During playback, use the following controls:



Number	Function
1	Skip to the previous file.
2	Access the Windows Media website (WindowsMedia.com).
3	Change the screen mode.
4	Rate the current track.
5	Pause playback; Select  to resume playback.

Number	Function
6	Skip to the next file.
7	Mute or unmute the speaker.
8	Adjust the volume.

To activate Shuffle mode and Repeat mode, select **Menu** → **Shuffle/Repeat** → an option.

4 Select **Menu** → **Stop** to stop playback.

➤ Add files to the Now Playing list

1 During playback, select **Now Pla...**

2 Select .

3 Locate and select the file you want to add and select **Menu** → **Queue Up**.

4 When you are finished, select **OK**.

➤ Create a playlist

- 1 From the Start menu, select **Windows Media**.
- 2 From the library, select a category → a file.
- 3 Select **Menu** → **Queue Up**.
- 4 Repeat steps 2-3 to add more files to the playlist.
- 5 Select **Menu** → **Now Playing**.
- 6 Select **Menu** → **Save Playlist...**
- 7 Enter a title for your new playlist and select **OK**.
- 8 Select **OK**.

➤ Customise the Windows Media settings

- 1 From the Start menu, select **Windows Media**.
- 2 From the library, select a category → a file → **Play**.
- 3 Select **Menu** → **Options...**

- 4 Adjust the following settings:

Option	Function
Playback	Select to show the remaining time or elapsed time of playback.
Video	Change the display mode for playing videos.
Network	Change the network settings for playing streaming contents.
Library	Set Windows Media to start with the library screen.
Skins	Select the skin of the player screen.
Buttons	Assign music control functions to the device keys.

- 5 When you are finished, select **OK**.

Media Browser

Learn to view photos and videos. You can view them as slideshows.



To play DivX video files, you must first register your device with the DivX website. From the Start menu, select **Settings** → **Personal** → **DivX Registration** to check your registration code and then visit <http://vod.divx.com> to complete the registration.

› View a photo


- 1 From the Start menu, select **Media Browser**.
- 2 Select a folder or select **All** to view all thumbnails.
- 3 Select a photo (with no play icon).

While viewing the photo, you can access the following options:

- To view more photos, flick left or right.

- To zoom in or out, tap and hold the screen. When the up and down arrows appear, scroll up or down.
- To send the photo to others via the messaging, E-Mail Bluetooth, or AllShare feature, select **Send via**.
- To delete the photo, select **Menu** → **Delete**.
- To set the photo as wallpaper or a caller ID image for a contact, select **Menu** → **Set As**.
- To post the photo to a community website or blog, select **Menu** → **Upload to Web**.
- To print the photo using the Bluetooth wireless feature, select **Menu** → **Print via Bluetooth**.
- To edit the photo using various tools, select **Menu** → **Edit**. ► p. 50
- To change the name of the photo, select **Menu** → **Rename**.
- To view the photo details, select **Menu** → **Properties**.


Play a video


- 1 From the Start menu, select **Media Browser**.
- 2 Select a folder or select **All** to view all thumbnails.
- 3 Select a video (with the play icon).
- 4 Tap  to begin playback.
Windows Media Player opens to play the video.
- 5 Control playback using the on-screen controls. ▶ p. 45

Start a slideshow

- 1 From the Start menu, select **Media Browser**.
- 2 Select a folder or select **All** to view all thumbnails.
- 3 Select **Menu** → **Slide show**.


- 4 During the slideshow, tap the screen and use the following controls:

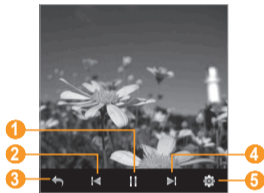

Number	Function
1	Pause the slideshow; Select  to resume the slideshow.
2	Skip to the previous photo.
3	End the slideshow.
4	Skip to the next photo.
5	Change the slideshow settings

› Edit a photo

- 1 From the Start menu, select **Media Browser**.
- 2 Select a folder or select **All** to view all thumbnails.
- 3 Select a photo (with no play icon).
- 4 Select **Menu** → **Edit**.
- 5 Select an editing tool at the top of the screen:

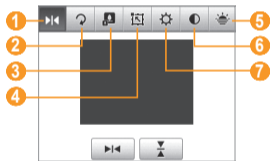

Number	Function
1	Flip the photo horizontally or vertically.


Number	Function
2	Rotate the photo.
3	Resize the photo.
4	Crop a portion of the photo.
5	Apply a special effect, such as sepia or black and white tones.
6	Adjust contrast.
7	Adjust brightness.

- 6 Select an option or adjust the setting for the selected editing tool at the bottom of the screen.
- 7 When you are finished, select **Save as**.
- 8 Select a folder → **OK**.
- 9 Enter the name for the new photo and select **OK** → **OK**.

FM Radio


You can listen to your favourite stations with FM radio.

› Listen to the FM radio

- 1 Plug a headset into the headset jack. The headset will serve as a radio antenna.
 - 2 From the Start menu, select **FM Radio**.
 - 3 Select **OK** to start automatic tuning.
The FM radio scans and saves available stations automatically.
-  The first time you access the FM radio, it will turn on and start automatic tuning.
- 4 When the scan is complete, select **OK**.
 - 5 Select a radio station you want and select **OK** to return to the FM radio screen.

6 Use the following controls:



Number	Function
1	Add the current radio station to the favourites list.
2	Turn off the FM radio; Select  to turn on the FM radio.
3	Search for an available radio station.
4	Adjust the volume.

Number	Function
5	Change the frequency by scrolling left or right on the scale bar.
6	Change the sound output (headset or device's speaker).

› Save radio stations by automatic tuning

- 1 Plug a headset into the headset jack.
- 2 From the Start menu, select **FM Radio** → **Scan**.
- 3 Select **Yes** to confirm (if necessary).
- 4 When the scan is complete, select **OK**.
- 5 Select the station you want and select **OK**.

› Save radio stations as your favourites

- 1 Plug a headset into the headset jack.
- 2 From the Start menu, select **FM Radio**.

- 3 Scroll to the radio station you want to save.
- 4 Select one of the **+** symbols at the top of the screen.

› Record the FM radio

- 1 Plug a headset into the headset jack.
- 2 From the Start menu, select **FM Radio**.
- 3 Select **Menu** → **Record** to record the current station.
- 4 When you are finished, select **Stop** or **OK** → **OK**. The recorded file is saved in **File Explorer** → **My Documents** → **FM Radio**.

› Customise the FM radio settings

- 1 From the Start menu, select **FM Radio**.
- 2 Select **Menu** → **Options**.

3 Adjust the following settings:

Option	Function
Region	Select your location.
Turn radio off while using another program	Set whether or not to play the FM radio in the background while using other applications.
Turn radio on again after a phone call	Select whether or not to turn on the FM radio after a call.
Record location	Select a memory location for storing recorded FM radio clips.

4 When you are finished, select **OK**.

Games

Play the Solitaire game.

- 1 From the Start menu, select **Games** → **Solitaire**.
- 2 Follow the directions on the screen to play the game.

Java

Your device supports applications and games built on the Java platform.


› Download Java-based applications

- 1 From the Start menu, select **Java** → **Download Applications...**
- 2 Follow the directions on the website to download new Java-based applications.

➤ Launch Java-based applications

I From the Start menu, select **Java**.

Select a Java application or game.

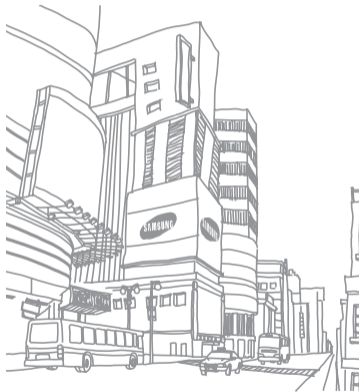


Personal information

Contacts

Learn to use contact cards and groups to store personal information, such as names, phone numbers, and addresses.

› Create a new Outlook or SIM contact card


- 1 From the Start menu, select **Contacts**.
- 2 Select  → a contact card type (Outlook or SIM).
You can also create Window Live contacts to use in MSN services by selecting **Windows Live**. ► p. 71
- 3 Select an information category at the top of the screen and enter contact information using the text input panel or QWERTY keyboard.



If you are saving the contact on a SIM or USIM card, you can save only the contact's name and a phone number.

- 4 When you are finished, select **OK** to save the contact card.



You can also create a contact from the dialling screen.

- 1 From the Today screen, enter a phone number.
- 2 Select  → **Save to Contacts** → <**New Contact**>.
- 3 Select a contact card type (Outlook or SIM).
- 4 Enter the contact's name, select a number type, and select **Save** or **OK**.
- 5 Select an information category at the top of the screen and enter contact information using the text input panel or QWERTY keyboard.
- 6 When you are finished, select **OK** to save the contact card.

› Search for a contact card

- 1 From the Start menu, select **Contacts**.
- 2 Enter a few letters of the contact's name in the keyword field at the top of the screen.
As you enter letters, the screen will show contacts that match your input.
- 3 Select a contact to open.

› Edit contact cards


- 1 From the Start menu, select **Contacts**.
- 2 Select a contact to edit.
- 3 Select  → **Edit**, or select .
- 4 Edit contact information.
- 5 When you are finished, select **OK** to save the contact card.

› Copy contact cards

To copy contact cards from your device's memory to a SIM or USIM card and vice versa,

- 1 From the Start menu, select **Contacts**.
- 2 Select  → **Copy Contact** → a copy option.

› Assign a speed dial number to a contact card



- 1 From the Start menu, select **Contacts**.
- 2 Select a contact.
- 3 Select the contact's phone number to use for speed dialling.
- 4 Select  → **Add to Speed Dial...**
- 5 Select a speed dial location → **OK**.



Once you set a speed dial number, you can dial the number by tapping and holding the corresponding location number on the dialling screen.

› Create a group of contacts


By creating groups of contacts, you can manage multiple contacts and send messages or email to an entire group. Start by creating a group.

- 1 From the Start menu, select **Contacts**.
- 2 Select  → a group type (email or messaging).
- 3 Enter a name for the group.
- 4 Select .
- 5 Select contacts to include in the group.
- 6 Select **Done** → **OK**.


Calendar





Use Calendar to keep track of appointments, birthdays, or other events.

› Create a calendar event





- 1 From the Start menu, select **Calendar**.
- 2 Select  → **New Appointment**.
- 3 Complete the fields and adjust the settings for your event.
- 4 When you are finished, select **OK**.

› Change the calendar view

- 1 From the Start menu, select **Calendar**.
- 2 Select the view mode icon to change the calendar view:
 -  : hourly blocks for one full day

- : hourly blocks for the days in one full week (Monday to Friday)
- : a full month in one view
- : whole year in one view
- : a list of events scheduled for a day

› View a calendar event

- 1 From the Start menu, select **Calendar**.
- 2 Select a date on the calendar. To go back to today, select .
To view events by event type, select  → **Filter** → a category.
 In the month view, a small figure will appear under dates with scheduled appointments.
- 3 Select an event to view its details.
 For events that you have received from others, you can send a reply or propose new time for the event.


› Stop an event reminder


When the reminder alarm sounds for a calendar event, select  or select  → **Dismiss All** or a snooze option. Alarms with snooze will repeat according to the number of times you specified in the settings or until you select .

Notes

Use Notes to create memos, sketches, and recordings.

› Create a note

- 1 From the Start menu, select **Notes**.
- 2 Select .
- 3 Enter your note.
 - To create sketches, draw your sketches on the screen.
 - ▶ Create a sketch

- To create recordings, select  → **View Recording Toolbar** → ●.
- To insert today's date into the note, tap and hold on the empty area and select **Insert Date**.



4 When you are finished, select **OK**.

› Create a sketch

1 From the Start menu, select **Notes**.

2 Select .

3 Make your sketch with strokes.


4 To edit the sketch, select  and clear **Draw**.
Select the sketch to make the selection handles appear. You can then use the handles to drag or resize the sketch or select  to access other options.

5 When you are finished, select **OK**.

› View a note

1 From the Start menu, select **Notes**.

2 Select a note.

3 Select  to play a recording or edit the note, if needed.

Tasks


Use Tasks to create to-do lists and reminders.

› Create a task

1 From the Start menu, select **Tasks**.

2 Select  → **New Task**.


3 Enter details for the task.

 To set a reminder for the task, select the due field and set a due date. Next, select the reminder field, select **Remind me**, and then specify the time and date of the reminder.

4 When you are finished, select **OK**.

› View a task

1 From the Start menu, select **Tasks**.

2 Select  → **Sort By** → a category (status, priority, subject, start date, or due date) to sort the tasks.

3 Select a task to view its details.

› Mark a task as completed

After completing a task, from the Start menu, select **Tasks** and select the check box next to the task name. Once you have marked a task complete, you will no longer receive any scheduled reminders for that task.

ActiveSync

With ActiveSync, you can synchronise your device with a computer and back up and restore your data. Before you can synchronise your data, you must download and install ActiveSync from the Microsoft website (<http://www.microsoft.com>).

› Connect your device to a computer

1 From the Start menu, select **Settings** → **System** → **USB Connection** → **ActiveSync** → **OK**.

2 Connect one end (micro-USB) of the PC data cable to the multifunction jack on your device and the other end to the USB port on your computer.

 If you have a problem in connecting the device with ActiveSync, activate advanced network functionality. From the Start menu, select **Settings** → **Connections** → **USB to PC** and select the check box.

› Synchronise your data

When you connect your device to a computer, ActiveSync should begin synchronising your data automatically. You can begin the synchronisation manually by selecting **Sync**. To stop a synchronisation in progress, select **Stop**.

You can also manually find and copy files from your device to a computer and vice versa. From the Microsoft ActiveSync window, click **Explore**.



If you format the **Storage Card** folder by using a connected computer, the writing speed to the folder may be reduced. Format the folder only from the device to avoid this situation.

› Add an Exchange server

Disconnect the PC data cable from your computer before adding an exchange server.


- 1 From the Start menu, select **ActiveSync**.
- 2 Select **Menu** → **Add Server Source...**

- 3 Enter an email address and select **Next**.
- 4 Enter your Exchange user name, password, and domain name, and select **Next**.
- 5 Enter a server address. To establish a secure connection, select the check box that reads **This server requires an encrypted (SSL) connection**.
- 6 Select **Next**.
- 7 Select the types of data to synchronise. To customise the sync options for the selected data type, select **Settings...**
- 8 When you are finished, select **Finish**.

› Change the synchronisation schedule

If you routinely synchronise your data via an Exchange server, you can configure settings for both peak and off-peak schedules. To change the synchronisation schedules,

- 1 From the Start menu, select **ActiveSync**.
- 2 Select **Menu** → **Schedule...**
- 3 Set the following options:
 - **Peak times:** Set the frequency of synchronisations during peak hours.
 - **Off-peak times:** Set the frequency of synchronisations during off-peak hours.
 - **Use above settings when roaming:** Set to use the synchronisation schedules even when roaming.
 - **Send/receive when I click Send:** Set to synchronise when you select **Send** in Messaging.
 - **Peak Times...:** Set days and peak hours.
- 4 When you are finished, select **OK**.

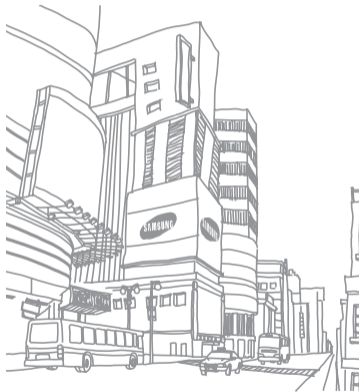

Web

Internet Explorer

Learn to access and bookmark your favourite web pages with Internet Explorer.




- You may incur additional charges for accessing the web and downloading media.
- Available icons may vary depending on your region or service provider.

› Browse the web

I From the Start menu, select **Internet Explorer**.



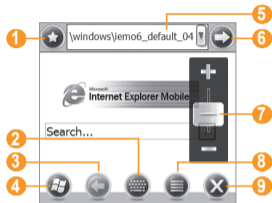

2 Navigate web pages by selecting the following controls:






Number	Function
1	Open favourite web pages.
2	Open the text input panel.
3	Return to the previous web page.
4	Access the Start menu.

Number	Function
5	Enter a web address to access or select one from the history drop-down list.
6	Go to the entered web address.
7	Zoom in or out.
8	Open the browser menu.
9	Close the current window.




While browsing web pages, you can access the following options:

- To go back to the homepage, select  → **Home Page**.
- To access a list of web pages you have visited, select  → **History**.
- To go to the next page in the history, select  → **Forward**.
- To update the web page with the latest information, select  → **Refresh**.

- To change the settings for the browser display, select  → **View**.
- To send the web address of the web page, view page properties, or customise the browser options, select  → **Tools**.
- To copy and paste text from the web page, select  → **Copy/Paste**.

› Bookmark your favourite pages


To add a web page to your list of favourites,

- 1 From the Start menu, select **Internet Explorer**.
- 2 Select  → .
To add a new bookmark folder, select .
- 3 Enter a name for the web page, the web address, and select a folder.
- 4 When you are finished, select **OK**.

Streaming Player

Use Streaming Player to watch videos or listen to audio files directly from the internet.

- 1 From the Start menu, select **Streaming Player**.
- 2 Select **Menu** → **Open**.
- 3 Enter the URL of a streaming media file and select **Connect**.
- 4 During playback, use the following controls:

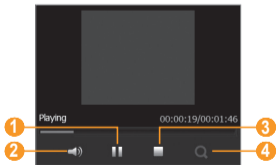

Number	Function
1	Pause playback; Select ▶ to resume playback.
2	Adjust the volume.
3	Stop playback.
4	Zoom in or out.

RSS Reader

Learn to use RSS Reader to get the latest news and information from your favourite websites.


› Subscribe to RSS feeds

To subscribe to RSS feeds by entering an address,

- 1 From the Start menu, select **RSS Reader**.
- 2 Select a feed category.

- 3 Select **Add Feed** → **Add RSS/ATOM URL**.
- 4 Enter the address of an RSS feed and select **OK**.
- 5 Enter the name of the RSS feed and set a feed category.
- 6 Select **OK**.

To subscribe to RSS feeds by searching,

- 1 From the Start menu, select **RSS Reader**.
- 2 Select a feed category.
- 3 Select **Add Feed** → **Search for Feeds**.
- 4 Use the input panel to enter a keyword and select .
- 5 Select a feed.
- 6 Select **Add** → **OK**.

➤ Update and read RSS feeds

- 1 From the Start menu, select **RSS Reader**.
- 2 Select a category → a feed → **Update**.
Your device will attempt to connect to the internet. If necessary, activate your internet connection.
- 3 Select **OK**.
- 4 Select a headline and a link.

Podcast

Use podcast to search for, download, and listen to podcasts.



➤ Subscribe to podcasts

To subscribe to podcasts by entering an address,

- 1 From the Start menu, select **Podcast**.

- 2 Select **Menu** → **Add Podcast URL**.
- 3 Enter the address of a podcast and select **Add** → **OK**.

To subscribe to Podcasts by searching,

- 1 From the Start menu, select **Podcast**.
- 2 Select .
- 3 Enter a keyword and select .
Your device searches for related podcasts and displays the results.
- 4 Select the podcast you want to subscribe to and select **Add** → **OK**.


➤ Update your podcast library

Once you have subscribed to podcasts, you can easily update your library to listen to the latest episodes. To update your podcast library,

- 1 From the Start menu, select **Podcast**.

- 2 Select a podcast → **Update**.
- 3 When the update is complete, select **OK**.

➤ Download and play podcasts

- 1 From the Start menu, select **Podcast**.
- 2 Select a podcast.
- 3 Select **Menu** → **Download**.
- 4 Select items you want to download.
- 5 Select **OK** to download the items.
- 6 When you are finished, select **OK**.
- 7 Select  next to the podcast item to play.

Communities

Communities is a convenient feature that allows you to access community websites and blogs and post your photos to the websites and blogs.

› Access a community websites

- 1 From the Start menu, select **Communities**.
Alternatively, select **Twitter** or **Facebook** and skip to step 5.
- 2 View disclaimer information and select **OK** (if necessary).
- 3 Select **Update** to update the community list.
- 4 Select a community website or blog → **Go to site**.
- 5 Enter your user name and password and select **Done** or **Login**.
- 6 Share photos and videos with other people or send messages.

› Upload photos

- 1 From the Start menu, select **Communities**.
- 2 Select a community website or blog → **Upload**.
- 3 Enter your user name and password and select **OK**.
- 4 Enter a title for your image and select **Upload file**.
- 5 Navigate to an image and select the thumbnail.
- 6 Select other options (if necessary).
- 7 Select **OK**.
The image will be uploaded to the website or blog.
- 8 When the upload is complete, go to the website, view the upload details, or return to the list of sites by selecting the appropriate button.

› Upload photos at a later time (Upload reservation)

You can set a specific date and time to upload your photos to a website or blog. To create an upload reservation,

- 1 From the Start menu, select **Communities**.
- 2 Select **Menu** → **Options** → **Upload reservation** → **New**.
- 3 Select a community website or blog.
- 4 Enter a title for your image and select **Upload file**.
- 5 Navigate to an image and select the thumbnail.
- 6 Select other options (if necessary).
- 7 Select the **Date** drop-down menu and select a date for the upload reservation.
- 8 Select the **Time** drop-down menu and set a time for the upload reservation.
- 9 Select **OK**.

Marketplace

Marketplace allows you to find and add new applications to your device. With Marketplace, you can search, browse, preview, buy, and download new applications directly to your mobile device. Available applications depend on your service provider.

- 1 From the Start menu, select **Marketplace**.
- 2 Search for and download the applications you want.

Microsoft My Phone

Use Microsoft My Phone to synchronise your contacts, calendar, tasks, text messages, music, photos, videos, and other documents with your my phone account at <http://myphone.microsoft.com>.

- 1 From the Start menu, select **Microsoft My Phone**.
- 2 Select **Next** → **Accept** (if necessary).

- 3 Enter your Windows Live user name and password and select **Sign in**.
- 4 Synchronise the data with your device and the web.
You will be able to access and use the data on your My Phone page.


MSN Money

Use MSN Money to access mobile stock services provided by MSN.

- 1 From the Start menu, select **MSN Money**.
- 2 Select **Continue** (if necessary).
- 3 Select **Refresh** to update the information and values with the-up-to-the-minute information.
- 4 Select **Menu** → **Settings** to set up your stock list.
 - To add stock items, select **+**.
 - To delete stock items, select **-** next to the item to delete.

MSN Weather

Use MSN Weather to access the weather forecast service provided by MSN.

- 1 From the Start menu, select **MSN Weather**.
 - 2 Select **Continue** (if necessary).
 - 3 Select **Refresh** to update the information with the-up-to-the-minute information.
 - 4 Select **Menu** → **Settings** to set up your city list.
 - To add cities, select **+**.
 - To delete cities, select **-** next to the city to delete.
 - To switch between celsius and fahrenheit, select **C** or **F**.
-  You can access other MSN services by selecting **Menu** → **Directory**.

Windows Live

With Windows Live, you can stay in touch with friends and quickly access information on the wireless web.

- 1 From the Start menu, select **Windows Live**.
- 2 Select **Sign in to Windows Live**.
- 3 Select **Accept** (if necessary).
- 4 Enter your login ID and password and select **Next**.
- 5 Follow the on-screen instructions.

For more information about Windows Live, refer to the embedded help on your device.

Google Maps

Learn to use Google Maps™ find your location, search the online map for streets, cities, or countries, and get directions.



- This feature may be unavailable depending on your region or service provider.
- You can enhance the map functionality by using the GPS function.

› Search the map

- 1 From the Start menu, select **Google Maps**.
- 2 Scroll through the map.
- 3 Zoom in or out on the location you want.

› Search for a specific location

- 1 From the Start menu, select **Google Maps**.
- 2 Select **Menu** → **Search** and enter the address or the category of the business.

› Get directions to a specific destination

- 1 From the Start menu, select **Google Maps**.
- 2 Select **Menu** → **Get Directions**.
- 3 Enter the addresses of the starting location and the ending location.
- 4 Select **Show directions** to view on the map.

Google Search

Learn to use Google Search service.



This feature may be unavailable depending on your region or service provider.

- 1 From the Start menu, select **Google Search**.
- 2 Select the search field.
- 3 Enter a keyword and press the confirm key.

Communicator Mobile

With Microsoft Office Communicator Mobile, you can simultaneously experience multiple modes of communication, including instant messaging, video conferencing, telephony, application sharing, and file transfer. Communicator Mobile is integrated with Microsoft Office to allow for communication directly from the selected application. Communicate more effectively inside Microsoft Outlook emails and show your availability and status to others in PowerPoint, Word, and Excel.

› Set up your Communicator account

- 1 From the Start menu, select **Communicator Mobile**.
If you access this application for the first time, the installation process will automatically begin. When the installation is finished, select **Yes** to restart the device.
- 2 Select **Options**.
- 3 Configure the options for accessing the Communicator server, such as your account information and server settings.
- 4 When you are finished, select **OK**.

› Start Communicator Mobile

- 1 From the Start menu, select **Communicator Mobile**.
- 2 Select **Sign In**.
- 3 When you are signed in to the Communicator server, use various features to communicate with others.

WebEx

With WebEx, you can attend web conferences that are set up via WebEx Meeting Centre. Communicate more effectively with real-time data, application, voice, and video sharing features.



To learn more about WebEx, select **View Demo** from the WebEx startup screen and access the online WebEx help.

- 1 From the Start menu, select **WebEx**.
- 2 Select **Join by Meeting Number**.
- 3 Enter the meeting number and your name and select **Join Meeting**.
- 4 Enter the password for the meeting and select **Done** (if necessary).
- 5 Share information, data, or ideas with other attendees.

Connectivity

Network connections

You can connect to your Internet Service Provider (ISP) and use the connection to send and receive email messages and to browse the internet. You can also connect to any private network, such as a corporate network you use at work.



The network settings for internet connections are preconfigured by your service provider.



› Connect to work

- 1 Obtain the following information from your network administrator: server phone number, user name, and password.
- 2 From the Start menu, select **Settings** → **Connections** → **Connections**.

- 3 In **My Work Network**, set up a modem, VPN server connection, or proxy server.
- 4 When the connection is successfully configured, run the Internet Explorer to begin browsing the internet. Your device will automatically attempt to connect.

› End a connection

To disconnect,

- When connected via dial-up or VPN, open the shortcuts panel, select the  icon, and then select **Disconnect**.
- When connected via ISP, open the shortcuts panel, select the  icon → **Wireless Manager**. The wireless manager screen appears. Select **All Data Connection** and **Disconnect**.
- When connected via a cable, detach your device from the computer by disconnecting the cable.
- When connected via a modem or a network (Ethernet) card, remove the card from your device.

To set options to end a network connection,

- 1 From the Start menu, select **Settings** → **Connections** → **Wireless Manager**.
- 2 Select **Menu** → **Data con. Settings**.
- 3 Select the check box next to an option.
 - **End Key (Short Press)**: When you press the End key, the network connection is disconnected.
 - **Sleep**: When Sleep mode activates, the network connection is disconnected.
 - **No packet for**: When the data packet is not transferred for the specific time interval, the network connection is disconnected.
- 4 Select **OK**.

› Find the active network connection

The icons at the top of the display will show active connections. Select any connectivity icon to view the active connection. A small window will display the connection information.



WLAN and data connections can be active at the same time. When both connections are active, the device will use the WLAN as the default internet connection.

Bluetooth


You can connect with other Bluetooth-enabled wireless devices within a range. Walls or other obstacles between devices may block or impair the wireless connection.

› Turn on the Bluetooth wireless feature


- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select next to **Bluetooth** to activate the Bluetooth feature.
- 3 To allow other devices to find and connect to your device, select **Menu** → **Device Info**, and select next to **Enable visibility to other devices**.
- 4 Select **OK**.

› Search for and pair with a Bluetooth-enabled device

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Search**.
Your device will search for and display the list of Bluetooth-enabled devices.

 To search for a specific type of devices, select **Menu** → **Options** and select a device type.

- 3 Select a device.
- 4 Enter the 1- to 16-digit Bluetooth PIN for the device you are trying to connect to and select **OK**.

 To pair with another Bluetooth-enabled device, both devices must use the same passcode. Headsets or hands-free car kits may use a fixed passcode, such as **0000**.

- 5 Select the paired device.
- 6 Select next to services.
- 7 Select **OK**.

› Send data via the Bluetooth wireless feature

- 1 Locate an item or a file to send.
- 2 Select a sending option.
- 3 Select a device.

➤ Receive data via the Bluetooth wireless feature

- 1 Enter the PIN for the Bluetooth wireless feature and select **Next** (if necessary).
- 2 When prompted to allow incoming data, select **Accept**.

To set your device to receive all incoming beams,

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Menu** → **Device Service**.
- 3 Select **Options** next to **Object Push**.
- 4 Select next to **Enable to receive all Incoming beams**.
- 5 Select **OK**.

➤ Activate the smart pairing option

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Menu** → **Device Service**.
- 3 Select **Options** next to **Hands-free** or **Wireless Stereo**.
- 4 Select next to **Enable smart pairing**.
- 5 Select **OK**.

➤ Activate the file sharing option

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Menu** → **Device Service**.
- 3 Select **Options** next to **File Transfer**.
- 4 Select next to **Enable to write**.
- 5 Select a folder to share your files.
- 6 Select **OK**.

➤ Activate remote SIM access

In Remote SIM mode, you can make or answer calls only with a connected Bluetooth hands-free car kit via the SIM or USIM card on your device. To activate Remote SIM mode,

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Menu** → **Device Service**.
- 3 Select **Options** next to **SIM Access**.
- 4 Select next to **Enable to allow SIM access**.
- 5 Select **OK**.

➤ Set up the Bluetooth virtual serial port

- 1 From the Start menu, select **Settings** → **Bluetooth**.
- 2 Select **Menu** → **Device Service**.
- 3 Select **Options** next to **Serial Port**.
- 4 Select **New Outgoing Port**.

- 5 Select the device you paired with and select **Next**.
- 6 Select a port from the drop-down menu.
- 7 Select **Secure Connection**, if desired.
- 8 Select **Finish** to complete the setup.

Wi-Fi

Your device features wireless networking capabilities that allow you to connect to wireless local area networks (WLANs).



Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

➤ Activate and connect to a WLAN

- 1 From the Start menu, select **Settings** → **Connections** → **Wi-Fi**.

- 2 Select next to **Wi-Fi** to activate the WLAN feature. The device will start searching and display the list of WLAN APs.
- 3 Select the check box next to an AP. The device will attempt to connect to the WLAN.
- 4 Enter a password and select **OK** (if necessary).

➤ Create a new WLAN connection

- 1 From the Start menu, select **Settings** → **Connections** → **Wi-Fi**.
- 2 Select **Menu** → **Add New**.
- 3 Enter network parameters and a network name and select **Next**.
- 4 Configure settings for network authentication and data encryption and select **Finish** or **Next**, depending on the authentication type.
If you selected **Next**, continue with the next step.

- 5 Set the IEEE 802.1x access option and the extensible authentication protocol (EAP) type (if necessary) and select **Finish**.
The new WLAN network will appear on the screen.

➤ Customise the WLAN settings

- 1 From the Start menu, select **Settings** → **Connections** → **Wi-Fi**.
- 2 Select **Menu** → **Configuration**.
- 3 Adjust the following settings:

Option	Function
Turn on available network notification	Set the device to alert you to available WLANs.
Turn off Wi-Fi if not connected in	Set the WLAN feature to automatically turn off after a specified length of time.

Option	Function
IP Settings : DHCP	Configure the IP addresses of your device.
Display preferred networks even Wi-Fi is off	Set the device to display WLANs you have used frequently even when WLAN feature is turned off.
Power save mode	Activate Power save mode. The WLAN feature is suspended to conserve the battery power when the feature is not in use.

4 When you are finished, select **OK**.

AllShare

Learn to use the Digital Living Network Alliance (DLNA) service that enables you to share media files between DLNA-enabled devices in your home over a WLAN.

You must first activate the WLAN feature and add a WLAN profile. ► p. 78

› Customise DLNA settings for sharing media files

To allow other DLNA-enabled devices to access media files on your device, you must activate media sharing.

- 1 From the Start menu, select **AllShare** → **Settings**.
- 2 Adjust the following settings to customize the DLNA feature:

Option	Function
My device name	Enter a name for your device as a media server.

Option	Function
My media Sharing	Turn on media sharing with other DLNA-enabled devices and select the default memory location for sharing your media files.
Download location	Select the default memory location for downloading media files from other devices.
Access Network	Select a connection profile to use for DLNA connections.

3 When you are finished, select **OK**.

▶ Play your files on another DLNA-enabled device

- 1 From the Start menu, select **AllShare**.
- 2 Select **Play file from my phone on another player**.

- 3 Select a media category → a file.
- 4 Select a player—the one that will play the media file. Playback begins at the selected player.

▶ Play files from one device to the other device

- 1 From the Start menu, select **AllShare**.
- 2 Select **Play file from server on another player via my phone**.
Your device automatically searches for DLNA-enabled devices.
- 3 Select a device as the media server—the one that contains media files.
- 4 Select a media category → a file.
- 5 Select a player—the one that will play the media file. Playback begins at the selected player.
- 6 Control playback using icons of your device.

Internet Sharing

Set your device to be used as a wireless modem.

- 1 Connect your device to another device or computer via the USB port or Bluetooth.
- 2 From the Start menu, select **Internet Sharing**.
- 3 Select a PC connection and network connection type.
- 4 Select **Connect** to activate the internet connection.

GPS

To use GPS applications of your device, you can connect to an external GPS receiver and enhance the GPS functionality.

› Connect to an external GPS receiver

By default, the device uses the internal GPS receiver but you can connect to an external GPS receiver. Because the internal GPS receiver uses the "None" hardware port and baud rate 4800, you need to change the COM port setting to use an external GPS receiver.



Your device is compatible only with Bluetooth-enabled GPS receivers.

- 1 Turn on your external GPS receiver.
- 2 Turn on the Bluetooth wireless feature of your device and connect it with the external GPS receiver. ► p. 75
- 3 From the Bluetooth screen, select **Menu** → **Device Service** → **Options** next to **Serial Port** → **New Outgoing Port**.
- 4 Select the connected external GPS receiver, select **Next**, and check the COM port.
- 5 Select **Finish** → **OK**.

- 6 In a navigation program, change the COM port to the same as in step 4.

› Update the GPS functionality

Enhance the GPS functionality by downloading GPS data files. You can improve the speed and accuracy of positioning capability and expand your navigation to areas where cellular networks are accessible. Use XTRA or Assist GPS depending on your service provider.


Use XTRA

- 1 From the Start menu, select **Settings** → **System** → **Enhanced GPS**.
- 2 Select next to **Enable XTRA Server**.
- 3 Select **OK**.



- GPS data of up to 35 KB will be downloaded.
- Your device will connect to the internet depending on the configuration on XTRA.

Use Assist GPS

- 1 From the Start menu, select **Settings** → **System** → **A-GPS**.
- 2 Select next to **Enable A-GPS**.
- 3 Enter the server address and select an access point.
 Server addresses may differ depending on the service provider. The default port is 7275.
- 4 Select **OK**.


PC connections

Learn to connect your device to a PC with the supplied PC data cable in various USB connection modes. By connecting the device to a PC, you can synchronise files with ActiveSync, transfer data to and from your device directly, and use the Samsung Kies program.

Details about connecting with ActiveSync are explained in the "ActiveSync" section. ► p. 60

› Connect with Samsung Kies

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website (www.samsungmobile.com).


- 1 From the Start menu, select **Settings** → **System** → **USB Connection** → **Samsung Kies** → **OK**.
- 2 Press [] to return to the Today screen.
- 3 Using the PC data cable, connect the multifunction jack on your device to a PC.
- 4 Run Samsung Kies and use wireless connections or copy data and files.
Refer to the Samsung Kies help for more information.


› Connect as a mass storage device


You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the file directory of the memory card by using the device as a memory card reader.



The file directory of the memory card will appear as a removable disk, separate from the internal memory.

- 1 If you want to transfer files from or to a memory card, insert a memory card into the device.
- 2 From the Start menu, select **Settings** → **System** → **USB Connection** → **Mass storage** → **OK**.
- 3 Press [] to return to the Today screen.
- 4 Using the PC data cable, connect the multifunction jack on your device to a PC.
When connected, a pop-up window will appear on the PC.

- 5 Open the folder to view files.
 - 6 Copy files from the PC to the memory card.
-  To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.

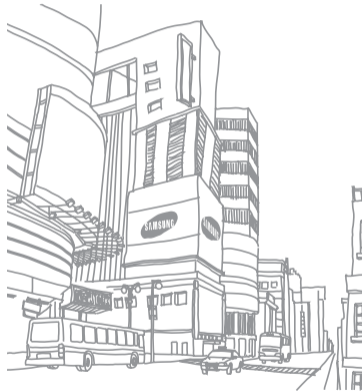









Tools


Adobe Reader LE

Learn to view Acrobat PDF documents.

- 1 From the Start menu, select **Adobe Reader LE**.
- 2 Navigate to a PDF file and select the file name.
- 3 While viewing a PDF file, use the following tools:

Icon	Function
	Fit the document width.
	Fit the document on the screen.
	Go to the first page in the document.
	Go to the previous page.

Icon	Function
	Go to the next page.
	Go the last page in the document.
	Zoom out.
	Zoom in.


 To zoom by a specific percentage, select **Tools** → **Zoom** → **To %** and drag the slider to adjust the zoom. Select **OK** to return to the document view.

Alarms


Learn to set and control alarms.

› Set an alarm

- 1 From the Start menu, select **Alarms**.
- 2 Select an alarm.

- 3 Set the alarm options.
- 4 When you are finished, select **OK**.
 To set your alarms to sound when the device is in the silent or vibration mode, select the check box at the bottom of the alarm list.


› Stop an alarm

When an alarm sounds, select  or select  → **Dismiss All** or a snooze option. Alarms with snooze will repeat according to the number of times you specified in the settings or until you select .

Calculator

Use the calculator to perform basic mathematical calculations. To perform a calculation,

- 1 From the Start menu, select **Utilities** → **Calculator**.

- 2 Enter the first number using the calculator buttons on the screen.
 - To clear the displayed numbers, select **C**.
 - To clear the last digit entered in a multi-digit entry, select .
- 3 Select the appropriate math function.
- 4 Enter the second number.
- 5 To view the result, select =.

You can use the following buttons while performing calculations:

- **MC**: Clear any value that is stored in the calculator's memory.
- **MR**: Recall the stored value from memory and inserts it into the current calculation.
- **M+**: Add the current number to the value stored in the calculator's memory.

Dictionary

Learn to look up words in your dictionary and set up your own wordbook.

› Look up a word

- 1 From the Start menu, select **Dictionary**.
- 2 In **Search**, select **ENG-ENG** → a dictionary type.
- 3 Select **Word** → **Word**.
- 4 Enter a word in the text input field.
- 5 Select the word and view the pronunciation and definition.
 - To add the word to your wordbook, select **Save to...** → a wordbook.
 - To display the importance of the word, select **Marker**.
 - To view words you have looked up, select ◀ or ▶.


- 6 When you are finished, select **OK**.

› Check spellings

- 1 From the Start menu, select **Dictionary**.
- 2 In **Search**, select **ENG-ENG** → a dictionary type.
- 3 Select **Word** → **Spelling check**.
- 4 Enter a word in the text input field.


The dictionary shows the words that have similar spellings.

› Create a wordbook

- 1 From the Start menu, select **Dictionary**.
- 2 Select  → **New**.
- 3 Enter a title for the wordbook and select **OK**.

Once you create workbooks and add words to the workbooks, you can have a quiz or memorisation exercise with the words. From the workbook list, select **Menu** → **Quiz** or **Memorization**.

› View the history

- 1 From the Start menu, select **Dictionary**.
- 2 Select  to see a list of words you have looked up.
- 3 To filter the words in the history by dictionary type, select **All** → a dictionary type.

File Explorer

With File Explorer, you can browse all the files and folders on your device and a memory card.

- 1 From the Start menu, select **File Explorer**.

- 2 Navigate through files and folders by selecting folders to open them and selecting **Up** to return to a higher level.
To browse files and folders in a memory card, open **Storage Card**.
- 3 Select **Menu** to rename, delete, send, or edit your files and folders.

Office Mobile 2010

Learn to create and edit Excel workbooks and Word documents, open and view PowerPoint slideshows, create notes, or search for and share document files with others.

› Create and edit an Excel workbook

- 1 From the Start menu, select **Office Mobile 2010** → **Excel Mobile 2010**.
- 2 Select **New** to create a new workbook (if necessary).

- 3 Select a cell.
- 4 Enter values or text with the input panel or the QWERTY keyboard.
- 5 Repeat steps 3-4 to create a spreadsheet.
- 6 To format cells, select **Menu** → **Edit, Insert, Format,** or **Tools**.
- 7 To save the workbook, select **OK**.

› Create and edit a Word document

- 1 From the Start menu, select **Office Mobile 2010** → **Word Mobile 2010**.
- 2 Select **New** to create a new document (if necessary).
- 3 Create your document with the input panel or the QWERTY keyboard.
- 4 To change the font or paragraph format, select **Menu** → **Format** → **Font...** or **Paragraph...**

- 5 To save the document, select **OK**.

› Open and view a PowerPoint presentation

- 1 From the Start menu, select **Office Mobile 2010** → **PowerPoint Mobile 2010**.
- 2 Select the drop-down menu in the top left of the screen to navigate folders and locate a PowerPoint file.
- 3 Select the file name to launch the presentation.
- 4 Select the screen to advance the slides.
 - To go back to the previous slide, press the Navigation key up or left.
 - To go to the next slide, press the Navigation key down or right.
 - To go to a specific slides, select **Menu** → **Go To** → a slide number → **Go To** or the Confirm key.
 - To zoom in or out, select **Zoom In** or **Zoom Out**.

- 5 To end the presentation, select **OK**.
- 6 If you edited the presentation, select **Yes**.

› Create and edit a note with OneNote Mobile

- 1 From the Start menu, select **Office Mobile 2010** → **OneNote Mobile 2010**.
- 2 Select **New** to create a new note.
- 3 Create your text with the input panel or the QWERTY keyboard.
- 4 To change the font or paragraph format, select **Menu** → **Format** or **List**.
- 5 To add an image or sound clip, select **Menu** → **Take Picture**, **Insert Picture**, or **Insert Recording**.
- 6 When you are finished, select **Done** or **OK**.

› Share documents with SharePoint Workspace Mobile

- 1 From the Start menu, select **Office Mobile 2010** → **SharePoint WorkSpace Mobile 2010**.
- 2 Browse, send, view, edit, synchronise, or pin your favourite documents.

Remote Desktop Mobile

With Remote Desktop Mobile, you can control the desktop of your computer running Windows XP Professional or later, from your device at another location. First, you need to set up your computer. For information, visit <http://www.microsoft.com/windows>.

To connect your device to your computer,

- 1 From the Start menu, select **Remote Desktop Mobile**.
- 2 Enter your computer name or IP address.

- 3 Enter your computer user name, password, and domain name.
- 4 Select **Connect**.

Search Phone

Learn to search your device for files and folders.

- 1 From the Start menu, select **Search Phone**.
- 2 Enter part of a file or folder name in the Search for field.
- 3 To restrict your search, select a data type from the type drop-down menu.
- 4 Select **Search**.
- 5 To open an item in the result list, select the item's name.

Smart Converter

Use Unit Converter to convert one unit of measure to another. To perform a conversion,

- 1 From the Start menu, select **Utilities** → **Smart Converter**.
- 2 Select a type of measurement from the tabs at the top of the screen.
- 3 Enter the base amount and select the unit of measure to convert.
For the tip calculator, enter the total amount, a percentage for the tip, and the number of people to split.




For the currency conversion, select **Edit Rate** to input the basic rate first.

Smart Reader

Use Smart Reader to capture information from a business card or a document.

› Capture images of business cards or documents

- 1 From the Start menu, select **Smart Reader**.
- 2 Select **BizCard** or **Document**.
- 3 Align the business card or document in the screen.
For business cards, you must align the corners of the card with the corners of the frame (the frame will turn green when aligned).
- 4 Press [] or the Confirm key to capture the image.





- If you have activated the **BizCard automatic capture** setting, the device will automatically capture the image once the card is aligned in the frame.
- For best results, place business cards or documents on a flat, level surface and ensure adequate lighting.



- 5 Edit the recognised contact information or text and select **Save** or **OK** → **OK**.

› View captured images


- 1 From the Start menu, select **Smart Reader**.
- 2 Select **Image**.
- 3 Select the following tabs to sort captured images:

Icon	Function
	View all captured images.

Icon	Function
	View captured images of business cards.
	View captured images of documents.

- 4 Scroll left or right to an image.
 - To delete the image, select .
 - To read information from the image, select .

› Customise the smart reader settings

- 1 From the Start menu, select **Smart Reader**.
- 2 Select **BizCard** or **Document** → .
- 3 Adjust the following settings to customise the smart reader:

Option	Function
Save taken image	Set whether or not to save captured images.

Option	Function
Storage	Select the default memory location for storing captured images.
BizCard automatic capture	Set whether or not to automatically capture a business card when it is aligned with the frame.

- 4 When you are finished, select **OK**.

Stopwatch

- 1 From the Start menu, select **Utilities** → **Stopwatch**.
- 2 Select **Start**.
- 3 Select **Lap** to record lap times.
- 4 When you are finished, select **Stop**.
- 5 Select **Reset** to clear the recorded times.

Timer

- 1 From the Start menu, select **Utilities** → **Timer**.
- 2 Set the length of time to count down and an alert sound.
- 3 Select **Start**.
- 4 When the time expires and the alert sounds, select **OK**.

World Clock

You can create world clocks and change your home clock.

› Create world clocks

- 1 From the Start menu, select **Utilities** → **World Clock**.
- 2 Select **New**.

- 3 Scroll through the world map and select a city.
A list of cities that are in the same time zone with the city you selected is displayed.
- 4 Select a city from the list.
- 5 Repeat steps 2-4 to add more clocks.

› Set a world clock as your home clock

- 1 From the Start menu, select **Utilities** → **World Clock**.
- 2 Select **Menu** → **Set as Home Clock**.
- 3 Select a city.
- 4 Select **OK** → **Yes**.

Settings

Access the Settings menu

- 1 From the Start menu, select **Settings**.
- 2 Select a setting category and select an option.
- 3 Customise the setting and select **OK** or **✕**.

Power

- **Battery:** View the remaining battery power level.
- **Battery power:** Customise the timeout settings for the screen and backlight when the device is not connected to the power outlet.
- **External Power:** Customise the timeout settings for the screen and backlight when the device is connected to the power outlet.

- **Calling:** Set the device to turn off the backlight and the screen after a specified time during a call.

Bluetooth

Activate the Bluetooth feature to exchange information over a distance.

Clock & Alarms

- **Time:** Set the time zone and the current time and date.
- **Alarms:** Set alarms to sound at a specified time.

Home

- **Appearance:** Select a theme for the device interface and select a wallpaper image.
- **Items:** View or edit the items shown on the Today screen.

Lock

Activate or deactivate the device lock feature to require a device password before using the device.

Sounds & Notifications

- **Sounds:** Enable or disable sounds for events, applications, alarms, screen touches, and key presses.
- **Notifications:** Set the alert types and ringtones for events, such as incoming calls, ActiveSync, messaging, and network connections.

Connections

- **Beam:** Set whether or not to receive incoming data via Bluetooth.
- **Browser Connection:** Set whether or not to automatically detect network settings or select a network to use when browsing the web.

- **Connections:** Add and configure settings for internet or work network connections.
- **Domain Enroll:** Enroll your device in a company domain.
- **USB to PC:** Enable or disable advanced network functionality for USB connections to a PC.
- **Wi-Fi:** Activate the WLAN feature to connect to the internet or other network devices.
- **Wireless Manager:** Enable or disable wireless functions.

Personal

› Buttons

- **Program Buttons:** Assign application shortcuts to device keys.
- **Up/Down Control:** Customise how the device will recognise your up or down scrolling.
- **Wake up:** Set which keys will wake up the device.

› Call Reject Message

Select a message to be sent to reject incoming calls. From the reject message list, you can add or delete reject messages.

› DivX Registration

Check your registration code for registering your device to play videos protected by DivX encoding.

› Owner Information

- **Identification:** Enter your personal identification information, including name, company, address, telephone number, and email address.
- **Notes:** Enter a note regarding owner information.

› Phone

• Phone

- General

Call Cost: View call cost information, reset the call cost counter, set a maximum allowable call cost, and set the price per unit for calls.

Caller ID: Set whether to provide your Caller ID information to everyone, no one, or only your contacts.

Own Number: Store your own numbers. The maximum number of own numbers you can store may differ depending on your SIM or USIM card.

Fixed Dialing: Activate fixed dialling and add numbers to the fixed dialling list.

Auto Answer: Set how quickly calls are automatically answered during hands-free operation.

Closed User Group: Activate a closed user group, allow or prevent outside access, and use either default group numbers or specify a group index.

- Voice Call

Call Barring: View and receive settings from your service provider that allow you to bar (block) incoming or outgoing calls.

Call Forwarding: View and receive settings from your service provider that allow you to forward calls.

Call Waiting: Receive a notification of an incoming call while you are on the phone.

- Video Call

Video Call Options: Select a display layout, an image to display when using the Hide me option, and video quality for video calls.

Call Barring: View and receive settings from your service provider that allow you to bar (block) incoming or outgoing calls.

Call Forwarding: View and receive settings from your service provider that allow you to forward calls.

- Message

Cell Broadcast Message: Enable or disable cell broadcast message reception, modify the channel list, and set languages for CB messages.

WAP Push Message: Set the push message receiving option, the push message service centre, and push message loading options.

Voice Mail: View and edit voice mail numbers.

Send Text Message Options: Set the network selection option, the validity period for sending text messages, and the text message service centre.

- Language Change

Change the language of the operating system. Changing the language will erase your data and settings and reinstall the selected language version of the operating system.



This feature is not available if **Mass storage** is selected in **USB Connection**. To use this feature, deactivate **Mass storage**.

- **Security**

- **Open Source Announcement:** View the open source licence document in PDF format.
- **SIM Lock:** Enable or disable the SIM lock function.
- **SIM PIN:** Set whether or not to require a PIN when using the device.
- **Change PIN:** Change the current PIN.
- **View more:** Access additional options:
 - Change PIN2:** Change the current PIN2.
 - Change Barring Password:** Change the current call barring password.
 - Mobile Tracker:** Configure and change the password for the mobile tracker feature.

- **Network Settings**

- **Band Selection:** Select a band to use for cellular service.
- **Network Options:** Set the network selection method and set preferred networks.

- **HSDPA:** Enable or disable high-speed downlink packet access.
- **GPRS Authentications:** Set the authentication type for each network connection.
- **View more:** Access additional options:
 - Restore Connections:** Restore all network settings to factory defaults.
 - Operator Settings:** Select a network operator. Network connection settings will change automatically according to the selected operator.(This feature may be unavailable depending on your region or service provider.)

System


- **A-GPS:** Enhance the startup performance of GPS receivers by using network elements such as assistance server.
- **Enhanced GPS:** Enable or disable the XTRA enhanced GPS server.
- **About:**
 - **Version:** View the Windows Mobile software version.

- **Device ID:** View and edit your device name.
- **Copyrights:** View copyright information.
- **Backlight:** Select the brightness of the screen.
- **Certificates:** View personal, intermediate, and root security certificates and their expiration dates.
- **Customer Feedback:** Enable or disable feedback reporting for Windows Mobile software issues. If you participate, anonymous information about how you use Windows Mobile software will be sent to Microsoft.
- **DNSe:** Select a sound effect or equaliser option for Windows Media Player.
- **Encryption:** Set whether or not to encrypt files when saved to a storage card. Encrypted files can only be read by the original device used to encrypt them.
- **Error Reporting:** Enable or disable error reporting. If you enable error reporting, information about software operation can be used for later reporting to Microsoft in the event of a serious error.
- **External GPS:** Configure the port and baud rate for an external GPS receiver.
- **Hard Reset:** Delete all data and reset all settings to the manufacturer's defaults or format a memory card.
- **Managed Programs:** View details for installed applications.
- **Memory:**
 - **Main:** View available main storage memory and applications currently stored in the main storage memory and available RAM and RAM usage for currently running applications.
 - **Storage Card:** View available memory in a memory card.
- **Regional Settings:**
 - **Region:** Set a region and view samples of regional settings.
 - **Number:** Set options for displaying numbers.
 - **Currency:** Set options for displaying currency.
 - **Time:** Set options for displaying time.
 - **Date:** Set options for displaying dates.
- **Remove Programs:** Remove installed applications.

- **Screen:**
 - **Alignment:** Calibrate the touch screen.
 - **ClearType:** Enable or disable the ClearType feature to smooth the edges of text.
 - **Text Size:** Adjust the text size for the display
- **Task Manager:** View and manage the applications and tasks that are currently running.
- **USB Connection:** Set a USB mode to be activated when you connect the phone to a PC.
- **Version:** View the device version.

Microsoft My Phone

Configure your My Phone account.

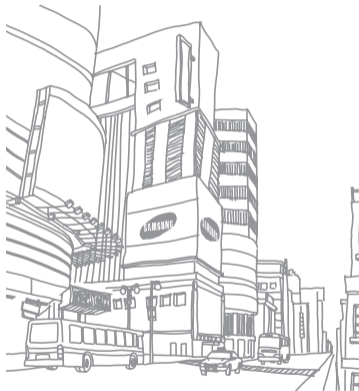

Troubleshooting

If you have trouble with your device, try these procedures before you contact a service professional.

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

Message	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the device.
PIN	When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the SIM PIN menu.

Message	Try this to solve the problem:
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

Your device does not show a signal (no bars next to the network icon)

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Centre.

Calls are being dropped

When you are in areas with weak signals or poor reception, you may lose your connection to the network. Move to another area and try again.

Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.

Incoming calls are not connected

- Ensure that your device is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

Audio quality is poor

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

When dialling from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

- Ensure that you have not set call barring for the contact's phone number.

The device beeps and the battery icon flashes

Your battery is low. Recharge or replace the battery to continue using the device.

The battery does not charge properly or the device turns off

- The battery terminals may be dirty. Wipe both gold-colored contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local ordinances for proper disposal instructions).

Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

Error messages appear when launching the camera

Your Samsung mobile device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a PC or deleting files from your device.
- Restart the device. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Error messages appear when launching the FM radio

The FM radio application on your Samsung mobile device uses the headset cable as an antenna. Without a headset connected, the FM radio will be unable to receive radio stations. To use the FM radio, first ensure that the headset is properly connected. Next, scan for and save the available radio stations.

If you still cannot use the FM radio after performing these steps, try accessing your desired station with another radio receiver. If you can hear the station with another receiver, your device may require service. Contact a Samsung Service Centre.

Error messages appear when opening music files

Some music files may not play on your Samsung mobile device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a PC or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate license or key to play the file.
- Ensure that your device supports the file type.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 metres).


If the tips above do not solve the problem, contact a Samsung Service Centre.


A connection is not established when you connect the device to a PC

- Ensure that the PC data cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your PC.

Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is still responsive but a program is frozen, close the program using the task manager.

If this does not solve the problem, perform a hard reset. Press and hold [] for more than 8-10 seconds.

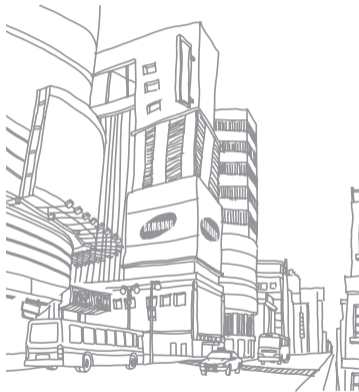

Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.

- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.
- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, remove the battery without turning on your device. Dry your device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on slopes

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0 °C to 40 °C.

Do not store your device with such metal objects as coins, keys and necklaces

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.

- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Do not use a flash close to the eyes of people or animals

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.

- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

When speaking on the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device's internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

- Hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Protect your hearing



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint your device

Paint can clog moving parts and prevent proper operation. If you are allergic to the paint or metal parts of the device, stop using the device and consult your physician.

When cleaning your device:

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.

- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.642 W/ kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity statement at the back of this manual demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working

life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN

CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Index

access codes 103

ActiveSync 60

Adobe Reader 86

alarms

creating 86

stopping 87

AllShare 80

battery

charging 12

installing 11

Bluetooth

activating 76

finding and pairing with
devices 76

receiving data 77

remote SIM access 78

sending data 76

smart pairing 77

brightness, display 25

calculator 87

calendar

changing view mode 57

creating events 57

viewing events 58

call log 32

calls

answering 30

international numbers 31

making 30

multiparty 32

rejecting 30

using headset 31

using options during voice 31

camera

capturing photos 37

customising camcorder 42

customising camera 39

recording videos 40

Communicator Mobile 72

communities

accessing websites 68

uploading photos 68

connections

Bluetooth 75

DLNA 80

GPS 82

internet sharing 82

- network 74
- PC 83
- Wi-Fi 78
- contacts**
 - assigning speed dial 56
 - copying 56
 - creating 55
 - creating groups 57
 - editing 56
 - searching 56
- converter** 92
- device**
 - indicator icons 19
 - keys 18
 - locking 26
 - settings 96
 - shortcuts panel 21
 - turning on or off 16

- device lock** 26
- dictionary**
 - checking spelling 88
 - creating wordbooks 88
 - looking up words 88
- DLNA** 80
- email**
 - sending 34
 - setting accounts 34
 - viewing 35
- file manager** 89
- FM radio**
 - listening to 51
 - recording 52
 - saving favourite stations 52
- Google Maps** 71
- Google Search** 72

- GPS**
 - connecting to external receivers 82
 - updating 83
- image editor** 50
- internet**
 - adding bookmarks 64
 - browsing web pages 63
- internet sharing** 82
- Java**
 - downloading 53
 - playing 53
- Marketplace** 69
- media browser** 48
- memory card**
 - formatting 15
 - inserting 14
 - removing 15

memos

- creating 58
- viewing 59

messages

- sending email 34
- sending text 32
- setting email accounts 34
- viewing email 35
- viewing multimedia 33
- viewing text 33

messenger 36

Microsoft My Phone 69

mobile tracker 27

MSN Money 70

MSN Weather 70

multimedia messages

- sending 33
- viewing 33

music player

- adding files 45
- creating playlists 47
- playing 45
- updating library 45

notes

- creating 58
- creating sketches 59
- viewing 59

Office Mobile

- Excel 89
- OneNote 91
- PowerPoint 90
- SharePoint Workspace 91
- Word 90

PC connections

- ActiveSync 60
- mass storage 84
- Samsung Kies 84

photos

- capturing divided 43
- capturing in action shot 44
- capturing in smile shot 43
- capturing panoramic 44
- capturing a series 43
- editing 50
- printing 48
- setting wallpaper 48
- viewing 48
- viewing slideshows 49

PIN lock 26

podcast 66

remote desktop 91

ringtone 97

RSS reader 65

Samsung Kies 84

settings

- Bluetooth 96
- clock & alarms 96
- connections 97
- home 96
- lock 97
- Microsoft My Phone 102
- personal 97
- power 96
- sounds & notifications 97
- system 100

silent mode 25

SIM card

- installing 11
- locking 26

slideshow 49

smart reader 93

stopwatch 94

streaming player 65

tasks

- creating 59
- viewing 60

text messages

- sending 32
- viewing 33

time and date, set 24

timer 95

USIM card

- installing 11
- locking 26

video calls

- answering 30
- making 30

videos

- playing 49
- recording 40

voice calls

- answering 30
- making 30
- using options 31

web browser

- adding bookmarks 64
- browsing web pages 63

WebEx 73

Wi-Fi

- activating and connecting 78
- creating 79

Windows Live 71

Windows Media Player 45

world clock

- creating 95
- setting home 95

Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

GSM WCDMA Wi-Fi Mobile Phone : GT-B7350

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2006
	EN 50332- 1 : 2000
	EN 50332- 2 : 2003
SAR	EN 50360 : 2001
	EN 62209-1 : 2006
EMC	EN 301 489- 01 V1.8.1 (04-2008)
	EN 301 489- 07 V1.3.1 (11-2005)
	EN 301 489- 17 V2.1.1 (05-2009)
	EN 301 489- 19 V1.2.1 (11-2002)
	EN 301 489- 24 V1.4.1 (09-2007)
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.7.1 (10-2006)
	EN 301 908- 1 V3.2.1 (05-2007)
	EN 301 908- 2 V3.2.1 (05-2007)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

CE 0168!

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*
2010.06.29



Joong-Hoon Choi/Lab Manager

(place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.