 





## Install the SIM card and battery

- Remove the back cover and insert the SIM card.

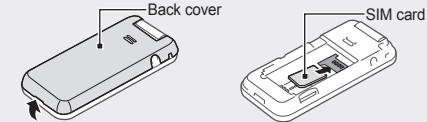


 - Insert the battery and replace the back cover.

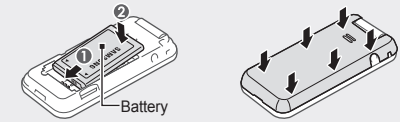

## Charge the battery

 - Plug the supplied travel adapter.
- When charging is finished, unplug the travel adapter.

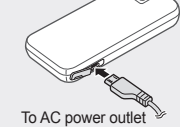

## Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to change the ringtone.

- Press **<Edit>** → **Voice call ringtone**.
- Select a memory location (if necessary).
- Select a ringtone.

To switch to another profile, select it from the list.

## Call a recently dialled number

- In Idle mode, press [↶].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [↶] to dial the number.

## Use the smart home screen

The smart home screen allows you to access applications, contacts, and calendar events or view the clock from Idle mode.

When you are using the smart home screen, the Navigation key does not work as shortcuts.

## Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press **<OK>**.

The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

- Press the Confirm key to turn on the mobile tracker feature.
- Scroll down and press the Confirm key to open the recipient list.
- Press **<Options>** → **Contacts** to open your contact list.  
You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 9.
- Select a contact.
- Select a number (if necessary).
- When you are finished selecting contacts, press **<Add>**.
- Press the Confirm key to save the recipients.
- Scroll down and enter the sender's name.
- Press the Confirm key → **<Accept>**.



- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

 
## Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- Remove the back cover.
- Insert a memory card with the gold-coloured contacts facing down.

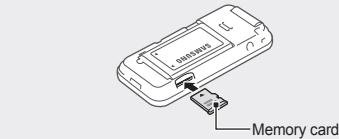

- Push the memory card in the memory card slot until it locks in place.

- Replace the back cover.

## Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )
[ ]	<b>Square brackets:</b> phone keys; for example: [↶] represents the Power/End key)
< >	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <b>&lt;OK&gt;</b> (represents the <b>OK</b> softkey)

## Turn your phone on or off

To turn your phone on,

- Press and hold [↶].
- Enter your PIN and press **<OK>** (if necessary).

To turn your phone off, repeat step 1 above.

## Access menus

To access your phone's menus,

- In Idle mode, press **<Menu>** to access Menu mode.



You may need to press the Confirm key to access Menu mode depending on your region or service provider. When you are using the smart home screen, you cannot use the Confirm key to access Menu mode.

- Use the Navigation key to scroll to a menu or option.
- Press **<Select>**, **<Save>**, or the Confirm key to confirm the highlighted option.
- Press **<Back>** to move up one level; Press [↶] to return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Make a call

- In Idle mode, enter an area code and a phone number.
- Press [↶] to dial the number.
- To end the call, press [↶].

## Answer a call

- When a call comes in, press [↶].
- To end the call, press [↶].

## Adjust the volume

### To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

- Press **<Edit>** → **Volume**.
- Scroll to **Call alert**.
- Scroll left or right to adjust the volume level and press **<Save>**.

### To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Send and view messages

### To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter your message text. *See "Enter text."*  
For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
- Press **<Options>** → **Add multimedia** and add an item.
- Press the Confirm key to send the message.

### To view text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

## Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

### To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

### To make a fake call

In Idle mode, press and hold the Navigation key down.

- Press [#] to change case or switch to Number mode.
- Press [\*] to switch to Symbol mode.
- Press and hold [\*] to select an input mode or change the input language.

### T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

### ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

### Number mode

Press an appropriate alphanumeric key to enter a number.

### Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

## Listen to music

- In Idle mode, press [🎵].
- Select a music category → a music file.
- Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Navigation	<ul style="list-style-type: none"><li>Left: Skip backward; Scan backward in a file (press and hold)</li><li>Right: Skip forward; Scan forward in a file (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>
1	Rate the current track
2	Select a sound effect
3	Change the repeat mode
4	Activate or deactivate Shuffle mode

## Listen to the FM radio

- Plug a headset into the phone.
- In Menu mode, select **Apps** → **FM radio**.
- Press the Confirm key to start the FM radio.
- Press **<Yes>** to start automatic tuning.  
The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

### To use other feature for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press [C]. To delete characters quickly, press and hold [C].
- To insert a space between characters, press [0].
- To change the line, press [0] three times.
- To enter punctuation marks, press [1].

## Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **<Options>** → **Settings** → **Save new contact to** → a memory location.

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Add to Contacts** → **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key or press **<Options>** → **Save** to add the contact to memory.

- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	<ul style="list-style-type: none"><li>Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>

## Set and use alarms

### To set a new alarm

- In Menu mode, select **Alarms**. Alternatively, select **Organiser** → **Alarms**.
- Press **<Create>**.
- Set alarm details.
- Press **<Save>** or the Confirm key.

### To stop an alarm

When the alarm sounds,

- Press **<Confirm>** or the Confirm key to stop the alarm.
- Press **<Snooze>** to silence the alarm for the snooze period.

### To deactivate an alarm

- In Menu mode, select **Alarms**. Alternatively, select **Organiser** → **Alarms**.
- Scroll to the alarm you want to deactivate.
- Press **<Options>** → **Deactivate alarm**.

SAMSUNG  
ELECTRONICS



### Declaration of Conformity (R&TTE)

**We, Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone - GT-C3560

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006+A11:2009
SAR	EN 50360 : 2001 / AC2006 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,  
Churchfield Road,  
Watton-on-Thames,  
Surrey, KT12 2TD, UK\*  
Identification mark: 0168

The technical documentation kept at :  
**Samsung Electronics QA Lab.**

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

2011.03.25  
(place and date of issue)

Joong-Hoon Choi / Lab Manager  
(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

CE0168