

Mobile Phone user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website <http://opensource.samsung.com>.

www.samsungmobile.com

Printed in Korea
Code No.:GH68-31801A
English (EU), 09/2010, Rev. 1.0



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

CE0168



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0 °C or above 45 °C).
- Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

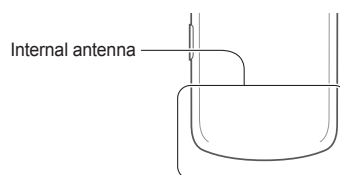

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product

 


(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Phone layout

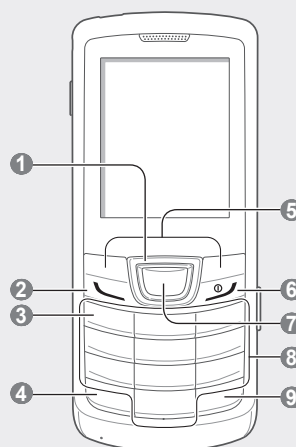

1

4-way navigation key

In Idle mode, access user-defined menus; In Menu mode, scroll through menu options
Depending on your service provider, pre-defined menus may differ

2

Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers; Send an SOS message
See "Activate and send an SOS message"

3

Voice mail service key

In Idle mode, access voice mails (press and hold)

4

Keypad lock key

In Idle mode, lock or unlock the keypad (press and hold)

5

Softkeys

Perform actions indicated at the bottom of the display

6

Power/End key

Turn the phone on or off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

7

Confirm key

In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input
Depending on your service provider or region, the key may perform differently

8

Alphanumeric keys

9

Silent profile key


In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	Call in progress
	Call diverting activated
	SOS message feature activated
	Roaming (outside of normal service area)
	FM radio on
	Alarm activated
	New text message
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

 - Remove the back cover and insert the SIM card.

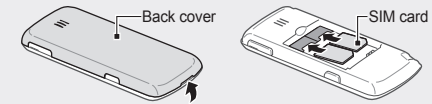

 - Insert the battery and replace the back cover.

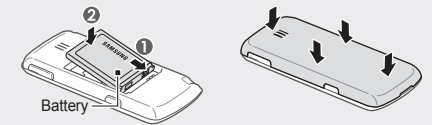

Charge the battery

- Plug the supplied travel adapter.
- When charging is finished, unplug the travel adapter.



Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step, for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [↵] (represents the Power/End key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

- Press and hold [↵].
- Enter your PIN and press <OK> (if necessary).
- Press <OK> to register new SIM cards.
- Assign a name and signal icon to the SIM cards by following the on-screen instruction.

To turn your phone off, repeat step 1 above.

If you remove the battery, the time and date will be reset.

Access menus

To access your phone's menus,

- In Idle mode, press <Menu> to access Menu mode.

You may need to press the Confirm key to access Menu mode depending on your region or service provider. When you are using the smart home screen, you cannot use the Confirm key to access Menu mode.

- Use the Navigation key to scroll to a menu or option.
- Press <Select>, <OK>, or the Confirm key to confirm the highlighted option.
- Press <Back> to move up one level; Press [↵] to return to Idle mode.

• When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
• Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [↵] to dial the number.
- To end the call, press [↵].

Answer a call

- When a call comes in, press [↵].
- To end the call, press [↵].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

- Press <Edit> → **Volume** → **Call alert**.
- Scroll left or right to adjust the volume level and press <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

To customise the smart home screen

- In Menu mode, select **Settings** → **Display** → **Smart home**.
- Scroll left or right to **Smart idle**.
- Press <Edit>.
- Select the items to display on the smart home screen.
- Press <Options> → <Save>.
- Press the Confirm key.

You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a style you want.

To access the smart home idle items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item. The following items are available.

Available items may vary depending on your service provider.

- Shortcuts toolbar:** access your favourite applications. You can customise the shortcut toolbar as desired.
- My buddies:** access contacts that are saved in the favourite number list.
- PIMs ticker:** access upcoming calendar events and tasks.
- Dual clock:** view your home clock and a world clock.
- Monthly calendar:** view the monthly calendar.
- Single clock:** view the current time and date.

To customise the shortcut toolbar

- In Menu mode, select **Settings** → **Display** → **Smart home**.
- Press <Edit>.
- Scroll to **Shortcuts toolbar** and press <Options> → **Edit shortcuts**.
- Select a menu to change or an empty location.
- Press <Edit>.
- Select the menus you want.
Press the Navigation key right to select submenus (if necessary).
- Press <Save>.

Manage your SIM cards

Your phone supports the use of two SIM cards, which enables the use of two subscriptions.

Your phone includes only one Radio Frequency (RF) module that is shared by both SIM cards. During a call that utilizes one of your SIM subscriptions, you will be unable to receive calls intended for the other SIM subscription.

To set time for automatic subscription changes

- In Idle mode, press and hold [☎].
- Select **SIM auto switch**.
- Press <Change> to activate the auto switch feature.
- Set the starting and ending time to change subscription.

To change the names and icons of the SIM cards

- In Idle mode, press and hold [☎].
- Select **Register card**.
- Select a SIM card.
- Select **Card name** and change the name for the SIM card.
- Select **Icon** and change the icon for the SIM card.

Enter text

To change the text input mode

- Press and hold [#] to switch between T9 and ABC modes.
- Press [#] to change case or switch to Number mode.
- Press [*] to switch to Symbol mode.
- Press and hold [*] to select an input method, change the input language, or access your word list.

T9 mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to change the ringtone.

- Press <Edit> → **Voice call ringtone**.
- Select a memory location (if necessary).
- Select a ringtone.

To switch to another profile, select it from the list.

Call a recently dialed number

- In Idle mode, press [↵] to display a list of recent numbers.
- Scroll to the number you want and press [↵] to dial.

Use the smart home screen

The smart home screen allows you to access your favourite applications and contacts and view upcoming events or tasks. You can customise the smart home screen to fit your preferences and needs.

When you are using the smart home screen, the Navigation key does not work as shortcuts.

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter your message text. See "*Enter text*".
- Press the Confirm key to send the message.

To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

Make fake calls

You can stimulate an incoming call when you want to get out of meetings or unwanted conversations.

- Press and hold the Navigation key down in Idle mode.
- Press the Navigation key down four times when the keys are locked.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Press <Change> to select **On**.
- Scroll down and press the Confirm key to open the recipient list.
- Press <Search> to open your contact list.
- Select a contact.
- Select a number (if necessary).
- Press the Confirm key to save the recipients.
- Scroll down and set the number of times to repeat the SOS message.
- Press <Back> → <Yes>.

To send an SOS message

- With the keys locked, press [↵] to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press [↵].

Listen to the FM radio

- Plug the supplied headset into the phone.
- In Menu mode, select **FM radio**.
- Press the Confirm key to start the FM radio.
- Press <Yes> to start automatic tuning.
The radio scans and saves available stations automatically.

The first time you turn on the FM radio, you will be prompted to start automatic tuning.

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Select an available radio station • Up/Down: Adjust the volume.

Record and play voice memos

To record a voice memo

- In Menu mode, select **Voice recorder**.
- Press the Confirm key to start recording.
- Speak your memo into the microphone.
- When you are finished speaking, press <Stop>.

To play a voice memo

- From the voice recorder screen, press <Options> → **Go to My voice clips**.
- Select a file.

Set and use alarms

Learn to set and control alarms for important events.

To set a new alarm

- In Menu mode, select **Alarms**.
- Press <Create>.
- Set the details of the alarm.
- Press <Save> or the Confirm key.

To stop an alarm

When the alarm sounds,

- Press <Confirm> or the Confirm key to stop the alarm.
- Press <Snooze> to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Alarms**.
- Scroll to the alarm you want to deactivate.
- Press <Options> → **Deactivate alarm**.

If you remove the battery, the time and date will be reset.

Activate the torch light

The torch light feature helps you see in dark places by making the flash as bright as possible. To activate the torch light, press and hold [☹]. To deactivate the torch light, press [☹].

SAMSUNG ELECTRONICS	
Declaration of Conformity (R&TTE)	
We, Samsung Electronics	
declare under our sole responsibility that the product	
GSM Mobile Phone : GT-E1252	
to which this declaration relates, is in conformity with the following standards and/or other normative documents.	
SAFETY	EN 60950- 1 : 2001 +A11:2004
EMC	EN 301 489- 01 V1.8.1 (04-2008) EN 301 489- 07 V1.3.1 (11-2005)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)
We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.	
The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):	
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK* Identification mark: 0168	
The technical documentation kept at :	
Samsung Electronics QA Lab.	
which will be made available upon request. <i>(Representative in the EU)</i>	
Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK*	
2010.07.12	Joong-Hoon Choi / Lab Manager (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.