 
 


Install the SIM or USIM card and battery

- Remove the back cover and insert the SIM or USIM card.

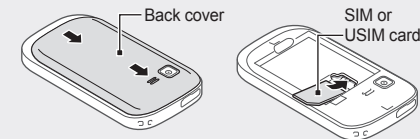 


- Insert the battery and replace the back cover.

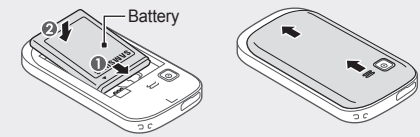

Charge the battery

- Plug a travel adapter.
- When charging is finished, unplug the travel adapter.

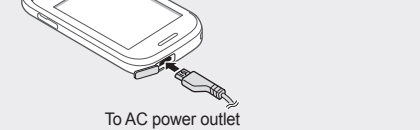

Answer a call

- When a call comes in, press **[↔]**.
- For a video call, select **Camera on** to allow the caller to see an image via the camera lens.
- To end the call, press **[⏏]**.

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Select the profile you are using.

If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

- Select **Volume** → **Call alert**.
- Drag the slider to adjust the volume level and select **Save**.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

- Select **Add media** and add an item.
- Select **Send** to send the message.

To view text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

In Idle mode, press and hold the Volume key down.

Activate the mobile tracker

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone. To activate the mobile tracker,

- While the phone is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- Open the cover to the memory card slot on the side of the phone.

- Insert a memory card with the gold-coloured contacts facing down.



- Push the memory card in the memory card slot until it locks in place.
- Close the cover to the memory card slot.

Instructional icons

	Caution: situations that could cause damage to your phone or other equipment
	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [⏏] (represents the Power/End key)

To open a widget

- In Idle mode, scroll left or right to a panel of the idle screen.
- Select a widget to activate on the idle screen.

To organise your widget

You can organise each panel of the idle screen with your favourite widgets.

- In Idle mode, select at the top left of the screen to open the widget toolbar.
- Read the widget disclaimer and select **I agree** (if necessary).
- Scroll left or right on the widget toolbar to find the widget you want to use.
- Drag the widget to the idle screen.
- Select .

Enter text

To change the text input mode

- Select **EN** to change the input language.
- Select to switch between T9 and ABC modes. The dot turns green in T9 mode.
- Select **123** or **sym** to switch to Number or Symbol mode.

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Select **Sending SOS** to activate the SOS messaging feature.
- Select **Recipients** → **Add recipients** → **Contacts**. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 6.
- Select **Multiple**.
- Select contacts → **Add**.
- When you are finished setting the recipients, select **Save** to save the recipients.
- Select **Repeats**, set the number of times to repeat the SOS message, and select **Save**.
- Press the Back key → **Yes**.

To send an SOS message

- With the touch screen and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
- To exit SOS mode, press and hold **[⏏]** and press **[⏏]**.

Turn your phone on or off

To turn your phone on,

- Press and hold **[⏏]**.
- Enter your PIN and select **Done** (if necessary).
- When the setup wizard opens, customise your phone as desired by following the screen.

If the battery is removed for more than a few minutes, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Use the touch screen

Learn basic actions to use the touch screen.

To avoid scratching the touch screen, do not use sharp tools.

For the optimal use of the touch screen, remove the protection film before using your phone.

- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap and hold your finger on an item to open a pop-up option list.

T9 mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, select to insert a space. If the correct word does not display, select to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

To use other features for text input

- To move the cursor, select and then the virtual navigation key.
- To delete characters one by one, select . To delete words quickly, tap and hold .
- To enter punctuation marks, select 1 repeatedly.
- To start a new line, select .
- Select to change case.

Use the camera

To capture photos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Select to take a photo. The photo is saved automatically.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To record videos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Select to switch to Recording mode.
- Aim the lens at the subject and make any adjustments.
- Select to start recording.
- Select to stop recording. The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

Access menus

To access your phone's menus,

- In Idle mode, select **Menu** to access Menu mode.
- Scroll left or right to a main menu screen.
- Select a menu or application.
- Press the Back key to move up one level; Press **[⏏]** to return to Idle mode.

When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, select **Keypad** and enter an area code and a phone number.
- Press **[↔]** to dial the number. For a video call, select .
- To end the call, press **[⏏]**.

Add a new contact

The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, select **Keypad** and enter a phone number.
- Select → **Add to Contacts** → a memory location (if necessary) → **Create contact**.
- Select a number type (if necessary).
- Enter contact information.
- Select **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Select the recipient field → **Enter manually**.
- Enter a recipient number and select **Done**.
- Select the text input field.
- Enter your message text and select **Done**. See "Enter text" For sending as a text message, skip to step 7. For attaching multimedia, continue with step 6.

SAMSUNG ELECTRONICS	
Declaration of Conformity (R&TTE)	
<i>We,</i> Samsung Electronics	
declare under our sole responsibility that the product	
GSM WCDMA Wi-Fi Mobile Phone : GT-S3770	
to which this declaration relates, is in conformity with the following standards and/or other normative documents:	
SAFETY	EN 60950-1 : 2006+A11:2009
SAR	EN 50360 : 2001/AC2006 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V2.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2008) EN 301 489-24 V1.4.1 (09-2007)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) EN 301 908-1 V4.2.1 (03-2010) EN 301 908-2 V4.2.1 (03-2010)
We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.	
The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):	
BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK* Identification mark: 0168	
The technical documentation kept at : Samsung Electronics QA Lab.	
which will be made available upon request. (Representative in the EU)	
Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK*	
2011.07.04	Joong-Hoon Choi / Lab Manager
(place and date of issue)	(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.