



SGH-F500 User's Guide





Important safety precautions

- Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth[®] is a registered trademark of the Bluetooth SIG, Inc. worldwide.
Bluetooth QD ID: B012661
- Java[™] is a trademark or registered trademark of Sun Microsystems, Inc.
- Picsel and Picsel Viewer[™] are trademarks of Picsel Technologies, Inc.
- Windows Media Player[®] is a registered trademark of Microsoft Corporation.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service




Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 45.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [] Indicates a key on the phone. For example, []
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, <**Menu**>



- **3G**
Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

Special features of your phone



- **Multimedia gate**
Use the phone functions and the multimedia player functions separately, by switching your phone's dual display.



- **Synchronisation with Windows Media Player**
Transfer music files to your phone directly from the Windows Media Player.



- **Media player**
Play media files on your phone. You can enjoy high quality videos and music.



- **Camera and camcorder**
Use the camera module on your phone to take a photo or record a video.



- **Java**
Enjoy Java™-based embedded games and download new games.



- **Phone to TV**
View photos and video clips captured with the phone on your TV screen.



- **Bluetooth**
Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **File viewer**
Open documents in various formats on the phone without corruption.



- **Web browser**
Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Email**
Send and receive emails with images, video, and audio attachments.

Contents

Unpack 6

Make sure you have each item

Get started 6

First steps to operating your phone

Assemble and charge the phone	6
Power on or off	6
Phone layout	7
Switch between Phone mode and Multimedia Player mode	8
Keys and icons	8
Access menu functions	11
Enter text	12
Customise your phone	13

Step outside the phone 15

*Begin with call functions, web browser,
messaging, and other special features*

Make or answer calls	15
Browse the web	16
Use Phonebook	17
Send messages	18

View messages	19
Use Bluetooth	20
Switch applications	21
Use a leather case	22
Reset the phone	23

Multimedia player functions 23

*Use multimedia functions: the music player,
camera, media album, and document viewer*

Use the multimedia player keys	23
Play music	25
Use the camera	30
View photos and videos in Album	35
Use the video player	36
Change multimedia player settings	36
View documents	37

Menu functions 38

All menu options listed

Health and safety information 45

Overview of menu functions

To access Menu mode, press <**Menu**> in Idle mode.

1 Call log

2 Phonebook

3 Bluetooth

4 Browser

- 1 Home
- 2 Enter URL
- 3 Bookmarks
- 4 Saved pages
- 5 History
- 6 Advanced
- 7 Browser settings

5 Messages

- 1 Create message
- 2 Inbox
- 3 Email inbox
- 4 Drafts
- 5 Outbox
- 6 Sentbox
- 7 Templates
- 8 Voice mail
- 9 Delete all
- 10 Message settings
- 11 SOS messages
- 12 Memory status

6 My files

- 1 Images
- 2 Videos
- 3 Sounds
- 4 Games & more
- 5 Other files
- 6 Memory status

7 Applications

- 1 Calendar
- 2 Memo
- 3 Task
- 4 Voice recorder
- 5 World clock
- 6 Calculator
- 7 Converter
- 8 Timer
- 9 Stopwatch
- 10 SIM application toolkit¹
- 11 Memory status

8 Alarms

9 Settings

- 1 Phone settings
- 2 Display settings
- 3 Message settings
- 4 Call settings
- 5 Phonebook settings
- 6 Network settings
- 7 Security
- 8 Memory settings
- 9 Master reset
- 10 Phone information

1. Available only if supported by your USIM/SIM card.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide

 
You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Get started


First steps to operating your phone

Assemble and charge the phone

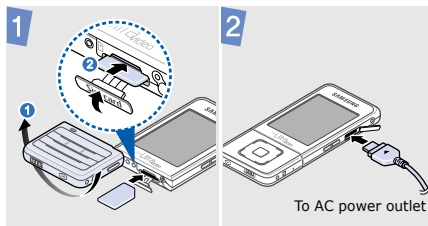


Power on or offs

Switch on

 
1. Press and hold [].
2. If necessary, enter the PIN and press **<Confirm>**.

Switch off


- Press and hold [].



Phone layout

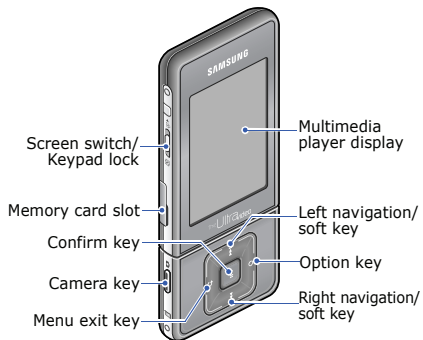Front view

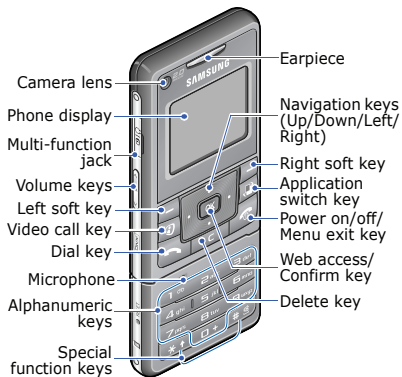 

Rear view




You can lock the keypad to prevent any unwanted phone operations from accidentally pressing any of the keys. In Idle mode, slide  up. To unlock the keypad, slide  down halfway.

Switch between Phone mode and Multimedia Player mode

Your phone provides you with entertaining multimedia functions, as well as traditional phone functions.

When you switch on your phone, it goes into traditional Phone mode using the small display on the rear side.

To switch the phone to Multimedia Player mode to use multimedia player functions, slide  down. The larger screen on the front side turns on.

Keys and icons

Phone keys



Perform the function indicated on the bottom line of the display.



Make a video call.



Open the application switch window to access other applications without exiting the current application.



In Idle mode, access your favourite menus directly.

In Menu mode, scroll through menu options.



In Idle mode, launch the web browser.

In Menu mode, select the highlighted menu option or confirm input.



Delete characters from the display or items in an application.



Make or answer a call.

In Idle mode, retrieve the numbers recently dialed, missed, or received.



Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.



In Idle mode, press and hold [**1**] to access your voicemail server. Press and hold [**0**] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [**#**] to activate or deactivate the Silent profile. Press and hold [*****] to enter a pause between numbers.

Multimedia player keys



Scroll through items or perform a specific function, according to your actions: dragging, pressing, or holding.



Select the highlighted menu option or confirm input.

Take a photo, record a video, or begin music playback.



In Idle mode, press and hold to turn on the camera.

In Camera mode, take a photo or record a video.

Common keys



Slide down to switch between Phone mode and Multimedia Player mode.










Slide up to lock the keys, or slide down halfway to unlock the keys.














Adjust the phone volume.

Icons

The following icons may appear on the top line of the screen to indicate your phone's status. Depending on your country or service provider, the icons shown on the display may vary.

	Signal strength
	GPRS (2.5G) network
	Connecting to GPRS (2.5G) network
	EDGE network
	Connecting to EDGE network
	UMTS (3G) network
	Connecting to UMTS (3G) network
	HSDPA (3G+) network
	Connecting to HSDPA (3G+) network

	Call in progress
	Out of your service area
	Video call in progress
	SOS message feature active
	Roaming network
	Music playback in progress
	Music playback paused
	Bluetooth active
	Bluetooth hands-free car kit or headset connected
	Browsing Internet
	Connected to secured web page



New message:

- : Text message
 - : Multimedia message
 - : Email
 - : Voicemail
 - : Push
 - : Configuration message
-



Profile setting

- : Normal
 - : Silent
 - : Car
 - : Meeting
 - : Outdoor
 - : Offline
-



Alarm set



Battery power level

Access menu functions

In Phone mode

Select an option

1. Press a desired soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>** or **[OK]** to confirm the function displayed or option highlighted.
4. Press **<Back>** to move up one level.
Press to return to Idle mode.


Use menu numbers

Press the number key corresponding to the option you want.





In Multimedia Player mode

You can access menu functions and options by touching or dragging on the multimedia player keys. Further details are described in “Multimedia player functions” on p. 23.

Enter text

- Entering text is only available in Phone mode. If you select an option requiring text input in Multimedia Player mode, slide  down to switch the screen to the phone display.

Change the text input mode

- Press and hold [*****] to switch between T9 mode () and ABC mode ().
- Press [*****] to change case or switch to Number mode ().
- Press and hold [**#**] to switch to Symbol mode ().

ABC mode

To enter a word:

Press the appropriate key until the character you want appears on the display.

T9 mode

To enter a word:

1. Press [**2**] to [**9**] to start entering a word.
2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, press [**#**] to insert a space. Otherwise, press [**0**] to display alternative word choices.

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the corresponding number key to select a symbol.

Other operations

- Press [**1**] to enter punctuation marks or special characters.
- Press [**#**] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [**C**] to delete characters one by one.
- Press and hold [**C**] to clear the entire display.

Customise your phone

Display language

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Language** → **Screen text**.
2. Select a language.
3. Press <**Save**>.

Call ringer melody

To change the profile properties:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Phone profiles**.
2. Scroll to the sound profile you are using.
3. Press <**Options**> and select **Edit**.
4. Select **Voice call ringtone** and select a ringtone for voice calls.
5. Select **V-call ringtone** and select a ringtone for video calls.
6. Press <**Options**> and select **Save**.

To change the sound profile:


1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Phone profiles**.
2. Select the profile you want.
3. Press [OK].

Key tone volume

In Idle mode, press [^/∨] to adjust the key tone volume.

Idle mode wallpaper

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Main display** → **Wallpaper**.
2. Scroll to an image folder.
3. Select an image.

4. Slide  down to switch the screen to the multimedia player display.
5. Press [O] and select **Set as** → **Wallpaper**.
6. Press [I◀◀].

Menu shortcuts

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.
4. Press <Save>.

Silent profile

You can activate the Silent profile to avoid disturbing other people. In Idle mode, press and hold [#].

Phone lock

1. In Idle mode, press **<Menu>** and select **Settings** → **Security** → **Change phone password**.
2. Enter the default password, **00000000**, and press **<Confirm>**.
3. Enter a new 4- to 8-digit password and press **<Confirm>**.
4. Enter the new password again and press **<Confirm>**.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press **<Confirm>**.


 

Step outside the phone

Begin with call functions, web browser, messaging, and other special features



Make or answer calls

Make a call

To make a voice call:

1. In Idle mode, enter an area code and phone number.
2. Press [].
Press [] to adjust the volume.
3. Press [] to end the call.

To make a video call:

1. In Idle mode, enter an area code and phone number.
2. Press [].
3. Press [] to end the call.

Answer a call

1. When the phone rings, press [].
2. For a video call, press <**Show me**> to allow the other person to see you.
3. Press [] to end the call.

Use the speakerphone feature

During a call, press [**OK**] and then <**Yes**> to activate the speaker.

Press [**OK**] again to switch back to the earpiece.

Make a multi-party call

1. During a call, call the second participant. The first call is put on hold.
2. Press <**Options**> and select **Join**.
3. Repeat step 1 and 2 to add more participants.

4. During a multi-party call:

- Press <**Options**> and select **Split** to have a private conversation with one participant.
- Press <**Options**> and select **Remove** to drop one participant.

5. Press [] to end the multi-party call.

Browse the web

Launch the web browser

In Idle mode, press [**OK**]. The homepage of your service provider opens.

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [OK].
- To return to the previous page, press <Back>.
- To access browser options, press <Options>.

Use Phonebook

Add a contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Add to phonebook** → a memory location → **New**.
3. For **Phone**, select a number type.

Find a contact

4. Specify contact information.
 5. Press <Options> and select **Save** to save the contact.
-
1. In Idle mode, press <Contacts>.
 2. Enter the first few letters of the name you want.
 3. Select a contact.
 4. Scroll to a number and press [↩] to dial, or press [OK] to edit contact information.

Send messages

Send a text message

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Text message**.
 2. Enter the message text.
 3. Press <Options> and select **Send**.
 4. Enter destination numbers.
 5. Press [OK] to send the message.
-

Send a multimedia message

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Multimedia message**.
2. Enter the message subject.

3. Select **Image or video** and add an image or a video clip.
4. Select **Sound** and add a sound clip.
5. Select **Text**.
6. Enter the message text and press [OK].
7. Press <Options> and select **Add file(s)** → an item type.
8. Press [OK] to select the items you want to be attached.
9. Press <Options> and select **Attach**.
10. Press [OK].
11. Enter destination numbers or addresses.
12. Press [OK] to send the message.

Send an email

1. In Idle mode, press **<Menu>** and select **Messages** → **Create message** → **Email**.
2. Enter the email subject.
3. Move to the **Message** field.
4. Enter the email text.
5. Select **Attach file(s)** → **Add** → an item type.
6. Press [**OK**] to select the items you want to be attached.
7. Press **<Options>** and select **Attach**.
8. Press [**OK**].
9. Enter email addresses.
10. Press [**OK**] to send the email.

View messages

View a text message

1. In Idle mode, press **<Menu>** and select **Messages** → **Inbox**.
2. Select a text message.

View a multimedia message

1. In Idle mode, press **<Menu>** and select **Messages** → **Inbox**.
2. Select a multimedia message.

View an email

1. In Idle mode, press **<Menu>** and select **Messages** → **Email inbox**.
2. Press **<Options>** and select **Download**.
3. Select an email or a header.
4. If you selected a header, press **<Options>** and select **Retrieve** to view the body of the email.

Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

1. In Idle mode, press **<Menu>** and select **Bluetooth** → **Activation** → **On**.
2. Select **My phone's visibility** → **On** to allow other devices to locate your phone.

Search for and pair with a Bluetooth device

1. In Idle mode, press **<Menu>** and select **Bluetooth** → **My devices** → **Search for new devices**.
2. Select a device.

3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press **<OK>**. When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, **Phonebook**, **My files**, **Calendar**, **Memo**, or **Task**.
2. Select an item.
3. Press **<Options>** and select **Send namecard via/Send via** → **Bluetooth**.
4. For sending a contact, select which data you want to send.

-
5. Search for and select a device.
 6. If necessary, enter the Bluetooth PIN and press **<OK>**.

Receive data

1. When a device attempts to access your phone, press **<Yes>** to permit the connection.
2. If necessary, press **<Yes>** to confirm that you are willing to receive.

Switch applications

You can switch to other applications from a menu, without closing the menu screen you are using.

Switch to an application

1. While using a menu, press [].
2. Select an application.

Available applications

- **Call:** open the dialling screen.
- **Messages:** access the **Messages** menu.
- **Browser:** launch the web browser.

Close all running applications

 
1. Press [].
2. Scroll to **End all?**.
3. Press **<Yes>**.

Use a leather case

A durable, portable leather case is provided with your phone. When used properly, it can help protect your phone from being damaged. It has an internal battery so that you do not need to carry an extra battery.


Insert the phone

Slide the phone into place.

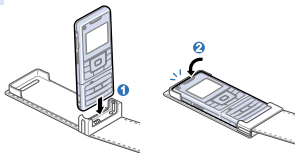


Charge the phone

 Plug the travel adapter into the jack on the case.



Remove the phone

 Slide the phone out.

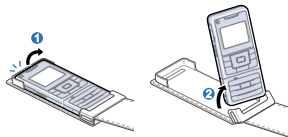


- The leather case's battery may be bent or damaged by careless handling of the case. Be especially careful not to sit down with the leather case in your back pocket.
- Always keep the leather case dry. Humidity may deform its original shape.

Reset the phone

If your phone freezes for any reason while using a phone function, you can easily reset it.

Reset the phone

 Press and hold the reset button inside the hole using a sharp tool.

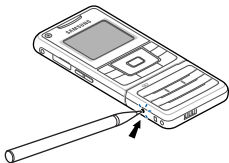

- ✓ The phone does not reboot automatically after resetting. Press and hold [⏻] to turn on the phone.

Multimedia player functions

Use multimedia functions: the music player, camera, media album, and document viewer

Use the multimedia player keys

How to use

Drag

Drag your finger in the direction of the arrow.



Scroll up or down to move two places on a list at a time.



Scroll one by one on a list.



Scroll one by one through the tabs on the main menu screen.

Press

Lightly press and release.



Perform the following options:

- : Opens an option list.
- ◀◀ : Functions as the left soft/navigation key.

- **▶▶I**: Functions as the right soft/navigation key.
- **↶**: Closes the current menu function.

Hold
Press and hold.



Move backward or forward in a file continuously until you release your finger from the key.

- When the multimedia player display turns off, press [**▶▶I**] to turn the display on.

Access menus or options

Access menu functions

1. In Idle mode, drag left or right on the key to scroll through menu icons:
Music, Video, Settings, Camera, Documents, and **Album.**

2. Press [**▶▶I**] to access the highlighted menu.
3. Press [**↶**] to exit the menu.

Select an option

1. In a menu, press [**O**] to open an option list.
2. Scroll up or down by dragging up or down on the key or pressing on a corner of the key.
3. Press [**▶▶I**] to confirm the highlighted option.
4. After change the setting, press [**I◀◀**] to save your changes.
5. Press [**↶**] to close the option list.

Play music

Copy music files to the phone

You can play mp3, ogg, wma8, wma9, and aac files. Use these methods:

- Download from the wireless web.
- Download from a PC using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card and insert the card into the phone.
- Synchronise music files with Windows Media Player.

Synchronise with Windows Media Player

You can copy music files to your phone by synchronising with Windows Media Player 11.

1. In Phone's Idle mode, press <Menu> and select **Settings** → **Phone settings** → **USB connection** → **Media player**.
2. Connect your phone and PC with an optional PC data cable.
3. Select **Sync digital media files to this device** when a pop-up window appears on your PC.
4. Select the name of your phone and click **Finish**.
5. Drag the music files you want to the sync list.

6. Click **Start Sync**.
7. When synchronization is finished, disconnect the phone from the PC.


Play music files


1. In Multimedia Player's Idle mode, access **Music**.
2. Press [▶||] to begin playback.
3. During playback, use the following options:
 - Press [▶||] to pause or resume playback.
 - Press [◀◀] to return to the previous file.
 - Hold [◀◀] to move backward in a file.
 - Press [▶▶] to skip to the next file.
 - Hold [▶▶] to move forward in a file.

- Drag up or down on the key to adjust the volume.
- Drag to the left or right on the key to check the music player settings or access the all music list.

4. Press [O] and select **Stop** to stop playback.

Use an optional Bluetooth headset

1. From the music player screen, press [O] to open the option list.
2. Select **Play via → Bluetooth stereo headset**.
3. Slide  down to switch the screen to the phone display.
4. Search for and select your Bluetooth stereo headset.



-
5. Enter the headset's Bluetooth PIN, **0000**, and press **<OK>**.
 6. Slide  down to return the screen to the multimedia player display.
 7. Press [▶||] to begin playback. Sound output switches to the headset.

Set up your favourite music list

1. From the music player screen, drag to the right on the key to access the all music list.
2. Press [O] and select **Add to Favourites** → **Selected** or **Multiple**.
3. For **Multiple**, press [▶||] to select the music files you want and then [I◀◀].
4. Press [I◀◀].

-
5. When you have finished, press [▶▶I] to access your favourite music list.
 6. Select the playlist you want.
 7. Press [▶||] to begin playback.

Create a playlist

1. From the screen, drag to the right on the key.
2. Press [▶▶I] to access the favourite music list.
3. Press [O] and select **Create playlist**.
4. Slide  down to switch to the phone display.
5. Enter a name for the playlist and press [OK].
6. Slide  down to return the screen to the multimedia player display.

7. Access the playlist you created.
8. Press [O] and select **Add music from** → a source category.
9. Press [▶||] to select the music files you want and then [◀◀].
10. To change the track order, press [O] and select **Move track in playlist**.
11. Move the file to the position you want by dragging up or down on the key and press [▶||].
12. Press [▶||] to begin playback.

Select a playlist

While you using the music player, music files are sorted automatically on the most played music list or recent music list. In addition to playlists you have created, use those playlists to listen to your favourite music easily and quickly.

1. From the music player screen, drag to the right on the key.
2. Press [▶▶|] to access the favourite music list.
3. Select the playlist you want.
4. Press [▶||] to begin playback.

Use player options

From the music player screen, press [O]. Depending on the current playlist, available options vary:

- **Transfer to phone/Transfer to Bluetooth stereo headset:** switch sound output to the phone speaker or a Bluetooth stereo headset.
- **Play via:** begin playback via the phone speaker or a Bluetooth stereo headset.
- **Stop:** stop playback.
- **Add to Favourites:** add the current file to your favourite music list.
- **Add to other list:** add the current file to another playlist.
- **Skip marked:** select the file to skip during playback.

- **Send via:** send the file via multimedia message, email, or Bluetooth.
- **Set as:** set the file as your ringtone for voice calls or video calls, or as a ringtone for a Phonebook entry.
- **Activate:** get a new license key from the corresponding website.
- **Bluetooth visibility:** share the file with other Bluetooth devices or hide the file so that other Bluetooth devices cannot access it.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.

- **Key management:** manage license keys.
- **Settings:** change the settings for using the music player.

Customise music player settings

From the music player screen, drag to the left on the key to open the option list.

- **Repeat:** select a repeat mode type.
- **Shuffle:** set the music player to play tracks in random order.
- **Music overrides other sounds:** set the music player to continue playback even when you switch to the phone display.
- **Equaliser type:** select an equaliser setting.

Use the camera



- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.
- When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Take a photo

1. In Multimedia Player's Idle mode, access **Camera**. The display is activated as a viewfinder.
2. Aim the lens at the subject and make any desired adjustments. You can rotate the multimedia keypad downward to use the number keypad for adjusting an image.

3. Press [▶||] or [📷] to take a photo. The photo is saved automatically.
4. Press [I◀◀] to return to the viewfinder, or press [▶▶I] to delete the photo.

Adjust an image

In Capture mode, adjust the image to be captured:

- Drag up or down on the left side of the key to zoom in or out.
- Drag up or down on the right side of the key to adjust the brightness.
- Drag to the left or right on the key to change the camera settings and access an option list.
- Press [▶▶I] to switch to Record mode.

Customise the camera settings

In Capture mode, drag to the right on the key to open the option list.

- **Shooting mode:** change the shooting mode.
- **Size:** select an image size.
- **Timer:** set a time delay before the camera takes a photo.
- **Effects:** change the colour tone or apply a special effect.
- **Frames:** apply a decorative frame.
- **White balance:** adjust the colour temperature of the camera.

- **ISO:** change the ISO setting, which controls the sensitivity of your camera. For low light situations, select a higher ISO number.
- **Zoom:** zoom in or out the image.
- **Brightness:** adjust the brightness.
- **Viewfinder mode:** select a preview screen.
- **Settings:** change the settings for taking a photo.

In Capture mode, drag to the left on the key to open the option list.

- **Quality:** select an image quality setting.
- **Exposure metering:** select a method to determine the exposure of an image.

- **Scene programs:** set whether to use Night shot mode.
- **Shutter sound:** select the sound that you hear when you press the shutter release key.
- **Zoom sound:** turn the sound effect for zooming on or off.
- **Brightness sound:** turn the sound effect for brightness adjustment on or off.
- **Default storage:** select the default memory location.
- **Default name:** change the default prefix of file names.

View photos

1. In Capture mode, press [I◀◀] to open the Album folder.
2. Select a photo from the list.
3. Press [I◀◀] or [▶▶I] to view other photos, or press [▶II] to zoom in or out the image.

Record a video

1. In Capture mode, press [▶▶I] to switch to Record mode.
2. Aim the lens at the subject and make any desired adjustments.
You can rotate the multimedia keypad downward to use the number keypad for adjusting an image.

3. Press [▶II] or [📷] to start recording.
Press [▶II] or [📷] to pause or resume.
4. Press [I◀◀] to stop recording. The video is saved automatically.
5. Press [▶II] to review the video.
6. Press [I◀◀] to return to the viewfinder, or press [▶▶I] to delete the video.

Adjust an image

- In Record mode, adjust the image to be recorded:
- Drag up or down on the left side of the key to zoom in or out.
 - Drag up or down on the right side of the key to adjust the brightness.

- Drag to the left or right on the key to change the camcorder settings and access an option list.
- Press [▶▶] to switch to Capture mode.

Customise the camcorder settings

In Record mode, drag to the right on the key to open the option list.

- **Size:** select a frame size.
- **Timer:** set a time delay before the camera starts recording.
- **Effects:** change the colour tone or apply a special effect.
- **White balance:** adjust the colour temperature of the camera.
- **Record audio:** record a video with audio.

- **Recording mode:** select a video recording mode.
- **Viewfinder mode:** select a preview screen.
- **Settings:** change the settings for recording a video.

In Record mode, drag to the left on the key to open the option list.

- **Quality:** select an image quality setting.
- **Default storage:** select the default memory location.
- **Default name:** change the default prefix of file names.

Play videos

1. In Record mode, press [◀◀] to open the Album folder.
2. Select a video clip from the list.

View photos and videos in Album

View photos

1. In Multimedia Player's Idle mode, access **Album**.
2. Select a photo.
3. Press [◀◀] or [▶▶] to view other photos.
4. Press [⏏] to zoom in or out the image.

View photos as a slide show

1. From the file list, select a photo.
2. Press [O] to open the option list.
3. Select **Slide show**. The slide show begins.

Play videos

1. In Multimedia Player's Idle mode, access **Album**.
2. Select a video file. The video plays.
3. During playback, use the following options:
 - Press [⏏] to pause or resume playback.
 - Press [◀◀] to move to the previous file.
 - Hold [◀◀] to move backward in a file.
 - Press [▶▶] to move to the next file.
 - Hold [▶▶] to move forward in a file.
 - Drag up or down on the key to adjust the volume.
4. Press [O] and select **Stop** to stop playback.

Customise video player settings

From the video player screen, drag to the left on the key to open the option list.

- **Repeat:** select a repeat mode type.
- **Caption size:** select a caption size.
- **Controller hide time:** select the length of time the controller image displays on the screen.
- **Screen brightness:** adjust the brightness of the video player screen.
- **Aspect ratio:** change the default screen type. When in TV-out mode, **Full screen** is only available.
- **DivX Registration Code:** check the registration code of your phone for playing downloaded video files.

Use the video player

In the video player, you can play mpeg4, DivX3.11, DivX4, DivX5, Xvid, wmv9, H.263, and H.264 files.

Play videos

1. In Multimedia Player's Idle mode, access **Video**.
2. Select a video.
3. Press [▶||] to play videos. For details about options during playback, see page 26.

Change multimedia player settings

Customise settings

1. In Multimedia Player's Idle mode, access **Settings**.
2. Press [I◀◀] or [▶▶I] to select a setting category.
3. Select an option and change the setting.

Available options

- **Light:** change settings for the backlight and keypad light.
- **Display:** change settings for the display. You can also select a video system for your TV.
- **Applications:** change the settings for using applications in Multimedia player mode.
- **Tutorial:** view how to use the multimedia player keys.
- **USB settings:** select a USB mode to use when you connect your phone to a PC via a USB interface.

- **Memory:** check memory information. You can also clear the phone memory and format the memory card.
- **PMP reset:** reset the settings for multimedia player functions.

View documents

Your phone includes Pictel File Viewer for viewing various files.

Available file formats are doc, xls, ppt, pdf, txt, html, and mhtml.

View documents

1. In Multimedia Player's Idle mode, access **Documents**.
2. Select a file from the list.

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Call log

Check the most recent calls dialed, received, or missed.

Phonebook

Menu	Description
Search for contacts	Search for contact information stored in Phonebook.
Create contact	Add a new contact to Phonebook.
Groups	Organise your contacts in caller groups.

Menu	Description
My namecard	Create a name card and send it to other people.
Copy all	Copy all of the contacts stored on the SIM card to the phone's memory, or vice versa.
Service number	View the SDN (Service Dialling Number) list assigned by your service provider, if supported by your USIM/SIM card.
Phonebook settings	Manage contacts in Phonebook or change the default settings for Phonebook.
Memory status	Check the number of contacts you have stored in the phone's memory and on the USIM/SIM card.

Bluetooth

Connect the phone wirelessly to other Bluetooth devices.

Browser

Menu	Description
Home	Connect your phone to the network and load the homepage of the wireless web service provider.
Enter URL	Enter a URL address and access the associated web page.
Bookmarks	Save URL addresses in order to quickly access web pages.
Saved pages	Access the list of pages you have saved while online.

Menu	Description
History	Access the list of pages you have accessed recently.
Advanced	Clear the cache or delete cookies, or change the browser display settings.
Browser settings	Select a connection profile to be used for accessing the wireless web.

Messages

Menu	Description
Create message	Create and send text, multimedia, and email messages.
Inbox	Access messages that you have received.

Menu	Description
Email inbox	Access emails that you have received.
Drafts	Access messages that you have saved to send at a later time.
Outbox	Access messages that the phone is attempting to send or has failed to send.
Sentbox	Access messages that you have sent.
Templates	Make and use templates of frequently used messages or passages.
Voice mail	Access your voicemail server.
Delete all	Delete messages in each message folder all at once.

Menu	Description
Message settings	Set up various options for using the messaging services.
SOS messages	Specify options for sending and receiving an SOS message. You can send an SOS message by pressing [\wedge / \vee] 4 times in Idle mode, with the keypad locked.
Memory status	Check the amount of memory currently in use in each message folder.

My files

Menu	Description
Images, Videos, Sounds, Other files	Access media files and other files stored in the phone's memory.

Menu	Description
Games & more	Access the embedded Java games and download Java applications.
Memory status	Check memory information for media items.

Applications

Menu	Description
Calendar	Keep track of your schedule.
Memo	Make memos for things that are important and manage them.
Task	Make a list of tasks you need to complete.
Voice recorder	Record voice memos and any other sounds.

Menu	Description
World clock	Set your local time zone and find out the current time in another part of the world.
Calculator	Perform arithmetic functions.
Converter	Do conversions, such as length and temperature.
Timer	Set a period of time for the phone to count down.
Stopwatch	Measure elapsed time.
SIM application toolkit	Use a variety of additional services offered by your service provider. This menu is available only if supported by your USIM/SIM card.


 
Menu	Description
Memory status	Check memory information for tasks and memos.

Alarms

Set alarms. The phone sounds a wake-up alarm even when the Silent profile is activated.

Settings

Menu	Description
Phone settings → Phone profiles	Change the sound settings of the phone for different events or situations.
Phone settings → Language	Select a language for the display text.

Menu	Description
Phone settings → Shortcuts	Use the Navigation keys as shortcuts to access specific menus directly from Idle mode.
Phone settings → Time & date	Change the time and date displayed on your phone.
Phone settings → Auto redial	Set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
Phone settings → Any key answer	Set whether a call is answered when you press any key, except for <Reject> and [].
Phone settings → Volume key in incoming call	Set how the phone reacts if you press and hold [ >] when a call comes in.

Menu	Description
Phone settings → USB connection	Select a USB mode that will be used when you connect your phone to a PC or printer via USB interface.
Display settings → Main display	Select a display style for the phone screen.
Display settings → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Display settings → Keypad light	Set how the phone controls the use of the keypad light.
Display settings → Dialling display	Customise the settings for the display while dialling.

Menu	Description
Display settings → Show caller ID	Set the phone to display missed call notifications with the most recently missed caller's information.
Message settings	Change the default settings for using the message services.
Call settings	Access network services for call functions.
Phonebook settings	Change the settings for using phonebook.
Network settings → Select network	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network settings → Network mode	Select the network you use.

Menu	Description
Network settings → Connections	Create and customise the profiles containing the settings for connecting your phone to the network.
Network settings → Browser settings	Select a connection profile to be used for accessing the wireless web.
Network settings → Streaming settings	Select a connection profile to be used for accessing a streaming server.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security → SIM lock	Set the phone to work only with the current USIM/SIM card by assigning a SIM lock password.

Menu	Description
Security → PIN lock	Activate your PIN to protect your USIM/SIM card against unauthorised use.
Security → Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your USIM/SIM card.
Security → Change phone password	Change the phone password.
Security → Privacy lock	Lock access to messages, files, call logs, or contacts.
Security → Change PIN code	Change the PIN.
Security → Change PIN2 code	Change the PIN2.

Menu	Description
Security → Mobile tracker	Set the phone to send the preset tracking message to your family or friends when someone tries to use your phone with another USIM/SIM card. This feature may be unavailable due to certain features supported by your service provider.
Memory settings	Manage memory of your phone and memory card.
Master reset	Reset the phone's settings you have changed.
Phone information	Check your phone's ID and version information.

Health and safety information

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.¹

1. The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

The highest SAR value for this model phone was 0.899W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the service provider.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0° C (32° F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [☞].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.

- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Declaration of Conformity (R&TTE)

We,

Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone : SGH-F500

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001+A11:2004
EMC	EN 301 489- 01 V1.5.1 (11-2004)
	EN 301 489- 07 V1.2.1 (08-2002)
	EN 301 489- 17 V1.2.1 (08-2002)
	EN 301 489- 24 V1.2.1 (11-2002)
SAR	EN 50360 : 2001
	EN 50361 : 2001
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.6.1 (11-2004)
	EN 301 908- 1 V2.2.1 (10-2003)
	EN 301 908- 2 V2.2.1 (10-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex^[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK[®]
Identification mark: 0168**

The technical documentation kept at :

Samsung Electronics QA Lab.**CE 0168**which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 8GG, UK[®]

2007.04. 12

(place and date of issue)

**Yong-Sang Park / S. Manager**

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-13753A
English (EU). 04/2007. Rev. 1.0