

- \* Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- \* Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.: GH68-08601A  
English. 02/2006. Rev. 1.0



# SGH-P300

## User's Guide





# Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

## Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

## Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

## Interference

All wireless phones may be subject to interference, which could affect their performance.

## Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


## Water resistance

Your phone is not water-resistant. Keep it dry.

## Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## Emergency calls

Key in the emergency number for your present location, then press .

## Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

## Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

## Qualified service

Only qualified service personnel may repair your phone.






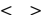 
For more detailed safety information, see "Health and safety information" on page 83.



# About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you can get more information on the referenced page.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
-  Indicates a key on the phone. For example, [  ].
-  Indicates a soft key, whose function is displayed on the phone screen. For example, <Menu>



- **Camera and camcorder**  
Use the camera module on your phone to take a photo or record a video.

## *Special features of your phone*



- **MP3 player**  
Play MP3 music files using your phone as an MP3 player.



- **Bluetooth**  
Transfer media files and personal data and connect to other devices using free, wireless Bluetooth technology.



- **Get personal with photo caller ID**

See who's calling you when their very own photo displays.



- **Name card**

Create name cards with your number and profile. Whenever introducing yourself to others, use this convenient electronic name card.



- **Web browser**

Access the wireless web to get current information and up-to-the-minute a wide variety of media content.

- **Multimedia Message Service (MMS)**

Send and receive MMS messages with a combination of text, image, video, and audio.

- **E-mail**

Send and receive e-mails with image, video, and audio attachments.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Calendar**

Keep track of your daily, weekly, and monthly schedule.



- **Voice recorder**

Record memos or sounds.

# Contents

## **Unpack 6**

*Make sure you have each item*

## **Your phone 6**

*Buttons, features, and locations*

## **Get started 7**

*First steps to operating your phone*

Install and charge the phone .....	7
Power on or off .....	8
Keys and display .....	9
Access menu functions .....	11
Customise your phone .....	12
Make/Answer calls .....	14
Use the leather case .....	14

## **Step outside the phone 15**

*Begin with your camera, MP3 player, web, and other special features*

Use camera .....	15
------------------	----

Play MP3s .....	16
Browse the web .....	17
Use Phonebook .....	18
Send messages .....	19
View messages .....	21
Use Bluetooth .....	22

## **Enter text 23**

*AB, T9, Number, and Symbol mode*

## **Call functions 25**

*Advanced calling features*

## **Menu functions 29**

*All menu options listed*

## **Solve problems 81**

*Help and personal needs*

## **Health and safety information 83**

## **Index 90**

## Overview of menu functions

To access Menu mode, press <Menu> in Idle mode.

### 1 Call records ▶ p.29

- 1 Current contacts ▶ p.29
- 2 Missed calls ▶ p.30
- 3 Dialed calls ▶ p.30
- 4 Received calls ▶ p.30
- 5 Delete all ▶ p.30
- 6 Call time ▶ p.30
- 7 Call cost\* ▶ p.31

### 2 Phonebook ▶ p.31

- 1 Contact list ▶ p.31
- 2 Add new contact ▶ p.32
- 3 Group ▶ p.33
- 4 Speed dial ▶ p.33
- 5 My namecard ▶ p.34
- 6 Own number ▶ p.34
- 7 Management ▶ p.35
- 8 Service number\* ▶ p.35

### 3 Applications ▶ p.35

- 1 Java world ▶ p.35
- 2 MP3 player ▶ p.36
- 3 Voice recorder ▶ p.38
- 4 World time ▶ p.39
- 5 Alarm ▶ p.39
- 6 PIM sync ▶ p.40
- 7 Calculator ▶ p.41
- 8 Converter ▶ p.41
- 9 Timer ▶ p.42
- 0 Stopwatch ▶ p.42
- \* SIM AT\* ▶ p.42

### 4 Browser ▶ p.43

- 1 Home ▶ p.43
- 2 Bookmarks ▶ p.44
- 3 http:// ▶ p.44
- 4 WAP profile ▶ p.44
- 5 Clear cache ▶ p.44

### 5 Messages ▶ p.45

- 1 Create message ▶ p.45
- 2 My messages ▶ p.47
- 3 Templates ▶ p.52
- 4 Delete all ▶ p.52
- 5 Settings ▶ p.52
- 6 Memory status ▶ p.57

### 6 File manager ▶ p.57

- 1 Images ▶ p.57
- 2 Videos ▶ p.58
- 3 Music ▶ p.59
- 4 Sounds ▶ p.59
- 5 Other files ▶ p.60
- 6 Memory status ▶ p.60

### 7 Calendar ▶ p.60

### 8 Camera ▶ p.64

### 9 Settings ▶ p.69

- 1 Time & Date ▶ p.69
- 2 Phone settings ▶ p.70
- 3 Display settings ▶ p.71
- 4 Sound settings ▶ p.72
- 5 Network services ▶ p.73
- 6 Bluetooth ▶ p.76
- 7 Security ▶ p.78
- 8 Connection settings ▶ p.79
- 9 Reset settings ▶ p.81

\* Shows only if supported by your SIM card.



## Unpack

Make sure you have each item



Phone



Travel adapter



Leather case



Battery





User's guide

You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

## Your phone

Buttons, features, and locations

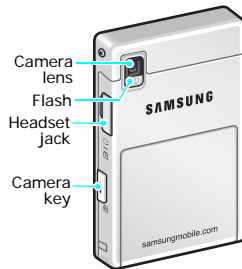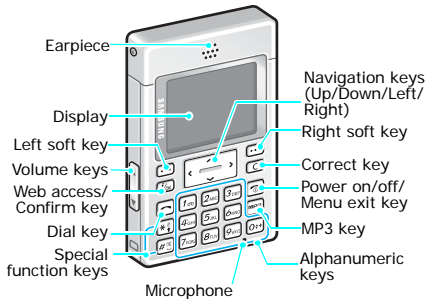

## Get started


First steps to operating your phone

### SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.


### Install and charge the phone

- 1** Remove the battery cover.

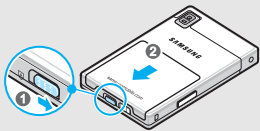

- If the phone is already on, first turn it off by holding [⏻].

- 2** Insert the SIM card.

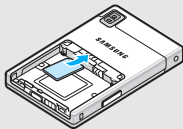


- Make sure that the gold-coloured contacts on the card face down into the phone.


- 3** Install the battery.




- 4** Replace the cover.

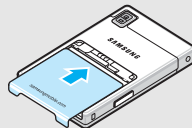

- 5** Lock the cover.

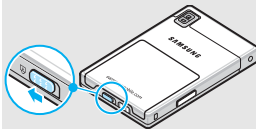


- 6** Plug the travel adapter into the phone.

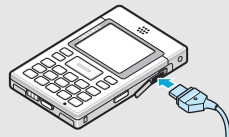

- 7** Plug the adapter into a standard AC wall outlet.


8 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

9 Remove the adapter from the phone.

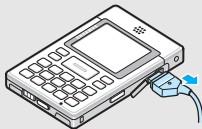

### Low battery indicator

When the battery is low:


- a warning tone sounds,
- the low battery message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


## Power on or off

### Switch on

Do not turn on the phone when mobile phone use is prohibited.


1. Press and hold [- 2. If necessary, enter the PIN and press <OK>.

### Switch off

Press and hold [

### Keypad lock



 



You can lock the keypad to prevent accidental key presses from affecting phone operations.





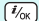


In Idle mode, press and hold [

You can also set the length of time that elapses before the keypad locks automatically. ► p. 70

## Keys and display


### Keys

	Perform the function indicated on the bottom line of the display.
	In Idle mode, access your favourite menus directly. ► p. 70 In Menu mode, scroll through menu options.
	In Idle mode, launch the web browser. In Menu mode, select the highlighted menu option or confirm input.
	Delete characters from the display.
	Make or answer a call. In Idle mode, retrieve the recent numbers dialled, missed, or received.
	End a call. Press and hold to switch the phone on or off. In Menu mode, cancel input and return the phone to Idle mode.

	In Idle mode, press and hold to access the <b>MP3 player</b> menu.
 ⋮ 	Enter numbers, letters, and some special characters. In Idle mode, press and hold [1] to access your voicemail server. Press and hold [0] to enter an international call prefix.
 	Enter special characters. In Idle mode, press and hold [#] to activate or deactivate Quiet mode. Press and hold [*] to enter a pause between numbers.
	Adjust the phone volume. In Idle mode, adjust the keypad tone volume.
	In Idle mode, press and hold to turn on the camera. In Camera mode, take a photo or record a video.

## Display

### Layout

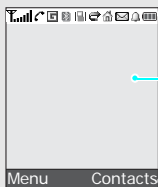

**Icons**  
display various icons.

**Text and graphics**  
display messages,  
instructions, and  
information you enter.

**Soft key function  
indicators**  
show the current functions  
assigned to the soft keys.

### Icons\*

- Received signal strength
- Call in progress
- Out of your service area; you cannot make or receive a call
- GPRS network
- Roaming network
- New message
- New e-mail
- New voicemail


- Call diverting feature active
- Home Zone, if registered for the appropriate service
- Office Zone, if registered for the appropriate service
- Bluetooth feature active
- Connected to hand-free kit or headset
- Synchronised with PC
- Alarm set
- Call ringer set to vibrate
- Quiet mode (Vibration)
- Quiet mode (Mute)
- Mute mode, during a call
- Battery power level

\* Depending on your country or service provider, the icons shown on the display may vary.

## Access menu functions

### Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

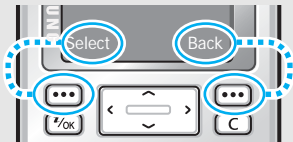

Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

### Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>**, **<OK>**, or [\*/OK] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods.
  - Press **<Back>** to move up one level.
  - Press [⏪] to return to Idle mode.

### Use shortcuts

Press the number key corresponding to the option you want.

## Customise your phone

### Display language

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

### Call ringer melody

1. In Idle mode, press <Menu> and select **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
2. Select an sound category.
3. Select an sound.
4. Press <Save>.

### Idle mode wallpaper

You can set wallpaper for the idle screen on the display.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Wallpaper** → **Wallpaper image**.
2. Select an image category.
3. Select an image.
4. Press <Select>.
5. Press <Save>.

### Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

## Menu shortcuts

You can set the Navigation keys as shortcuts to access your favourite menus.

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Short cut**.
2. Select a key.
3. Select a menu to be assigned to the key.

## Quiet mode

You can switch the phone to Quiet mode to avoid disturbing other people.

Press and hold [#] in Idle mode.

## Phone lock



You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.

1. In Idle mode, press <**Menu**> and select **Settings** → **Security** → **Change password**.
2. Enter the default password, **00000000**, and press <**OK**>.
3. Enter a new 4- to 8-digit password and press <**OK**>.
4. Enter the new password again and press <**OK**>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <**OK**>.





## Make/Answer calls

### Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [  ].
3. To end the call, press [  ].

### Answer a call

1. When the phone is ringing, press [  ].
2. To end the call, press [  ].

### Adjust the volume during a call

Press [  /  ].


## Use the leather case

The portable leather case, specially designed for your phone, has an internal battery so that you don't need to carry an extra battery. When you charge the phone with the leather case, you can charge both batteries at once.

- The leather case's battery may be bent or damaged by careless handling of the case. Be especially careful not to sit down with the leather case on a back pocket.
- Always keep the leather case dry. Humidity may deform it's original shape.

### Insert the phone


Slide the phone down into place. The lock will fasten automatically.

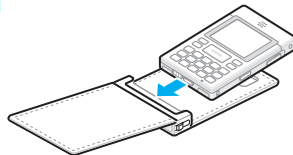

---

## Remove the phone

Push the lock on both slide and the slide the phone up.

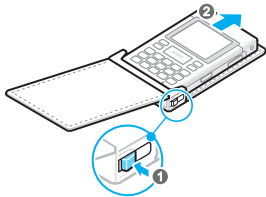

## Step outside the phone

*Begin with your camera, MP3 player, web, and other special features*

### Use camera

---

#### Take a photo

1. In Idle mode, press and hold [] to turn on the camera.
2. Adjust the image to be captured.
3. Press [] to take a photo. The photo is saved automatically.
4. Press <**Preview**> to take another photo.

---

#### View a photo

1. In Idle mode, press <**Menu**> and select **File manager** → **Images** → **Photos**.
2. Select the photo you want.

### Record a video

1. In Idle mode, press and hold [**Ⓜ**] to turn on the camera.
2. Press [**1**] to switch to Record mode.
3. Press [**Ⓜ**] to start recording.
4. Press [**Ⓜ**] to stop recording. The video is saved automatically.
5. Press <**Preview**> to record another video.

### Play a video

1. In Idle mode, press <**Menu**> and select **File manager** → **Videos** → **Video clips**.
2. Select the video you want.

## Play MP3s

### Copy MP3 files to the phone

Use these methods:

- Download from the wireless web ► p. 43
- Download from a computer using the optional Samsung PC Studio ► Samsung PC Studio User's Guide
- Receive via Bluetooth ► p. 76

### Create a play list

1. In Idle mode, press and hold [**MP3**].
2. Press <**Options**> and select **Add to playlist** → **Add all** or **Add files**.
3. For **Add files**, press [**Ⓜ**] to select the files you want and press <**Select**>.
4. Press <**Back**> to return to the MP3 player screen.

## Play MP3 file

1. From the MP3 player screen, press [  $\bar{i}/\text{OK}$  ].
2. During playback, use the following keys:
  - Up: pauses or resumes playback.
  - Left: moves back to the previous file.
  - Right: skips to the next file.
  - $\blacktriangle/\blacktriangledown$ : adjusts the volume.
  - Down: stops playback.

## Browse the web

Using a built-in web browser, you can get easy access to the wireless web to get a variety of up-to-date services and information and to enjoy downloads of web content.

### Launch the web browser

In Idle mode, press [  $\bar{i}/\text{OK}$  ].

### Navigate the browser

- To scroll through browser items, press [Up] or [Down].
- To select an item, press <Options> and select **Select**.
- To return to the previous page, press <Options> and select **Back**.
- To access browser options, press <Menu>.

## Use Phonebook

---

### Add an entry

#### To the phone's memory:

1. In Idle mode, enter a phone number and press <**Options**>.
2. Select **Save contact** → **Phone** → a number type.
3. Specify contact information: First name, Last name, Mobile, Home, Office, Fax, Other, Email, Caller ID, Ringtone, Group, and Memo.
4. Press <**Save**> to save the entry.


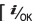 
---

#### To the SIM card:

1. In Idle mode, enter a phone number and press <**Options**>.
2. Select **Save contact** → **SIM**.
3. Enter a name.
4. Press <**Save**> to save the entry.

---

### Find an entry

1. In Idle mode, press <**Contacts**>.
2. Select an entry.
3. Scroll to a number and press [  ] to dial, or press [  ] to edit contact information.

### Create and send a name card

1. In Idle mode, press <Menu> and select **Phonebook** → **My namecard**.
2. Specify your contact information.
3. Press <Save> to save the name card.
4. To send the name card to other people, press <Options> and select **Send** → a sending method.

## Send messages

### Send a text message (SMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Text message**.
2. Enter the message text.
3. Press <Options> and select **Save and send** or **Send only**.
4. Enter destination numbers.
5. Press [  $\#$ /OK ] to send the message.

### Send a multimedia message (MMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Multimedia message**.
2. Select **Subject**.
3. Enter the message subject and press [  $\#$ /OK ].

**Send a multimedia message (MMS)**  
(continued)

4. Select **Image and video** or **Sound**.
5. For **Image and video**, select **Add image** or **Add video** and add an image or a video clip. For **Sound**, select **Add sound** and add a sound clip.
6. Select **Message**.
7. Enter the message text and press [  $\frac{\#}{OK}$  ].
8. Press <**Options**> and select **Send**.
9. Enter destination numbers or addresses.
10. Press [  $\frac{\#}{OK}$  ] to send the message.

**Send an e-mail**

1. In Idle mode, press <**Menu**> and select **Messages** → **Create message** → **Email**.
2. Select **Subject**.
3. Enter the e-mail subject and press [  $\frac{\#}{OK}$  ].
4. Select **Message**.
5. Enter the e-mail text and press [  $\frac{\#}{OK}$  ].
6. Select **File attached**.
7. Add image, video, sound, music files, or document files.
8. Press <**Options**> and select **Send**.
9. Enter e-mail addresses.
10. Press [  $\frac{\#}{OK}$  ] to send the e-mail.

## View messages

---

### View a text message

When a notification appears:

1. Press <**View**>.
2. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select an SMS message (✉).

### View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Press <**Options**> and select **Retrieve**.
3. Select the message from the Inbox.

---

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select the MMS message (✉).

### View an e-mail

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Email box**.
2. Select an account.
3. Press <**Yes**> to download new e-mails or headers.
4. Select an e-mail or a header.
5. If you selected a header, press <**Options**> and select **Retrieve**.



## Use Bluetooth

Your phone is equipped with Bluetooth technology which enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

### Turn on Bluetooth

In Idle mode, press <Menu> and select **Settings** → **Bluetooth** → **Activation** → **On**.

### Search for and pair with a Bluetooth device

1. In Idle mode, press <Menu> and select **Settings** → **Bluetooth** → **My devices** → **Search for new devices**.
2. Select a device.
3. Enter a Bluetooth PIN code or the other device's Bluetooth PIN code, if it has one, and press <OK>.

When the owner of the other device enters the same code, pairing is complete.

### Send data

1. Access an application, **Phonebook**, **File manager**, or **Calendar**.
2. Scroll to an item.
3. Press <Options> and select **Send (via)** → **Bluetooth**.
4. Select a device.
5. If necessary, enter the Bluetooth PIN and press <OK>.

### Receive data

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If necessary, press <Yes> to confirm the reception.

## Enter text

*AB, T9, Number, and Symbol mode*

You can enter text for some features, such as messaging, Phonebook, or Calendar, using AB mode, T9 mode, Number mode, and Symbol mode.

### Changing the text input mode

The text input mode indicator appears when the cursor is in a text field.

- Press and hold [**\***] to switch between T9 (**T9Ab**) and AB (**ABAb**) modes. Depending on your country, you may also be able to access an input mode for your specific language.
- Press [**\***] to change case or switch to Number (**123**) mode.
- Press and hold [**#**] to switch to Symbol mode.

### Using AB mode

Press the appropriate key until the character you want appears on the screen.

Keys	Characters in order displayed	
	Upper case	Lower case
1	. , - ? ! @ : ( ) / _ 1	
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 Λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	Space + = < > € £ \$ % & ¥ ¤ 0	

(Creating an SMS message with uni-code encoding)

## Tips for using AB mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

## Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

### Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.  
For example, press [4], [3], [5], [5], and [6] to enter *HELLO* in T9 mode.  
T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed. For example, *OF* and *ME* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

### Tips for using T9 mode

- Press [1] to enter periods or apostrophes automatically.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

### Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.

2. Press **[0]** to display alternative words for your key presses. When there are no more alternative words, **Add** appears on the bottom line.
3. Press **<Add>**.
4. Enter the word you want using AB mode and press **<OK>**.

## Using Number mode

Number mode enables you to enter numbers.

Press the keys corresponding to the digits you want.

## Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the entered symbols	<b>[C]</b> .
insert the symbols	<b>&lt;OK&gt;</b> .

## Call functions

*Advanced calling features*

### Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [**↩**].

- Press **[C]** to clear the last digit or press and hold **[C]** to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold **[\*]** to enter a pause between numbers.

### Making an international call

1. In Idle mode, press and hold **[0]**. The **+** character appears.
2. Enter the country code, area code, and phone number, then press [**↩**].

### Redialling recent numbers

1. In Idle mode, press [**↩**] to display the list of recent numbers.

2. Scroll to the number you want and press [].

### Making a call from Phonebook

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook. ▶ p. 31

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ▶ p. 33

You can quickly dial a number from the SIM card using its location number assigned when stored.

1. In Idle mode, enter a location number and press [#].
2. Press [Left] or [Right] to scroll through other numbers.
3. Press <Dial> or [] to dial the number you want.

### Ending a call

Press [].

## Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <Accept> or [] to answer the call.

### Tips for answering a call

- When **Anykey answer** is active, you can press any key, except for <Reject> or []. ▶ p. 71
- Press <Reject> or [] to reject a call.
- Press and hold [] to reject a call or mute the ringer, depending on the **Volume key** setting. ▶ p. 70

## Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <View>.
2. If necessary, scroll through the missed calls.
3. Press [] to dial the number you want.

## Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the right side of the phone. The button on the headset works as listed below:

To	Press
redial the last call	and hold the button.
answer a call	the button.
end a call	the button.

## Options during a call

You can access a number of functions during a call.

### Adjusting the volume during a call

Use [▲/▼] to adjust the earpiece volume during a call.


Press [▲] to increase the volume level and [▼] to decrease the volume level.

## Placing a call on hold/Retrieving

Press <**Hold**> or <**Retrieve**> to place a call on hold or retrieve the call.


## Making a second call


You can make another call if your network supports it.

1. Press <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Swap**> to switch between the calls.
4. Press <**Options**> and select **End held call** to end the call on hold.
5. To end the current call, press [].

## Answering a second call


You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ► p. 74

1. Press [] to answer the call. The first call is automatically put on hold.
2. Press <**Swap**> to switch between the calls.

3. Press <**Options**> and select **End held call** to end the call on hold.
4. To end the current call, press [].

### Using the Speakerphone feature

Use your phone as a speaker phone to talk and listen with the phone a short distance away.

Press [] to activate the Speakerphone feature.  
Press the key again to switch back to the earpiece.

### Using In-call options

Press <**Options**> to access the following options during a call:

- **Speaker on/Normal:** turn on the Speakerphone feature or switch back to Normal mode.
- **Menu:** access the phone's menu functions.
- **Mute/Unmute:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.

- **Mute keys/Send keys:** switch the key tones on or off.



To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Phonebook:** access the contact list.
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to 5 people on a multi-party call.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other, but you are disconnected from the call.

- **End held call:** disconnect the call currently on hold.
- **Select one:** select one of the following options during a multi-party call:

**Private:** have a private conversation with one multi-party call participant. The other participants can converse with each other. After the private conversation, select Join to return to the multi-party call.

**Remove:** disconnect one multi-party call participant.

## *Menu functions*

*All menu options listed*

### **Call records** *(Menu 1)*

Use this menu to view the calls you have dialled, received, or missed, the length of your calls, and the cost of your calls, if your SIM card supports.

To access this menu, press <**Menu**> in Idle mode and select **Call records**.

### **Current contacts** *(Menu 1.1)*

---

This menu displays the most recent calls dialled, received, or missed.

#### **Accessing a call record**

1. Press [Left] or [Right] to move to another call type.
2. Press [Up] or [Down] to scroll through the call list.



## Menu functions

3. Press [  $\frac{1}{2}$ /**OK** ] to view the details of a call, or [  $\curvearrowright$  ] to dial a number.

### Using call record options

While viewing the call details, press <**Options**> to access the following options:

- **Paste**: edit the number to dial or save in Phonebook.
- **Save contact**: save the number to Phonebook.
- **Send message**: send an SMS or MMS message to the selected number.
- **Delete**: delete the selected call record or all records.

### Missed calls *(Menu 1.2)*

---

This menu displays the most recent calls you did not answer.

### Dialled calls *(Menu 1.3)*

---

This menu displays the most recent calls you have dialled.

### Received calls *(Menu 1.4)*

---

This menu displays the most recent calls you have received.

### Delete all *(Menu 1.5)*

---

Use this menu to delete all of the records in each call type.

1. Press [  $\frac{1}{2}$ /**OK** ] to select the call types to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

### Call time *(Menu 1.6)*

---

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time**: check the length of your last call.
- **Total sent**: check the total length of all the calls you have dialled.
- **Total received**: check the total length of all the calls you have received.

To reset the call timers, press <**Reset**>. You need to enter the phone password.

- The password is preset to **00000000**. You can change this password. ▶ p. 79

## Call cost *(Menu 1.7)*

---

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.

- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

## Phonebook *(Menu 2)*

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.



To access this menu, press <**Menu**> in Idle mode and select **Phonebook**.

### Contact list *(Menu 2.1)*

---

Use this menu to search for numbers in Phonebook.

#### Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name from the list.
3. Scroll to a number and press [  ] to dial, or press [  ] edit contact information.

### Using Phonebook options

While viewing the contact details, press <**Options**> to access the following options:

- **Edit**: edit contact information.
- **Send message**: send an SMS or MMS message to the selected number, or an e-mail to the selected address.
- **Copy to**: copy the contact to the phone's memory or the SIM card.
- **Send via**: send the contact via SMS, MMS, e-mail, or Bluetooth.
- **Delete**: delete the selected contact.

### Add new contact *(Menu 2.2)*

---

Use this menu to add a new contact to Phonebook.

#### Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
  - **First name/Last name**: assign a name.

- **Mobile/Home/Office/Fax/Other**: add a number in any category.
- **Email**: assign an e-mail address.
- **Caller ID**: assign an image to alert you to a call from the person.
- **Ringtone**: assign a ringtone to alert you to a call from the person.
- **Group**: assign the number to a caller group.
- **Memo**: add a memo about the person.

3. Press <**Save**> to save the contact.

#### Storing a number on the SIM card

1. Select **SIM**.
2. Enter information about the contact.
  - **Name**: assign a name.
  - **Phone number**: add a number.
  - **Location**: assign a location number.



If you assign a caller ID image, ringtone, or group, the contact must be saved to the phone's memory.

3. Press <**Save**> to save the contact.

## Group (Menu 2.3)

---

Use this menu to organise your contacts in caller groups.

### Creating a new caller group

1. Press <**Options**> and select **Add**.
2. Enter a name for the group.
3. Select the caller ID line and set an image.
4. Select the ringtone line and set a melody.
5. Press <**Save**> to save the group.

### Adding members to a caller group

1. Select a group.
2. Press <**Add**>.
3. Press [  $\frac{1}{OK}$  ] to select the contacts to be added.
4. Press <**Select**>.

### Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View**: display the members of the selected group.
- **Add**: add a new group.
- **Edit**: change the group properties.
- **Send message**: send an SMS, MMS, or e-mail message to the group members you want.
- **Delete**: delete the selected group or all groups. Group members, however, are not deleted from Phonebook.

## Speed dial (Menu 2.4)

---

Use this menu to assign a speed dial number (2 to 9) for 8 of your most frequently called numbers.

### Assigning speed dial numbers

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact from the contact list.
3. Select a number, if the contact has more than one number.

## Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add:** assign a number to an unassigned key.
- **View:** check the name and number assigned to a key.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

## Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

## My namecard *(Menu 2.5)*

---

Use this menu to create a name card and send it to other people.

## Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ► p. 32

## Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit:** edit the name card.
- **Send:** send the name card via SMS, MMS, e-mail, or Bluetooth.
- **Exchange contact details:** exchange name cards with another person via Bluetooth.
- **Delete:** delete the name card.

## Own number *(Menu 2.6)*

---

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

## Management *(Menu 2.7)*

---


Use this menu to manage Phonebook.

- **Saving location:** select a default memory location to save contacts. If you select **Ask on saving**, the phone will ask you to select a memory location when saving a number.
- **Copy all to phone:** copy all of the contacts stored on the SIM card to the phone's memory, or vice versa.
- **Delete all:** delete all of the contacts from your phone's memory, your SIM card, or both.
- **Memory status:** check the number of contacts you have stored in Phonebook.

## Service number *(Menu 2.8)*

---

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and directory enquiries. This menu is available if your SIM card supports SDN.

1. Scroll to the number you want and press **<View>**.
2. Press **<Dial>** or [].

## Applications *(Menu 3)*

Use this menu to play Java games, play MP3 music files, or to use convenient features, such as voice recorder, alarm clock, calculator, converter, and stopwatch. You can also synchronise Phonebook or calendar data in the phone's memory with a computer.

To access this menu, press **<Menu>** in Idle mode and select **Applications**.

### Java world *(Menu 3.1)*

---

Use this menu to access the embedded Java games and downloaded Java applications.

### Using Java application options

From the Java world screen, select **Downloads** and press **<Options>** to access the following options:

- **Launch:** launch the selected application.
- **Delete:** delete the selected application or all applications, except for the embedded ones.
- **Properties:** access the application properties.

- **Upgrade:** upgrade the application to the latest version.
- **Protection:** protect the application from being deleted.
- **Send information:** send the URL containing the application via SMS.

### Accessing Java settings

You can select a connection profile for accessing Java services.

From the **Java world** menu, select **Settings** and then a profile.

You can edit a profile using the **Connection settings** menu. ▶ p. 79

### Checking memory status

You can view the amount of total memory for the Java applications as well as the amount of available and used memory. You can also view the number of downloaded games.

From the **Java world** menu, select **Memory status**.

### MP3 player (Menu 3.2)

---

Use this menu to enjoy music. First, you need to save MP3 files into your phone's memory.

#### Downloading or receiving music files

Use these methods to save MP3 files to your phone's memory:

- Download from the wireless web ▶ p. 43
- Download from a computer using the optional Samsung PC Studio ▶ Samsung PC Studio User's Guide
- Via an active Bluetooth connection ▶ p. 78

The downloaded or received files are stored in the **Music** folder. ▶ p. 59

#### Creating a play list

1. From the MP3 player screen, press <**Options**> and select **Add to playlist** → **Add all** or **Add files**.
2. For **Add files**, press [  $\frac{1}{\text{OK}}$  ] to select the files to be added and press <**Select**>.
3. Press <**Back**> to return to the MP3 player screen.

## Playing music files

1. From the MP3 player screen, press <**Options**> and select **Play**.
2. Select **Phone** to use the phone speaker.  
Select **A/V headset** to use a Bluetooth headset and then search for and connect to the headset.

During playback, use the following keys:

Keys	Function
Up	Pauses or resumes playback.
Left	Moves back to the previous file.
Right	Skips to the next file.
Down	Stops playback.
▲/▼	Adjusts the volume level.
<b>1</b>	Turns the 3D sound on or off.
<b>2</b>	Changes the skin type.
<b>3</b>	Changes the repeat mode
<b>4</b>	Changes the equalizer mode

Keys	Function
<b>6</b>	Turns Shuffle mode on or off.

## Using MP3 player options

From the MP3 player screen, press <**Options**> to access the following options:

- **Play /Pause**: begin or pause playback.
- **Open playlist**: access the current play list.
- **Go to music**: access the **Music** folder.
- **Send via**: send the current file via e-mail or Bluetooth.
- **Set as**: set the file as your ringtone or as a caller alert melody for a Phonebook entry.
- **Remove from playlist**: remove the selected file from the play list.
- **Settings**: change the default settings for playing music files.

**Repeat mode**: select a repeat mode.

**Shuffle**: set the MP3 player to play music at random.

**Equalizer**: select an equalizer setting.



**3D sound:** turn the 3D sound on or off.

**Skin:** select a skin type.

**Volume:** select a volume level.

- **Properties:** access the file properties.

### Accessing the play list

From the MP3 player screen, press <**Options**> and select **Open playlist**.

Press <**Options**> to access the following options:

- **Play:** play the currently selected file.
- **Add to playlist:** add files to the play list.
- **Change order:** move the selected file to the position you want within the play list.
- **Remove:** remove the selected file or all files from the play list.
- **Properties:** access the file properties.

### Voice recorder *(Menu 3.3)*

Use this menu to record voice memos. A voice memo can be up to one hour long.

### Recording a voice memo

1. Press [Up] to start recording.
2. Speak into the microphone.  
Press [Up] to pause or resume the recording.
3. Press <**Stop**> or [Down] to end recording. The voice memo is saved automatically.
4. Press [Up] to review the voice memo.

### Playing a voice memo

1. From the Voice recorder screen, press <**Options**> and select **Go to voice recorder files**.
2. Select a voice memo.

During playback, use the following keys:

Keys	Function
Up	Pauses or resumes playback.
Left	Moves backward in a memo.
Right	Moves forward in a memo.
▲/▼	Adjusts the volume.

Keys	Function
Down	Stops playback.

## Changing the recording mode

You can change the recording mode of the voice recorder. Depending on this setting, the maximum recording time is determined. Before recording a memo, press <**Options**> and select **Settings** → a recording mode:

- **Limit for multimedia message:** record a voice memo for adding to an MMS message.
- **Limit for email:** record a voice memo for adding to an e-mail.
- **Maximum 1 hour:** record a voice memo for up to one hour.

## World time *(Menu 3.4)*

Use this menu to set your local time zone and find out what time it is in another part of the world.

### Viewing world time

1. From the world map, press [Down].

2. Press [Left] or [Right] to scroll to the city you want. As the time line moves, the time and date of the given zone display.
3. Press [  $\frac{1}{OK}$  ] to save the city as your local time zone.

## Applying daylight savings time

1. From the world map, press <**Options**> and select **Set daylight saving time**.
2. Press [  $\frac{1}{OK}$  ] to select the time zones you want.
3. Press <**Save**>.

## Alarm *(Menu 3.5)*

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake-up alarm is not affected by your sound setting.

### Setting an alarm

1. Select the type of alarm.
2. Set each alarm option.
  - **Alarm:** activate the alarm.
  - **Alarm time:** enter the time for the alarm to ring.

- **AM/PM:** select **AM** or **PM** in 12-hour format.
  - **Repeat:** select a repeat unit.
  - **Alarm tone:** select an alarm tone.
3. Press **<Save>**.

### Stopping an alarm

- For a non-wake-up alarm, press any key.
- For a wake-up call alarm, press **<Confirm>** or [**⏏**].  
Press any key, except **<Confirm>** and [**⏏**], and cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

### Setting the alarm to ring even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone is switched on and sounds the alarm.

### PIM sync *(Menu 3.6)*

---

Use this menu to synchronise personal data with corresponding PC applications via the optional WideSync program.

### Creating a synchronisation profile

1. Press **<Add>**.
2. Specify the following information for the profile:
  - **Profile name:** enter the profile name.
  - **Sync category:** select the applications you want to synchronise.
  - **Sync type:** select a synchronisation type.
  - **Sync protocol:** select a connection method.
3. Press **<Save>** to save the profile.

### Starting synchronisation

1. Make sure that your PC has MS Outlook and the WideSync program installed, and the phone and the PC are connected by a USB cable or an active Bluetooth connection.
2. Open MS Outlook.
3. From the PIM sync screen, select a profile.
4. Press [**⏏**].

## Using synchronisation options

From the PIM sync screen, press <**Options**> to access the following options:

- **Start sync:** start a synchronisation for the selected profile.
- **View result:** show the result of the last synchronisation.
- **New sync profile:** add a new profile.
- **Edit sync profile:** change the properties of the profile.
- **Delete:** delete the selected profile or all profiles.

## Calculator *(Menu 3.7)*

---

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

1. Enter the first number.
  - Press the <.O> to insert a decimal point or bracket.

- Press [ $\ast$ ] or [#] to move the cursor.
2. Press one of the Navigation keys to access the math function you want.
  3. Enter the second number.
  4. Press [ $\frac{1}{OK}$ ] to view the result.
  5. If necessary, repeat from step 2 to continue the calculation.

## Converter *(Menu 3.8)*

---

Use this menu for common conversions, such as currency and temperature.

1. Select a converter.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted and press [Down].
  - Press [ $\ast$ ] to insert a decimal point.
  - Press [#] to change the temperature to above zero (+) or below zero (-).

## Menu functions

4. Press [Left] or [Right] to select the unit you want to convert to.

The equivalent value for the amount you entered displays.

- For the currency converter, you can view and set currency rates by pressing <**View rate**>.

### Timer (Menu 3.9)

---

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

#### Starting the timer

1. Press <**Set**>.
2. Enter the length of time you want to count down and press <**OK**>.
3. Press [  $\frac{1}{OK}$  ] to start counting down.

#### Stopping the timer

- Press any key when the timer rings.
- Press [  $\frac{1}{OK}$  ] on the Timer screen to stop the timer before it rings.

### Stopwatch (Menu 3.0)

---

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Press [  $\frac{1}{OK}$  ] to start the stopwatch.
2. Press [  $\frac{1}{OK}$  ] to check an interval. You can repeat this step for a total of 3 intervals.

### SIM AT (Menu 3.\*)

---

This menu is available if you use a SIM-AT card that supports SIM Application Tool kit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

## Browser *(Menu 4)*

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web. From the wireless web, you can access up-to-date information and a wide variety of media content, such as games, wallpapers, ringtones, and music files.

To access this menu, press <Menu> in Idle mode and select **Browser**.

## Home *(Menu 4.1)*

Use this menu to connect your phone to the network and load the homepage of the wireless web service provider. You can also press [  $\frac{1}{2}$ OK ] in Idle mode.

### Navigating the web browser

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	<Options> and select <b>Select</b> .

To	Press
return to the previous page	<Options> and select <b>Back</b> .

### Using page options


From any web page, press <Menu> to access the following options:

- **Bookmarks:** bookmark the current page or access the bookmark list.
- **Reload:** reload the current page with updated information.
- **Home:** return to the homepage.
- **Go to URL:** enter a URL address manually.
- **Show URL:** display the URL address of the current web page. You can also set the current page as the homepage for the web browser or a bookmark.
- **Clear cache:** clear the cache. A cache is a temporary memory that stores recently accessed web pages.
- **Inbox:** access push messages in the web browser.

## Menu functions

- **Show images:** display images on the current page.
- **Certificates:** access certificate information.

### Exiting the web browser

Press [  ] to exit the browser.

### Bookmarks *(Menu 4.2)*

---

Use this menu to save URL addresses in order to quickly access web pages.

#### Adding a bookmark

1. Select an empty location.
2. Enter a title for the bookmark and press [Down].
3. Enter a URL address and press <**Save**>.

#### Accessing a bookmarked page

Selecting a bookmark item launches the web browser and accesses the associated web page.

#### Using bookmark options

After saving an item, press <**Options**> to access the following options:

- **Go to URL:** access the bookmarked web page.
- **Edit:** edit the URL address and title of the bookmark.
- **Delete:** delete the selected bookmark or all bookmarks.

### http:// *(Menu 4.3)*

---

Use this menu to manually enter a URL address and access the associated web page.

### WAP profile *(Menu 4.4)*

---

Use this menu to select a connection profile to be used for accessing the wireless web. You can also add or edit a profile. ▶ p. 79

### Clear cache *(Menu 4.5)*

---

Use this menu to clear information stored in the cache.

## Messages *(Menu 5)*

Use the **Messages** menu to send and receive text messages, multimedia messages, and e-mails. You can also use push message, and cell broadcast message features.

To access this menu, press <**Menu**> in Idle mode and select **Messages**.

### Create message *(Menu 5.1)*

Use this menu to create and send SMS, MMS, or e-mail messages.

#### Text message *(Menu 5.1.1)*

Short Message Service (SMS) allows you to send or receive text messages that may include simple pictures, animated images, and melodies.

1. Enter your message.

- The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

2. Press <**Options**> to access the following options for creating a message:

- **Insert**: add a template, Phonebook entry, or bookmark.
- **Add image/Add animation/Add melody**: attach a picture, an animated image, or a melody.
- **Attach**: attach a name card or calendar data as a data format attachment.

3. When you have finished, press <**Options**> and select **Save and send** or **Send only**.

4. Enter a destination number.

To send the message to more than one recipient, fill in additional destination fields.

5. Press [  $\frac{1}{\text{OK}}$  ] to send the message.

#### Multimedia message *(Menu 5.1.2)*

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Select the **Subject** line.




2. Enter the message subject and press [  $\frac{1}{OK}$  ].
3. Select the **Image and video** or **Sound** line and add an image, a video, or a sound file.
  - The maximum size allowed for a message can differ, depending on your service provider.
  - Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.
4. Select the **Message** line.
5. Enter the message text and press [  $\frac{1}{OK}$  ].
6. Press <**Options**> to access the following options for editing the message:
  - **Edit**: edit the subject or text of your message.
  - **Change image/Change video/Change sound**: change an added item.
  - **Add page**: add pages. Move to each page by pressing [Left] or [Right].
  - **Delete page**: delete an added page.
  - **Edit page**: change the duration of page display or move the page forward.

- **Attach**: attach a name card or calendar data as a data format attachment.
  - **Clear subject/Clear message**: clear the subject or text.
  - **Remove media/Remove sound**: remove an added item.
7. When you have finished, press <**Options**> and select **Send**.
  8. Enter a phone number or an e-mail address.  
To send the message to more than one recipient, fill in additional destination fields.
  9. Press [  $\frac{1}{OK}$  ] to send the message.

### Email (Menu 5.1.3)

You can create and send e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile. ▶ p. 55

1. Select the **Subject** line.
2. Enter the subject of your e-mail and press [  $\frac{1}{OK}$  ].
3. Select the **Message** line.

4. Enter the e-mail text and press [  ].
5. Select **File attached** line and select one of the following options to add files:
  - **Add image/Add video/Add sound/Add music:** add media files stored in the phone's memory.
 


Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.
  - **Other files:** add document files stored in the **Other files** folder.
  - **Attach:** attach a name card or calendar data as a data format attachment.
6. Press <**Options**> to access the following options to edit the e-mail:
  - **Edit:** edit the subject or text.
  - **Remove subject/Remove message:** clear the subject or text.
  - **Remove attachment:** delete the selected attachment.

- **Remove all attachments:** delete all attachments.

7. When you have finished, press <**Options**> and select **Send**.

8. Enter an e-mail address.

To send the e-mail to more than one recipient, fill in additional destination fields.

9. Press [  ] to send the e-mail.

## **My messages** *(Menu 5.2)*

---


Use this menu to access messages you have received, sent, or failed to send.

### **Inbox** *(Menu 5.2.1)*









This folder stores all of the messages you have received, except for e-mails.

### **Viewing a message**

The following icons may appear on the message list to show the message type:

-  SMS
-  MMS

## Menu functions

-  MMS notification (  : Being retrieved,  : Failed to retrieve)
  -  Voicemail
  -  Push message from the web servers
  -  Configuration message, containing network parameters from the service provider
  -  CB (Cell Broadcast) message from your service provider
  -  Delivery report for your sent messages
- According to the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.
  - A ! icon next to a message means that a message is of high priority. A grey-coloured message icon is of low priority.

### Using message options

While viewing a message, press <**Options**> to access the following options:

#### SMS messages

- **Reply**: reply to the sender via SMS or MMS.

- **Forward**: forward the message to other people.
- **Delete**: delete the message.
- **Move to phone/Move to SIM**: move the message between the SIM card and the phone's memory.
- **Copy entry**: extract URLs, e-mail addresses, or phone numbers from the message.
- **Copy media**: save media content from the message to your phone's memory.
- **Protection**: protect the message from being deleted. You can protect only those messages stored in the phone's memory.

#### MMS messages/MMS notifications

- **Retrieve**: retrieve the MMS message from the MMS server.
- **Reply via SMS**: send a reply via SMS.
- **Reply via MMS to**: send a reply via MMS.
- **Forward**: forward the message to other people.
- **Delete**: delete the message.

- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Copy media:** save media content from the message to your phone's memory.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

### Configuration messages

- **Install:** apply the configuration specified in the message to your phone.
- **Copy entry:** extract the URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.

### Push messages

- **Go to URL:** connect to the URL specified in the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.

- **Protection:** protect the message from being deleted.

### CB messages

- **Save:** save the message to the phone's memory.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.

### Delivery reports

- **Copy entry:** extract URL, e-mail addresses, or phone numbers from the report.
- **Delete:** delete the report.
- **Protection:** protect the report from being deleted.

### Drafts *(Menu 5.2.2)*



This folder stores messages you have saved to send at a later time.

### Outbox *(Menu 5.2.3)*

This folder stores messages that the phone is attempting to send or has failed to send.

## Menu functions

The following icons are available to show the message status:

-  Being sent
-  Failed to send

While viewing a message, press <**Options**> to access the following options:

- **Send again:** retry to send the message.
- **Forward:** forward the e-mail to other people.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

### Sent (Menu 5.2.4)

This folder stores messages that you have sent.

While viewing a message, press <**Options**> to access the following options:

- **Forward:** forward the message to other people.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.

- **Delete:** delete the message.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.




### Email box (Menu 5.2.5)

This folder stores e-mails that you have received.

#### Viewing an e-mail

1. Select an e-mail account.
2. Press <**Yes**> when **Check for new email** displays, or press <**Options**> and select **Check for new email**. The phone checks the e-mail server and download new e-mails.

The following icons may appear on the list to show the e-mail status:

-  Retrieved from the server
-  Being retrieved
-  Failed to retrieve.



A ! icon next to a message means that a message is of high priority. A grey-coloured message icon is of low priority.

3. Select an e-mail or a header.

4. Press [▲/▼] to view other pages in the e-mail.
5. Press [\*] or [#] to view the previous or next e-mail.

### Using e-mail options

While viewing the e-mail or header, press <**Options**> to access the following options:

- **Retrieve:** retrieve the e-mail body from the e-mail server.
- **Reply:** send a reply to the sender or to all of the other recipients.
- **Forward:** forward the e-mail to other people.
- **Delete:** delete the e-mail.
- **Add to filtering list:** add the sender's e-mail address or subject to the Block list to reject e-mails from that address or containing that subject.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the e-mail.

- **Copy media:** save the attached files from the e-mail to your phone's memory.
- **Protection:** protect the e-mail from being deleted.
- **Properties:** access the e-mail properties.

### My folders *(Menu 5.2.6)*

Use this menu to create new folders and organise your messages.

#### Creating a new folder

1. Press <**Yes**>.
2. Enter a folder name and press <**OK**>.

#### Using folder options

On the folder list, press <**Options**> to access the following options:

- **Open:** open the selected folder.
- **Add folder:** add a new folder.
- **Rename folder:** change the folder name.
- **Delete:** delete the selected folder.

## **Templates** *(Menu 5.3)*

---

Use this create SMS templates with the sentences you use frequently so that you can retrieve and insert them when composing an SMS message.

### **Creating a template**

1. Select an empty location.
2. Enter a message and press <OK>.

### **Using template options**

From the template list, press <Options> to access the following options:

- **Edit**: edit the selected template.
- **Send message**: create and send a new message.
- **Delete**: delete the selected template.
- **Add new**: add a new template.

## **Delete all** *(Menu 5.4)*

---

Use this menu to delete messages in each message folder all at once.

1. Press [  $\frac{1}{2}$ /OK ] to select the message folders to be cleared.  
Pressing the key twice displays the message types so that you can specify the ones to be cleared.
2. Press <Delete>.
3. Press [  $\frac{1}{2}$ /OK ] to select the check box to delete protected messages, and then press <Yes>.
4. Press <Yes> to confirm the deletion.

## **Settings** *(Menu 5.5)*

---

Use this menu to set up various options for using the messaging service.

### **Text message** *(Menu 5.5.1)*

You can configure default SMS settings.

- **Send settings**: set up the options for sending SMS messages:

**Reply path:** allow the recipient to reply to you through your SMS server.

**Delivery report:** set the network to inform you when your message has been delivered.

**Character support:** select a character encoding type. If you select **Automatic**, the phone switches the encoding type from **GSM-alphabet** to

**Uni-code** if you enter a Unicode character. Use of Unicode encoding will reduce the maximum number of characters in a message to about half. If this menu is not shown, your phone provides the Automatic character encoding by default.

**Bearer selection:** select either **GSM** or **GPRS preferred**, depending on your network.

- **Current profile:** select an SMS setting profile.
- **Profile settings:** set the properties of each profile.

**Service centre:** store or change the number of your SMS server.

**Default destination:** enter the default destination.

**Default type:** set the default message type. The network can convert the messages into the selected format.

**Default validity:** set the length of time your messages are stored in the SMS server.

**Setting name:** enter a profile name.

### **Multimedia message** (Menu 5.5.2)

You can configure default MMS settings.

- **Sending settings:** set up the options for sending MMS messages:

**Delivery report:** set the network to inform you when a message has been delivered.

**Hide address:** set your address to be hidden from the recipient's phone.

**Read reply:** send a read-reply request along with your messages.

**Priority:** set the priority level of messages.

**Expiry date:** set the length of time messages are stored in the MMS server.



**Delivery time:** set a time delay before messages are sent.

**Outgoing message size:** select a maximum size of attached items allowed for messages.

- **Retrieve settings:** set up the options for receiving MMS messages:

**Reject unknown senders:** reject messages from unknown senders.

**Allow adverts:** accept advertisements.

**Allow information:** accept information messages.

**Report allowed:** set the network to inform the sender when a message has been delivered to you.

**Recep. in home network:** determine if your phone retrieves new messages automatically when you are in your home service area.

**Reception when abroad:** determine if your phone retrieves new messages automatically when you are roaming in another network.

**Recep. in home network** and **Reception when abroad** have the following options:

- **Automatic:** the phone automatically retrieves messages from the server.
- **Reject:** the phone rejects all messages.
- **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.

- **Profile:** select a connection profile to be used for MMS. You can also edit a profile. ▶ p. 79

### Email (Menu 5.5.3)

You can configure default e-mail settings.

- You cannot change e-mail profile and account settings while an e-mail is being sent or retrieved.

- **Sending settings:** set up the options for sending e-mails:

**Delivery report:** set the network to inform you when your e-mails have been delivered.

**Read reply:** set an e-mail address to receive read-reply messages from recipients.

**Priority:** select the priority level of e-mails.

**Include signature:** attach your name, phone number, a simple memo, or a tag line to your e-mails.

**Edit name:** edit the name in your signature.

**Edit telephone number:** edit the phone number in your signature.

**Edit note:** edit the tag line in your signature.

- **Reception settings:** set up the options for receiving e-mails:

**Check interval:** determine how often the phone checks the server for incoming e-mails. If you select **Do not notify**, use the **Check for new email** option to receive new e-mails manually.

**Read reply:** determine whether or not the phone sends a read-reply for incoming e-mails. If you select **Reply reminder**, the phone asks you to send a read-reply.

**Reject if larger than:** determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

**Leave copy of messages on server:** leave copies of e-mails on the e-mail server after retrieving.

- **Block list:** specify e-mail addresses or subjects you want to reject.
- **Email account:** set up an e-mail account and select an account to be used.

**Current account:** select an account.

**Account settings:** configure e-mail accounts using different e-mail servers. Set the options for each account:

- **Account name:** enter a name for the currently selected account.
- **User name:** enter a user name.
- **Email address:** enter your e-mail address.
- **SMTP server:** enter the IP address or host name of the outgoing e-mail server.
- **SMTP port:** enter the SMTP port number.
- **Protocol type:** select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

When the protocol type is **POP3**:

- **POP3 server**: enter the IP address or host name of the server that receives your e-mail.
- **POP3 port**: enter the POP3 port number.
- **User ID**: enter your e-mail ID.
- **Password**: enter the password.
- **APOP login**: connect to the server by using the APOP login scheme.

When the protocol type is **IMAP4**:

- **IMAP4 server**: enter the IP address or host name of the server that receives your e-mail.
- **IMAP4 port**: enter the IMAP4 port number.
- **User ID**: enter your e-mail ID.
- **Password**: enter the password.
- **Include attachments**: select this option to receive attachments with e-mails.
- **Email retrieval limit**: set the number of headers you will retrieve from the server.
- **Email profile**: select a connection profile to be used for e-mail services. You can also add or edit a profile. ► p. 79

### Push message (Menu 5.5.4)

You can change the settings for receiving push messages from the wireless web server.

- **Receive**: set how your phone receives push messages.
- **Service centre**: enter the address of the server from which you want to receive push messages, when the **Receive** option is set to **SMS-C specific**.

### Broadcast (Menu 5.5.5)

You can change the settings for receiving CB messages.

- **Receive**: select to receive CB messages, or not.
- **Channel list**: indicate the channels from which you wish to receive CB messages. Please contact your service provider for further details.
- **Language**: select the preferred languages in which CB messages display.

## Memory status *(Menu 5.6)*


---

Use this menu to view the amount of memory currently in use in each message folder.

## File manager *(Menu 6)*

The **File manager** menu allows you to access images, videos, music files, and sound files stored in the phone's memory.

To access this menu, press <**Menu**> in Idle mode and select **File manager**.

- According to the DRM (Digital Rights Management) system, web content may not be able to be forwarded. The content is indicated by the  icon.

## Images *(Menu 6.1)*

---

This menu displays photos you have taken and images downloaded, or received in messages.

### Viewing an image

1. Select an image folder.
2. Select an image.

## Viewing a slide show

You can view your photos as a slide show, a sequential presentation of each photo in the current folder.

1. Select **Photos**.
2. Press <**Options**> and select **Slide show**.
3. Select an interval option.  
The slide show begins.
4. Press <**Stop**> to stop the slide show.

## Using image options

While viewing an image, press <**Options**> to access the following options:

- **Full screen view:** change the display to Full screen view.
- **List:** return to the image list.
- **Send via:** send the file via MMS, e-mail or Bluetooth.
- **Set as:** set the file as wallpaper for the display or a caller ID image for a Phonebook entry.
- **Delete:** delete the file.
- **Rename:** change the file name.

- **Move to Favourite images:** move the file to the **Favourite images** folder.
- **Move to Photos:** move the file to the **Photos** folder.
- **Move to Downloaded images:** move the file to the **Downloaded images** folder.
- **Share for bluetooth:** share the files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

## Videos *(Menu 6.2)*

---

This menu displays video clips you have recorded, downloaded, or received in messages.



Video clips recorded on other devices, such as camcorders, may not play correctly.

### Playing a video clip

1. Select a video folder.
2. Select a video clip.

During playback, use the following keys:

Keys	Function
Up	Pauses or resumes playback.
Left	Moves backward in a file.
Right	Skips forward in a file.
▲/▼	Adjusts the volume.
Down	Stops playback.

## Using video options

From a video screen, press <**Options**> to access the following options:

- **List:** return to the video list.
- **Send via:** send the file via MMS, e-mail or Bluetooth.
- **Set as wallpaper:** set the video clip, if saved as a 3gp file, as wallpaper for the display.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Move to Favourite videos:** move the file to the **Favourite videos** folder.
- **Move to Video clips:** move the file to the **Video clips** folder.
- **Move to Downloaded videos:** move the file to the **Downloaded videos** folder.
- **Share for bluetooth:** share the files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

## Music *(Menu 6.3)*

---

This menu displays MP3 files you have downloaded.

Select a file. The MP3 player opens. ► p. 37

## Sounds *(Menu 6.4)*

---

This menu displays voice memos you have recorded, and sound files downloaded, or received in messages.

### Playing a sound clip

1. Select a sound folder.
2. Select a sound clip. For a voice memo, see Voice recorder. ► p. 38

### Using sound options

From a sound screen, press <**Options**> to access the following options:

- **List:** return to the sound list.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the file as your ringtone or as a ringtone for a Phonebook entry.

## Menu functions

- **Delete:** delete the file.
- **Rename:** change the file name.
- **Move to Favourite sounds:** move the file to the **Favourite sounds** folder.
- **Move to Voice recorder files:** move the file to the **Voice list** folder.
- **Move to Downloaded sounds:** move the file to the **Downloaded sounds** folder.
- **Share for bluetooth:** share the files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

### Other files *(Menu 6.5)*

---

Files that you have received but which are not supported by your phone are stored in this folder. You cannot open these files on the phone. Unsupported file formats include \*.doc, \*.ppt, and \*.txt.

While viewing the file list, press <**Options**> to access the following options:

- **Send via:** send the file via e-mail or Bluetooth.
- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **Share for bluetooth:** share the files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

### Memory status *(Menu 6.6)*

---

Use this menu to view memory information for media items in each folder. Press [Left] or [Right] to view the memory status in size or number of items.

### Calendar *(Menu 7)*

The **Calendar** menu enables you to keep track of your schedule.

To access this menu, press <**Menu**> in Idle mode and select **Calendar**.

## Consulting the calendar

---

When you enter the **Calendar** menu, the calendar in Month view appears with today's date indicated by a blue box.

### Selecting a day

- Press [Left] or [Right] to move by day.
- Press [Up] or [Down] to move by week.
- Press [▲/▼] to move by month.

### Using calendar options

Press <**Options**> to access the following options:

- **View mode:** change the view mode of the calendar. ▶ p. 63
- **Create:** add a new event. ▶ next section
- **Go to:** select today's date or enter a specific date.
- **Sort by:** sort items by the type of event.
- **Delete:** delete the items stored on the calendar by using various deleting options.

You can delete recurring events in Day view only.

- **Missed alarm events:** view events whose alarms you have missed.
- **Memory status:** access memory information for the event items stored on the calendar.

## Creating an event

---

You can store scheduled events, anniversaries, memos, and To do items on the calendar. More than one event per day can be stored.

### Entering a new scheduled event

1. Scroll to a date on the calendar.
2. Press <**Options**> and select **Create** → **Schedule**.
3. Enter information or change the settings:
  - **Subject:** enter the title of the event.
  - **Details:** enter event details.
  - **Start date** and **Start time:** enter the starting date and time for the event.
  - **AM/PM:** select **AM** or **PM** in 12-hour time format.



- **End date** and **End time**: enter the ending date and time for the event.
  - **AM/PM**: select **AM** or **PM** in 12-hour time format.
  - **Location**: enter information about the event location.
  - **Alarm**: set an alarm for the event.
  - **Before**: set how long before the event the alarm is to alert you.
  - **Alarm tone**: select an alarm tone.
  - **Repeat**: set the event to recur and select a repeat unit.
  - **Until**: set the ending date, if the event will recur.
4. Press **<Save>** to save the event.

### Entering a new anniversary

1. Select a date on the calendar.
2. Press **<Options>** and select **Create** → **Anniversary**.
3. Enter information or change the settings:

- **Occasion**: enter information about the anniversary.
  - **Date**: enter the date.
  - **Alarm**: select to set an alarm for the anniversary.
  - **Before**: set how long before the event the alarm is to alert you.
  - **Alarm time**: enter the time for the alarm to ring.
  - **AM/PM**: select **AM** or **PM** in 12-hour time format.
  - **Alarm tone**: select an alarm tone.
  - **Repeat every year**: set the phone to remind you of the anniversary every year.
4. Press **<Save>** to save the event.

### Entering a memo

1. Select a date on the calendar.
2. Press **<Options>** and select **Create** → **Memo**.
3. Enter a memo and press **<Save>**.





## Entering a To do item

1. Select a date on the calendar.
2. Press <Options> and select **Create** → **To do**.
3. Enter information or change the settings:
  - **To do**: enter information about the item.
  - **Start date**: enter the starting date.
  - **Due date**: enter the ending date.
  - **Select priority**: select a priority level.
4. Press <Save> to save the event.

## Viewing an event

---

Once you have scheduled events, the event icons and the number of events for a specific day appears at the bottom of the calendar.

-  Scheduled event
-  Anniversary
-  To do item
-  Memo

## Accessing an event

1. Select a date on the calendar to display the events for the day.

2. Select an event to view its details.
3. Press [Left] or [Right] to access the other events scheduled for the selected day.

## Using event options

While viewing an event, press <Options> to access the following options:

- **Edit**: edit the event.
- **Create**: add a new event.
- **Send via**: send the event via SMS, MMS, e-mail, or Bluetooth.
- **View mode**: change the view mode of the calendar.
- **Delete**: delete the event.
- **Memory status**: access memory information for the events stored on the calendar.

## Viewing an event in different mode




---

You can change the calendar display to Day view or Week view. Press <Options> and select **View mode** → a view mode.

### Day view

You can view events for the selected date. Select an event to view its details.

The following icons may display to indicate the event status:


-  Alarm set
-  Recurring event
-  To do item's priority (Red: high, Blue: normal, Grey: low)
- Completed, to do item

### Week view

You can view events for the selected week. A cell on the timetable indicates the presence of a schedule item. Select a cell in the day you want.

### Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos.

To access this menu, press <Menu> in Idle mode and select **Camera**, or press and hold [].


- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.



### Taking a photo

---

 You can take photos in various modes. The camera produces JPEG photos.

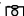
- When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. Access the **Camera** menu or press and hold [] to turn on the camera.

2. Adjust the image to be captured.
  - Press <  > to access camera options.
    - ▶ next section
  - Use the keypad to change the camera settings or switch to other modes. ▶ Using the keypad in Capture mode
3. Press [] to take a photo. The photo is saved in the **Photos** folder.

To	Press
access photo options	< <b>Options</b> >. ▶ p. 66
delete the photo	[ <b>C</b> ] and then < <b>Yes</b> >.
return to Capture mode	< <b>Preview</b> >.

### Using camera options in Capture mode

In Capture mode, press <  > to access the following options:

- **Record video:** switch to Record mode.
- **Shooting mode:** take a photo in the following modes:


**Single shot:** take a photo in normal mode. You can select whether or not the camera automatically saves a photo.

**Multi shot:** take a series of action stills. You can select the number of photos the camera will take and shooting speed.

**Mosaic shot:** take several stills and save them in one frame. You can select the layout and save mode.

- **Effects:** change the colour tone or apply a special effect.
  - **Frames:** apply a decorative frame.
  - **Flash:** determine the use of the flash.
  - **Timer:** set a time delay before the camera takes a photo.
  - **Go to photos:** access the **Photos** folder.
  - **Settings:** change the default settings for taking a photo.
- Size:** select an image size.
- Quality:** select an image quality setting.

**Viewfinder mode:** select a preview screen.

**Shutter sound:** select the sound that you hear when you press the shutter release, [].

- **Shortcuts:** view the functions of the keys you can use in Capture mode.

### Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
1	Switches to Record mode. ▶ p. 67
2	Changes the image size.
3	Changes the image quality.

Key	Function
4	Changes the shooting mode.
5	Changes the colour tone or applies a special effect.
6	Reduces the distortion on the image to maximise detail and sharpness.
7	Selects a decorative frame.
8	Sets the timer.
9	Goes to the <b>Photos</b> folder.
*	Changes the preview screen.
0	Determines the use of the flash.

### Using photo options


After saving a photo, press <**Options**> to access the following options:

 
 

- **View:** access one of the multi-shot photos.
- **Take another:** return to Capture mode.



- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the photo as wallpaper for the display or a caller ID image for a Phonebook entry.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Go to photos:** access the **Photos** folder. ▶ p. 57
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

## Recording a video

You can record a video of what is displayed on the camera screen and save it.

1. In Capture mode, press [1].
2. Adjust the image to be captured.
  - Press <  > to access camera options. ▶ next section
  - Use the keypad to change the camera settings or switch to other modes. ▶ Using the keypad in Record mode

  3. Press [] to start recording.
4. Press [] or <  > to stop recording. The video is automatically saved in the **Video clips** folder.

To	Press
play back the video clip	[  /  ].
access video options	< <b>Options</b> > . ▶ p. 69
delete the video clip	[ <b>C</b> ] and then < <b>Yes</b> > .
return to Record mode	< <b>Preview</b> > .

## Using camera options in Record mode

In Record mode, press <  > to access the following options:

- **Take photo:** switch to Capture mode.
- **Effects:** change the colour tone or apply a special effect.
- **Flash:** determine the use of the flash.
- **Timer:** set a time delay before the camera starts recording.

## Menu functions

- **Go to videos:** access the **Video clips** folder.
- **Settings:** change the following settings for recording a video:
  - Recording mode:** select a video recording mode. Select **Limit for MMS/Wallpaper** to record a video suitable for messaging or for setting as wallpaper. The video clip is saved in 3GP format. Select **Normal** to record a video within the limit of the currently available memory. The video clip is saved in MP4 format.
  - Size:** select a frame size.
  - Quality:** select an image quality setting.
  - Viewfinder:** select a preview screen.
  - Audio record:** record audio with a video clip.
- **Shortcuts:** view the functions of the keys you can use in Record mode.

### Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:

Keys	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
1	Switches to Capture mode. ▶ p. 64
2	Changes the frame size.
3	Changes the image quality.
4	Changes the video recording mode.
5	Changes the colour tone or applies a special effect.
6	Reduces the distortion on the image to maximise detail and sharpness.
7	Mutes or unmutes the audio.

Keys	Function
<b>8</b>	Sets the timer.
<b>9</b>	Goes to the <b>Video clips</b> folder.
<b>*</b>	Changes the preview screen.
<b>0</b>	Determines the use of the flash.

### Using video options

After saving a video clip, press <**Options**> to access the following options:

- **Record another:** return to Record mode.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as wallpaper:** set the video clip, if saved as a 3GP file, as wallpaper for the display.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Go to videos:** access the **Video clips** folder.
  - ▶ p. 58

- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

### Settings *(Menu 9)*

The **Settings** menu provides you with various setting options to customise the phone as your preferences and needs. You can also reset the settings to their default values.

To access this menu, press <**Menu**> in Idle mode and select **Settings**.

#### **Time & Date** *(Menu 9.1)*

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World time** menu.

- ▶ p. 39
- **Set time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select a time format.



## Menu functions

- **Set date:** enter the current date.
- **Starting day of calendar:** set which day of the week the calendar starts with.

### Phone settings *(Menu 9.2)*

---

Many different features of your phone's system can be customised to suit your preferences.

#### Language *(Menu 9.2.1)*

Use this menu to select one of several languages for the display text.

#### Greeting message *(Menu 9.2.2)*

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

#### Short cut *(Menu 9.2.3)*

You can use the Navigation keys as shortcuts to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

### Assigning a shortcut menu

1. Select a key to be used as a shortcut key.
2. Select a menu to be assigned to the key.

### Using shortcut options

Press <**Options**> to access the following options:

- **Change:** assign or change a shortcut menu.
- **Remove:** deactivate the shortcut assignment to the selected key.
- **Remove all:** deactivate all shortcut assignments.

### Auto keypad lock *(Menu 9.2.4)*


Use this menu to set the length of time that elapses before the keypad locks automatically.

### Volume key *(Menu 9.2.5)*

Use this menu to set whether the phone mutes the call ringer or reject a call if you press and hold [▲/▼] when a call comes in.

### Extra settings (Menu 9.2.6)

You can turn the automatic redialling or answering feature on or off.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer:** answer an incoming call by pressing any key, except <Reject> and [].

### Display settings (Menu 9.3)

---

Use this menu to change settings for the display and light.

#### Wallpaper (Menu 9.3.1)

You can set up the idle screen for the display.

- **Wallpaper image:** select an image or a video clip to be displayed on the display.
- **Text position:** select a text position. If you don't want to display text in Idle mode, select **Off**.
- **Text mode:** select a font style.

- **Text colour:** select a font colour.
- **Graphic logo:** set the phone to display a graphic icon instead of the service provider's logo on the idle screen. This is only available if a graphic icon has been received in message.

#### Skin (Menu 9.3.2)

You can select a skin colour pattern for Menu mode.

#### LCD brightness (Menu 9.3.3)

You can adjust the brightness of the display for varying lighting conditions.

#### Back light (Menu 9.3.4)

You can select the length of time the backlight stays on or the display stays in Dim mode, in which the backlight is off.

- **Main display normal:** select the length of time the backlight stays on.
- **Main display dim:** select the length of time the display stays in Dim mode after the backlight turns off. After a specified time, the display turns off.

### Dialling display (Menu 9.3.5)

Use this menu to select a font colour for the numbers entered while dialling.

### Service light (Menu 9.3.6)

The service light on the phone blinks to indicate the service status. Use this menu to activate or deactivate the feature of the service light.

### Sound settings (Menu 9.4)

---

Use this menu to customise various sound settings.

#### Incoming call (Menu 9.4.1)

Use this menu to change the sound settings for incoming calls.

- **Ringtone:** select a ringtone to be used for the call ringer.
- **Volume:** select a ringer volume.
- **Alert type:** specify how you are to be informed of incoming calls.

### Keypad tone (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.

- You can adjust the keypad tone volume using [▲/▼] in Idle mode.

### Message tone (Menu 9.4.3)

Use this menu to change the sound settings for incoming SMS messages, MMS messages, e-mails, and CB messages individually.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed that a message comes in.
- **Repetition:** specify how often the phone informs you of a new message.

### Power on/off (Menu 9.4.4)

Use this menu to select the melody that the phone sounds when it is switched on or off.

### Quiet mode (Menu 9.4.5)

Use this menu to set how the phone acts to alert you to a specific event in Quiet mode, instead of making sounds.

### Extra tones *(Menu 9.4.6)*

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when an outgoing call is connected to the system.
- **Alert on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Error tone:** set the phone to beep when you have made a mistake or something wrong happens on the phone.

### Network services *(Menu 9.5)*

---

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

### Call diverting *(Menu 9.5.1)*

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
  - **Divert always:** divert all calls.
  - **Busy:** divert calls when you are on another call.
  - **No reply:** divert calls when you do not answer the phone.
  - **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
  - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
3. Select **Activate**. To deactivate call diverting, select **Deactivate**.
4. Move to the **Divert to** line.
5. Enter the number to which calls are to be diverted.
6. If you selected **No reply**, move to the **Seconds** line and select the length of time the network delays before diverting a call.
7. Press **<Select>**.

### Call barring (Menu 9.5.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
  - **All outgoing:** prohibit all outgoing calls.
  - **International:** prohibit international calls.
  - **International except to home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
  - **All incoming:** prohibit incoming calls.
  - **Incoming while abroad:** prohibit incoming calls when you use your phone outside of your home country.
  - **Cancel all:** cancel all call barring settings, allowing calls to be sent and received normally.
  - **Change barring password:** change the call barring password obtained from your service provider.
2. Select the type of calls to be barred.

3. Select **Activate**. To deactivate call barring, select **Deactivate**.

4. Enter the call barring password supplied by your service provider and press <**Select**>.

### Call waiting (Menu 9.5.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which call waiting option will apply.
2. Select **Activate** and press <**Select**>. To deactivate call waiting, select **Deactivate**.

### Network selection (Menu 9.5.4)

This network service allows you to either automatically or manually select the network to be used while roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.

### Caller ID *(Menu 9.5.5)*

This network service allows you to prevent your phone number from being displayed on the phone of the person being called. If you select **Default**, the phone will use the default setting provided by the network.

- Some networks may not allow you to change this setting.

### Voice mail server *(Menu 9.5.6)*

Use this menu to store the number of the voicemail server and access your voicemails.

- You must store the voicemail server number before accessing the server. Your service provider can give you the number.

- **Connect to voice server:** connect to the voicemail server to listen to your messages.
- **Voice server number:** enter the voicemail server number.

### Closed user group *(Menu 9.5.7)*

Use this menu to set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group, contact your service provider.

- **Index list:** add, delete, or activate CUG index numbers.
- **Outside access:** enable calls to numbers other than those in the closed user group. This feature depends on the nature of your CUG subscription.
- **Default group:** enable the default CUG, if you have set one with your service provider. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

### Band selection *(Menu 9.5.8)*

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks: GSM 1900 and Combined GSM 900/1800.

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you may need to change to an appropriate band.

### **Bluetooth** (Menu 9.6)

---

Using the Bluetooth feature, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 meters. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.

- ☑ • If there are obstacles between the devices, the operating distance may be reduced.
- It is recommended that you don't use the Bluetooth feature while using multimedia features, such as voice recorder, camera, and MP3 player, or vice versa, for better performance.
- Some devices may not be compatible with your phone.

### **Setting up the Bluetooth feature**

The **Bluetooth** menu provides the following options:







- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to search for your phone.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth services:** display available Bluetooth services.

### **Searching for and pairing with a Bluetooth device**

1. From the Bluetooth setting options, select **My devices**.

## 2. Select **Search for new devices**.

After searching, a list of devices to which you can connect displays. The following icons indicate the type of device:

-  Mono headset/Hands-free car kit
-  Computer
-  Mobile phone
-  Unknown device
-  Printer
-  PDA

The colour of the icon indicates the status of the the device:

- Grey for unpaired devices
- Blue for paired devices
- Red for devices that are currently connected to your phone

## 3. Select a device.

## 4. Enter a Bluetooth PIN and press **<OK>**. This code is used just once and you don't need to memorise it.

When the owner of the other device enters the same code, pairing is complete.



Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has a code, you must enter it.

## Using device options

From the device list, press **<Options>** to access the following options:

- **Connect:** connect to a headset or hands-free car kit.
- **Disconnect:** end the connection with the connected device.
- **Browse files:** search for data from the device and import data directly to your phone.
- **Service list:** access the Bluetooth service list of the device.
- **Rename:** rename the paired device.
- **Authorise device/Unauthorised device:** determine whether or not the phone asks you to permit connection when other devices try to connect to your phone.
- **Delete:** remove the selected device or all devices from the list.



## **Sending data via Bluetooth**

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want and press **<Options>**.
4. Select **Send via → Bluetooth**.  
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

## **Receiving data via Bluetooth**

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

1. If an unauthorised Bluetooth device sends data to your phone, press **<Yes>** to allow the device to access your phone.
2. Press **<Yes>** to receive data.

## **Security** *(Menu 9.7)*

---

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- If you enter an incorrect PIN/PIN2 three times in succession, the SIM card is blocked. To unblock it you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your service provider.

### **PIN check** *(Menu 9.7.1)*

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

### **Change PIN** *(Menu 9.7.2)*

Use this menu to change your PIN. The PIN check feature must be enabled to use this feature.

**Phone lock** *(Menu 9.7.3)*

Use this menu to lock the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

**Change password** *(Menu 9.7.4)*

Use this menu to change your phone password.

**Privacy** *(Menu 9.7.5)*

Use this menu to lock access to messages, files, or all menu functions on the phone, except for call functions.

When a privacy option is enabled, you must enter the phone password to access the locked items or functions.

**SIM lock** *(Menu 9.7.6)*

This menu allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

**FDN mode** *(Menu 9.7.7)*

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

**Change PIN2** *(Menu 9.7.8)*

If supported by your SIM card, use this feature to change your current PIN2.

**Connection settings** *(Menu 9.8)*

---

Use this menu to create and customise the profiles containing the settings for connecting your phone to the network. You need these settings to use the web browser or send MMS messages or e-mails.

- ☑ Your phone is suited for connecting to the network by default. If you change the settings without first checking with your service provider, the web browser, MMS, and e-mail features may not work properly.

### Creating a profile

1. Press **<New>**. If a profile has already been saved, press **<Options>** and select **Add new connection**.
2. Specify each information:
  - **Profile name**: enter a profile name.
  - **Homepage URL**: enter the address of the homepage of your service provider.
  - **Proxy**: activate or deactivate the proxy server.
  - **IP address**: enter the IP address of the proxy server.
  - **Port**: enter the port number of the proxy server.
  - **DNS**: activate or deactivate the DNS addresses.

- **DNS1** and **DNS2**: enter the primary and secondary DNS addresses.
- **Bearer**: select the network bearer type.
- **Advanced settings**: change the advanced options. Depending on the bearer setting, available options vary.

*When the bearer is set to **GPRS**:*

**APN**: enter the access point name.

**Login ID**: enter the login ID.

**Password**: enter the login password.

*When the bearer is set to **GSM**:*

**Dial number**: enter the PPP phone number.

**Login ID**: enter the login ID.

**Password**: enter the login password.

**Data call type**: select a call type for data transmission.

3. Press **<Save>** to save the profile.

## Using profile options

Press <**Options**> to access the following options:

- **Edit**: edit the selected profile.
- **Delete**: delete the profile.
- **Add new connection**: add a new profile.

## Reset settings *(Menu 9.9)*

---

Use this menu to reset the phone's settings you have changed.

1. Press [  $\frac{1}{\text{OK}}$  ] to select the setting categories to be reset.
2. Press <**Reset**>.
3. Press <**Yes**> to confirm the reset.
4. Enter the phone password and press <**OK**>.

The password is preset to **00000000**. You can change this password. ▶ p. 79

## Solve problems

### *Help and personal needs*

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

### **When you switch on your phone, the following messages may appear:**

#### "Insert SIM"

- Be sure that the SIM card is correctly installed.

#### "Enter password"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

#### "Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.

## *Solve problems*


### “Enter PUK”

- The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.


### “No service,” “Network failure,” or “Not done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

### You have entered a number but it was not dialed

- Be sure that you have pressed [].
- Be sure you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

### Your correspondent cannot reach you

- Be sure that your phone is switched on. ([) pressed for more than one second.)

- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.



 
### Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

### The phone starts beeping and “Warning Low battery” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

### The audio quality of the call is poor

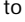- Check the signal strength indicator on the display (). The number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

## **No number is dialled when you re-call a Phonebook entry**

- Use the **Contacts list** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

## **The battery doesn't charge properly or the phone sometimes turns itself off**

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

## **If the above guidelines do not help you to solve the problem, take note of:**

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

## *Health and safety information*

### **SAR certification information**

---

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0W/kg.\*

The highest SAR value for this model phone was 0.973 W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

## **Precautions when using batteries**

---

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Road safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

## Operating environment

---

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).



## **Electronic devices**

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

## Potentially explosive environments

---

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.


## Emergency calls

---

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [  ].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

## **Other important safety information**

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## **Care and maintenance**

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

# Index

## A

- AB mode, text input • 23
- Alarm • 39
- Answering
  - call • 26
  - second call • 27
- Anykey answer • 71
- Auto redial • 71

## B

- Background image • 71
- Backlight time, set • 71
- Band selection • 75
- Barring, calls • 74
- Battery
  - charging • 7
  - low indicator • 8
  - precautions • 84
- Bluetooth
  - receiving, data • 78
  - sending, data • 78
  - settings • 76
- Broadcast messages • 49, 56
- Browser, web • 43

## C

- Calculator • 41
- Calendar • 60
- Call cost • 31
- Call records
  - dialled • 30
  - missed • 30
  - received • 30
- Call time • 30
- Caller groups • 33
- Caller ID • 75
- Calls
  - answering • 26
  - barring • 74
  - diverting • 73
  - holding • 27
  - redialling • 25
  - rejecting • 26
  - transferring • 28
  - waiting • 74
- Camera
  - photos • 64
  - videos • 67
- CB (Cell Broadcast) messages • 49, 56

- Characters, enter • 23
- Configuration messages • 49
- Connection tone • 73
- Converter • 41
- Creating messages
  - e-mail • 46
  - MMS • 45
  - SMS • 45
- CUG (Closed User Group) • 75

## D

- Date, set • 70
- Deleting
  - call records • 29
  - e-mail • 50, 51, 52
  - events • 63
  - MMS • 48, 50, 52
  - phonebook • 35
  - SMS • 48, 50, 52
- Dialled calls • 30
- Dialling font, set • 72
- Display
  - backlight, set • 71
  - brightness • 71
  - icons • 10

- language • 70
- layout • 10
- settings • 71

- Diverting, calls • 73
- DRM (Digital Rights Management) • 57
- DTMF tones, send • 28

## E

- E-mails
  - creating/sending • 46
  - deleting • 51
  - setting • 54
  - viewing • 50
- Emergency calls • 87

## F

- FDN (Fixed Dialling Number) mode • 79
- File manager • 57

## G

- Games • 35
- Greeting message • 70

- H**  
 Health and safety • 83  
 Holding, call • 27
- I**  
 Icons, description • 10  
 Images, downloaded • 57  
 Inbox, messages  
   e-mail • 50  
   MMS/SMS • 47  
 International calls • 25  
 Internet • 43
- J**  
 Java applications • 35
- K**  
 Keypad lock • 8, 70  
 Keypad tones  
   selecting • 72  
   sending/muting • 28  
   volume • 72
- L**  
 Language, select • 70  
 Last number, redial • 25  
 Locking  
   menu functions • 79  
   phone • 79  
   SIM card • 79
- Low battery indicator • 8
- M**  
 Memory status  
   downloaded items • 60  
   file manager • 60  
   messages • 57  
   phonebook 35  
 Message tone • 72  
 Messages  
   cell broadcast • 49, 56  
   configuration • 49  
   e-mail • 46, 50  
   greeting • 70  
   MMS • 45, 48  
   push • 49, 56  
   SMS • 45, 48  
 Minute minder • 73  
 Missed calls • 30  
 MMS messages  
   creating/sending • 45  
   deleting • 48  
   setting • 53  
   viewing • 47  
 MP3 player • 36  
 Multiparty-call • 28  
 Music, downloaded • 59
- N**  
 Name card • 34  
 Names  
   entering • 23  
   searching • 31  
 Network band, select • 75  
 Network selection • 74  
 Network services • 73
- O**  
 Outbox, messages • 49
- P**  
 Password  
   call barring • 74  
   phone • 79  
 Phone  
   care and maintenance •  
     88  
   display • 10  
   icons • 10  
   locking • 79  
   password • 79  
   resetting • 81  
   switching on/off • 8  
   unpacking • 6  
 Phonebook  
   adding • 32  
   deleting • 32, 35
- finding • 31  
 managing • 35  
 options • 32  
 speed dialling • 33
- Photos  
 taking • 64  
 viewing • 57
- PIM sync  
 creating, profile • 40  
 starting • 40
- PIN, change • 78  
 PIN2, change • 79  
 Power on/off tone • 72  
 Privacy • 79  
 Problems, solve • 81  
 Push messages • 49, 56
- Q**  
 Quiet mode  
   entering • 13  
   setting • 72
- R**  
 Received calls • 30  
 Received messages  
   e-mail • 50  
   MMS/SMS • 47

Recording  
  videos • 67  
  voice memos • 38

Redialling  
  automatically • 71  
  manually • 25

Resetting phone • 81

Ringer  
  incoming calls • 72  
  messages • 72

Road safety • 85

Roaming • 74

**S**

Safety  
  information • 83  
  precautions • 1

Security, calls • 78

Sent messages • 50

Short cut • 70

SIM card  
  inserting • 7  
  locking • 79

Skin colour • 71

SMS messages  
  creating/sending • 45  
  deleting • 48  
  setting • 53  
  viewing • 47

Sound settings • 72

Sounds, downloaded • 59

Speakerphone • 28

Speed dial • 33

Stopwatch • 42

Switching on/off  
  microphone • 28  
  phone • 8

**T**

T9 mode, text input • 24

Templates, message • 52

Text, enter • 23

Time, set • 69

Timer • 42

**V**

Videos  
  playing • 58  
  recording • 67

Voice recorder  
  playing • 38  
  recording • 38

Voicemail server • 75

**W**

Waiting call • 74

Wallpaper • 71

Web browser

  access • 43  
  bookmarks • 44

World time • 39

# Declaration of Conformity (R&TTE)

For the following product :

GSM900/GSM1800/GSM1900 with Bluetooth

Portable Cellular Telephone

(Product description)

SGH-P300

(Model name)

## Manufactured at :

- Samsung Electronics Co., Ltd, 94-1, Insoo-Dong, Gumi City, Kyung-Buk, Korea,  
730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001  
EMC : EN 301 489-01 v1.4.1 (08-2002)  
EN 301 489-07 v1.2.1 (08-2002)  
EN 301 489-17 v1.2.1 (08-2002)  
SAR : EN 50360:2001  
EN 50361:2001  
Network : EN 301 511 v9.0.2 (03-2003)  
EN 300 328 v1.4.1 (04-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK  
Identification mark: 0168

CE0168

The technical documentation kept at :

Samsung Electronics OA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro OA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK  
2005.11.28

Yong-Sang Park / S. Manager

(place and date of issue)

(name and signature of authorized person)



■ It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.