

**User's Manual**

**639UA**

**MP3-COMPATIBLE**

**IN-DASH CD RECEIVER**

**WITH USB AND SD MEMORY CARD PORTS  
AND FRONT PANEL AUX INPUT**



**639UA**

**MP3-COMPATIBLE  
IN-DASH CD RECEIVER**

**WITH USB AND SD MEMORY CARD PORTS  
AND FRONT PANEL AUX INPUT**

12.2008

iPod is a trademark of Apple, Inc.,  
registered in the U.S. and other countries.

**tech support: [www.bossaudio.com/support](http://www.bossaudio.com/support)**



**BOSS®  
AUDIO SYSTEMS**

BOSS Audio Systems • 3451 Lunar Court • Oxnard, CA 93030  
[www.bossaudio.com](http://www.bossaudio.com)

**800.999.1236**

**BOSS®  
AUDIO SYSTEMS**



## Trouble Shooting

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

Symptom	Cause	Solution
No power	The car ignition is not on.	If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC"
	The fuse is blown.	Replace the fuse.
Disc cannot be loaded or ejected	Presence of CD disc inside the player.	Remove the disc in the player, then put a new one.
	Inserting the disc in reverse direction.	Insert the compact disc with the label facing upward.
	Compact disc is extremely dirty or defective disc.	Clean the disc or try to play a new one.
	Temperature inside the car is too high.	Cool off or until the ambient temperature returns to normal.
	Condensation.	Leave the player off for an hour or so, then try again.
No sound	Volume is in minimum.	Adjust volume to a desired level.
	Wiring is not properly connected.	Check wiring connection.
The operation keys do not work	The built-in microcomputer is not operating properly due to noise.	Press the RESET button. Front panel is not properly fixed into its place
Sound skips.	The installation angle is more than 30 degrees.	Adjust the installation angle to less than 30 degrees.
	The disc is extremely dirty or a defective disc.	Clean the compact disc or try to play a new one.
The radio does not work. The radio station automatic selection does not work.	The antenna cable is not connected.	Insert the antenna cable firmly.
	The signals are too weak.	Select a station manually.
ERROR 1	Mechanism Error	Press the reset button if the error code does not disappear, consult your nearest service dealer.
ERROR 2	Servo Error	Press the reset button if the error code does not disappear, consult your nearest service dealer.



**If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)**

**BOSS**<sup>®</sup>  
AUDIO SYSTEMS

### 639UA

MP3-Compatible  
In-Dash CD Receiver  
with USB And SD Memory Card Port  
And Front Panel AUX Input

Congratulations on your purchase of a **BOSS** Digital Media Receiver.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will afford you years of listening pleasure.

Thank you for making **BOSS** your choice for car audio entertainment!

What's inside the box:

639UA x 1

Instruction Manual x 1

Wire Harness x 1

Support Strap x 1

5mm Nut x 1

Mini USB Cable X 1

5 x 15mm Screw x 1

Unit Release Lever x 2

Remote Control x 1

## USER'S MANUAL

pages	CONTENTS
3	Installation
6	General and radio control
8	CD/CD MP3 control
10	USB/SD Card (MP3 Playback) control
12	Setting the clock
14	Setting mode
15	Specification
16	Trouble shooting

 
## Handling Compact Discs

### MOISTURE CONDENSATION


On a rainy day or in a very damp area, moisture may condense on the lenses inside the unit. Should this occur, the unit will not operate properly. In such a case, remove the disc and wait for about an hour until the moisture has evaporated.

### NOTES ON CDs


1. A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows. Handle the disc by its edge. To keep the disc clean, do not touch the surface (P.1).



 2. Do not stick paper or tape on the disc (P.2).



 3. Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in temperature inside the car (P.3).



4. Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the center out (P.4).



5. Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog discs.

### NOTES ON DISCS

If you use the discs explained below, the sticky residue can cause the CD to stop spinning and may cause malfunction or ruin your discs.

 
Do not use second-hand or rental CDs that have a sticky residue on the surface (for example, from peeled-off stickers or from ink, or glue leaking from under the stickers).

There are paste residue.  
Ink is sticky (P.5).




Do not use CDs with old labels that are beginning to peel off.

Stickers that are beginning to peel away, leaving a sticky residue (P.6).




Do not use your CDs with labels or stickers attached.

 Labels are attached (P.7).



Do Not Use Special Shape CDs

 Be sure to use round shape CDs only for this unit and do not use any special shape CDs. Use of special shape CDs may cause the unit to malfunction.(P.8).



Be sure to use CDs with disc mark



Only for this unit.

CD-Rs and CD-RWs which have not undergone finalization processing cannot be played. (For more information on finalization processing, refer to the manual for your CD-R/CD-RW writing software or CD-R/CD-RW recorder.) Additionally, depending on the recording status, it may prove impossible to play certain CDs record on CD-R or CD-RW.

## Specifications

Supply voltage	: 12V DC(11V-15V)
Current consumption	: Less than 15A
Discs played	: Compact disc 5" (12 cm) disc
Audio Signal Output	: 2ch line out
Characteristics	: (1) Frequency Response: 20Hz-20kHz (2) S/N Ratio: 40 dB (JIS) (3) Wow and Flutter: Below measurable limits

	(Europe) FM	(Europe) FM	(U.S.A.) FM
Frequency Coverage:	87.5 to 108 Mhz	87.5 to 108 Mhz	87.5 to 107.9MHz
IF	10.7 Mhz	10.7 Mhz	10.7 Mhz
Sensitivity (S/N = 30dB):	20 dBu	20dBu	20 dBu
	AM		AM
Frequency Coverage:	522 to 1620 Khz		530 to 1710 Khz
IF	450 Khz		450 Khz
Sensitivity (S/N = 20dB):	45 dBu		45 dBu

### NOTE:

Specifications and design are subject to modification, without notice, due to improvements in technology.

## Setting Mode

You can make changes to the system setting in the following area:

### Radio Frequency Range + Enable/Disable AUX In+ Clock Format

The display will show “TEST MOD” briefly to indicate you are in system setting area and then automatically change to Radio Frequency selection mode. At anytime, you can press the > button to step through the above areas. When you are ready to leave the System Setting area, press ENTER. The unit will reboot to initialize with the new setting.

#### - Radio Settings

The unit can operate on several different frequency ranges. Please see the following for these ranges. The default frequency range is “AMERICAN 2”.

BAND NAME	FREQUENCY RANGE	
AMERICAN 1	FM:87.5-108MHz	AM:530-1710kHz
AMERICAN 2	FM:87.5-107.9MHz	AM:530-1710kHz
EUROPE 10	FM:87.5-108MHz	AM:522-1620kHz
EUROPE 5	FM:87.5-108MHz	AM:522-1620kHz
MID EAST	FM:87.5-108MHz	AM:531-1602kHz
AUST (AUSTRALIA)	FM:87.5-108MHz	AM:522-1593kHz
RUSSIA	FM:65.0-74MHz	AM:522-1620kHz
JAPAN	FM:76.0-90.0MHz	AM:522-1629kHz

To change the range to suit your location, press DOWN ARROW until the desired frequency range is high lighted. The press > to save it and move to next setting area.

#### -AUX Input Enable/Disable

Press DOWN ARROW to move between Enable and Disable modes. When the selection has been made, press > to save it and move to next setting area or press ENTER to leave the System Setting mode.

If Aux Input is disabled in System Settings, any input connected will not be played.

#### -Clock Format (12-hour or 24-hour)

Press DOWN ARROW to move between 12-hour and 24-hour format, press > to save it and move to next setting area or press ENTER to leave the System Setting mode.

## Installation

- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.




- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from heater, or where it would be subject to dust dirt or excessive vibration.
- Be sure to remove the front panel before installing the unit.

### DIN FRONT/REAR-MOUNT


This unit can be properly installed either from “Front” (conventional DIN Front-mount) or “Rear” (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods A and B.

#### DIN FRONT-MOUNT (Method A)

Installation the unit

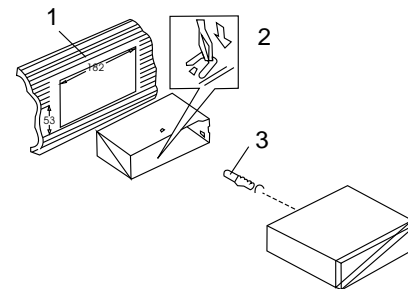


1. Dashboard
2. Holder  
After inserting the half sleeve into the dashboard, select the appropriate tab according to the thickness of the dashboard material and bend them inwards to secure the holder in place.
3. Screw

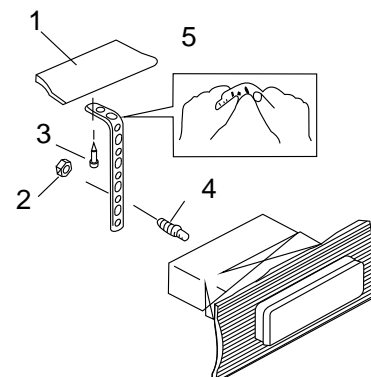

1. Dashboard
2. Nut (5mm)
3. Screw (5x15mm)
4. Screw
5. Support Strap  
Be sure to use the support strap to secure the back of the unit in place. The strap can be bent by hand to the desired angle.

## Removing the unit

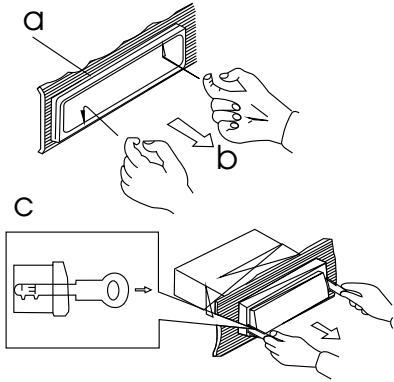



- Frame
- Insert fingers into the groove in the front of frame and pull out to remove the frame. (When re-attaching the frame, point the side with a groove down wards and attach it.)
- Insert the levers supplied with the unit into the grooves at both sides of the unit as shown in figure until they click. Pulling the levers makes it possible to remove the unit from the dashboard.

## Trim Plate Installation:

Push the trim plate against the chassis until it is fitted.

**You must do this before you install the front panel, otherwise it can't be attached.**


## Wiring Diagram (12 Pin Harness Plug)

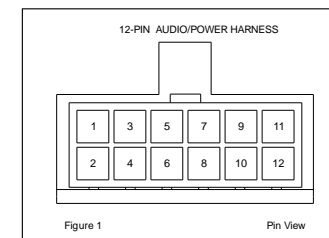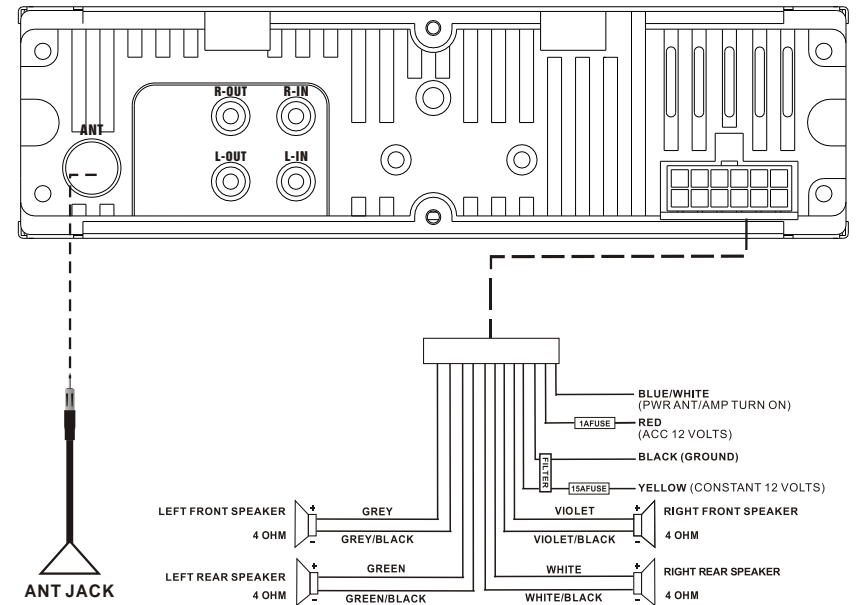

PIN	WIRE COLOR	FUNCTION/LABEL
1	VIOLET	RIGHT FRONT SPEAKER(+)
2	VIOLET/BLACK	RIGHT FRONT SPEAKER(-)
3	GREY	LEFT FRONT SPEAKER(+)
4	GREY/BLACK	LEFT FRONT SPEAKER(-)
5	WHITE	RIGHT REAR SPEAKER(+)
6	WHITE/BLACK	RIGHT REAR SPEAKER(-)

PIN	WIRE COLOR	FUNCTION/LABEL
7	GREEN	LEFT REAR SPEAKER (+)
8	GREEN/BLACK	LEFT REAR SPEAKER (-)
9	BLUE/WHITE	POWER ANTENNA
10	RED	IGNITION(ACC)
11	BLACK	CHASSIS GROUND
12	YELLOW	BATTERY(+)

## Setting the clock

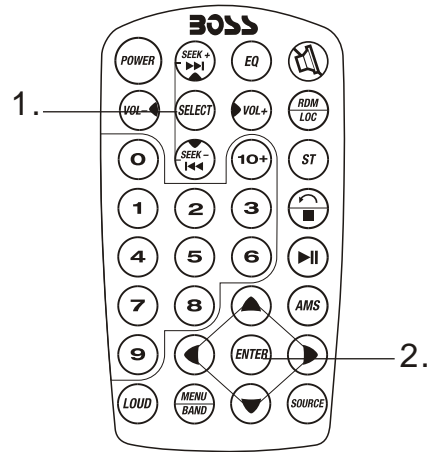

To change the clock setting, press and hold the ENTER button (2). The hour and minutes display will begin flashing.

### Setting the time


After pressing ENTER, to change the time, press |<</ >>| (1) to correct the time. To switch between hour and minutes settings, press ENTER again. To enter the normal mode, press ENTER or wait few seconds.

### Setting the time display mode

After pressing ENTER, to switch between 24 hour mode and 12 hour mode ( "AM/PM" mode), by pressing and hold ENTER until the display mode changes.


## Detachable Control Panel(D.C.P)

Removing The Detachable Control Panel (D.C.P.).

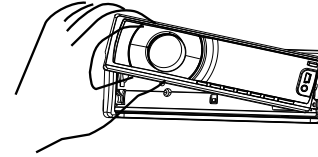

1. Turn the power off
2. Press the D.C.P. release button
3. Remove the D.C.P.


Attaching the DCP

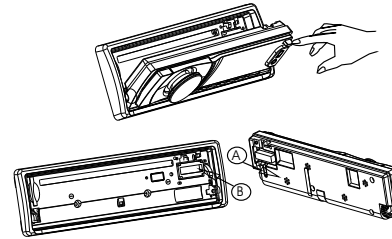

1. Attach the panel at the right side first, with point B on the main unit touching point A on the D.C.P. (As shown on the diagram).
2. Then press the left side of D.C.P. onto the main unit until a "click" sound is heard.

### CAUTION


- DO NOT insert the D.C.P from the left side. Doing so may damage it.
- The D.C.P can easily be damaged by shocks. After removing it, place it in a protective case and be careful not to drop it or subject it to strong shocks.
- When the release button is pressed and the D.C.P is unlocked, the car's vibrations may cause it to fall. To prevent damage to the D.C.P, always store it in a protective case after detaching it.
- The rear connector that connects the main unit and the D.C.P is an extremely important part. Be careful not to damage it by pressing on it with fingernails, pens, screwdrivers, etc.

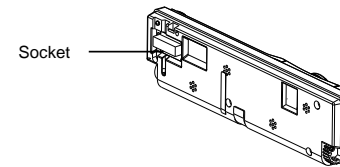

### Note:

If the D.C.P is dirty, wipe off the dirt with soft, dry cloth only. And use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the D.C.P.

## General And Radio Control

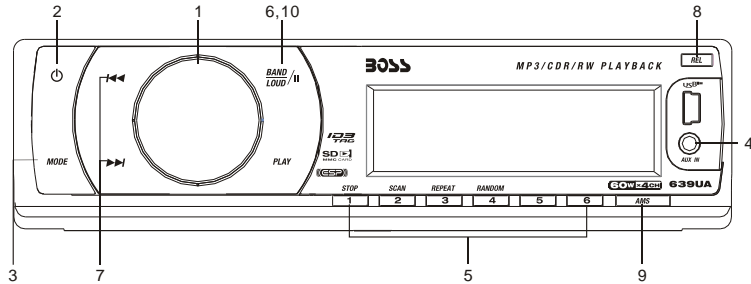

- 1.) VOLUME UP/DOWN KNOB (TURN)  
AUDIO MODE SELECTOR (PRESS)**  
In normal mode, use this knob to increase / decrease the volume level.

To access various sound parameters push the button (like a button) to cycle through the following adjustable settings:

VOLUME>BASS>TREBLE>BALANCE  
>FADER>EQUALIZER

Use volume knob to increase / decrease the setting of Volume, Bass, Treble, Balance and Fader

For Equalizer, rotate the volume knob cycle through and select response curve you wish:  
FLAT,POPS, ROCK or CLASSIC.

To save setting, press the knob and move on next parameter. You can exit the system by pressing until you return to VOL, or simply do nothing and the unit will return to normal mode automatically.


- 2.) POWER**  
Press Power to turn on the unit.  
Press and hold Power to turn off the unit.
- 3.) MODE**  
Press the button repeatedly to cycle through the audio input sources:
- RADIO>CD>USB>SD CARD>AUX IN
- 4.) AUX IN**  
This jack is a convenient way to play music from MP3 player such as iPod through your car stereo.
- Simply connect headphone output from MP3

player to this input jack. Press MODE to select AUX as input source and begin to play music on the MP3 player.


- 5.) RADIO PRESET 1-6**  
These buttons are used to store radio stations. To set a preset, tune the desired radio station, then press and hold the preset you wish to assign that station more than one second and release. To replace it with a different station, repeat the process and the new setting will override the previous one.
- 6.) BAND**  
Press briefly, repeatedly to cycle through five radio bands:
- FM1>FM2>FM3>AM1>AM2
- 7.) TUNE/SEEK UP/DOWN BUTTON**  
Press this button briefly to step up or down the radio dial in single step increments. Press and hold for half second to enter SEEK mode. In this mode the tuner will stop at the next strong station available.
- 8.) REL**  
Press to drop down the detachable front panel to insert CD or SD Card. See Detachable Control Panel for more detail.
- 9.) AMS (Auto Memories Scan)**  
This is the easiest way to set up the preset station in each radio band. If you press AMS, the radio will scan up all the strongest stations and preset automatically.
- 10.) LOUDNESS**  
Press and hold to increase bass output. Press and hold again to turn off Loudness function.

using remote control....

- 1.) |<< and >>| (Skip back/skip forward, fast back/fast forward)**  
Press those buttons to skip back or ahead one track. Press and hold for fast back or fast forward.
- 2.) RDM (Random Play Mode)** Press this button to play all MP3 files in random order. "RDM ON/OFF" will be displayed. Press again to cancel.
- 3.) STOP**  
Press to stop playback. Press PLAY PAUSE to begin playback on the first track (NOT the track on last play)
- 4.) PLAY/PAUSE** Files will begin to play automatically. Press Play to pause the MP3 playback and "PAUSE" will be displayed. Press again to resume playback.
- 5.) RPT (Repeat Play Mode)** Press this button to repeat all the playback automatically. "PRT ONE/DIR/ALL" will be displayed. Press again to cancel.
- 6.) NUMERIC PAD** Press the number key during playback to select particular track.
- For example, #45, press 4, 5, Enter and the 45th track will begin to play.
- 7.) SOURCE (Input select, same as MODE on head unit)** Press the button repeatedly to cycle through the 5 audio input sources in order to select either USB or SD modes.

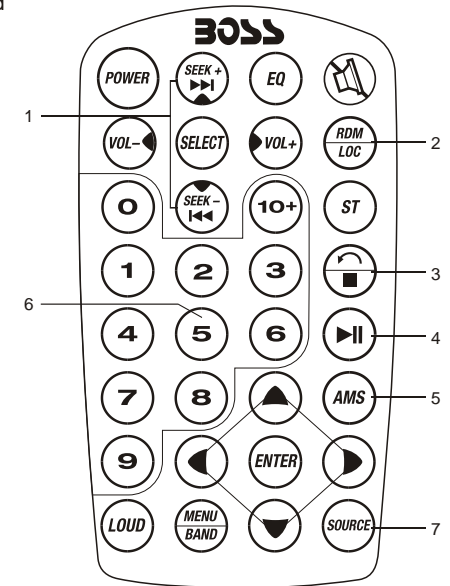


**Changing the battery in remote control**  
The remote is held one small "drawer" on one edge of the remote. To open this drawer, press and hold the small button on the edge of this small drawer (as shown) and slide the drawer out.

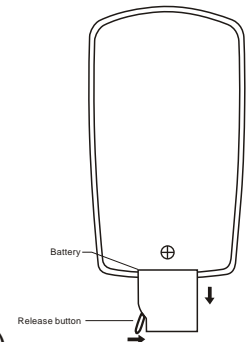

Insert the new battery and push the drawer back fully into the remote.



## USB/SD Card (MP3 Playback) Control

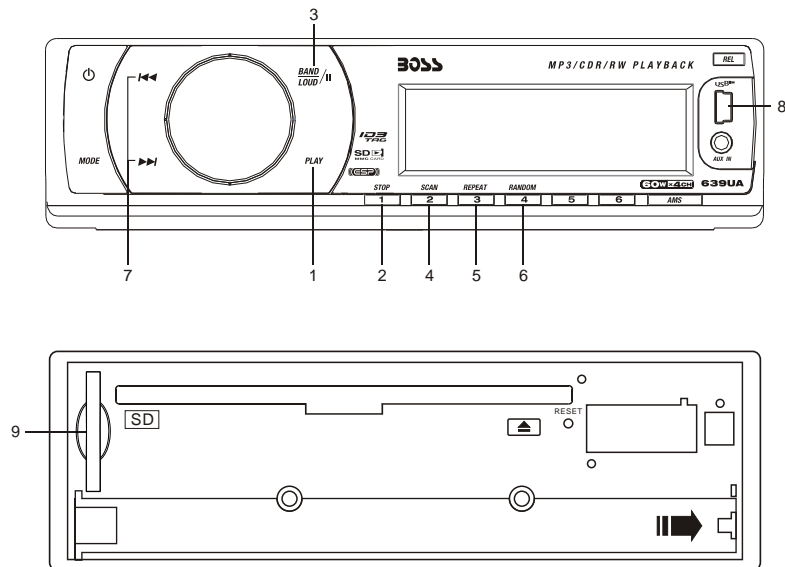

### 1.) PLAY

Files will begin to play automatically. Press PLAY to resume playback from pause/stop.

### 2.) STOP

Press to stop playback. Press PLAY to begin playback on the first track (NOT the track on last play)

### 3.) PAUSE

Press to pause playback. Press PLAY to resume playback from last play

### 4.) SCAN (Intro Scan)

To audition the first 10 seconds each track, press this button. Press again to cancel and begin to play the auditioned track.

### 5.) REPEAT (Repeat Play Mode)

Press this button to repeat all the playback automatically. "PRT ONE/DIR/ALL" will be displayed. Press again to cancel.

### 6.) RANDOM (Random Play Mode)

Press this button to play all MP3 files in random order. "RDM ON/OFF" will be displayed. Press again to cancel.

### 7.) I<< and >>I (Skip back/skip forward, fast back/fast forward)

Press those buttons to skip back or ahead one track. Press and hold for fast back or fast forward.

### 8.) USB PORT

Insert USB drive in this port for playback

### 9.) SD CARD SLOT

Insert SD card in this slot for playback

using remote control...

### 1.) POWER Use to turn receiver on/off

2.) **TUNE/SEEK** Press this button briefly to step up or down the radio dial in single step increments. Press and hold for half second to enter SEEK mode. In this mode the tuner will stop at the next strong station available.

3.) **EQ (Preset Equalizer Curves)** Press repeatedly to cycle through four preset curves FLAT, POPS, ROCK or CLASSIC.

4.) **MUTE** Press to silence the audio. Press again to return to previous volume level.

5.) **VOLUME - / VOLUME +** Use to increase or decrease volume level

6.) **LOC (Local/Distant Select)** In some areas, the reception of FM stations may be weak. Change the reception mode to LOC by pressing the button may skip the poor signal station. Press again to return to DISTANT mode.

7.) **SELECT** Press this button to cycle through the following adjustable settings:


VOLUME>BASS>TREBLE>BALANCE  
>FADER>EQUALIZER

8.) **MO/ST** In some areas, the reception of FM stations may be weak. Change the reception mode to MONO by pressing the button may improve the reception. Press again to return to STEREO

9.) **RADIO PRESET 1-6** After you preset the stations via front panel, you can use this buttons 1-6 to select the preset stations.

10.) **AMS (Auto Memories Scan)** This is the easiest way to set up the preset station in each radioband. If you press AMS, the radio will scan up all the strongest station and preset automatically. Please note, all the previous preset will be lost.

11.) **LOUDNESS** Press to increase bass output. Press again to turn off Loudness function.

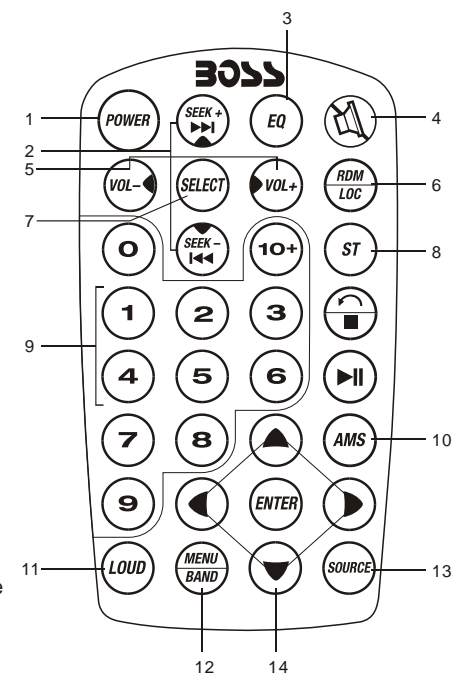

12.) **BAND** Press briefly, repeatedly to cycle through five radio bands:

FM1>FM2>FM3>AM1>AM2


13.) **SOURCE** (Input select, same as MODE on head unit) Press the button repeatedly to cycle through the audio input sources:

RADIO>CD>USB>SD CARD  
>AUX IN

### 14.) CLOCK SETTING

See Setting Clock for more detail

## CD/CD MP3 Playback Control

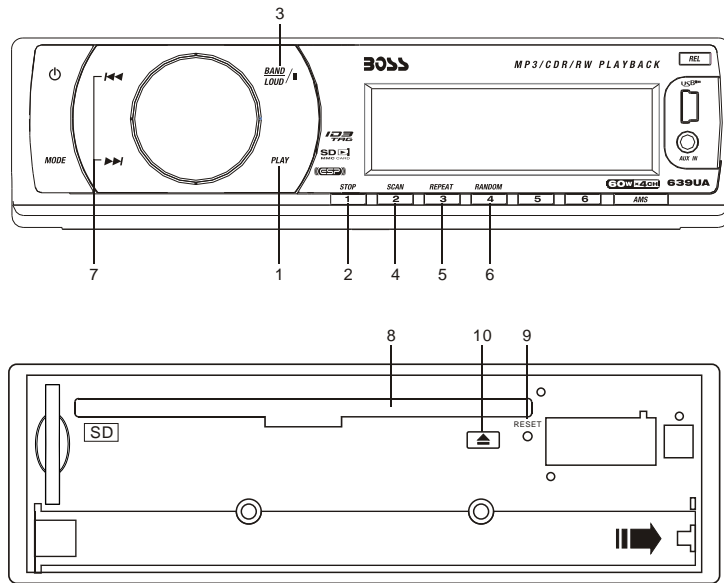

### 1.) PLAY

Files will begin to play automatically. Press Play to resume playback from pause/stop.

### 2.) STOP

Press to stop playback. Press PLAY to begin playback on the first track (NOT the track on last play)

### 3.) PAUSE

Press to pause playback. Press PLAY to resume playback from last play

### 4.) SCAN (Intro Scan)

To audition the first 10 seconds each track, press this button. Press again to cancel and begin to play the auditioned track.

### 5.) REPEAT (Repeat Play Mode)

Press this button to repeat all the playback automatically. "PRT ONE/DIR/ALL" will be displayed. Press again to cancel.

### 6.) RANDOM (Random Play Mode)

Press this button to play all MP3 files in random order. "RDM ON/OFF" will be displayed. Press again to cancel.

### 7.) I<< and >>I (Skip back/skip forward, fast back/fast forward)

Press those buttons to skip back or ahead one track. Press and hold for fast back or fast forward.

### 8.) CD SLOT

Insert CD into the slot.

### 9.) RESET

Reset the unit back to factory setting.

### 10.) EJECT BUTTON

Eject the CD by pressing this button.

using remote control....

### 1.) I<< and >>I (Skip back/skip forward, fast back/fast forward)

Press those buttons to skip back or ahead one track. Press and hold for fast back or fast forward.

### 2.) RDM (Random Play Mode)

Press this button to play all MP3 files in random order. "RDM ON/OFF" will be displayed. Press again to cancel.

### 3.) STOP

Press to stop playback. Press PLAY PAUSE to begin playback on the first track (NOT the track on last play)

### 4.) PLAY/PAUSE

Files will begin to play automatically. Press Play to pause the MP3 playback and "PAUSE" will be displayed. Press again to resume playback.

### 5.) RPT (Repeat Play Mode)

Press this button to repeat all the playback automatically. "PRT ONE/DIR/ALL" will be displayed. Press again to cancel.

### 6.) NUMERIC PAD

Press the number key during playback to select particular track. For example, #45, press 4, 5, Enter and the 45th track will begin to play.

### 7.) SOURCE (Input select, same as MODE on head unit)

Press the button repeatedly to cycle through the 5 audio input sources in order to select either USB or SD modes.

