

User's Manual

MOBILE DVD/MP3/CD
AM/FM RECEIVER



BV6500
MOBILE DVD/MP3/CD
AM/FM RECEIVER

12.2005

BOSS[®]
AUDIO SYSTEMS

BOSS Audio Systems • 3451 Lunar Court • Oxnard, CA 93030
www.bosssaudio.com
800.999.1236

BOSS[®]
AUDIO SYSTEMS

Thank you for buying this product.

Please read through these operation instruments so you will know how to operate your model properly. After reading please keep this booklet in safe place for future reference.

1 Before You Start

- Important Safeguards 4
- About this manual 4
- Precautions 5
- Maintenance 6
- Location & function of the controls 7
- Remote control 8
- Specifications 11

2 Installation

- Wiring Connections 12
- Installation 13
- Detach the Unit 15
- Cleaning the Connector 16

3 General Operations

- The Starting Animation 17
- Reset the Unit 17
- Turning the Unit On/Off 17
- Volume Control 17
- Setting the Sound Characteristics 17
- EQ Setting 17
- Turning Loudness On/Off / My Best Position 18
- Displaying and Adjusting Time 18
- Mute Function 18
- Displaying and Adjusting Time 18
- Mode Selector 18
- Sensor 18
- AUX In (optional) 18

4 DVD

- Basic Operation of DVD 19
- Playing the Previous/Next Track 19
- Playing the Track F.F./REW 19
- Stop the Playback 19
- Slow Motion Playback 19
- System Button 19
- Increase Picture Size 19
- Pause the Playback 19
- Number Buttons 20
- Repeat Playing 20
- On Screen Display 20
- Changing the Viewing Angle 20
- Changing Audio Language 21
- Changing the Subtitle Language 21
- Selecting Different Menu/Title 21
- Eject a Disc 21
- Set Up Menu 21

5 VCD/CD/MP3

- Basic Operation of VCD/CD/MP3 28
- Playing the Previous/Next Track 28
- Playing the Track F.F./REW 28
- Repeat Playing 28
- Playing Tracks in Random Order 28
- Stop the Playback 28
- Pause the Playback 28
- Scanning Tracks Automatically 28
- ID3 Function 28
- System Button 28
- Slow Motion Playback 28
- On-Screen Display 28

- Eject a Disc 28
- Number Buttons 30
- Setting the Playback Time 30
- MO/ST Selector 30
- Program Playing 30
- Playing PBC (Menu) 30

6 Tuner

- Band Selector 31
- Manual/Automatic Tuning 31
- Selecting the Stored Station 31
- DX/LOC Selector 31
- MO/ST Selector 31
- Scanning/Memorizing Stations Automatically 32
- Number Buttons 32

7 Additional Information

- Simple Troubleshooting Guide 33

IMPORTANT SAFEGUARDS


1. Be sure to connect the color coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage the vehicle's electrical system.
2. Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body.
3. Make sure all the connections are completely correct before turning on your unit.
4. When replacing the fuse(s), the replacement must be of the same amperage as shown on the fuse holder.
5. Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.
6. After completing the installation and beginning to play the unit (including replacing the battery), please remove the front panel at first, and then press RESET button on the base with pointed object (such as ball-point pen) to set the unit to initial status.

About this manual

This unit features a number of sophisticated functions ensuring superior operation. All the functions have been designed for the easiest possible use, but many are not self-explanatory. This manual will help you understand the functions and operations of the unit. This manual main explains **remote control operation**. However, in addition to those functions related with DVD/VCD/CD/MP3 operation that can only be operated by the remote control, there are also functions can be operated by the buttons provided for the main unit.

PRECAUTIONS

This unit can play the following discs only:

Type of disc	Label on the disc	Recorded material	Size of disc
DVD		Sound and moving pictures	12cm
VCD		Sound and moving pictures	12cm
CD		Sound only	12cm
MP3		Sound only	12cm

NOTE: The unit is compatible with VCD1.0/2.0/3.0 version and DVCD disc.

- **Do not attempt to modify the unit, modifying the unit may cause an accident.**
- **Stop the vehicle before carrying out any operation that could interfere with your driving.**
- **Do not work in extremely high or low temperature. Be sure the temperature inside the vehicle is between +60° C and -10° C before turning on your unit .**
- **To enjoy optimum sound and images while playing, handle the discs as follows:**

— Handle the disc by its edge to keep the disc clean, and do not touch the surface.



— Do not use your CDs with paste residue or ink attached.



— Do not use CDs with labels or stickers attached, which may leave a sticky residue while beginning to peel off. (Shown as the picture)



— Clean the discs with an optional cleaning cloth. Wipe each disc from the center out. (Shown as the picture)



Maintenance

Replacing the Fuse


Make sure the amperage matches the specified value when replacing the fuses. If the fuse is blown, check the power connection and replace with a new one. If the same problem occurs, it would be subjected to the malfunction. In such cases, please consult to the nearest service dealer.

Warning
Never use the fuse with the rated amperage more than that supplied to your unit, otherwise it will damage the unit.


Replacing the Battery

When the range of the operation of the card remote control becomes short or no functions while operating. Replace the lithium battery with a new button cell (CR2025). Make sure the battery polarity before replace.


Gently pull out the Battery Holder while pressing the Stopper.

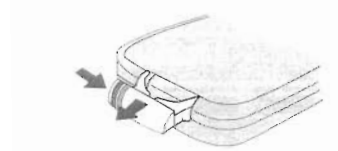

Put the button-type battery with mark(+) upward into the Battery Holder.

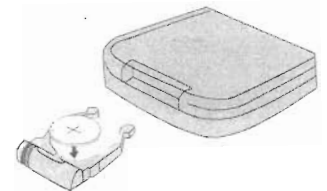

Insert the Battery Holder into the Remote Control.

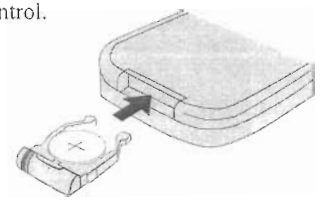

Precautions on Using Lithium Battery

Always keep the lithium battery beyond children's reach. In case swallowed, see a doctor immediately.

Cleaning the battery with a dry cloth, to ensure its perfect connected.


Make sure the proper polarity when loading with the battery.

To prevent short circuit, do not use metal tweezers to clip the battery.


Warning!
Improper handle with the battery may lead to explosion. It cannot be charged, disassembled or thrown into a fire.

Location of the Controls

Front Panel

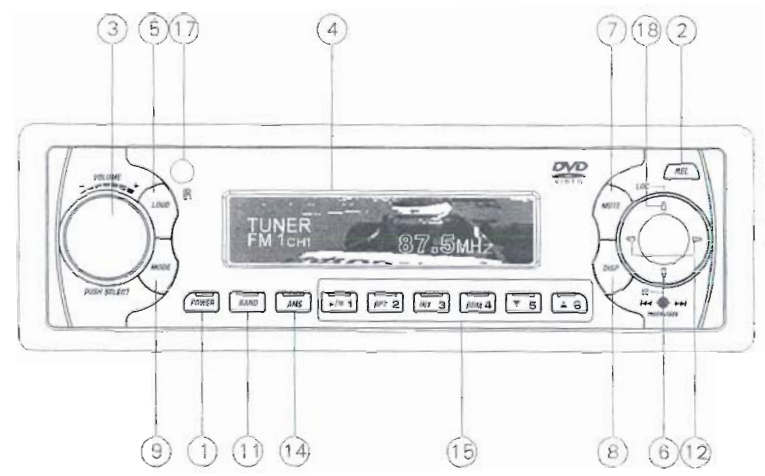


Base

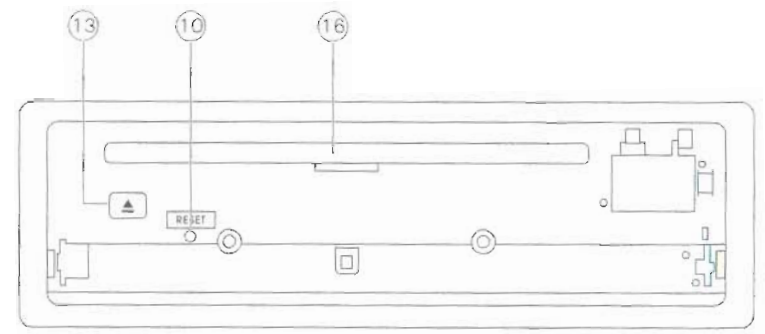

- ① **POWER button**
Press this button to turn on the unit, press it again to turn off.
- ② **RELEASE button**
Press REL button to release the front panel.
- ③ **VOL/SEL button**
Rotate (VOL) button clockwise to increase the volume level; and rotate (VOL) button anticlockwise to decrease the volume level. Press it to set the volume characteristics.
- ④ **LCD (LIQUID CRYSTAL DISPLAY)**
To display current status.
- ⑤ **LOU (MBP) button**
Briefly pressing it to turn the loudness on; keep pressing it to activate my best position function.
- ⑥ **EQ button**
Press to select the corresponding preset modes to adjust the sound quality perfectly.
- ⑦ **MUT button**
Press this button to MUTE.
- ⑧ **DSP button**
Press it to display the current mode.
- ⑨ **MODE button**
Press to select radio mode or playback mode.
- ⑩ **RESET button**
Press to set the unit to initial status.
- ⑪ **BAND (ID3) button**
During radio mode, press to select among three FM or one AM bands. During MP3 mode, press it to activate ID3.
- ⑫ **TRK/SEEK button**
Repeatedly press to do manual seek tuning and track search controls.
- ⑬ **▲ EJECT button**
Briefly pressing it to eject the disc. Keep pressing it to eject the disc compulsively.
- ⑭ **AMS button**
During radio mode, shortly press to scan each stored station 5 seconds. Hold and press it to activate automatically storing function.
- ⑮ **NUMBER BUTTONS**
During radio mode, press for preset tuning; during playback mode, press for activating ►||, RPT, INT, RDM, DOWN, UP functions.
- ⑯ **Disc Loading Slot**
- ⑰ **Infrared Sensor**
- ⑱ **LOC button**
Press this button to select the distant or local station.

Card Remote Control

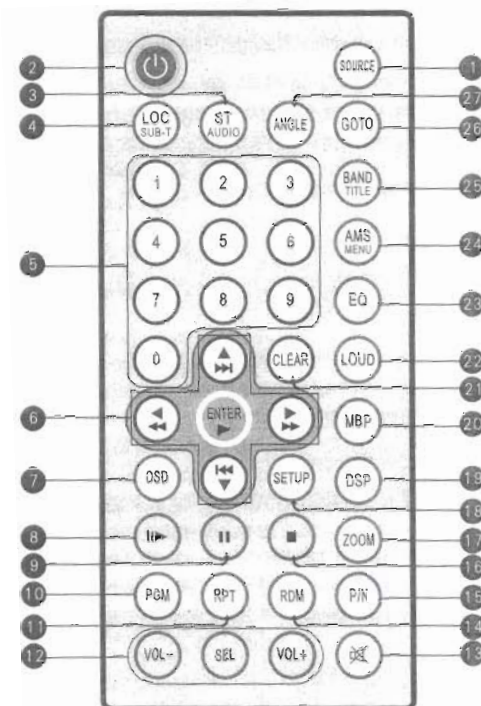

Tips:

For more information as to replacing battery, please refer to **Replacing the Battery** on page 6.

- ① **SOURCE**
Press it to select the desired mode.
- ② **PWR**
Press to turn on or off the unit.
- ③ **ST/AUDIO**
During radio mode, press it to select the mono or stereo channel; during DVD mode, press it to select the audio language.
- ④ **LOC/SUB-T**
During radio mode, press it to select the distant or local station; during DVD mode, press it to select the subtitle language.
- ⑤ **0~9 (Number) Buttons**
During radio mode, press 1-6 buttons to select the preset stations; during playback mode, press to select track directly.

- 6. **[▲][▼][◀][▶][ENTER]/[▶▶][◀◀]/[▶▶][◀◀]** ([upward][downward][leftward][rightward][enter]/[previous track][next track]/[adjusting the frequency/searching stations/F.F/F.R] Button
- 7. **OSD**
Press to display title, chapter, the elapsed time, remain time.
- 8. **▶▶**
During playback mode, press it to slowly forward.
- 9. **||**
Press it to pause or start the playback. Under the stop status, press it to play.
- 10. **PGM**
Press it to activate the program playing.
- 11. **RPT**
During playback mode, press it to start the repeat playing function.
- 12. **VOL+/VOL-/SEL**
Press VOL+ to increase volume level, and press VOL- to decrease volume level. Repeatedly press to select modes.
- 13. **MUTE**
Press it to cut down the volume output, press it again to resume volume.
- 14. **RDM**
During playback mode, press to play tracks at random order.
- 15. **P/N**
During DVD, VCD status, press it to select the video system.
- 16. **■**
Press it to stop playing.
- 17. **ZOOM**
Press to increase or decrease the picture in size.

- 18. **SETUP**
During playback mode, press it to switch among the different setup options.
- 19. **DSP**
Press to display current time.
- 20. **MBP**
Press it to activate MBP function.
- 21. **CLEAR**
Press it to eradicate mistakes.
- 22. **LOUD**
Press it to activate LOUD function.
- 23. **EQ**
Press to select the corresponding preset modes to adjust the sound quality.
- 24. **AMS/MENU**
During radio status, shortly pressing it to scan the each stored station 5 seconds; keep pressing it to activate the AMS function. During VCD/DVD playback, press it to display the root menu of the disc.
- 25. **BAND/TITLE (ID3)**
During radio mode, press to select bands. During DVD status, press it to select different titles. During Mp3 mode, press it to enter ID3 mode.
- 26. **GOTO**
press to set the playback time.
- 27. **ANGLE**
Press it to change the viewing angle during DVD playback.

Specifications

General

Power Requirement	14.4V DC (11-16V allowable)
Load Impedance	4Ω
Max. Power Output	80W X 4
Tone Controls	±10dB Bass 100Hz Treble 10KHz
Dimensions	Approx. 192 x 178 x 50 mm (d/w/h)
Mounting Dimensions	Approx. 169 X 182 X 53 mm (d/w/h)
Weight	Approx. 1.75kg

FM Section

Tuning Range (Optional)	87.5-108(MHz) (Europe) 87.5-107.9(MHz) (U.S.A.)
IF Range	10.7MHz
Usable Sensitivity (-30dB)	10dBuV
Signal-to-noise Ratio	60dB
Stereo Separation	30dB (1KHz)
Frequency Response	30-15000Hz

AM Tuner Section

Frequency Range (Optional)	522-1620(KHz) (Europe) 530-1710(KHz) (U.S.A.)
IF Range	450KHz
Usable Sensitivity (-20dB)	28dBuV

CD Player Section



VCD Signal System	PAL/NTSC
Signal-to-noise Ratio	65dB
Separation	60dB(1KHz)
Distortion	0.1%

DVD Player Section

Number of channel	2 channels
Frequency Response	5Hz to 20,000Hz
Dynamic Range	98dB
Signal-to-Noise Ratio	73dB
Wow and Flutter	Less than measurable limit

Note:
Due to continuous product improvement, specifications and design are subject to change without prior notice.


Wiring Connection

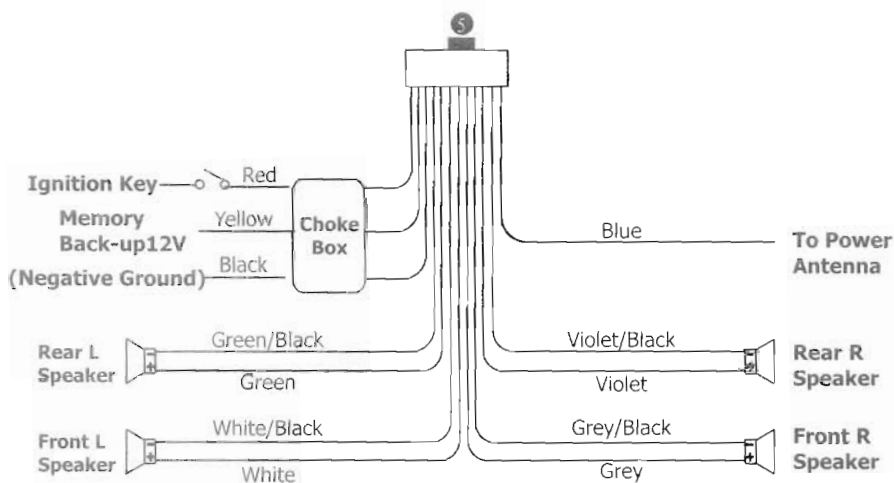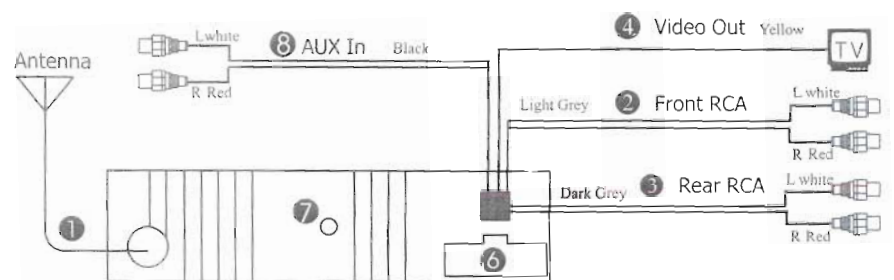


- | | |
|------------------------|--------------------------|
| ① Antenna Receptacle | ⑤ Output Plug (Male) |
| ② Front RCA | ⑥ Output Socket (Female) |
| ③ Rear RCA | ⑦ Screw Holes |
| ④ Video Out Receptacle | ⑧ AUX In (optional) |

Install the Front Panel



Put notch (A) (Shown as picture) onto shaft (B). And then slightly press into the right side.

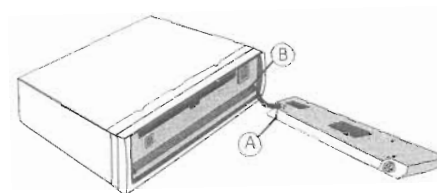

Press (REL) button in the upper right corner, and then the front panel will be folded down.

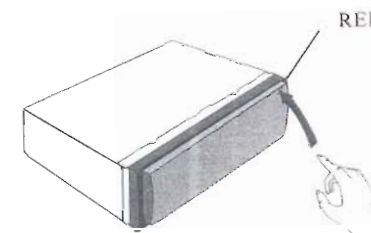


When the front panel was turned down to a position of 45°, hold and slide the front panel to left, and then pull it out.

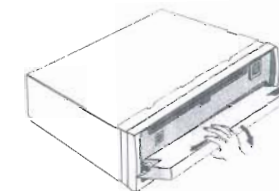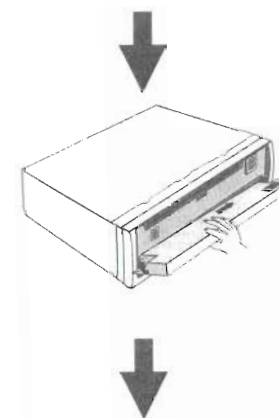

■ **Note:**

- * Never put any objects into the front panel.

Installation Method ① : DIN Front-Mount

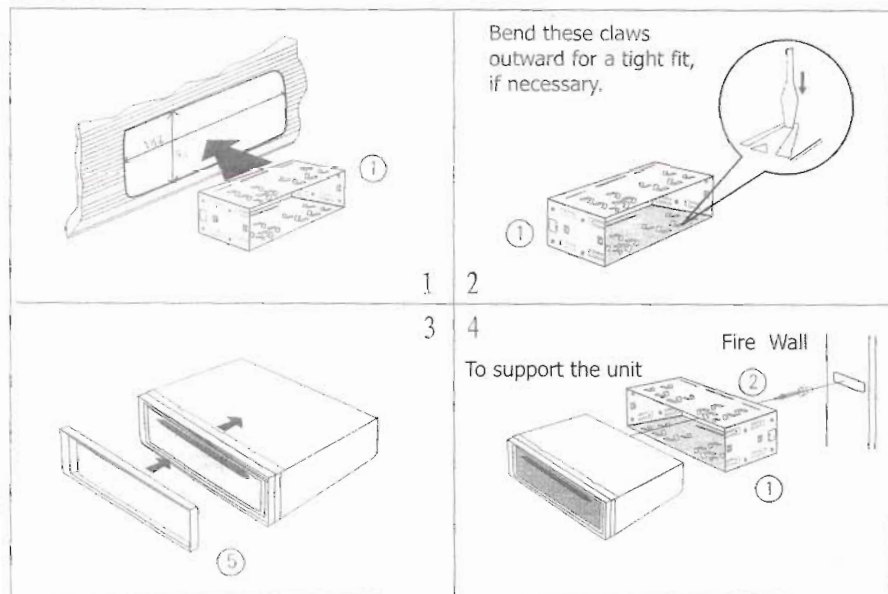


Installation Method ②

Installation using the screw holes at the sides of the unit.

1. Remove the hooks on both sides.
2. Select a position where the screw holes of the mounting bracket supplied with the car and the screw holes of the main unit become aligned (are fitted), and tighten the screws (see ④) at 2 places on each side. And then fasten them to the car.

NOTE:


- Outer Trim Frame ⑤, Hook ⑨ and Mounting Sleeve ① are not used for installation method ②.

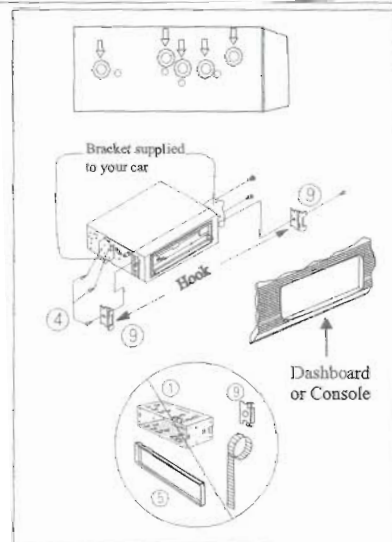


Detach the Unit

Detach the front panel before disassembling the unit. For more details regarding this section, refer to "Detach the Front Panel".


1. Take out the Outer Trim Frame after detaching the front panel.

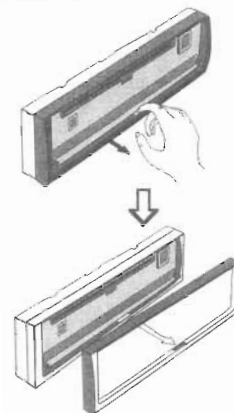

2. Insert the keys supplied to the unit at both sides of the unit (shown as illustrated) until they click. Pulling the keys makes it possible to remove the unit from the dashboard.


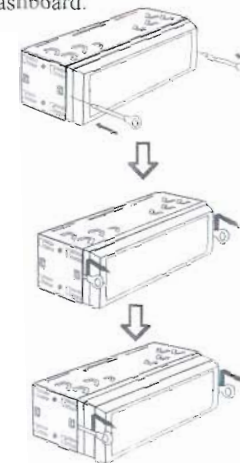


Parts List

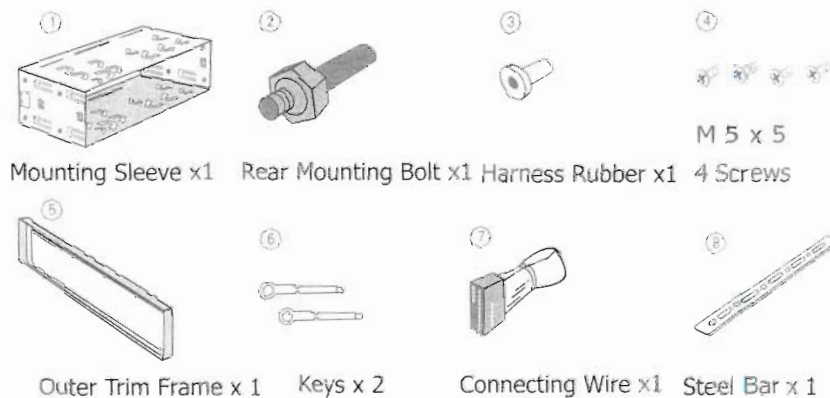

Cleaning the Connector

If the connector between the main unit and the front panel is dirty, it may result in unit's abnormal working condition. To avoid such problems happening, please detach the front panel, and clean the connector with an alcohol swab. Gently clean and avoid damaging the connector.

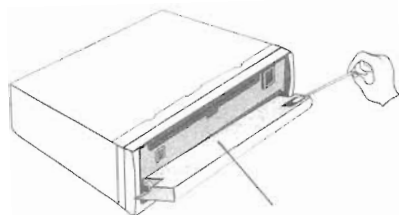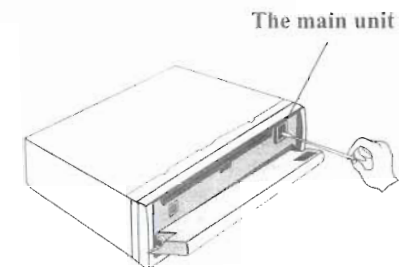

Notes:

- * For safekeeping, always shut down the generator and take out the key from the ignition before cleaning.
- Never keep your finger or any metal device touch the connector directly.

The Starting Animation

The animation appears when starting up. During operating a model, the animation appears at the lower level, and the operational information appears at the upper one. If there is no operation within 6 seconds, the LCD displays the animation automatically (no information appears).

Note:

- * The animation do not display under ID3 mode.

Reset the Unit

Operating the unit for the first time or after replacing the car battery, you must reset the unit.

Remove the front panel at first, and then Press **RESET** button on the base with a pointed object, (such as a ballpoint pen) to set the unit to initial status.

Note:

- * When some errors occur on the display, you can also press **RESET** button to resume to normal, and it will erase the clock setting and some memorized functions.
- * This function can only be operated by the head unit.

Turning the Unit On/Off

Press **PWR** button to turn on the unit, press it again, the unit is still in the waiting status. When insert a disc, the unit will automatically start playing. Keep pressing it to turn off the unit completely.

Note:

- * After the unit is off, the volume level is memorized during the area between 6 and 30. If the volume level is set less than 6, it will resume to 6; if it is higher than 30, it will resume to 30; if it is between 6 and 30, it still stores in the status which you set.
- * Pressing **PWR** button on the head unit also performs the same operation.

Volume Control


Press **VOL+** button to increase the sound level and press **VOL-** button to decrease the sound level.

Note:

- * Rotating **VOL** on the head unit also performs the same operation.

Setting the Sound Characteristics

Repeatedly pressing **SEL** button to select the desired mode in the following order:

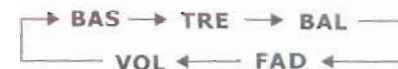

- 1 After selecting the desired mode, you can adjust the current level by pressing **VOL** buttons.
- 2 If you don't adjust **VOL** buttons within 3 seconds after selecting the desired mode, the unit will automatically return to the current mode being displayed.
- 3 when **EQ** mode is activated, press **SEL** button to select modes, **BAS/TRE** are invalid. (Shown as below)

 


Note:

- * Pressing **SEL** button on the head unit to select mode.
- * Rotating **VOL** on the head unit also performs the same operation.

EQ Setting

While listening to the popular music, classic music or rock music, you can select the corresponding preset modes to adjust the sound quality perfectly by using **EQ** button. Repeatedly pressing **EQ** button to choose the following modes in turn:

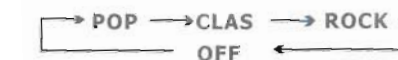

Note:

- * Bass mode and Treble mode return to initial settings when EQ system is on, "Bass" and "Treble" disappear.
- * Pressing **EQ** button on the head unit also performs the same operation.

Turning Loudness On/Off /My Best Position(MBP)

- Press **LOUD** button on the remote control to activate LOUD function. You can press this button to increase the low frequency, which can improve sensitivity for your ears. And "LOUD" appears. Press it again to shut down "LOUD" function.
- Press **MBP** button to activate MBP function. If there is no passenger in the car, you can perform MBP function and enjoy optimum sound.

LCD	F Speaker		R Speaker	
	L	R	L	R
MBP-A	0	-4dB	-4dB	-8dB
MBP-B	-4dB	0	-8dB	-4dB
MBP-OFF	0	0	0	0

Each time when you press and hold this button for 3 seconds, it will select the position as desired in the following order:



The corresponding mode will appear on the display.

If accurately adjusting the volume level needed, please use SEL button. (Refer to "Setting the Sound Characteristics" for more details)

Note:

- When activate BAL and FAD ("Setting the Sound Characteristics"), MBP mode will be turned off.
- Briefly pressing LOU/MBP on the head unit to perform LOU function; keep pressing it to activate MBP function.

Displaying and Adjusting Time

Displaying Time: Press **(8) (DSP)** button, and the current time is shown on the LCD, and it returns to original status after 3 seconds.

Adjusting Time: Press and hold **(8) (DSP)** button until the two points in the middle of the clock stop blinking, you can rotate **(3) (VOL)** button to adjust hours, press **DSP** the minutes blink, rotate **VOL** button to adjust minutes.

Note:

- press **(9) DSP** and **(12) VOL+/VOL-** on the remote control to perform the same function.

Mute Function

Press **(15) MUTE** button to shut off the sound output. Press it again to resume to previous volume level.

Note:

- Press **MUT** on the head unit also performs the same operation.

Mode Selector

Press **(28) SOURCE** button to select radio mode or playback mode.

Note:

- Pressing **MODE** on the head unit also performs the same operation.

Infrared Sensor:

Receptor **(7)** on the head unit for the card remote commander.

AUX In (optional)

You can input the audio or video frequency into the main unit to increase the volume through AUX.

Basic operation of DVD

Insert a DVD disc into the slot, the unit will automatically switch on, if a DVD disc is loaded, press **(1) SOURCE** on the remote control to start the playback.

Note:

- Pressing **(12)** button on the head unit to eject a disc.

Playing the Previous/Next Track


During DVD playback, firstly pressing **(6) ⏮** to replay the current track, press **(6) ⏮** within 3 seconds to play the previous track, press **(6) ⏭** to play the next track.

Note:

- Pressing **(12)** button on the head unit also performs the same operation.

Playing Track F.F/F.REW

Press **(6) ⏩** or **(6) ⏮** to play the track fast forward or fast rewind; each pressing, the change is as following:

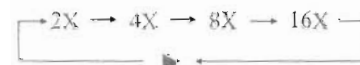

Note:

- Pressing **(12)** button on the head unit also performs the same operation.

Stop the playback


During DVD mode, firstly pressing **(16) ■** to pause playing, press **(9) ||** to play, press **(16) ■** button twice to stop playing completely, press **PLAY** button to start playing.

Note:

- Keep press **(16) ■** on the head unit also performs the same function.

Slow motion playback

 Press **(3) ⏪** to slow forward or slow backward. There are such speeds each pressing decreases the speed until the minimum speed is reached.

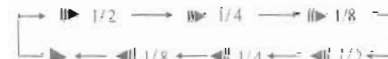


Note:

- This function is operated by using the remote control.

System Button

During DVD playback, press **(15) P/N** button to select standard TV system as following:

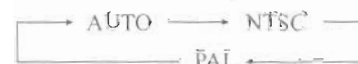


Note:

- This function is operated by using the remote control.

Increase the size of the picture

Press **(17) ZOOM** to increase the picture in size. There are such sizes as following:

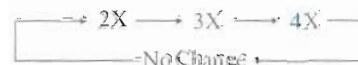

Note:

- This function is operated by using the remote control.

Pause the playback

During DVD mode, press **(9) ||** to switch pause and play mode, during stop mode, press it again to resume to the playback mode.

Note:

- Press **(16) ■** on the head unit also performs the same function.

Number Buttons

 
press **5** **Number Buttons** to input the desired tracks, then it will be played automatically.

Note:

- * This function is operated by using the remote control.

Repeat Playing

press **1** **RPT** on the remote control to replay as following:

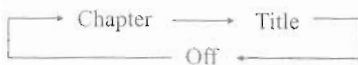


Note:

- * Pressing RPT on the head unit also performs the same operation.
- * The default setting is **DISC REPEAT**.

On-screen display

 During DVD playback, press **7** **OSD**, the monitor shows:

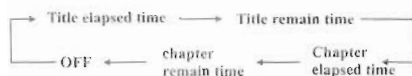

Note:

- * This function is operated by using the remote control.

Setting the Playing Time

During DVD mode, press **20** **GOTO** button to set the playing time, when the TFT display : *title/chapter/sound/captions/angle/title time/chapter time/repeat playing/time option*. Press **6** [**▲**][**▼**] to select the options, press **ENTER** to set the status. Then press **5** **NUMBER BUTTONS** or **6** [**▶**][**◀**] to set the current status.

Note:

- * This function is operated by using the remote control.

Changing the viewing angle (Multi-angle)

With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can press **21** **ANGLE** to switch among viewing angles during playback.

Selection options switch as follows:

ANGLE 1 — ANGLE 2 — ANGLE 3

Note:

- * This function is operated by using the remote control.
- * This function only operates with DVDs featuring multi-angle recordings.
- * The "Ⓜ" mark on a DVD's package indicates it features multi-angle scenes. The number in the "Ⓜ" mark indicates the number of angles from which scenes were shot.
- * If you press **ANGLE** during fast forward/fast reverse or pause, fast forward/fast reverse or pause is canceled and normal playback resumes but the viewing angle does not change.

Changing audio language (Multi-audio)

DVDs can provide audio playback with different language. With DVDs featuring multi-audio recordings, you can press **5** **AUDIO** to switch between language and audio systems during playback.

Selection options switch as follows:

AUDIO 1 — AUDIO 2 — AUDIO 3

Note:

- * This function is operated by using the remote control.
- * This function only operates with DVDs featuring multi-audio recordings.
- * The number in the "Ⓜ" mark on a DVD's package indicates the number of recorded languages/audio systems.

Changing the subtitle language (Multi-subtitle)

With DVDs featuring multi-subtitle recordings, You can press **4** **SUB-T** to switch between subtitle languages during playback.

Selection options switch as follows:

Subtitles 1 — Subtitles 2 — Subtitles OFF

Note:

- * This function is operated by using the remote control.
- * This function only operates with DVDs featuring multi-subtitle recordings.
- * The number in the "Ⓜ" mark on a DVD's package indicates the number of recorded subtitle languages.

Selecting Different Menu/Title

Under DVD playback mode, press **24** **MENU** or **25** **TITLE** to return to the root menu or the title menu, the monitor display all the chapters or all titles. You can press **6** and **5** **Number Buttons** on the remote control to select different chapter or title.

Note:

- * This function is operated by using the remote control.

Eject a Disc

Firstly press **2** **REL** on the base, then press **13** **▲** button to eject a disc.

Notes:

- * This function can only be operated by the head unit.

SET UP MENU

During DVD playback, press **18** **SET UP**, the screen will display system setting picture. the user can select some relative constant parameters. The user also can set it as needed by moving the cursor and using **6** [**▲**][**▼**][**◀**][**▶**] buttons, and then press **6** **ENTER** to execute the selecting or entering item.

Note:

- * The selections are the preferred options that will be chosen if they are available on a disc. If the disc that is inserted does not have the preferred option then the disc's own preference will be used.
- * Regarding **SETUP MENU**, please refer to the following pages for more details.
- * Some functions varies depending on the types of models or formats of the disc.

--General Setup Page--

TV Display Example showing how to set TV Display mode:

(Press ▲ or ▼)

--General Setup Page--

TV Display	Wide
Angle Mark	On
OSD Lang	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV Display	Wide	Normal/PS
Angle Mark	On	Normal/LB
OSD Lang	Eng	Wide
Captions	Off	
Screen Saver	On	

Set TV Display mode

--General Setup Page--

Captions Example showing how to set captions on/off:

(Press ▲ or ▼)

--General Setup Page--

TV Display	Wide
Angle Mark	On
OSD Lang	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV Display	Wide	
Angle Mark	On	
OSD Lang	Eng	
Captions	Off	On
Screen Saver	On	Off

Closed Captions

Angle Mark Example showing how to set picture mode:

(Press ▲ or ▼)

--General Setup Page--

TV Display	Wide
Angle Mark	On
OSD Lang	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV Display	Wide	
Angle Mark	On	On
OSD Lang	Eng	Off
Captions	Off	
Screen Saver	On	

Set Angle Mark

Screen Saver Example showing how to set Screen Saver on/off:

(Press ▲ or ▼)

--General Setup Page--

TV Display	Wide
Angle Mark	On
OSD Lang	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV Display	Wide	
Angle Mark	On	
OSD Lang	Eng	
Captions	Off	
Screen Saver	On	On

Screen Saver

OSD Lang Example showing how to set language mode:

(Press ▲ or ▼)

--General Setup Page--

TV Display	Wide
Angle Mark	On
OSD Lang	Eng
Captions	Off
Screen Saver	On

Go To General Setup Page

(Press ►, ▲ or ▼, then press ENTER)

--General Setup Page--

TV Display	Wide	
Angle Mark	On	
OSD Lang	Eng	English
Captions	Off	
Screen Saver	On	

Set OSD Language

--Dolby Digital Setup--

Dual Mono Example showing how to set stereo mode:

(Press ▲ or ▼)

--Dolby Digital Setup--

Dual Mono
Dynamic

➔

(Press ▶, ▲ or ▼, then press ENTER)

--Dolby Digital Setup--

Dual Mono	Stereo
Dynamic	L-Mono
	R-Mono
	Mix-Mono

Dual Mono (1+1) Setup

Go To Dolby Digital Setup

Dynamic Example showing how to set dynamic range compression:

(Press ▲ or ▼)

--Dolby Digital Setup--

Dual Mono
Dynamic

➔

(Press ▶, ▲ or ▼, then press ENTER)

--Dolby Digital Setup--

Dual Mono	
Dynamic	Full
	3/4
	1/2
	1/4
	Off

Set DRC off

Go To Dolby Digital Setup

---Preference page---

TVType Example showing how to set TV type:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	
Disc Menu	Eng	
Parental		
Password		
Default		

Go To Preference Page

➔

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	PAL
Audio	Eng	Auto
Subtitle	Eng	NTSC
Disc Menu	Eng	
Parental		
Password		
Default		

Set TV Standard

Audio Example showing how to set Audio language:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	
Disc Menu	Eng	
Parental		
Password		
Default		

Go To Preference Page

➔

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	
Audio	Eng	English
Subtitle	Eng	
Disc Menu	Eng	
Parental		
Password		
Default		

Preferred Audio Language

Subtitle Example showing how to set subtitle language:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	
Disc Menu	Eng	
Parental		
Password		
Default		

Go To Preference Page

➔

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	English
Disc Menu	Eng	Off
Parental		
Password		
Default		

Preferred subtitle Language

---Preferences page--

Disc Menu Example showing how to set Disc Menu Language:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitle	Eng
Disc Menu	Eng
Parental	
Password	
Default	

Go To Preference Page

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	
Disc Menu	Eng	English
Parental		
Password		
Default		

Preferred Menu Language

Parental Example showing how to set parental control:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitle	Eng
Disc Menu	Eng
Parental	
Password	
Default	

Go To Preference Page

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	2	G	▲
Audio	Eng	3	PG	
Subtitle	Eng	4	PG 13	
Disc Menu	Eng	5	PGR	
Parental		6	R	
Password		7	NC 17	
Default		8	Adult	
			Off	

Set Parental Control

Password Example showing how to set password, and the default password is 8888.

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitle	Eng
Disc Menu	Eng
Parental	
Password	
Default	

Go To Preference Page

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto	
Audio	Eng	
Subtitle	Eng	
Disc Menu	Eng	
Parental		
Password		Change
Default		

Change Password

---Preferences page--

Default Example showing how to set load factory setting:

(Press ▲ or ▼)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitle	Eng
Disc Menu	Eng
Parental	
Password	
Default	

Go To Preference Page

(Press ▶, ▲ or ▼, then press ENTER)

--Preference Page--

TV Type	Auto
Audio	Eng
Subtitle	Eng
Disc Menu	Eng
Parental	
Password	
Default	Reset

Load Factory Setting

Basic operation of VCD/CD/MP3

Insert a disc into the slot, the unit will automatically switch on, if a disc is loaded, press **1 SOURCE** to start the playback.

Note:

- * You can eject a disc by pressing **▲** on the base.

Playing the Previous/Next Track

During Mp3 playback, press **6 ▲** to play the previous track, press **▼** to play the next track.

During VCD/CD playback, firstly pressing **6 ◀** to replay the current track, press **6 ◀** within 3 seconds to play the previous track, press **▶** to play the next track.

Note:

- * Pressing **12** button on the head unit also performs the same operation.

Playing Track F.F/F.REW

Press **6 ▶▶** or **◀◀** to play the track fast forward or fast rewind; each pressing, the change is as following:



Note:

- * Pressing **13** button on the head unit also performs the same operation.

Repeat Playing

During playback, press **11 RPT** to replay the current track. Press it again to cancel this function.

Note:

- * Pressing RPT on the head unit also performs the same operation.
- * The default setting is Disc Repeat.

Playing Tracks in Random Order

During VCD/CD playback status, when pressing **14 RDM** button on the remote control, the unit plays any track at random under the directory which you select. Press **RDM** again to return to normally playing.

Note:

- * Pressing RDM on the head unit also performs the same operation.

Stop the playback

During Mp3 mode, press **16 ■** to pause playing, press it again to play the current track.

During VCD/CD mode, firstly pressing **16 ■** to pause playing, press **9 ||** to play, press **■** button twice to stop playing completely, press **PLAY** button to start playing.

Note:

- * keep press **▶** on the head unit also performs the same function.

Pause the Playback

During playback, press **9 ||** button to suspend the playback, Press it again to return to normal playback.

Note:

- * Pressing **▶** on the head unit also performs the same operation.

Scanning Tracks Automatically

During VCD/CD status, press **13 INT** button to play the first 10 seconds of each track on the disc, and the display shows *the track number and the elapsed time*.

Notes:

- * This function can only be operated by the head unit.
- * It is valid in DISC REPEAT mode.
- * During VCD mode, to select the page by using **6** button.

ID3 Function

During MP3 status, press **25 BAND** button to switch between ID3 ON and ID3 OFF. During ID3 ON mode, the LCD displays the current moving Mp3 information. During ID3 OFF mode, to perform the common Mp3 operation directly.

Notes:

- * Pressing **BAND** on the head unit also performs the same operation.

System Button

During VCD playback status, press **15 P/N** button to set the TV standard to AUTO, NTSC or PAL system.

Note:

- * This function is operated by using the remote control.

Slow motion playback

During VCD mode, press **8 ▶▶** to slow forward or slow backward. There are such speeds each pressing decreases the speed until the minimum speed is reached.



Note:

- * This function is operated by using the remote control.

Increase the size of the picture

During VCD mode, press **17 ZOOM** to increase the picture in size. There are such sizes as following:

 


Note:

- * This function is operated by using the remote control.
- * To perform this function with the **6** button.

On-screen display

During VCD/CD playback, press **7 OSD**, the monitor shows:

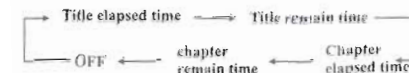

Note:

- * This function is operated by using the remote control.

Eject a Disc

Firstly press **2 REL** on the base, then press **13 ▲** button to eject a disc.

Notes:

- * This function can only be operated by the head unit.

Number Buttons

During VCD status, you can select any track directly by using **5** **Number Buttons(0~9)**. For example, if you need the **15th** track, you can firstly press **Button 10+**, and then press **Button 5**, the corresponding track (**15th**) will be played.

Note:

- * This function is operated by using remote control only.
- * The continuously pressing should be within every 3 seconds.

Setting the Playback Time

During CD playback, firstly press **26** **GOTO**, and TFT shows : *disc playback time:--:--*, press your desired time of the playback by using number buttons.

Secondly press **GOTO** button, *the tracks time* appears on TFT, also input your desired numbers to play the current time of your selection.

During VCD mode, press **26** **GOTO** button to set the playing time, when the TFT display : *title/chapter/sound/captions/angle/title time/chapter time/repeat playing/time option*. Press **6** [▲] [▼] to select the options, press **ENTER** to set the status. Then press **5** **NUMBER BUTTONS** or **6** [▶] [◀] to set the current status.

Note:

- * This function is operated by using the remote control.

MO/ST Selector

During VCD playing, repeatedly press **3** **AUDIO** button to select the mode as bellow:

Mono left → Stereo → Mono right

Note:

- * This function is operated by using the remote control.

Program Playing

During VCD/CD mode, press **10** **PGM**, the TFT displays the program menu. Pressing **NUMBER BUTTONS** to select the track Number and then press **6** to move the cursor to **START**, press **ENTER** to start program playing; move the cursor to **EXIT** and press **ENTER** to exit the program playing. Move the cursor to **◀** and press **ENTER** to the last page; move the cursor to **▶** and press **6** **ENTER** to the next page.

During this process, press **16** **■** to cancel the program playing.

Note:

- * The function is only valid on remote control.

Playing PBC (Menu)

 
 
During VCD status, firstly pressing **25** **TITLE**, PBC playback starts and *the menu of entire disc* appears on the monitor. And then you can select your favorite track by using **Number Buttons 5**. When a track is playing, you can press **16** **■** button to return to the menu if you would like to end the track and select others. To cancel PBC playing, press **25** **TITLE** button again.

Note:

- * This function is operated by using the remote control.
- * PBC playing confirms to version 2.0 of SVCD/DVD disc only.

Band Selector

During radio status, repeatedly press **25** **BAND** button to select bands in the following order:

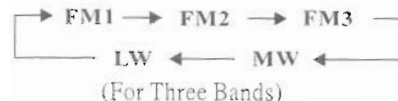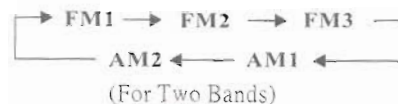

Note:

- * Pressing **1** **BAND** button on the head unit performs the same function.
- * Hold and press **BAND** button to change the FM between USA and Europc.

Manual/Automatic Tuning

Manual Tuning: Briefly pressing **6** (▶▶ or ◀◀) button on the remote control continuously to select a station downward or upward respectively.

Automatic Tuning: Press and hold **6** (▶▶ or ◀◀) button for more than 3 seconds, the radio automatically searches a station downward or upward respectively and plays when it finds a station.

Note:

- * Pressing **1** button on the head unit performs the same function.

Selecting the Stored Station

During radio mode, press **6** ▲ to select the upward stored station, press ▼ to select the downward stored station.

Note:

- * This function is only operated by using remote control.

DX/LOC Selector

During radio status, press **4** **LOC** button on the remote control to select strong or weak station reception.

- 1 It is set to LOC mode when **4** **LOC** button is first pressed. "LOC" appears on the display and only local station is available.
- 2 It is switched to DX mode when **4** **LOC** is pressed again. Both distance and local stations can be received.

Notes:

- * The initial mode is DX mode.
- * LOC mode is functional only in selecting and memorizing stations.
- * Pressing LOC on the head unit performs the same function.

MO/ST Selector

During radio status, you can press **3** **ST** button on the remote control to select **Mono mode** or **Stereo mode**.

- 1 Stereo reception is charged when "ST" and "◻" appear.
- 2 It is switched to **MONO** mode when "ST" and "◻" disappear.

Note:

- * This function is operated by pressing the remote control only.

Scanning/Memorizing Stations Automatically

During radio status, you can press **AMS** button on the remote control to scan each stored station 5 seconds respectively which stored in **Number Buttons** (from 1 to 6). You can press the corresponding **Number Buttons** or **AMS** button when your desired station is charged. And it starts playing that station.

When press and hold **AMS** button, it will activate automatically memory storing function. The radio automatically selects a station and has it stored in any one of the **Number Buttons** from 1 to 6.

▣ Notes:

- * Pressing **AMS** and **NUMBER BUTTONS** button on the head unit perform the same function.

Number Buttons

During radio mode, **Number Buttons from 1 to 6** can help you store your favorite station. You can follow the steps as below:

When receiving a station, press and hold any one of the **Number Buttons** until “**CH**” appears in the LCD, which indicates that station is already stored in the corresponding number button.

You can store up to 18 FM stations (6 each for FM1,FM2,FM3), up to 12AM stations (6 each for AM1/MW and AM2/LW).

▣ Note:

- * This function is operated by pressing the remote control only.

Simple Troubleshooting Guide

The following checklist might help to solve the problems which you meet when using the unit. Please double check and make sure if the connection and the procedure of the operation is properly before using the checklist below .

Problem	Cause/Solution
No power.	<ul style="list-style-type: none"> • Check and make sure whether the fuse is blown, replace with the proper value if necessary.
Some errors occur in the LCD or no function when pressing the button.	<ul style="list-style-type: none"> • Press RESET button.
Unable to receive stations.	<ul style="list-style-type: none"> • Check and make sure whether the antenna is inserted or the antenna is properly connected, if not, insert the antenna or connect it properly.
Poor effect on receiving a station.	<ul style="list-style-type: none"> • Antenna may not be the proper length. Make sure the antenna is fully extended: if broken, replace the antenna with a new one. • The antenna is poorly grounded, check and make sure the antenna is properly grounded at its mounting location. .
CDs cannot be loaded.	<ul style="list-style-type: none"> • A CD is loaded in the mechanism.
Sound skips.	<ul style="list-style-type: none"> • The CD is dirty or damaged.
No images.	<ul style="list-style-type: none"> • The Video line from main unit to the TV is not connected properly.
Images skip.	<ul style="list-style-type: none"> • Improper setting of the color system. Set the color system to “PAL” or “NTSC” according to the connected television.

Note:

If any of the problem persist after check list had been made, consult your nearest service dealer. Never attempt to disassemble your unit by yourself.

 *Due to continuous product improvement, the operations are subject to run the model.*