

User's Manual

BV7986

**IN-DASH AM/FM
DVD/MP3/CD RECEIVER WITH
4.5-INCH WIDESCREEN
TOUCHSCREEN TFT MONITOR
WITH USB PORT, SD MEMORY CARD PORT
AND FRONT PANEL AUX INPUT**



BV7986

**IN-DASH AM/FM
DVD/MP3/CD RECEIVER WITH
4.5-INCH WIDESCREEN
TOUCHSCREEN TFT MONITOR
WITH USB PORT, SD MEMORY CARD PORT
AND FRONT PANEL AUX INPUT**

08.2008



iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

tech support: www.bossaudio.com/support

BOSS®
AUDIO SYSTEMS

BOSS Audio Systems • 3451 Lunar Court • Oxnard, CA 93030
www.bossaudio.com
800.999.1236

BOSS®
AUDIO SYSTEMS



BV7986

*In-Dash AM/FM DVD/MP3/CD Receiver With
4.5" TFT Monitor*

CONTENTS

Welcome	3
Warning.....	3
Note	4
Features.....	5
Basic Operation	6
Panel Arrangement	7
Basic Functions	8
Main Menu Touch Operation	10
OSD Setup	11
Adjust Mode	12
Remote Control Function	13
Loading	15
Disc Play Touch Operation	16
DVD Mode.....	17
RDS User Operation	19
Radio Operation	21
DVD Basic Operation.....	22
VCD Basic Operation.....	33
CD/MP3 Basic Operation	36
Music Surroundings Setting	38
EQ Setting	39
Audio Frequency/Tone	40
Other Play Mode	41
Trouble Shooting.....	42
Wiring Diagram	43
Specifications	44

WELCOME

Thank you for enjoying our series of digital car A/V product.

To properly use this product, please go through this instruction manual for installation and operation, put it in a safe place for future use!

WARNING

1. Please keep the disc slot clean, wipe it off when there is some dirt on it. You should wipe off any dirt on the disc before you place it into the unit. If the disc is dirty and you place it inside the unit, it will cause the unit to go into an error and will not play the disc. Please ask professional to clean the laser.
2. Playing the radio at higher volumes for a long period of time may cause hearing issues. You should play this unit at a moderate listen level.
3. This unit is set up by precision parts. If you open up this unit, you will void any and all of your warranty.
4. Please do not touch LCD display with any hard object so that you prevent it from getting scratched or damaged.
5. To avoid an accident caused by watching the LCD screen. This unit has a vehicle lock out wire so that you will not be allowed to watch a video while driving down the road.
6. This unit is for 12V and negative ground system car.
7. This TFT LCD display is motorized. Please do not try and push or pull on the display by hand so that you can avoid any damage to the motorized construction.




NOTE:


We keep improving this product all the time. There may be some changes in it that are not in this manual.

INSTRUCTIONS

NOTE

- This unit can play the following disc

MODE	ICON	CONTENT	DISC SIZE
DVD		Sound, image	12cm
VCD		Sound, image	12cm
MP3	<i>MP3</i>	Sound only	12cm
CD		Sound only	12cm

Note: 1. This unit is compatible with MP4/DVD/VCD1.0/2.0/3.0 version, DVD, CD-R, CD-RW, MP3, WMA, JPEG.
2. When playing a DVD, VCD, MP3, CD disc the display will auto identify the disc and show corresponding word.  When appears on the display, that means that there is no function, please choose another mode.

SPECIFICATIONS:

Power supply	DC 12V
Power range	10.8-16.0 DC
Max operate current	10A
Dimensions	155X182X53MM
Ground system	Negative ground

FM tuner

European frequency range	87.5-108MHz
USA frequency range	87.5-107.9MHz
Signal/Noisse ratio	55dB
Stereo separation	30dB
Search station volt	20-30Buv
Distortion rate	1.5%

AM tuner

European frequency range	522-1620MHz
USA frequency range	530-1710MHz
Limit noise sensitivity	32dB

DVD PLAYER

Signal/Noise ratio	70dB
Frequency response	20Hz-20KHz

FEATURES

DVD PLAYER

1. MPEG-4 Decoder Technology
2. Compatible with MP4 (AVI/5.X), DVD (DVD-R/DVD-RW), VCD, SVCD, CD-RW, WMA, MP3, JPG
3. Supporting Multiple Subtitles, Angles, Languages
4. Child lock function
5. 4-Channel Audio Output
6. Pause, Play, Up/Down, Stop, Zoom, PBC Function

RADIO

1. AM/FM Radio Tuner
2. 30 Radio Preset Stations (18FM, 12AM)

LCD DISPLAY

1. 4.5" - 16:9 TFT LCD Display
2. Touchscreen
3. Motorized Faceplate
4. Adjustable Motorized Angle

INSTRUCTIONS

BASIC OPERATION

1. SOURCE ON/OFF

Press SRC button on panel or PWR button on remote control quickly to power on.
Press SRC button on panel or PWR button on remote control longer to power off.

2. PLAYING SOURCE CHOOSE

Press SOURCE button on remote control, unit will switch sources in the following sequence: RADIO → DVD → AUX

3. MUTE CONTROL

 
Press MUTE button on panel or MUTE button on remote control shortly to turn off sound output, press again to back to sound output.

4. VOLUME ADJUSTMENT

- 1) Press VOL+/VOL- button on panel, VOL+/VOL- button on remote control or touch button on display to adjust volume level.
- 2) The volume setting on this unit is 0 - 39.

BASS, TREBLE, BALANCE & FADER ADJUSTING (SELECT)

Press SEL button on remote control or SELECT button on the panel to choose your desired Bass, Treble, Balance & Fader level:



NOTE:

- 1) DVD playing mode, MBP & User will be automatically activated.
- 2) After 5 seconds you choose desired mode, do not adjust volume button. The mode will automatically take you back to status before adjustment.

5. RESET

 
- 1) If unit is not working correctly, you should press the RES button. This will reset the radio and should start working correctly afterwards.
- 2) After reset, all settings will resume back to the factory default settings.

INSTRUCTIONS

WIRING DIAGRAM

This player is equipped with ISO standard connector, please follow below instruction:

- Red - ACC ON (+12V)
- Yellow - 12 V Constant
- Black - Ground wire
- Blue - Power Antenna / Remote Amp Turn On
- Orange - Back-Up Camera Trigger (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+/-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green - Left rear speaker (+/-)
- Pink - Parking Brake (-)

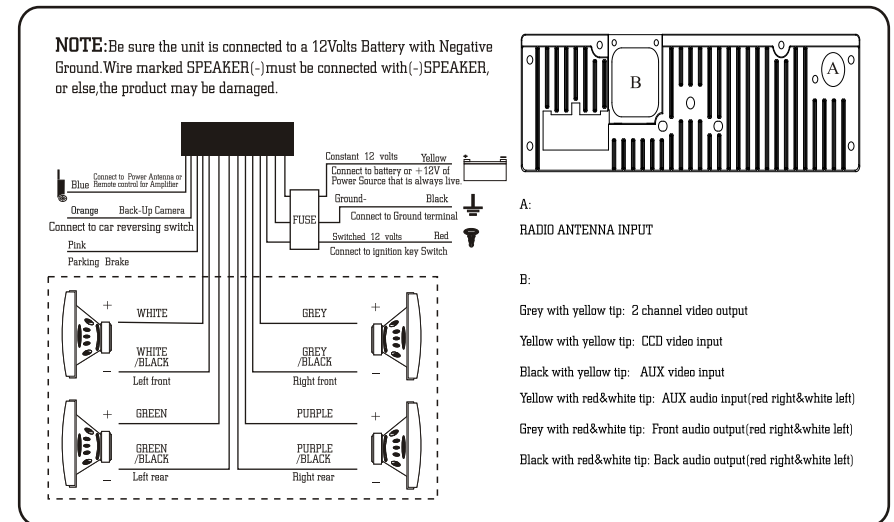

Note:

The "PARKING BRAKE" wire must be connected to the parking brake system of your car. When the parking brake is engaged, the LCD will be allowed to view your video. If not, the screen will produce an image saying, "PARKING BRAKE". This is a safety feature designed for the driver not to watch a video while driving. The video output on this unit will not be affected by this.


INSTRUCTIONS

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Can not power on	Check whether power fuse melt or not	Change fuse same as the old one
	Some factor cause MPU wrong operation	Press RESET button on the panel by pen point, then, power on
After ignition switch off, setting information all lose	Wrong connection between ignition line ACC and Constant 12 Volt wire	Change the wiring around
Remote control no function	No enough power supply from battery	Change battery in remote control
Poor performance of radio station	Improper length of antenna, poor connection of antenna grounding	Check whether antenna is connected or not, or poor connection
Can not load disc	The disc will not go in all the way	Remove the 2 screws on top of the radio
Can not play disc	Disc is scratched	Change new disc
	Put wrong side of disc into unit	Slot in the disc with sign side up
	Lens has dirty	Clean lens by lens clean disc
Can not switch language/subtitle	There is only one language/subtitle in disc	If disc is not with multi-language/subtitle, it cannot switch language/subtitle
No image	Video line between unit and TV is not properly connected	Reconnect lines

INSTRUCTIONS

 PANEL ARRANGEMENT

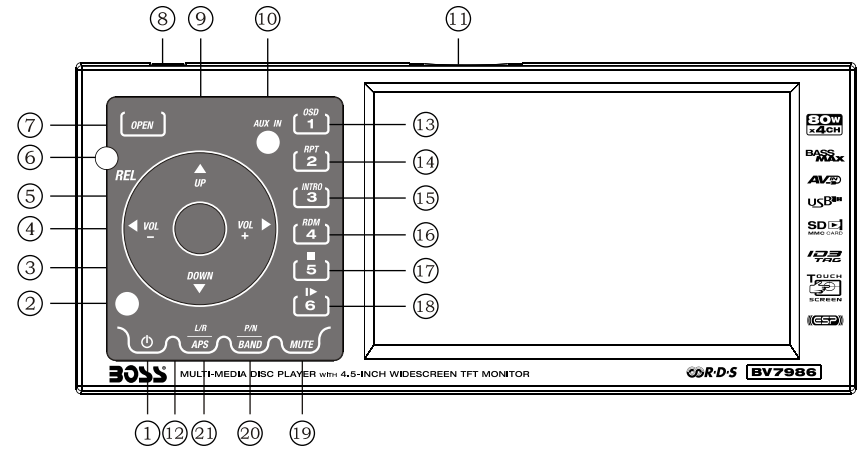

- ① SRC Button
- ② IR Eye Window
- ③ Select Button
- ④ VOL - Button
- ⑤ VOL + Button
- ⑥ Panel Release Button
- ⑦ OPEN Button
- ⑧ USB PORT
- ⑨ UP Button
- ⑩ Aux In Jack
- ⑪ SD SLOT
- ⑫ DN Button
- ⑬ Number button M1/Disc info button
- ⑭ Number button M2/Repeat Play button
- ⑮ Number button M3/Intro scan button
- ⑯ Number button M4/Play random play button
- ⑰ Number button M5/Stop button
- ⑱ Number button M6/Play/Pause button
- ⑲ Mute Button
- ⑳ Band Button
- ㉑ APS Button (R/L sound switch)

1. SRC Button (Power Button/Audio Mode Switching Button)

Press this button to power on. Press it shortly to switch audio source modes. Press it longer to power off.

2. Reception Window for Remote Control Signal (IR)

It is able of receiving infrared signals launched by the remote control matching the unit.

3. Select Button

Press this button to adjust each function setting according to everyone's favorite. After you choose one function setting mode, you can use voice adjust button for adjustment.

4. VOL (-) Button

Press this button to reduce the volume.

5. VOL (+) Button

Press this button to increase the volume.

6. REL (Panel Release Button)

Press this button to release the panel.

7. OPEN Button

In other audio source, press this button to slide up or down the display. At that time, load the disc, unit will play it and close the display. If there is a disc inside, the unit will auto eject disc.

8. USB Slot

Connect the USB memory to this socket, and the unit can play music format files supported by this unit in the USB memory.

9. Up Button

Short press on this button to make the monitor move upwards.
Longer press on this button will make the monitor move to the top position.

10. AUX IN (Audio Input Jack)

You can input another audio source into this location, i.e. an iPod.

11. SD Input

Connect the SD memory card to this socket, and the unit can play MP3 music.

12. DOWN Button

Short press this button to make the monitor downwards steply;
Longer press this button to make the monitor downwards to the lowest position.

13. M1/OSD

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button to display the disc location and playing time of the current music.

14. M2/RPT (Repeat Playback)

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button to repeat the current track indefinitely.

15. M3/INT (Intro Scan)

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button to start or stop the intro scan function.


OTHER PLAY MODE

AUX IN:

 
AUX IN OPERATION

- 1) Press "Source" button on remote control or touch "AUX" on the touch screen, to switch to AUX mode.
- 2) This will allow you to listen and or watch any source that you have plugged into this section of the radio.
- 3) This unit has 1 - Video RCA input & 1 pair of Audio RCA's for this feature.

CCD (Back-Up Camera)


- 1) If there is a back-up camera installed onto your car, you will need to connect it to the CCD video input.
- 2) When you are backing up the car there you will see this image  on your screen.
- 3) You can set CCD image according to your car's own position in general setting mode.

AUDIO FREQUENCY

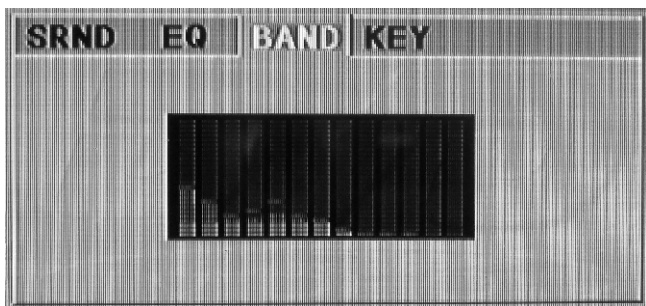

This function shows that the effect of standard audio output.

 TONE

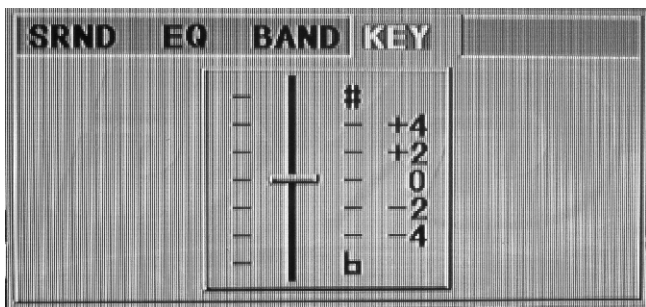

Note: You can change the timbre of the sound in DVD mode. We suggest keep it in the original place.

16. M4/RDM(Random playback)

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button to play fracks on the disc in random order.

17. M5/STOP

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button for to stop playback.

18. M6/PLAY

In radio mode, press this button to hear radio preset.
In disc playback mode, press this button for Play/Pause.

19. Mute Button

Press this button to shut off sound output, repress this button to resume sound output.

20. Band Selection Button/TV System Format Selection Mode

In radio mode, press this button to switch bank, every time to choose band, the Sequence is as follows: FM1→FM2→FM3→AM1→AM2



In playing state, press this button to switch video system, AUTO, NTSC, PAL.

21. APS (Browse/Auto Scan & Store Radio Stations/Display)

In radio mode, press this button to store the strongest radios stations to the presets on this radio. Press and hold this button and it will change it from Stereo to Mono.

 
22. RESET Button

Press this button to make the unit back to the mode default.


23. Disc Opening

24. RESET light


25. Slot Indicator Light

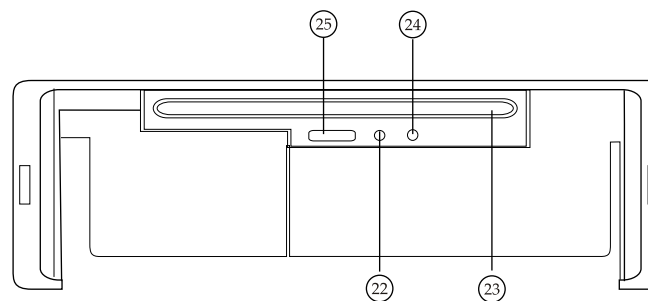


MAIN MENU TOUCH OPERATION (PIC 1)

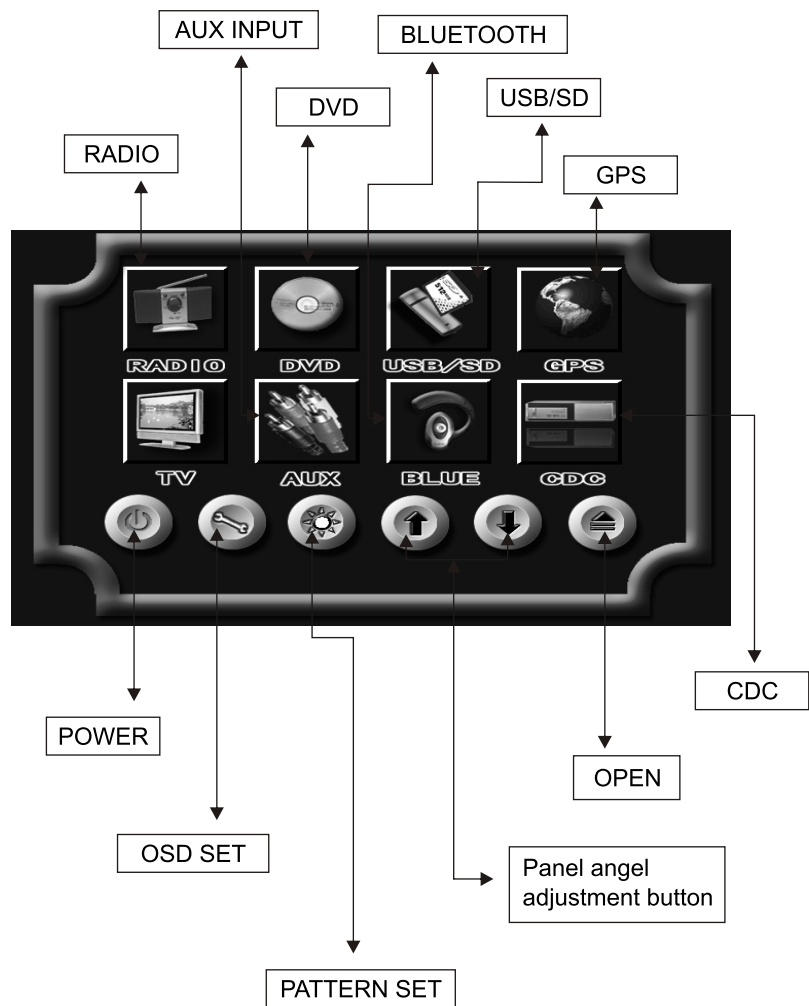 

EQ SETTING

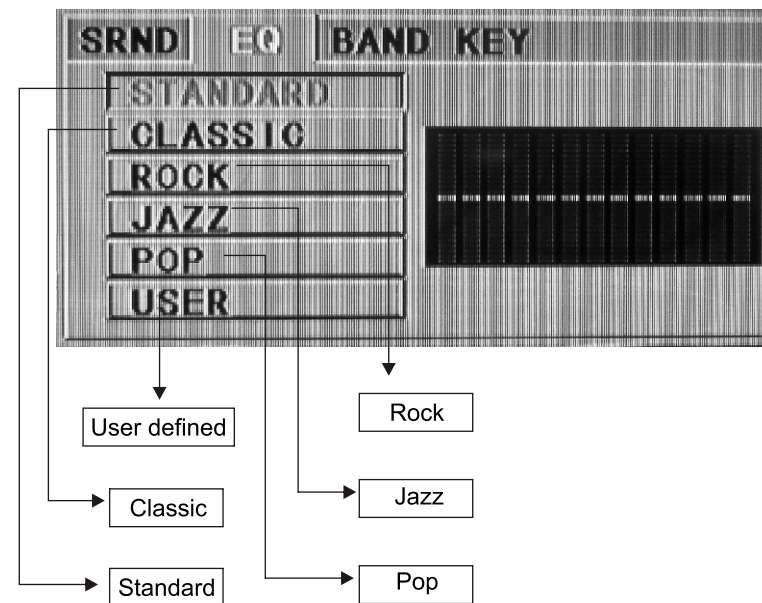 


MUSIC SURROUNDINGS SETTING (PIC 7)

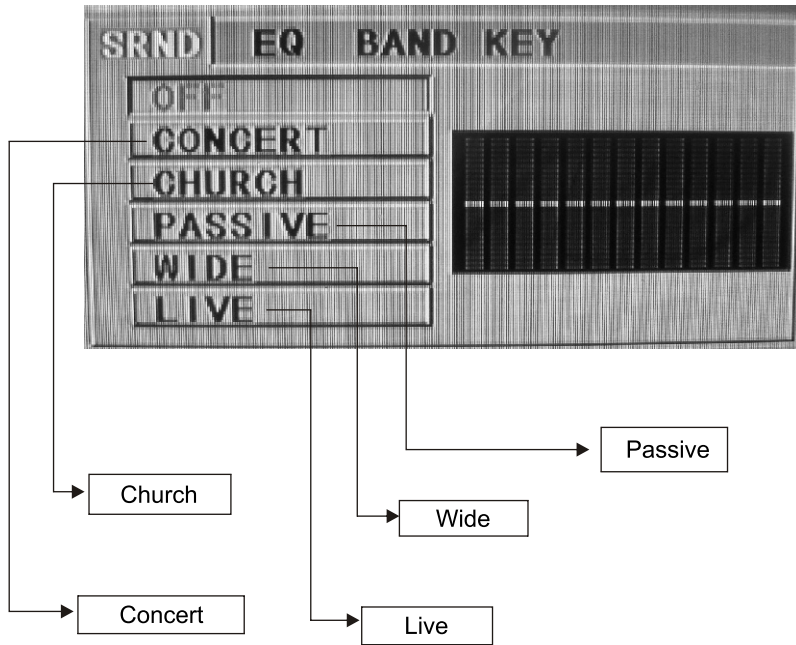 

Note: This function only is used with the remote control in CD/MP3/USB/SD mode.

 OSD SETUP (PIC 2)

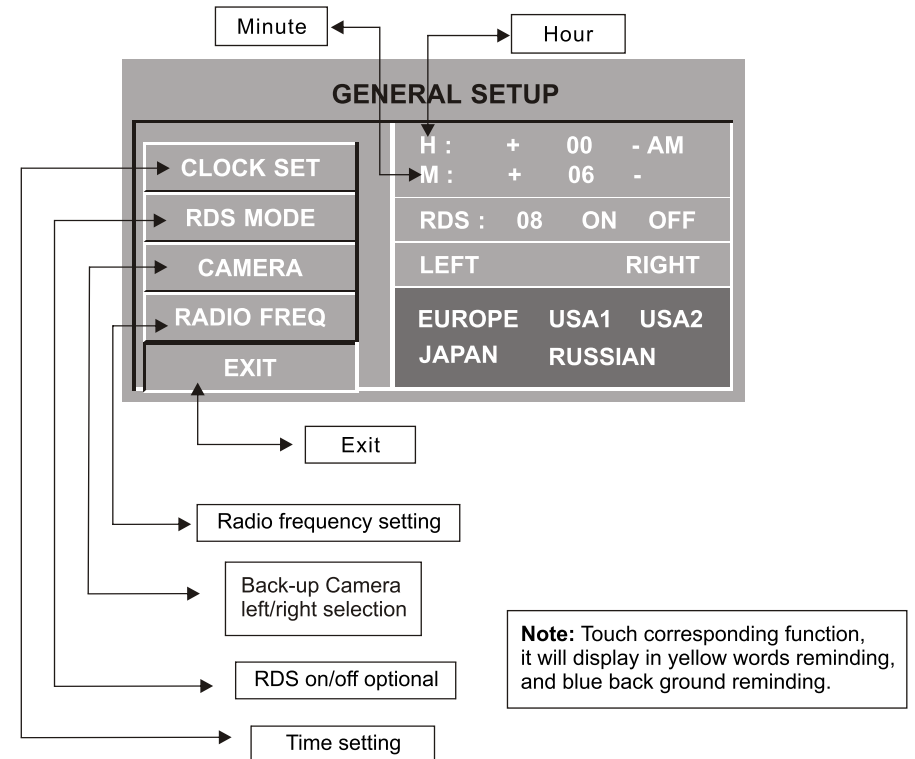

Note: Touch corresponding function, it will display in yellow words reminding, and blue back ground reminding.

Note: There are 3 buttons automatically changed according to your setting change in radio state when you activate or exit RDS; Changes are as following:

PTY ↔ LOUD; TA ↔ EQ; AF ↔ ST

TIME DISPLAY AND ADJUST

Time display: Touch main menu into adjust mode, press time setup button, the corresponding function will be display in yellow words.

(1) Press “+” on hour to add hour, press “-” to reduce hour;

 
(2) Press “+” on minute to add minute, press “-” to reduce minute.

NOTE: Touch the correspondence function, will be display in green background.

The unit include two times system: Europe time (24 hour setup), America time (12 hour setup), when show the AM mark it indicate morning time, when appear the PM mark, it show the time of afternoon.

Remark: This unit is with RDS function, it will automatically adjust the time when you activate RDS function or have received RDS radio channels. At no received RDS radio channels or AM state, you should adjust the time.

ADJUST MODE (PIC 3)

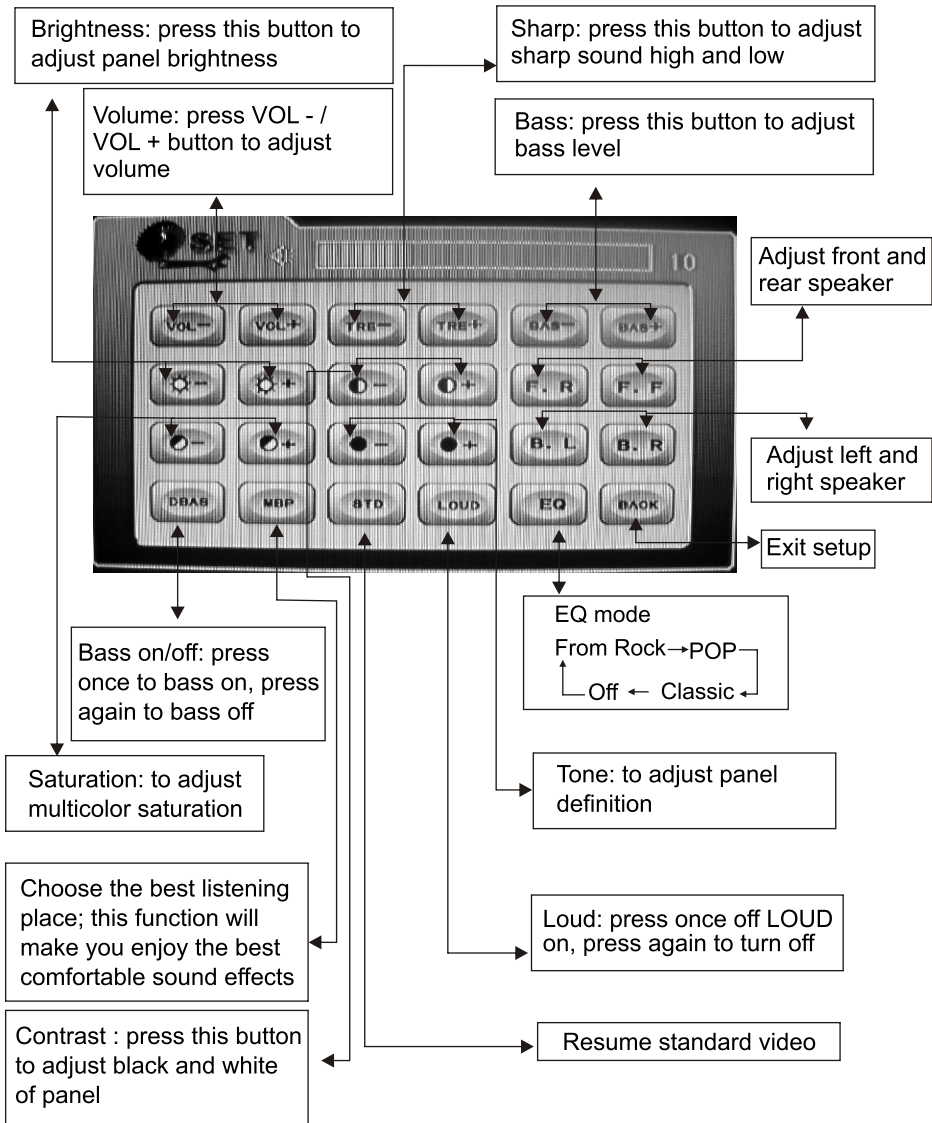

10. CD Program Play

In CD mode, you can set the sequence of playing by the program function, the operation is as follows:

When CD is playing, press ST/PROG button, then the display shows:

PROG	TC	TC	TC	TC			
1	__ : __	5	__ : __	9	__ : __	13	__ : __
2	__ : __	6	__ : __	10	__ : __	14	__ : __
3	__ : __	7	__ : __	11	__ : __	15	__ : __
4	__ : __	8	__ : __	12	__ : __	16	__ : __
		PLAY		DELETE			

Input the number of the song you want to program by the remote control, program the first song, input your desired song, for example, the sixth song, and press number button 6 on the remote control. Program the second song, press ▼ button move the cursor to 2[_ _]. Input your desired song, for example, the ninth song, press number button 9 on the remote control. Press ►► button to program play.

Back to the normal mode, press the ST/PROG button, then press ►► button.

Note: This function can only be worked by the remote control.

11. MP3 Program Play

In MP3 mode, you can set the sequence of playing by the program function, the operation is as follows:

When MP3 is playing, press ST/PROG button, then the display shows:

PROG	TC	TC	TC	TC			
1	__ : __	5	__ : __	9	__ : __	13	__ : __
2	__ : __	6	__ : __	10	__ : __	14	__ : __
3	__ : __	7	__ : __	11	__ : __	15	__ : __
4	__ : __	8	__ : __	12	__ : __	16	__ : __
		PLAY		DELETE			

Then, input desired song by remote control.

For example: Program the first song, input 01, press ► button move the cursor to the second lattice, input desired song, for example the third song. Program the second song, press ► button, work with ▼ button, move the cursor to 2[_ _]. Input 01, press ► button move the cursor to the second lattice, input desired song, for example, the sixth song (press 6). Press ►► button to program play.

Back to the normal mode, press the ST/PROG button and then press ►► button.

Note: This function can only be worked by the remote control.