

DISC NOTES

Handling and Cleaning

- Dirty, dusty, scratched or warped discs will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damage.
- Do not place discs in the following places:
 1. Direct sunlight.
 2. Dirty, dusty and damp areas.
 3. High temperature places.
 4. On the seats or dashboard.

Disc Cleaning

 
Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moist with isopropyl (rubbing) alcohol. Never use solvent such as benzene, thinner or conventional record cleaners which may mar the surface of the disc.

NOTE:

A disc may become somewhat scratched (although not enough to make it unusable) depending on your handling it in the condition of the usage environment. These scratches are not an indication of any problem with the player.

Repairing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ballpoint pen or pencil. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

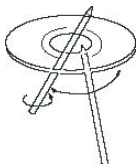

OWNER'S MANUAL

Mobile Video System

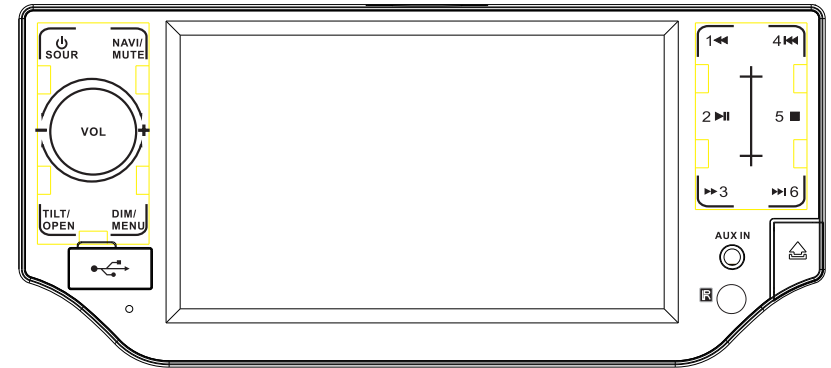 


TABLE OF CONTENTS

Table of Contents.....	1
Safety Information.....	2
Features.....	3
Accessories.....	4
Wire Connection.....	5
Unit Installation and Removal.....	8
Front Panel.....	12
Base Panel.....	13
Remote Control.....	14
Touch Screen Operations.....	18
Touch Screen Calibrate.....	18
Main Menu.....	19
Radio Operations.....	20
DISC Operations.....	21
USB Operations.....	28
SD CARD Operations.....	32
Bluetooth Operations.....	33
IPOD Operations.....	42
AV IN Operations.....	44
AUX IN Operations.....	44
TV Operations.....	45
Digital TV Operations.....	49
NAVI Operations.....	46
System Setup.....	50
Specifications.....	60
Trouble shooting.....	61
Disc Notes.....	63

Problem	Cause	Action
TFT MONITOR		
No video display (when in reverse)	Reverse circuit not connected	Check connections at reverse lamp
	Vehicle is not in reverse	Select reverse gear
Front panel will not open/close	Front panel obstructed	Remove the obstruct and press OPEN to resume the monitor open/close sequence
Flashing image or interference appears on screen	DVD is not compatible with current TV system settings Image blurred, distorted, or dark	Change setup to accommodate disc
Prolonged image or improper height/width ratio display	Improper video signal connections	Check wiring and correct
	Improper aspect ratio setup	Use correct aspect ratio setting
Touch screen function disorder if the position is excursion	Under different condition, for example: temperature , humidity, tec.	Do touch screen calibrate
DISC		
Cannot insert disc	Disc already inside unit	Eject current disc and insert new one
DVD does not start playback	Disc is warped or scratched	Use disc in good condition
	Disc is dirty or wet	Clean disc with soft cloth
	Incompatible disc is used	Use compatible disc
	Disc rating exceeds Parental Lock rating limit	Change parental Lock settings to lower restriction
	Disc region code is not compatible with unit	Use disc with proper region code
	Disc is inserted upside down	Insert disc with label side up
Image blurred , distorted, or dark	Disc is illegally copied	Use original disc
No repeat or searching while playing VCD	PBC is on	Turn PBC off
Interruption occurred during MP3 playback	Disc is dirty or scratched	Clean disc or replace new disc
Bad Disc appears on display	Focus error	Press eject or RESET

TROUBLE SHOOTING

If any of problem persists after checking the below list, Please consult your nearest service dealer. Never attempt to disassemble and repair unit personally.

Problem	Cause	Action
GENERAL		
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Re wire not connected or incorrect voltage	Check connections for proper voltage(11-16vdc)
	Black wire not connected	Check connection to ground
	ACC Fuse blown or Car battery fuse blown	Install new fuse with correct rating
	Illegal operation	Press the RESET button
Unit has power (but no/low audio output)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
	Speakers damaged	Review wiring diagram and check
Poor sound quality or distortion	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker is shorted	Check speaker wire contact
Unit resets itself when engine is off	Incorrect connection between ACC and Positive battery wire	Check wiring and correct
Unit blows fuse	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
Unit has audio (when in reverse)	Parking brake safety circuit not connected	Check connections at parking brake
	Parking brake not applied	Apply parking brake
Excessive skipping	Unit is not mounted correctly	Check mounting sleeve
	Physical defect in media	Check media for scratches
IR remote does not work	Dead battery	Replace battery
	Battery installed incorrectly	Remove battery and install correctly
TUNER		
Weak station searching	Auto antenna is not fully extended	Connect the auto antenna control cable properly
	Auto antenna not properly connected	Connect the auto antenna control cable properly
	LOCAL function is activated	Turn LOCAL function off

SAFETY INFORMATION

Please read the manual carefully before operating this unit and keep it for future reference.

CAUTION: This unit is a class 1 laser product. To prevent direct exposure to the laser system, do not open the unit. The laser beam may hurt your eyes. If the unit requires adjustments, contact an authorized service centre.

USE THIS PRODUCT SAFELY

Be sure you fully understand the following safety information:

When driving

Keep the unit at an appropriate sound level. Driving with the sound at a level preventing you from hearing sounds outside and around the car may cause an accident.

When cleaning

Do not expose the product to water or excessive moisture. This could cause short circuit, fire or other severe damage.

When parked

Parking in direct sunlight can result in very high temperature levels inside your car. Let the interior and unit cool down before switching the unit on.

NOTE:

Do not use and store the player in dusty, hot or humid environment.

FUSE REPLACEMENT – WARNING!



Never replace any fuse with one of a higher value than the fuse supplied with your unit. Using a higher current rated fuse may cause damage to your unit and/or electrical wiring.

FEATURES

- Motorized 5 inch panel TFT-LCD display 480 x 272 Screen Resolution
- Playback from DVDR/RW & CDR/RW Including VCD, MP3, MP4 & DivX
- Built-In TV Tuner (Optional)
- 4 Pre-Set Angles & Last Angle Memory
- IPOD Input Connection (requires IPOD cable)
- Full-USB Connection for MP3 & MP4 Playback From 16GB Flash Drive
- 16GB SD Card Reader for MP3, MP4, DivX & Xvid Playback
- 18 FM / 12 AM Station Memory
- 50w x 4 MOSFET Powered Speaker Level Outputs
- Fixed Subwoofer Pre-Amp Output at 80Hz
- A/V Outputs for Multiple Components
- A/V Inputs for Secondary Source
- Front Panel 3.5mm Auxiliary A/V Input
- Custom & Pre-Set EQ Settings
- High Definition Digital Panel with LED Back Light
- Full Function Remote Control
- Accepts Add-On Digital TV Tuner Module(Optional)

Bluetooth Features (Optional)

- Work with Most Bluetooth V2.0 Enabled Phones
- Noise & Echo Cancellation
- Contacts List Transferred for Easy Access Dialing
- Caller ID Shows Name and Number from Contacts List
- Recent Calls & Talk Time Logs
- A2DP for MP3 Playback

NOTE:

*This user's manual is only for reference.
Modifying rights are reserved.
Specifications are subject to change without notice.*

SPECIFICATIONS

GENERAL

Supply Voltage	: 14.4V DC (11-16V allowed)
Load Impedance	: 4Ω per channel
Max Power Output	: 50W x 4
Bass 100Hz	: ≥ 10dB
Treble 10KHz	: ≥ 10dB
Dimensions (approx.)	: 183 x 188 x 76 mm (d/w/h)
Mounting (approx.)	: 160 x 178 x 50 mm (d/w/h)

FM TUNER

Frequency Range	: 87.5 – 108 MHz (Europe/Asia) 87.5 – 107.9 MHz (USA)
IF	: 10.7 MHz
Usable Sensitivity	: ≤ 15dBuV
Stereo Separation	: ≥ 26dB (1 KHz)
Frequency Response	: 100-20000Hz

AM TUNER

Frequency Range	: 531 - 1602 KHz (Asia) 522 - 1620 KHz (Europe) 530 - 1710 KHz (USA)
IF	: 450 KHz
Usable Sensitivity	: ≤ 40dBuV

TV TUNER (Optional)

Frequency Range	NTSC : 55.25 MHz~855.25MHz PAL: 48.25 MHz~855.25MHz
-----------------	--

DVD PLAYER


Signal-to-noise Ratio	: ≥ 85dB (1 KHz)
Distortion	: ≤ 0.5%

MONITOR


Resolution	: 480 (w) x 272 (H) (RGB)
Brightness	: 350 cd/m ²
Contrast	: 500:1

NOTE:

 Specifications and design are subject to modification without notice due to improvement in technology.

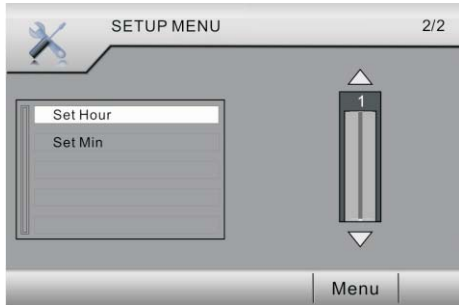


 Touch [UP] / [DOWN] icons to adjust the parameters of Hour (Range: 1 to 12 under 12H / 0 to 23 under 24H).

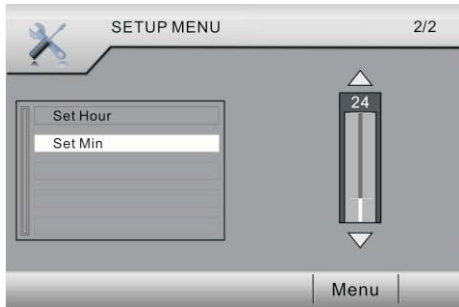

Touch [UP] / [DOWN] icons to adjust the parameters of Min (Range: 0 to 59).

 
Time ON/OFF

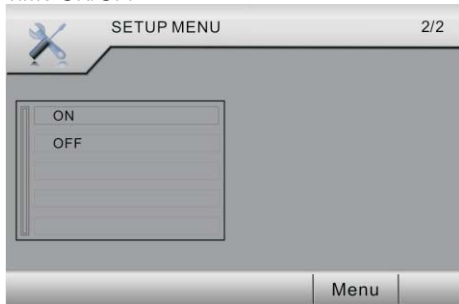

Following options are available for the Time ON/OFF
ON OFF

ACCESSORIES

 1




Bolt x 1

2



Back Strap x 1

 3




M5X5 Screws x 4

4




Keys x 2

 5

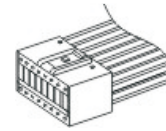


Power Wire x 1

 6

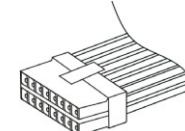


Connector Wire x 1

 7



Operational Manual x1

 8




AUX Cable x 1

9




Trim Bezel x 1

 10

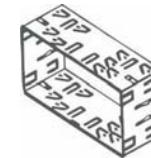

Mounting Sleeve x 1

 11



Remote Control x 1

12



Faceplate Case x 1

13



 
IPOD Cable x 1
(Optional)

14




External Microphone x 1
(Optional)


WIRE CONNECTION

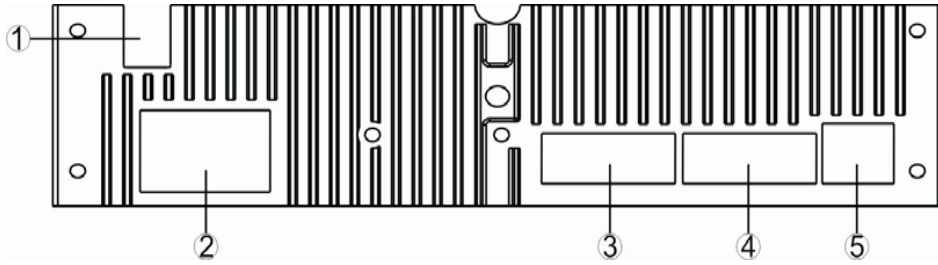

 1. RADIO& ANALOG TV ANTENNA (OPTIONAL)
2. 15PIN SOCKET
3. AUDIO / VIDEO OUTPUT & INPUT
4. NAVI & DIGITAL TV ADAPTER (OPTIONAL)
5. IPOD ADAPTER

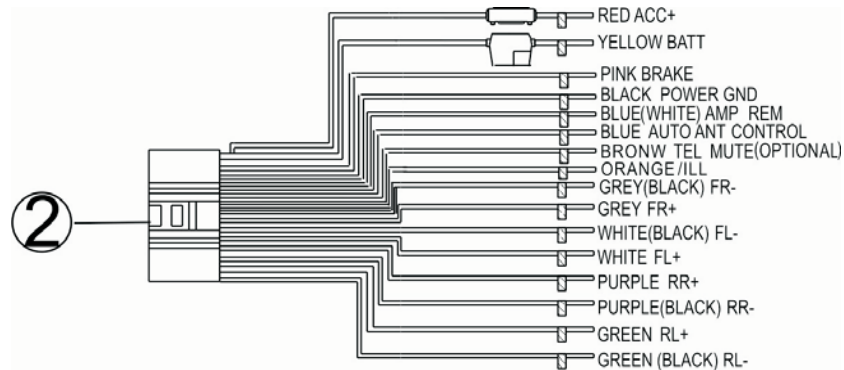

TIME

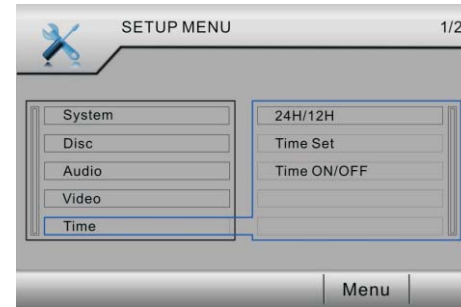 


Following options are available for the Time
24H/12H Time Set Time ON/OFF



Following options are available for 24H/12H
24H 12H




 Following options are available for the Time Set
Set Hour Set Min

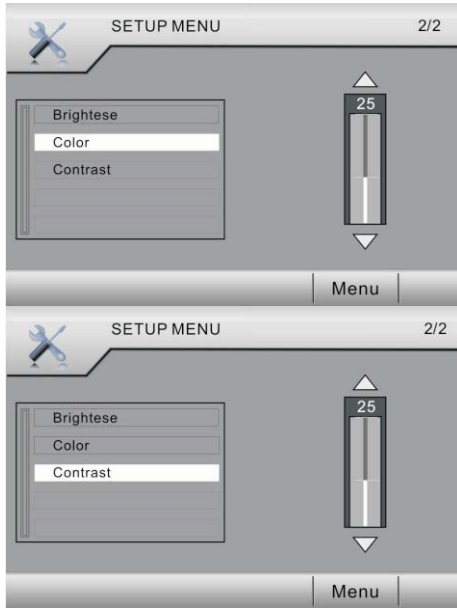


Touch [UP] / [DOWN] icons to adjust the parameters of Brightness / Color / Contrast (Range: 0 to 50).

 Screen Mode

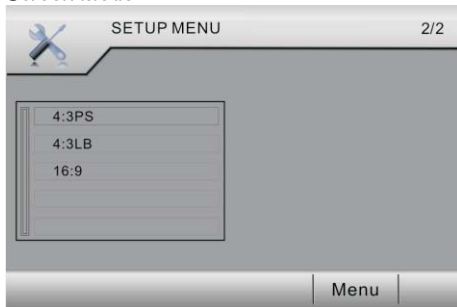


 Following options are available for the Screen Mode
4:3PS 4:3LB 16:9

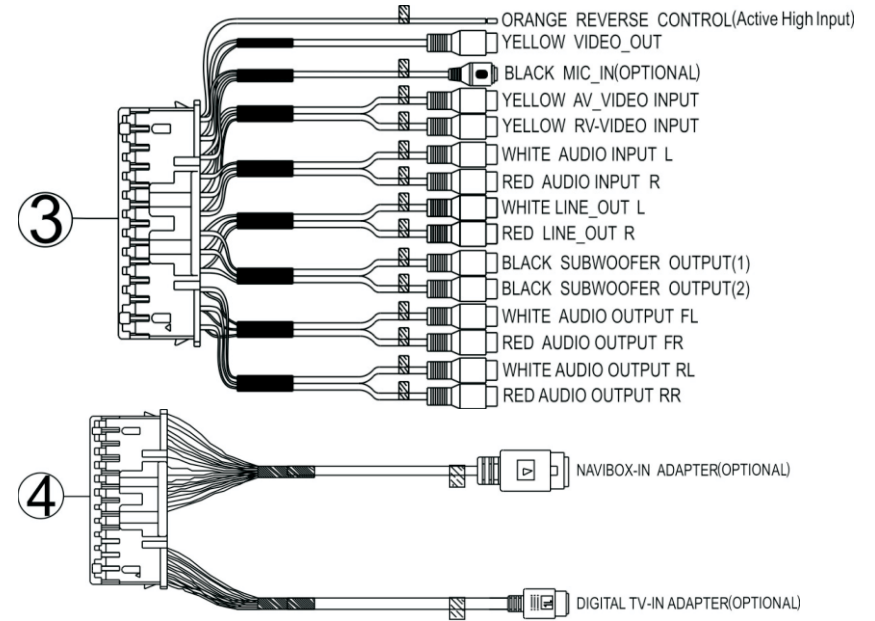

Brake Control

 Connect the brake control wire AUTO_ANT (see Wiring Diagram). It is necessary to connect the Brake Control wire to the Hand-brake switch of the car. While driving, the TFT monitor will display the alarm picture (see as follows) in order to ensure the safety.

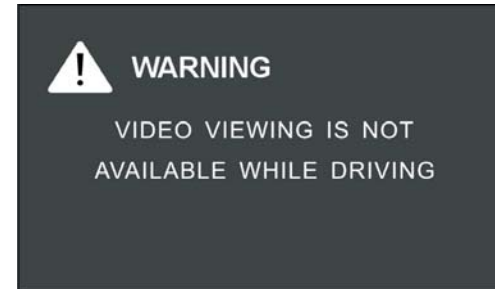


Under the Rear View Mode, the Brake Control function is no effective.


Auto Antenna Control

Connect the auto antenna control wire AUTO_ANT (see Wiring Diagram). The antenna will lift when the unit startup; it will descend when the unit turnoff.

 Wiring Diagram

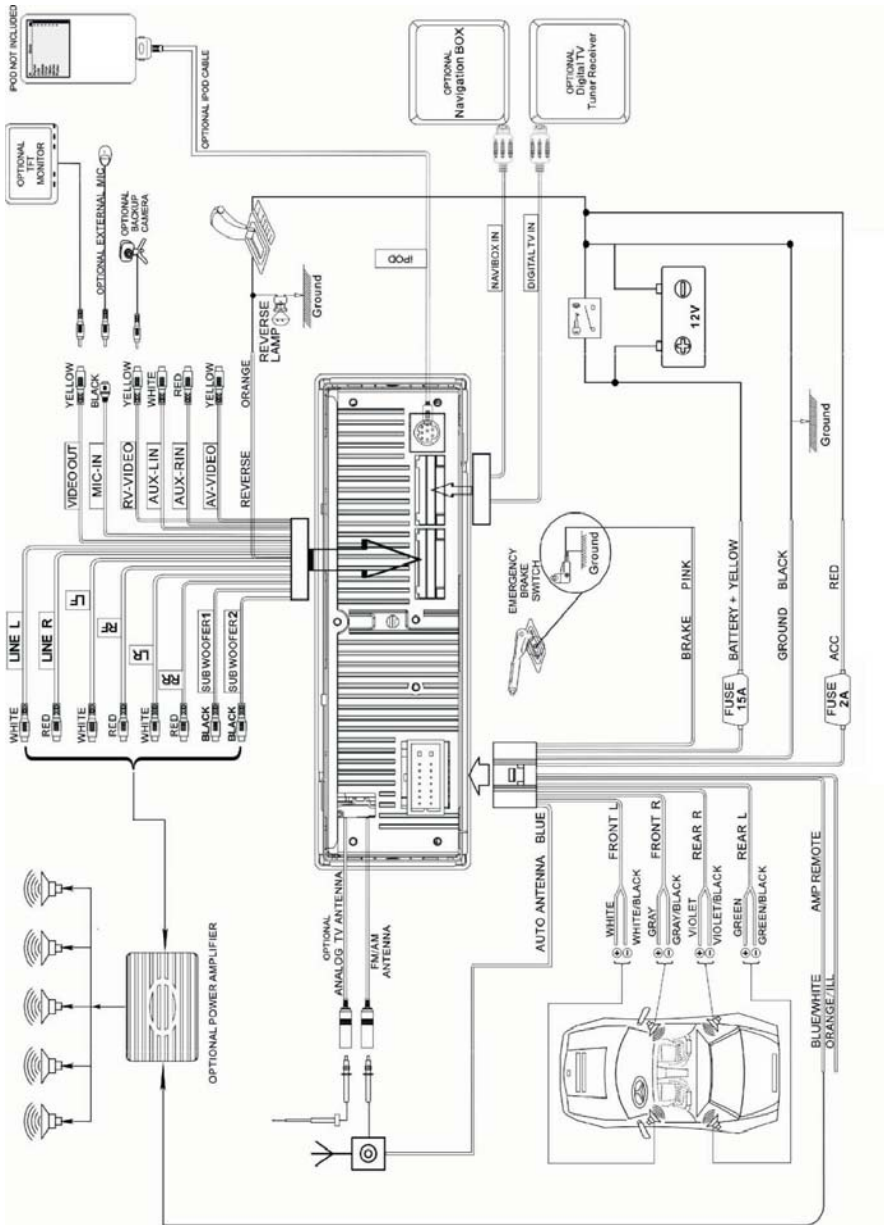


VIDEO

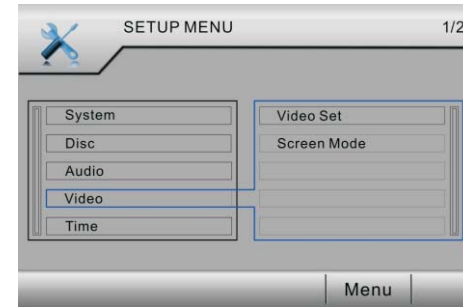 


Following options are available for the Video
Video Set Screen Mode




  Following options are available for the Video Set
Brightness Color Contrast

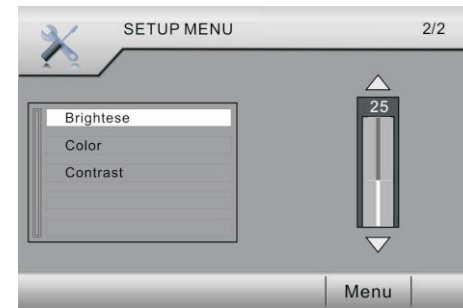

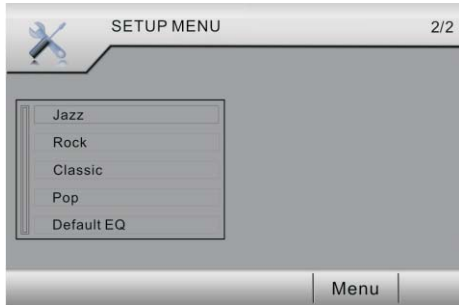


 Following options are available for the EQ
 Jazz Rock Classic Pop Default EQ
 LOUD

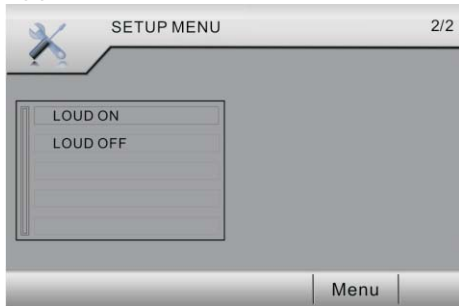

Following options are available for the LOUD
 LOUD ON LOUD OFF

 BEEP

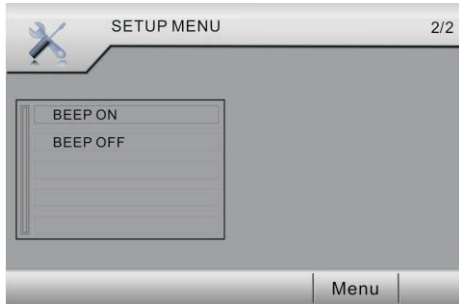


Following options are available for the BEEP
 BEEP ON BEEP OFF

UNIT INSTALLATION AND REMOVE

Installation Method 1:


1 Install the mounting sleeve into the dashboard.

 2 Bend the claws into place to secure the sleeve.

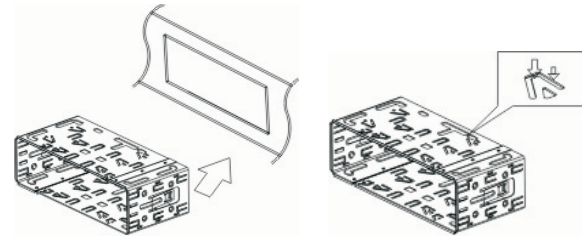


3 Slide the units into the mounting sleeve.

 4 Install the trim bezel onto the unit.

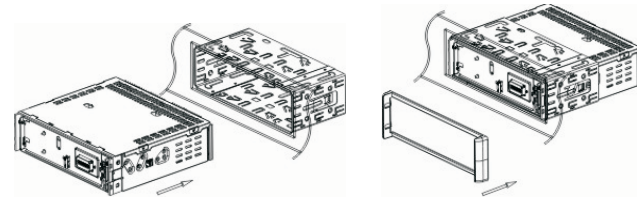


5 Install the face panel onto the unit.

 6 Sketch map when installation is finished.

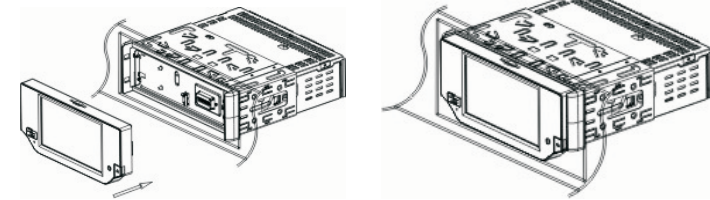


Removal Method 1:

 
1 Detach the face panel by pushing the release button.

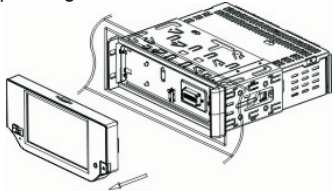


2 Detach the trim bezel.

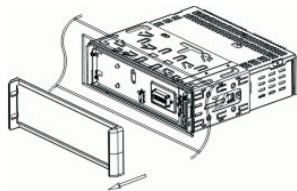 


 
3 Insert the keys into the aperture between the unit and the mounting sleeve to release the internal locks.

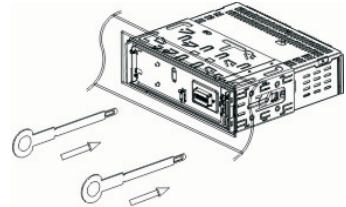

 
4 Pull the unit out of the mounting sleeve.

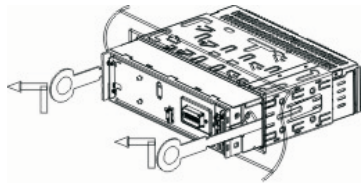

5 Sketch map when removal is finished.

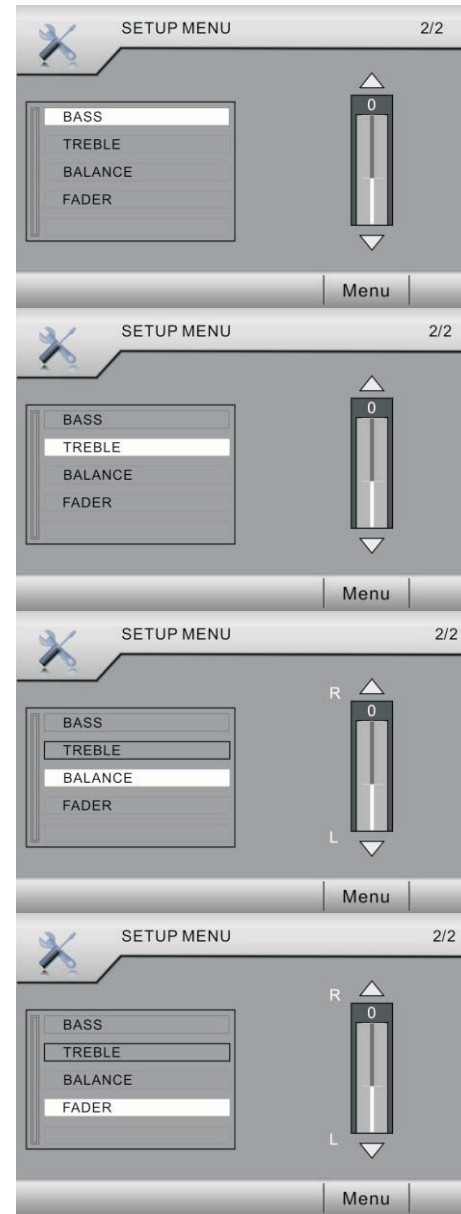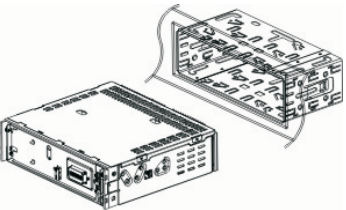  


 Touch [UP] / [DOWN] icons to adjust the parameters of BASS / TREBLE / BALANCE / FADER (range:-7 to 7).
EQ

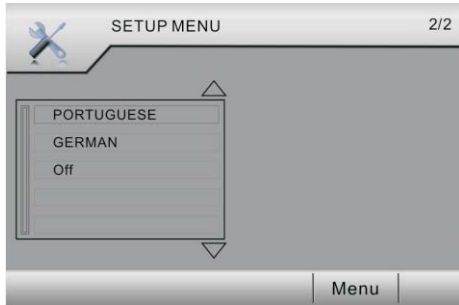


Following options are available for the Subtitle Language
 CHINESE ENGLISH JAPAN FRENCH SPANISH
 PORTUGUESE GERMAN OFF

 AUDIO

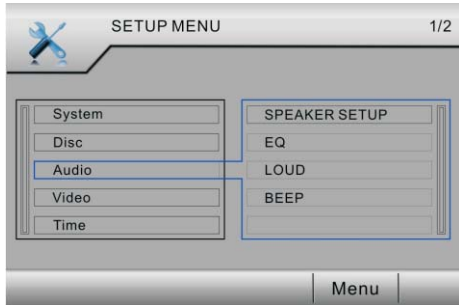

Following options are available for the Audio
 SPEAKER SETUP EQ LOUD BEEP

 
SPEAKER SETUP

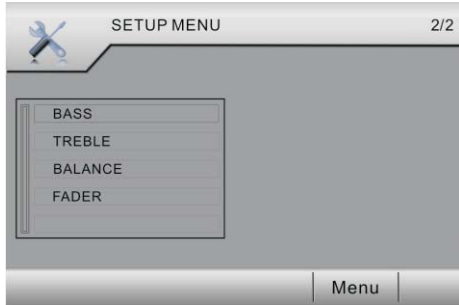


Following options are available for the SPEAKER SETUP
 BASS TREBLE BALANCE FADER

Installation Method 2:

 
1 Tighten the bolt onto the rear panel of the unit.

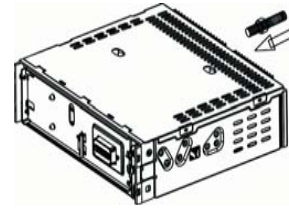

 
2 Tighten the back strap onto your car inside the dashboard.

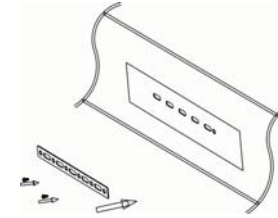

 
3 Place the unit into the dashboard; make the bolt bar across back strap; and then fix the bolt by the Nut M5.

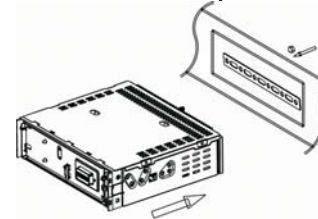

 
4 Screw the unit on the car on the two sides with M5x5 SCREWS.

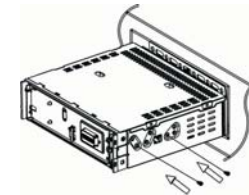

5 Install the trim bezel onto the unit.

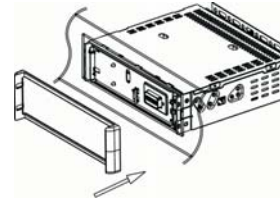 


6 Install the face panel onto the unit.

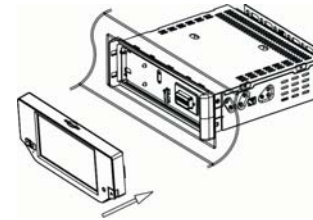 


Removal Method 2:

 
1 Detach the front panel by pushing the release button.

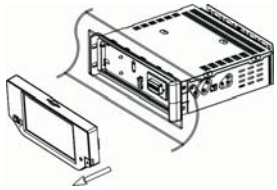


2 Detach the trim bezel.

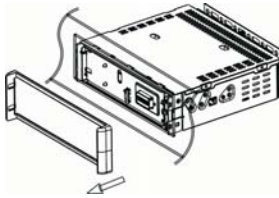 

 
3 Unscrew the unit off the car on the two sides.

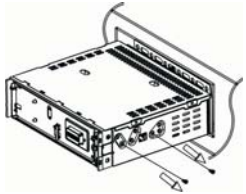

 
4 Unscrew the Nut M5 screw on the rear side of the unit and pull out the unit.

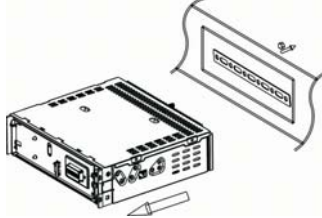

5 Sketch map when removal is finished.

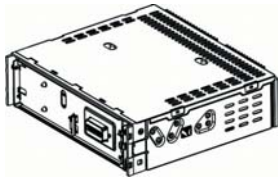 


Audio Language

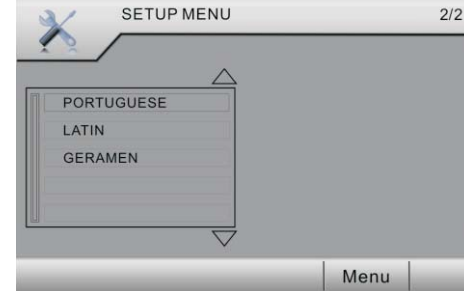 

Following options are available for the Audio Language
CHINESE ENGLISH JAPAN FRENCH SPANISH
PORTUGUESE LATIN GERMAN

 Subtitle Language

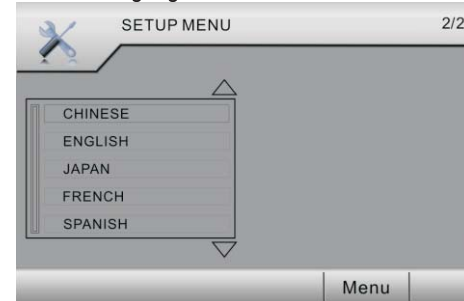


TV Region




Following options are available for the TV Region
USA CCIR ITALY AUSTRALIA NEW ZEALAND

 DISC

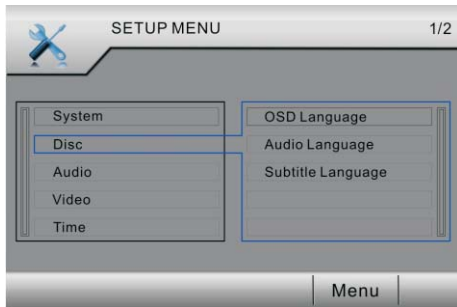


Following options are available for the Disc
OSD Language Audio Language Subtitle Language

 OSD Language

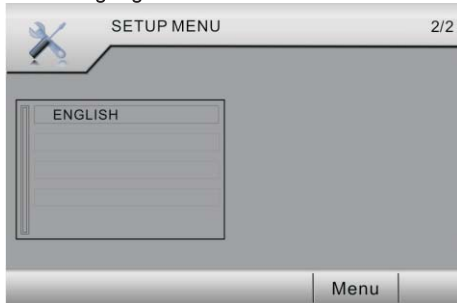

Following options are available for the OSD Language
ENGLISH

 FRONT PANEL

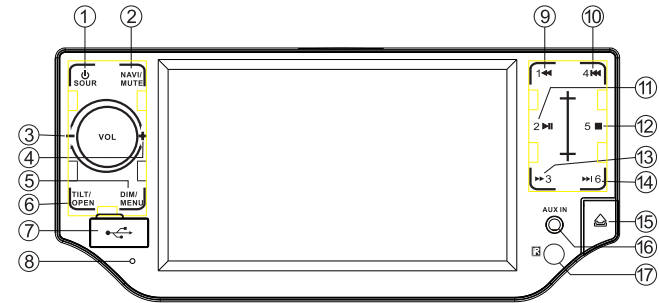

- | | | |
|-------------------|------------------|-----------|
| 1. POWER / SOURCE | 2. NAVI / MUTE | 3. VOL- |
| 4. VOL+ | 5. DIM / MENU | 6. TILT |
| 7. USB | 8. MIC | 9. F. REV |
| 10. PREV | 11. PLAY / PAUSE | 12. STOP |
| 13. F. FWD | 14. NEXT | 15. REL |
| 16. AUX IN | 17. REMOTE | |

1. Power / Source

When ACC is on, touch to turn the unit on; hold on touching the button to turn off the unit.

When the unit is on, touch to switch between different modes.

2. Navi / Mute

Hold on pressing to access to navi mode.

Touch to switch off the sound; touch it again to resume to the previous volume level.

3. VOL-

Touch to decrease the volume.

4. VOL+

Touch to increase the volume.

5. DIM / Menu

Touch to access the Main Menu.

Hold on touching to switch the brightness modes as following:

 
DIM1 → DIM2 → DIM3
↑ ↓

The screen brightness will decrease step by step from DIM1 → DIM2 → DIM3.

6. Tilt / Open

Inserting Disc

Touch the button, the front panel will slide down to Position 1; then insert a disc into the Disc Loading Slot; the panel will slide back automatically.

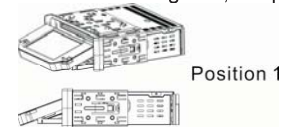


Ejecting Disc

Touch the button, the front panel will slide down to Position 1; then eject a disc; touch it again to close the monitor; the panel will slide back automatically if no action is taken.

TFT Viewing Angle Adjustment:

Hold on touching the button to adjust the viewing angle as following:

 Angle 1- Angle 2- Angle 3- Angle 4- Angle 1

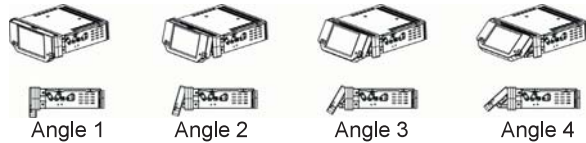

7. USB

The unit will be switched to DVD Mode automatically when USB connected, and play the songs, pictures, videos in USB.

8. MIC(OPTIONAL)

Micro phone for Bluetooth.

9. / 13. Fast Reverse / Fast Forward

Touch to fast reverse / fast forward at 2x speed. Each touch changes speed from 2x to 4x to 8x to 20x then back to normal play. Touch the [PLAY/PAUSE] icon to resume to normal playback.

10. Previous / 14. Next

Touch to go to the next / pervious chapter, track or song.

11. Play/Pause

Touch to pause or resume the playback.

12. Stop

When DVD/VCD/CD disc playback, touch the icon once to stop the playback, touch the [Play/Pause] icon to resume the playback again. Touch the icon twice to stop the playback, touch the [Play/Pause] icon to start the playback from the beginning of disc. When MP3 disc playback, touch the icon to stop the playback, touch the [Play/Pause] icon to start the playback from the beginning of track.

15. REL

Press to take off the panel for burglar-proof purpose.

16. AUX IN

Connect an external audio device to this jack to listen to the device through your car speakers.

17. Remote

Remote infrared receiver.

Preset Stations

Radio Mode, touch the icons [1, 2, 3, 4, 5, 6] to select a preset station, hold on touching to store current radio frequency to the preset station.

SETUP OPERATIONS

Touch the [SETUP] icon to enter the SETUP MENU.

SYSTEM



Following options are available for the System

LCD Calibration Radio Region TV Region Default

LCD Calibration



 
Radio Region



Following options are available for the Radio Region

OIRT EUROPE ASIA USA JAPAN

Quick Access Key [NAVI]

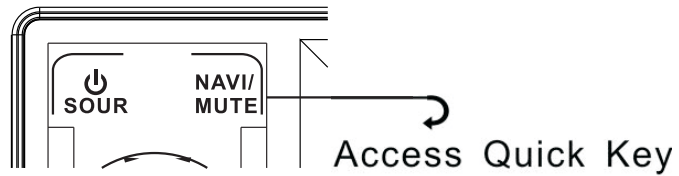


Under any working mode, hold on pressing the [MENU/NAVI] button to switch to NAVI mode; hold on pressing the [MENU/NAVI] button again to return the previous working mode. For example, under Radio mode, hold on pressing the [MENU/NAVI] button to switch to NAVI mode; hold on pressing the button again to quit the NAVI mode and return back the Radio mode.

Enter the NAVI mode by Quick Access Key, the previous working mode is still working on background. For example, under Radio mode, hold on pressing the [NAVI] button to switch to NAVI mode, and you can still listen to the radio stations. But when voice of Navigation comes, the radio will be interrupted until voice of Navigation ends.

NO NAVIBOX CONNECTION

 
Touch the "NAVI" icon to enter the following screen if the NAVIBOX not connected:

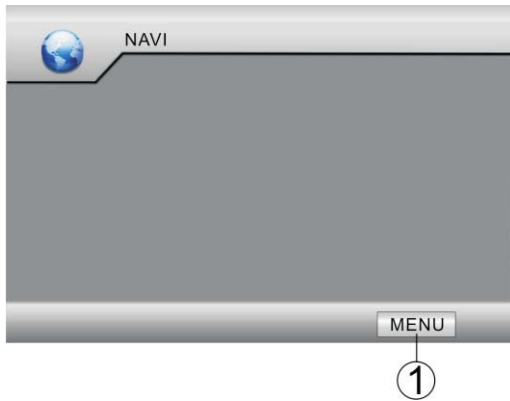

1. Menu

Touch to return the main MENU.

 BASE PANEL

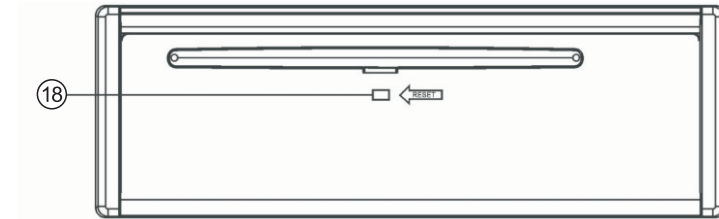


18. Reset

If the unit ever needs to be reset, you can do so by removing the face plate to gain access to the reset button.

Press and hold this button to switch back to all the original factory settings.

Keep in mind this will erase all your preset radio stations and any EQ settings you may have made and saved.

 REMOTE CONTROL

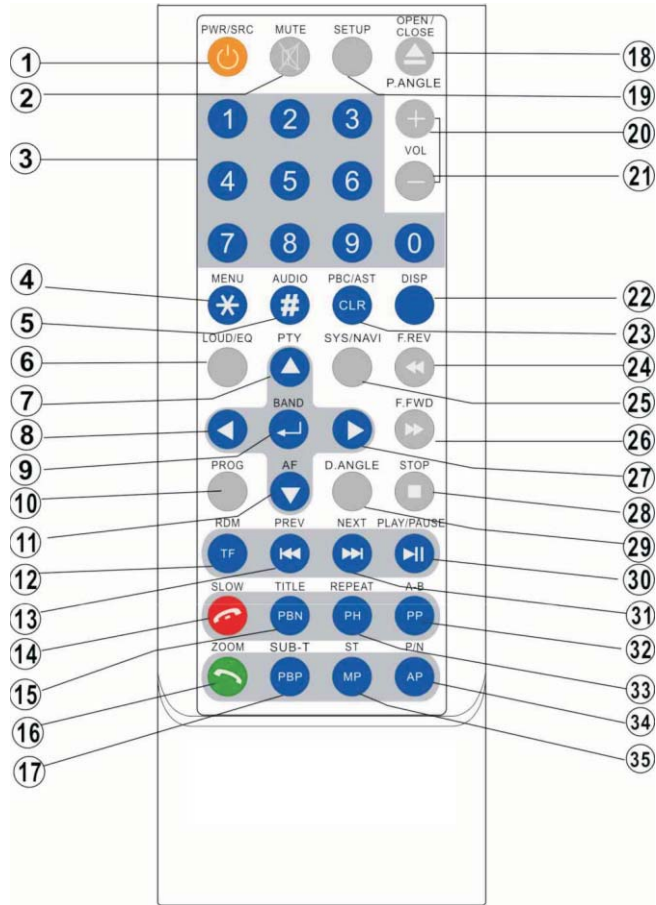

- | | | |
|------------------------|-----------------------------------|----------------------|
| 1. POWER/SOURCE | 13. PREVIOUS | 25. SYSTEM / NAVI |
| 2. MUTE | 14. SLOW / END CALL | 26. F.FWD |
| 3. NUMBER BUTTONS | 15. TITLE / PBN | 27. RIGHT(Seek up) |
| 4. MENU / * | 16. ZOOM / CALL | 28. STOP |
| 5. AUDIO / # | 17. SUBTITLE / PBP | 29. D.ANGLE |
| 6. EQ / LOUD | 18. OPEN / CLOSE / P.ANGLE/ EJECT | 30. PLAY / PAUSE |
| 7. UP (TUNE UP)/PTY | 19. SETUP | 31. NEXT |
| 8. LEFT (SEEK DOWN) | 20. VOLUME+ | 32. A-B / PHONE PAIR |
| 9. ENTER / BAND | 21. VOLUME- | 33. REPEAT / PHONE |
| 10. PROGRAM | 22. DISPLAY | 34. PAL / NTSC / AP |
| 11. DOWN(Tune Down)/AF | 23. PBC / AST / CLEAR | 35. STEREO / MP |
| 12. RANDOM / TRANSFER | 24. F.REV | |

 
NOTE:

This is a universal remote, some functions would be optional.

Read information and touch "I agree" button at the bottom of the screen, then enter the NAVI mode.

NOTE:

If change the NAVIbox to connect another unit, please take out the SD card from the NAVIbox and connect with computer, the following screen is displayed on computer:

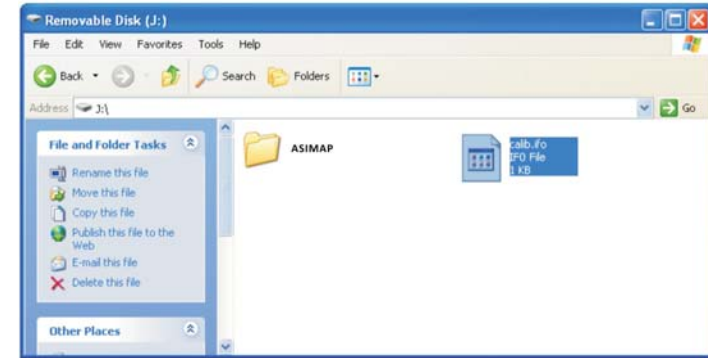

Delete the file "calib.ifo" only. Insert the SD card into NAVIbox again, and connect the NAVIbox with another unit.

Go to NAVI mode

Touch the icon "NAVI" to enter the NAVI Mode if NAVIBOX connected:

Following screen will be displayed:



Read information and touch "I agree" button at the bottom of the screen.

Enter the NAVI mode by main menu, the NAVI operations are effective only, all other processes are disable such as Radio, CD etc.

 
NOTE:

Under NAVI mode, please view all operations by Navigation Device NAVIBOX-1 User's manual.


NAVI OPERATIONS (OPTIONAL)

Touch Screen Calibration

When 1st time to enter NAVI mode, you will see the calibration screen. Please touch the points from 1 to 5 by using a ballpoint pen or pencil.

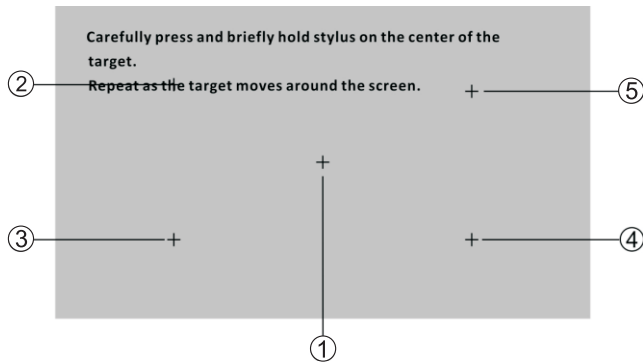

Then the following screen is displayed:

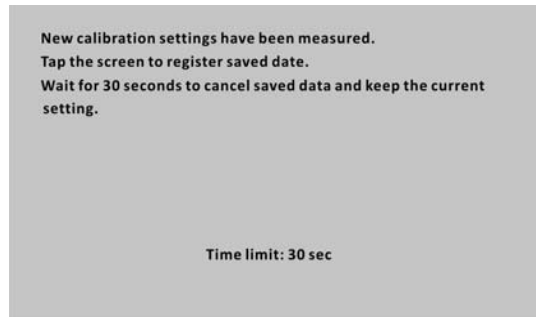 

The Touch Screen is restored to their default positions. Touch anywhere of panel to finish the calibration and go to the following screen:



1. [POWER/SOURCE]

When ACC is on, press the button to turn the unit on; hold on pressing the button to turn off the unit.

When the unit is on, press to switch between different modes.

2. [MUTE]

Press to switch off the sound; press it again to resume to the previous volume level.

3. [NUMBERS 0~9]

Radio Mode, press the buttons 1~6 to select a preset station, hold on touching to store current radio frequency to the preset station.

DVD Mode, When playing DVD, VCD, CD, MP3, press the buttons 0~9 to input the number of track, press the [BAND] button to confirm.

TV Mode, press the buttons 0~9 to choose the channel and press the [BAND] button to confirm.

4. [MENU / *]

DVD Mode, press to return to the boot menu when playing DVD disc.

5. [AUDIO / #]

DVD Mode, press to change dialogue language when playing DVD disc; Press to select different audio channels when playing VCD, CD disc.

6. [LOUD/EQ]

Press to adjust the EQ setting as following:

USER – POP – CLASSIC – ROCK – JAZZ – USER

Hold on pressing to switch between LOUD ON / OFF.

7. [^] / 8. [<] / 11. [v] / 27. [>] Direction Key

DVD Mode and System Parameters Setup, press the [v] / [^] buttons to move the cursor upward / downward to select item. Press the [<] / [>] buttons to move the cursor leftward / rightward to select item.

Radio Mode, press the [<] / [>] buttons to switch the stored stations. Hold on pressing the [<] / [>] buttons to fast seeking the next available channel by decreasing / increasing the tuning frequency; seeking will stop by pressing any button. Press the [v] / [^] buttons to decrease / increase the frequency step by step. Hold on pressing the [v] / [^] buttons to fast seeking by decreasing / increasing the tuning frequency; seeking will stop when loose the button.

TV Mode, hold on pressing the [<] / [>] buttons to fast tuning channel forward the low / high frequency automatically. Press the [^] / [v] buttons to select the stored channel upward / downward.

9. [BAND/ENTER]

DVD Mode, press to confirm the selection.

Radio Mode, press to switch the wave band as following:

FM1 – FM2 - FM3 - AM1- AM2 - FM1

TV Mode, press to switch the TV audio as following:

NTSC – PAL/BG – PAL/I – PAL/DK – NTSC

Hold on pressing to switch the TV system area as following:

USA – CCIR – ITALY – AUS – NZ – USA

10. [PROGRAM] (NO FUNCTION)

DVD Mode, press to enter / exit the PROGRAM Function when playing the DVD, VCD, CD disc.

12. [RANDOM/TRANSFER]

DVD Mode, press to turn RANDOM function on / off when playing DVD, VCD, CD disc. (NO FUNCTION)

Bluetooth Mode, press to transfer the call between the unit and your cell phone when talking the phone.

13. [PREVIOUS] / 31. [NEXT]

DVD Mode, press to go to the pervious / next chapter, track or song.

14. [SLOW/END CALL]

DVD Mode, press to slow motion playback at 1/2x speed when playing DVD/VCD disc. Each press changes speed from 1/2x to 1/4x to 1/8x to 1/16x then back to normal play. (NO FUNCTION)

Bluetooth Mode, press to reject or hang up a call.

15. [TITLE/PBN]

DVD Mode, press to enter the title menu when playing DVD disc.

16. [ZOOM/CALL]

DVD Mode, press to zoon the picture display when playing DVD, VCD disc. Each press changes speed from 2x to 3x to 4x to 3x to 2x then back to normal play.

17. [SUB-T/PBP]

DVD Mode, press to change the subtitle language when playing DVD disc.

18. [OPEN/CLOSE/P.ANGLE/EJECT]

Press the button to open the monitor to eject the disc, press it again to close the monitor.

Hold pressing the button to enter into adjusting mode, press it again to adjust the angle of the front panel as following:

Angle 1 - Angle 2 - Angle 3 - Angle 4 - Angle 1

19. [SETUP]

DVD Mode, press to enter/ exit the DVD SETUP menu.

20. [VOL+] / 21. [VOL-]

Press to increase / decrease the volume.

Hold on pressing the button to keep increasing/decreasing the volume.

22. [DISPLAY]

Under main menu, press to set the background by default picture.

DVD Mode, press to display current playback information.

23. [PBC/AST/CLEAR]

DVD Mode, press to select the PBC function on / off when playing VCD disc.

Radio Mode, press to review stored stations; Hold on pressing to automatically program the 6 strongest stations available into the presets in the each wave band.

 
TV Mode, automatically seek the stations available.

24. [F.REV] / 26. [F.FWD]

DVD Mode, press to fast reverse / fast forward at 2x speed. Each press changes speed from 2x to 4x to 8x to 20x then back to normal play. Press the [PLAY/PAUSE] button to resume to normal playback.

DIGITAL TV OPERATIONS (OPTIONAL)

Touch the icon "DIGITAL TV" to enter the DIGITAL TV Mode:

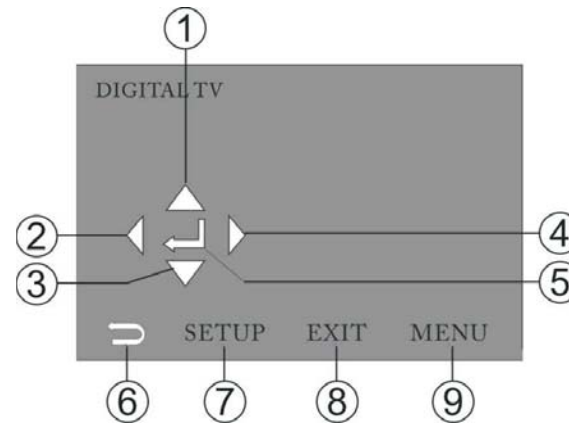

1. UP

Touch to select another TV available station upward.

2. LEFT

Touch to decrease the TV volume.

Under the SET UP, touch to move the cursor left direction.

3. DOWN

Touch to select another TV available station downward.

4. RIGHT

Touch to increase the TV volume.

Under the TV OSD, touch to move the cursor right direction.

5. ENTER

Touch to confirm the selection of TV SET UP.

6. RETURN

Touch to return the previous menu.

7. SET UP

Touch to enter the set up menu.

8. EXIT

Touch to exit the set up menu.

9. MENU

Touch to return the main menu.