


© Motorola, Inc. 2005.

reverse side of this guide.

Features and Functions Guide

H300 Bluetooth® Handsfree Headset

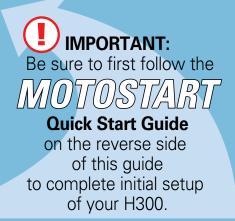

FOR MORE INFORMATION ON USING YOUR MOTOROLA H300

Visit us at www.hellomoto.com/bluetooth and click **Support.**

SUPPORT

If you need more help, contact us at **1-877-MOTOBLU.**

TURNING ON AND OFF

To turn your headset on, press and hold the Call button until the indicator light flashes. Then, release the button.


To turn your headset off, press and hold the Call button until the indicator light flashes rapidly and then turns off.

To conserve battery power, turn off your headset when you don't plan to use it for a while.



WEARING THE HEADSET

- 1 Open the earhook.
- 2 Loop the earhook over your ear.
- **3** Press the headset to your ear.

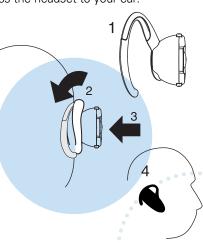

CHANGING FOR USE ON OTHER EAR

You can wear your H300 headset on your left or right ear. The headset comes ready for the right ear. To change the headset for the left ear:

- 1 Open the earhook 90 degrees from the headset.
- 2 Gently lift and pull the top of the earhook up and off the upper hinge pin. Then, pull it away to remove it.

3 Flip the headset over.

4 Hook the bottom of the earhook onto the lower hinge pin, then lift and pull the top of the earhook over the upper hinge pin.

INDICATOR LIGHTS

The indicator lights provide information about your headset status.

Indicator Light	Headset Status	
Off	Power off	
On (steady)	Pairing mode	
10 rapid flashes	Pairing successful	
Slow pulse	Connected (on a call)	
Quick flash	Standby (not on call)	

Note: After 5 minutes of inactivity, the light stops flashing to conserve power, but the headset remains in standby mode.

CHANGING VOLUME BUTTON ORIENTATION

If you change your headset to wear on the other ear, you can also change the orientation of the Volume buttons.

- 1 Turn the headset power off.
- 2 Press the Call button and the Volume button you want to assign as the "volume up" button until the blue indicator light flashes twice.

The headset power turns on.



TS AUDIO TONES

Hinae Pin

The audio tones provide information about your headset status.

Audio Tone	Headset Status
Single high tone when pressing volume button	Volume at minimun or maximum
Five rapid high tones repeated every 60 sec.	Low battery
No audio indications; deteriorating quality	Out of range
Ring tone	Incoming call
Single high tone	Pairing confirmation
Single low tone	Voice activation
Dual high/low tone	Voice tag not recognized
Single high tone	End call
Low to high tone	Phone network not available
Two ascending tones	Mute enabled
Two descending tones	Mute disabled

MAKING CALLS

Function	Action	
Make a voice dial call	Tap the Call button and speak the name after the tone	
End a call	Tap the Call button	
Receive a call	Tap the Call button	
Reject a call	Press and hold the Call button until you hear a beep	
Redial last call	Press and hold the Call button until you hear a beep	
Answer a second incoming call	Press and hold the Call button (places first call on hold)	
Note: Your H300 supports both Handsfree and Headset Profiles. Accessing call functions depends upon which		

Note: Your H300 supports both Handsfree and Headset Profiles. Accessing call functions depends upon which profile your phone supports. See your phone's user's guide for more information.

MAKING	CALLS	CONTINUED

	•
Function	Action
Toggle between two active calls	Press and hold the Call button
Join a 3-way call	Press and hold both Volume button
Put an active call on hold or resume a call on hold	Press and hold the Call button until you hear a beep
Transfer a call from the phone to the headset	Tap the Call button
Disable or enable the indicator light	Press and hold both Volume buttons for 3 to 4 seconds
Mute or unmute a call	Tap both Volume buttons

Note: Some features are phone/network dependent.