

# Nokia Wireless Stereo Headset (HS-12W) User Guide

---



## DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product HS-12W is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

# CE 0682



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or

contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

#### Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

9240474/Issue 1 EN

# Contents

---

|   |           |
|---|-----------|
| <b>1. Introduction</b> .....                    | <b>6</b>  |
| Radio data system (RDS) .....                   | 6         |
| Bluetooth wireless technology .....             | 6         |
| <b>2. Get started</b> .....                     | <b>8</b>  |
| Chargers and batteries.....                     | 9         |
| Charge the battery.....                         | 9         |
| Switch the headset on or off .....              | 10        |
| Pair the headset with a compatible phone .....  | 10        |
| Disconnect the headset from the phone.....      | 11        |
| Reconnect the paired headset to your phone..... | 11        |
| <b>3. Basic use</b> .....                       | <b>12</b> |
| Wear the earpieces .....                        | 12        |
| Adjust the earpiece volume .....                | 12        |
| Call handling.....                              | 12        |
| Make a call.....                                | 12        |
| Answer a call .....                             | 13        |
| End a call.....                                 | 13        |
| Mute or unmute the microphone.....              | 14        |
| Switch the call between phone and headset.....  | 14        |
| Listen to the audio player .....                | 14        |
| Listen to the radio .....                       | 15        |
| Lock or unlock the keys .....                   | 16        |
| View the time .....                             | 16        |
| Missed calls and received messages .....        | 16        |
| Reset the headset.....                          | 17        |

|                             |    |
|-----------------------------|----|
| 4. Battery information..... | 18 |
| Care and maintenance .....  | 19 |

# 1. Introduction

---

The Nokia Wireless Stereo Headset (HS-12W) allows you to make and receive phone calls, and listen to FM radio and music tracks.

Read this user guide carefully before using the headset. Read also the user guide for your phone, which provides important safety and maintenance information. Keep the headset out of reach of small children.

## ■ Radio data system (RDS)

The FM radio of the headset supports the RDS technology. RDS allows you to view the name of the selected radio channel on the headset display. RDS also keeps the headset automatically tuned into the selected radio channel as long as the channel is available in your location. RDS may not work with all radio channels or in all countries.

## ■ Bluetooth wireless technology

Bluetooth wireless technology makes it possible to connect compatible communication devices without using cables. A Bluetooth connection does not require that the phone and the headset be in line of sight, but both devices should be within 10 meters (30 feet) of each other. Connections can be subject to interference from obstructions, such as walls, or other electronic devices.




 


 

 
The wireless headset is compliant with Bluetooth Specification 2.0 supporting the following profiles: Headset Profile 1.1, Hands-free Profile 1.0, Advanced Audio


Distribution Profile (A2DP) 1.0, Audio/Video Remote Control Profile (AVRCP) 1.0, and General Audio/Video Distribution Profile (GAVDP) 1.0. Check with the manufacturers of other devices to determine their compatibility with this device. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

## 2. Get started

---

The headset contains the following parts:

- Display (1)
- Call/play key  (2)
- Volume down key  (3)
- Volume up key  (4)
- Power key  (5)
- Stop key  (6)
- Neck strap clip (7) ties up the strap laces.
- Headset clip (8) attaches the headset to your clothing.
- Key lock switch  (9)
- Music key  (10)
- Fast forward key  (11)
- Rewind key  (12)
- Strap lock (13) fastens the neck strap.
- Microphone (14) picks up your voice. You can press the key on the microphone to answer or end a call, or to play a music track.

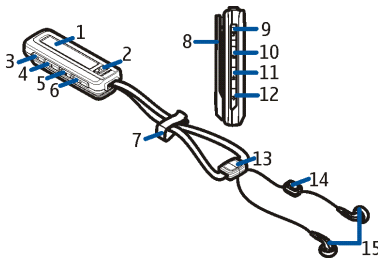



- Earpieces (15) relay the caller's voice and the sounds from the radio or audio player.

Before you can start using the headset, you must charge the battery and pair the headset with a compatible phone.



Note: Parts of the headset are magnetic. Metallic materials may be attracted to the headset, and persons with a hearing aid should not hold the headset to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

## ■ Chargers and batteries

Check the model number of any charger before using it with this device. The Nokia Wireless Stereo Headset (HS-12W) is intended for use with the AC-1, ACP-12, and LCH-12 chargers.




Warning: Use only batteries and chargers approved by Nokia for use with this particular enhancement. The use of any other types may invalidate any approval or warranty, and may be dangerous.


For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

## ■ Charge the battery


This device has an internal, non-removable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the headset.

1. Connect the charger cable to the headset.
2. Connect the charger to a wall outlet. The battery indicator scrolls on the display during charging. Charging the battery fully may take up to 2 hours depending on the charger.

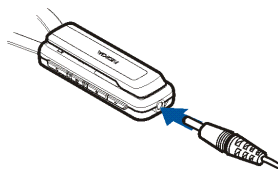

3. When the battery is fully charged, the battery indicator stops scrolling, and  and a note are displayed. Disconnect the charger from the wall outlet and the headset.

The fully charged battery has power for up to 8 hours of talk-time or up to 200 hours of standby time. However, the talk and standby times may vary when used with different mobile phones, products that use a Bluetooth connection, usage settings, usage styles, and environments.

When the battery is running out, the headset beeps, displays a note and .


## ■ Switch the headset on or off

To switch the headset on, press and hold the power key. The headset beeps and displays the Nokia text.

To switch the headset off, press and hold the power key. The headset beeps.

## ■ Pair the headset with a compatible phone

1. Switch on your phone and the headset.
2. Activate the Bluetooth feature on the phone, and set the phone to search for Bluetooth devices. See the user guide of your phone for instructions.

3. Select the headset (HS-12W) from the list of found devices.
4. Enter the passcode 0000 to pair and connect the headset to your phone. In some phones you may need to make the connection separately after pairing. See the user guide of your phone for details. You only need to pair the headset with your phone once.
5. If the pairing was successful,  appears on the headset display, and you can start using the headset.

You can set your phone to connect with the headset automatically when the headset is switched on. To do this in Nokia phones, change your paired device settings in the Bluetooth menu.

## Disconnect the headset from the phone

To disconnect the headset from your phone (for example, to connect the phone to another Bluetooth device), do one of the following:

- Switch off the headset.
- Disconnect the headset in the Bluetooth menu of your phone.
- Move the headset more than 10 meters (30 feet) away from the phone.

You do not need to delete the pairing with the headset to disconnect it.

## Reconnect the paired headset to your phone

If you want to reconnect the paired headset to your phone, switch on the headset, make the connection in the Bluetooth menu of your phone, or press and hold the call/play key of the headset until *Connecting* is shown on the display.

## 3. Basic use

---

### ■ Wear the earpieces

For a better fit of the earpieces, you can remove the rubber rings around the earpieces or replace them with soft ear pads for enhanced audio quality. The headset comes with three pairs of soft ear pads.



Warning: When using the stereo headset your ability to hear outside sounds may be affected. Do not use the stereo headset where it can endanger your safety.

### ■ Adjust the earpiece volume

 
Press the volume up or volume down key to adjust the earpiece volume. To adjust the volume quickly, press and hold either key. The volume level is shown on the display.

### ■ Call handling

#### Make a call


To make a call, use your phone in the normal way when the headset is connected to your phone.

If your phone supports redialing, press the call/play key twice.

If your phone supports voice dialing, press and hold the call/play key until  appears on the display. Say the voice tag. The phone dials the related phone number.


Voice dialing and redialing are not available during a call or when you are listening to the radio or music.

## Answer a call

When you receive a call, the ringing tone selected on your phone sounds, and  and the caller's name are shown on the display if your Nokia phone supports the transfer of this information into the headset. If the caller's name is unknown, the caller's number or *Call* is shown instead.

To answer a call, press the call/play key, press the key on the microphone, or use the phone keys. If the automatic answer function is set on in your phone, the phone automatically answers the call after one ring.

To reject an incoming call, press the call/play key twice.

If you receive another call during a call,  is shown on the display. To end the ongoing call and answer the new call, press the call/play key twice.

## End a call

To end a call, press the call/play key, press the key on the microphone, or use the phone keys.

## Mute or unmute the microphone

To mute or unmute the microphone during a call, press the power key briefly.

## Switch the call between phone and headset

To switch the call between the headset and a compatible Nokia phone, press and hold the call/play key of the headset, or use the respective function in your phone.


## ■ Listen to the audio player

You can listen to the audio player of your phone or a compatible music playing device.

If you receive a call when listening to the player, the player is paused until the call ends.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

To use the stop key, music key, fast forward and rewind keys of the headset, your phone must support the Audio Video Remote Control Profile, see [Bluetooth wireless technology](#) on page 6. If your phone does not support this profile, start the audio player on your phone. When the audio player is on,  is shown on the display.

To start the audio player, press the music key, or go to the audio player function in your phone. See the user guide of your phone for details.

To play a specific track, select it in the audio player of your phone.

To select the next track, press the fast forward key. To select the previous track, press the rewind key.


To pause the audio player, press the stop key. To restart it, press the call/play key.

To stop the audio player, press the stop key twice.


## ■ Listen to the radio

You can use the FM radio of the headset also without connecting the headset to a phone.

If you receive a call while listening to the radio, the radio is muted until the call ends.

To switch on the radio, press the music key twice. If the headset is not connected to your phone or you are listening to the audio player, press the music key once. When the radio is on,  is shown on the display.

To search for radio channels, press and hold the fast forward or rewind key for a few seconds. To stop searching for new channels, press the stop key. To fine tune a found channel, press the fast forward or rewind key while the channel number is blinking on the display.

To save a found channel in the headset memory, press the call/play key. You can save up to 20 channels. The memory location of the current channel is shown after the  indicator. If you save a channel when all the memory locations are occupied, the new channel replaces the old one in the first memory location.


To select a saved channel and listen to it, press the fast forward or rewind key.

To switch off the radio, press the music key, or press and hold the stop key.

To delete a channel, you need to reset the headset to its original settings. All the saved channels are cleared.

To change from the FM radio frequency default range (87.5 to 108 MHz) to the range used in Japan (76 to 90 MHz), press and hold the fast forward and rewind keys until the new frequency range is shown. Changing the range resets all the saved channels.

## ■ Lock or unlock the keys


Slide the key lock switch towards the top of the headset to lock or towards the music key to unlock the headset keys. A note and  are displayed. When the keys are locked, all key presses are ignored. If you receive a call, the keys are unlocked until you end the call.

## ■ View the time

When the headset is connected to a compatible phone, the headset shows the current time in the standby mode if your phone supports the transfer of this information into the headset. (In the standby mode, the headset is switched on but not used.) To adjust the time, use the clock function in your phone.

## ■ Missed calls and received messages

When you miss a call,  is shown on the display.

 shows that you have at least one unread text or multimedia message that you can view on the phone.



You are notified of new messages and missed calls only if your Nokia phone supports the transfer of this information into the headset.

## ■ Reset the headset

To reset the headset to its original settings, press and hold the power key and the volume up key for 10 seconds. The display indicates when the headset is reset. After the reset, you need to pair the headset with your phone to use the headset.

## 4. Battery information

---

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

# Care and maintenance

---

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow the device to dry completely before replacing it.
- Do not attempt to remove the battery from the device.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

