@ 2004 Plantronics, Inc. All rights reserved. Plantronics, the logo design, Plantronics and the logo design combined, and Audio IQ are trademarks or registered trademarks of Plantronics, Inc. The I NEED MORE HELP Bluetooth name and the Bluetooth trademarks are owned by Bluetooth SIG, Inc. and are used by Plantronics, Inc. under license. All other trademarks are the property of their respective owners.

including items not covered by this limited warranty.

contact our service centers at the numbers provided.

remanufactured/pre-owned or new Products or parts.

purchased and used in the United States and Canada.

purchase receipt.

your dealer or our service center for the full details of our limited warranty,

• This warranty gives you specific legal rights, and you may also have other

THIS IS PLANTRONICS' COMPLETE WARRANTY FOR THE PRODUCTS.

Canada call (800) 540-8363. If you need additional information, please

To obtain service in the U.S. contact Plantronics at (800) 544-4660 and in

the warranty. We may use tunctionally equivalent reconditioned/returbished/

We will, at our option, repair or replace the Products that do not conform to

This warranty extends to you only it you are the end user with the original

This warranty lasts for one year from the date of purchase of the Products.

This warranty covers defects in materials and workmanship of Commercial

Purchased in the US and Canada

for Plantronics Commercial Products

ΥΤΝΑЯЯΑΨ ΟΞΤΙΜΙΙ

MAINTENANCE/TROUBLESHOOTING

MAINTENANCE HINTS FOR OPTIMAL PERFORMANCE

TROUBLESHOOTING

2. Clean the outside of the headset with a dry cloth once a month. Dirt can

1. Replace the rechargeable battery every 12 months.

MY HEADSET DOES NOT WORK WITH MY PHONE.

Verify that the unit is not in mute mode (see Fig. 6.3).

Turn up the volume using the VOLUME UP control.

decrease the efficiency of the headset.

Make sure the battery is fully charged.

CALLERS DO NOT HEAR ME.

I DON'T HEAR CALLERS.

What do I do if.

vour mouth

Products manufactured, sold or certified by Plantronics which were

rights which vary from state to state or province to province. Please contact

• Visit www.plantronics.com or call 800.544.4660 for assistance. (US only, toll-free.)

THE HEADSET IS UNCOMFORTABLE.

• Select the proper size earloop for your ear. Both a large and a small earloop

Make sure the headset's speaker (see Fig. 3.2) is positioned snugly over your ear

- are included with your headset.
- Check to make sure that the earloop is properly positioned so pressure is not being exerted on any part of your ear causing you discomfort

HOW DO I USE THE HEADSET ON MY LEFT EAR?

- The headset, as packaged, is ready to be used on your right ear. However, with one very simple adjustment, the headset is easily configured for your left ear. Please see the footnote in Section 3 for detailed instructions.

Make sure the Bluetooth[®] feature of your phone is turned on. Refer to your mobile phone user guide and perform the pairing process. M3500 EARLOOP SET • Make sure that the microphone (see Fig. 3.3) is positioned properly toward One large and one small

MY HEADSET DOES NOT RESPOND TO BUTTON PRESSES. Remove and replace the battery pack as described in Section 9. Make sure your headset is turned on. See Section 4 for detailed instructions. • Verify that your phone is turned on, properly charged, and able to make calls.

Replacement headset battery pack.

replacement earloops.

Multi-voltage AC adapter. US, UK and European versions available.

M3500 BATTERY

AC ADAPTER

separately. Call 1.800.544.4660 or visit www.plantronics.com for ordering information. **HEADBAND**

CAR LIGHTER ADAPTER

Car lighter adapter allows you to

charge and use your M3500 headset

from any 12-volt car lighter socket.

Items shown are accessories available for your M3500 headset with Bluetooth* that may be purchased

PARTS & ACCESSORIES

ΙΜΡΟΓΤΑΜΆΟΙΝΙ ΥΤΞΊΑς ΤΝΑΤΆΟΙΜΙ

auq way cause damage to eyes or skin pack. Released electrolyte is corrosive 3. Do not open or mutilate the battery

Over-the-head headband for

long-term wearing comfort.

64625-02

France 698 539; Patents Pending.

conductor may overheat and cause pracelets, or keys. The battery or with conducting materials such as rings, order not to "short" the battery contacts 4. Exercise care in handling the battery in and may be toxic it swallowed.

pattery and charger contacts. 5. Observe proper orientation between ·suina

СНАКСІИС

dualified service personnel. adapter from the wall and contact Auring charging, disconnect the AC ton semocet becadset becomes hot an AC voltage or wall outlet. AC adapter to charge the headset from C supplied Class 2 Couly the supplied Class 2

exbose you to dangerous voltages or AC adapter of this product as it may Interpretation of discrete the statement of the statem

CAUTION: Do not use the charger ·pəsn /µuənbəsqns si canze electric spock when the product other risks. Incorrect reassemply can

. Ibunapin sidi accordance with the instructions of Only charge the headset battery in outdoors or in damp areas.

Charger Output: 5V/180mA maximum,

center contact positive.

cells may explode. Check with local 2. Do not dispose of battery in a fire. The

codes for possible disposal instructions.

mobile phone and headset while driving. Check local laws regarding use of a

NECKBAND

CARRY CASE

Includes belt clip

vour headset.

DPLANTRONICS

345 Encinal St., Santa Cruz, CA 95060 • 800.544.4660 • www.plantronics.com

U.S. 5,210,791 and D471,537; Australia 151050; Germany 40210147.2; GB Regd.Des.No. 3009355;

Soft case to protect

Behind-the-head neckband for

discreet long-term wearing comfort.

01.04

on your responsibility of driving safely. ensure your attention and focus remains If you use the product while driving

with the headset—small parts may be a CHILDREN. Never allow children to play

 Batteries can be swallowed by children cpoking hazard.

store and dispose of batteries where and are dangerous if swallowed. Always

electrical device or RF radio product to children can't reach them.

These could include hospitals, blasting

Incu off your headset prior to boarding

·s/oidab gba serious injury may result when an air ολέι αυλ αιι ραθ φεριολιμεμε αιέα αε Never mount or store your headset

ЗАТТЕ КҮ

these instructions. ZAUTION: To reduce the risk of fire

.cauaudsouun areas, and potentially explosive Observe all signs that require an

De switched off in designated areas.

an aircraft. Do not use your headset in

an aircran.

I. Use only the battery pack supplied with or injury to persons, read and tollow

this product.

I he level of energy emitted is far less than wireless radio is safe for use by consumers. Plantronics therefore believes the internal γτισυπαίτις community. which reflect the consensus of the safety standards and recommendations, vitinin guidelines tound in radio trequency The internal wireless radio operates described in the manual. the wireless radio shall be used as trequency exposure limits. Nevertheless, wireless radio is far below the FCC radio The radiated output power of this internal

as this may damage internal components.

Do not stick anything inside the product

dry cloth to clean the external portions

headset or tinish of the headset. Use a

cieavers as they may damage the

Do not use liquid cleaners or aerosol

Never submerge your headset in water

excessive rdin, dnd wet locations.

Protect your headset from spills,

·uəudınbə əu

void the user's authority to operate

approved by Plantronics, Inc. could

Detore turning on the wireless radio.

ουταθέα το αεκ τοι απιμομχαιου

It you are unsure of restrictions, you are

euvironments, such as aboard airplanes.

the electromagnetic energy emitted by

NOTE: Modifications not expressly

be restricted in some situations or

ΓΕΓΕΘΟΕΝΟΥ ΚΑΡΙΑΤΙΟΝ

ΟΙΔΑΆ ΟΤ ΞΆU2O4XΞ

or the heddset.

or other liquids.

CARE

However, the use of wireless radios may vireless devices such as mobile phones. interference by one or more of the interterence to radio or television

:səınspəm buiwollot user is encouraged to try to correct the turning the equipment off and on, the

equipment and receiver.

receiver is connected.

a circuit different from that to which the Connect the equipment into an outlet on

in a particular installation. guarantee that interference will not occur communications. However, there is no cause harmful interference to radio

reception, which can be determined by It this equipment does cause harmtul

. Dunetana.

Increase the separation between the

accordance with the instructions, may

energy and, if not installed and used in

uses and can radiate radio frequency

harmful interference in a residential

installation. This equipment generates,

provide reasonable protection against

FCC Rules. These limits are designed to

digital device, pursuant to Part 15 of the

This equipment has been tested and found

to comply with the limits for a Class B

may cause undesired operation.

I. This device may not cause harmtul

FCC Rules. Operation is subject to the

This device complies with Part 15 of the

interterence; and

iollowing two conditions:


received, including interference that

2. This device must accept any interference

Reorient or relocate the receiving

Bluetooth

USER GUIDE

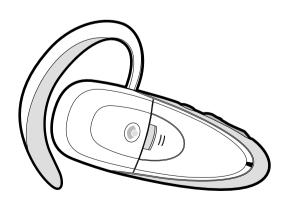





ΡΓΑΝΤRΟΝΙCS Μ3500 **ABOUT THE**



unsurpassed hands-free communication. and Audio IQ" technology to improve incoming call quality and deliver Your Plantronics M3500 headset combines Bluetooth® wireless technology

μεαι αυq pe μεαιq ωοιε cleauλ. When using an M3500 headset and a compatible mobile phone, you'll

heard above any surrounding distractions. environments. Ambient noise reduction ensures your voice can be so voices sound natural and understandable-especially in noisy The integrated DSP uses audio compression and frequency equalization


your neadset. tailored for your mobile lifestyle. Refer to this guide to set up and use Designed to provide maximum comfort and ease of use, the M3500 is

compatibility information, visit www.plantronics.com. Headset and/or Handstree Profiles. For product support or additional The M3500 is compatible with devices that support the Bluetooth®

M3500 MOBILE HEADSET WITH BLUETOOTH

WELCOME

Here are the components of your Plantronics M3500 Headset.

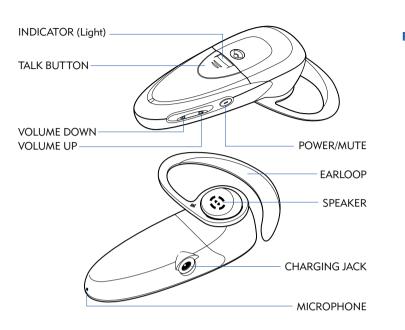

E PAIRING—IMPORTANT

6

Before using your headset, you must pair it with another Bluetooth® device, such as a mobile phone. Refer to your mobile phone's user quide for specific instructions, or visit www.plantronics.com.



FIG. 5.2

FIG. 5.1 TURN ON BOTH DEVICES

Once both devices are turned on, place the headset and phone where they are easily viewable. Make sure the Bluetooth[®] feature of your phone is turned on.

FIG. 5.2 SELECT PAIRING MODE

On your headset PRESS and HOLD both the TALK and VOLUME UP keys for two seconds until the INDICATOR light flashes red then green.

Your headset will remain discoverable by other Bluetooth[®] devices for 60 seconds. On your phone, search for devices by selecting search or discover from the Bluetooth® options menu. Check your mobile phone display and follow any instructions



FIG. 5.3 ENTER THE PASSKEY

When prompted by your phone, enter four zeros (0000). This is your headset passkey.

CONFIRM PAIRING

Check your mobile phone display to see if pairing succeeded and follow any instructions. **NOTE:** If pairing is not completed within 60 seconds, the headset will return to on/standby mode

Refer to your phone user guide and repeat the pairing process.

CHARGING THE BATTERY

NOTE: The battery pack for your M3500 is already installed when you purchase your headset. If the battery pack has been removed, or for instructions on replacing the battery, see Section 9.

FIG. 2.1 0

 


FIG. 2.1 CONNECT TO POWER

Connect the included wall charger to AC power and then to the headset charging jack. In a few seconds, the INDICATOR will light red. Charge the headset overnight (at least 8 Subsequent charges take just 90 minutes and

the INDICATOR will turn green when the headset is fully charaed.

TIPS: Draining the battery once a month can improve battery life. Otherwise, it's best to charge your headset whenever possible. Avoid charging in excessive heat (above 104°F/40°C) or cold (below 50°F/10°C). The headset may also be charged using the

The battery used in your headset must be recycled or disposed of properly. Contact instructions.


Do not use the headset while charging and do not connect the charger while the headset is in use

USING YOUR HEADSET

PRESS FIG. 6.1 0





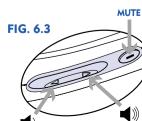

included car lighter adapter.

your local recycling center for proper disposal

FIG. 6.1 ANSWERING A CALL

Wait for the headset to ring, then PRESS and RELEASE the headset TALK button. During a call, the headset INDICATOR light will flash green showing a call is in progress.

TRANSFERRING TO THE HEADSET

You can transfer a call from your phone to your headset by pressing and releasing the headset TALK button

ENDING A CALL

To end a call, PRESS and RELEASE the headset TALK button any time during a call.


FIG. 6.2 MAKING A CALL

To make a call, dial using your phone's keypad. To voice-dial a call from your headset, PRESS and HOLD the headset TALK button for two seconds

FIG. 6.3 ADJUSTING THE VOLUME

To increase the volume level, PRESS and RELEASE the VOLUME UP button. To decrease the volume level, PRESS and RELEASE the VOLUME DOWN button. When the maximum or minimum volume level is reached, the headset sounds four short tones

 
MUTE FEATURE




The mute feature allows you to hear the person you are calling, however, they cannot hear you.

To mute or un-mute a call, PRESS and RELEASE the POWER/MUTE button. Two tones indicate mute function is on. When mute is enabled, the headset will sound two short tones every 30 seconds.

 GETTING THE PERFECT FIT

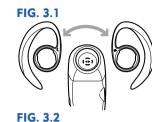





The headset, as packaged, is ready to be used on your right ear—a letter R on the earloop is facina outward. For left ear usage, simply unsnap the earloop from the headset by pulling gently at the base of the earloop ring.

FIG. 3.1 SELECT LEFT OR RIGHT EAR

Flip the earloop over (with the letter L facing outward) and snap it back onto the headset.

FIG. 3.2 SLIDE HEADSET OVER YOUR EAR

Using one hand, gently slide the earloop behind your ear in a twisting motion until you achieve a snug, comfortable fit.

FIG. 3.3 ADJUST FOR SOUND AND COMFORT

Adjust the microphone so it aligns with your mouth

Make sure that the speaker positions correctly on top of your ear canal and that the earloop does not cause discomfort.

Your headset, as packaged, is configured with a small-size earloop. For larger ears, install the larger earloop included in your package.


ADDITIONAL FEATURES

NOTE: These features may be available if your phone supports the Handsfree Profile. Functionality varies depending on the phone model you have. Refer to your phone user auide for additional information.

HOLD FOR FIG. 7.1 CALL TRANSFER 2 SECONDS You can transfer a call back to your phone

FIG. 7.1



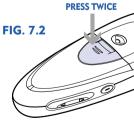



STOWING YOUR HEADSET

Consider turning your headset off before placing it in your pocket or bag. If the TALK button is pressed accidentally, your phone may place an unintended call.

 












CALL REJECT While your phone is ringing, you can reject the call without answering. PRESS and HOLD the TALK button. You will hear a tone when you press the TALK button. When you hear a second tone, the call has been rejected and you may release the TALK button.

from your headset. PRESS and HOLD the

press the TALK button. When you hear a

TALK button. You will hear a tone when you



FIG. 7.2 LAST NUMBER REDIAL


When making a call, you can quickly dial the last number called from your headset. PRESS the TALK button twice quickly. Check the display on your phone for call progress.



BASICS: BEFORE YOU GET STARTED

FIG. 4.1

FIG. 4.2

 

 


FIG. 4.1 TURNING HEADSET ON AND OFF

flashes green. The INDICATOR will flash green every three seconds while the headset is on. To turn your headset off, PRESS and HOLD the POWER/MUTE button until the

INDICATOR flashes red.



When the headset is on and battery becomes low, the headset emits a beep every 20 seconds.

The INDICATOR also flashes red when the battery needs to be recharged. Recharge the battery as described in Section 2

REPLACING THE BATTERY

IMPORTANT: If your headset stops responding to button presses, remove and reinstall the battery as described below.



FIG. 9.1 REMOVE COVER

Open the battery compartment by pushing back on the battery door.

FIG. 9.2 UNPLUG OLD BATTERY

Remove the battery by pulling on the tab to expose the red and black wires and battery connector. Gently pull at the base of the wires to unplug the battery.



FIG. 9.3 INSTALL NEW BATTERY

To install a new battery, insert the battery plug as shown in the illustration. Make sure you align the plugs so they connect easily. Do not force the connection.

Fold the wire under the battery pack and gently push the battery in place.

REPLACE BATTERY DOOR

Replace the battery door by pushing it forward until it snaps shut.