


# FUJIFILM

DIGITAL CAMERA

## FINEPIX F300EXR

### Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM FinePix F300EXR digital camera and the supplied software. Be sure that you have read and understood its contents before using the camera.

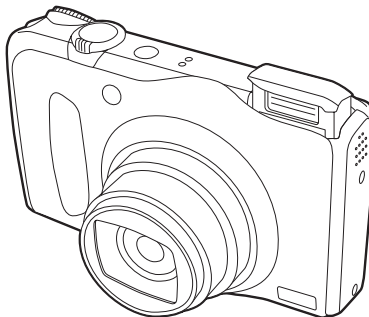

For information on related products, visit our website at [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)

Exif Print



SUPER CCD EXR

HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE

BL01056-201 **EN**

**Before You Begin**

**First Steps**

**Basic Photography and Playback**

**More on Photography**

**More on Playback**

**Movies**

**Connections**

**Menus**

**Technical Notes**

**Troubleshooting**

**Appendix**

# Notes and Cautions

## IMPORTANT SAFETY INSTRUCTIONS

- **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow Instructions:** All operating and use instructions should be followed.

### Installation

**Power Sources:** This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

**Grounding or Polarization:** This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace

your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**Alternate Warnings:** This video product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

**Overloading:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

**Ventilation:** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the

manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

**Attachments:** Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

**Water and Moisture:** Do not use this video product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

**Power-Cord Protection:** Power-Supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**Accessories:** Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting

of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




### Antennas

**Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antennadischarge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

**Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

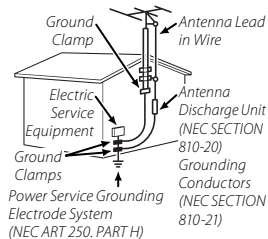

### Use

**Cleaning:** Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

**Object and Liquid Entry:** Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or shortout parts that could result in a fire or electric shock.

Never spill liquid of any kind on the video product.

**Lightning:** For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

### Service

**Service:** Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**Damage Requiring Service:** Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.
- If the video product does not operate normally be following the operating instructions. Adjust only

those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance - this indicates a need for service.

**Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**Safety Check:** Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

## Be sure to read this notes before using

### Safety Notes

- Make sure that you use your camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- After reading these Safety Notes, store them in a safe place.

### About the Icons

- The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



**WARNING**

This icon indicates that death or serious injury can result if the information is ignored.



**CAUTION**

This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.



Triangular icons tell you that this information requires attention ("important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark tell you an action that must be performed ("Required").



### WARNING



Unplugging from power socket.

**If a problem arises, turn the camera off, remove the battery, disconnect and unplug the AC power adapter.**

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



**Do not allow water or foreign objects to enter the camera.**

If water or foreign objects get inside the camera, turn the camera off, remove the battery and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock.

- Contact your FUJIFILM dealer.



Do not use in the bathroom or shower.

**Do not use the camera in the bathroom or shower.**

This can cause a fire or electric shock.



Do not disassemble.

**Never attempt to disassemble or modify (never open the case).**

Failure to observe this precaution can cause fire or electric shock.



Do not touch internal parts.

**Should the case break open as the result of a fall or other accident, do not touch the exposed parts.**

Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



**Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.**

These actions could damage the cord and cause a fire or electric shock.

- If the cord is damaged, contact your FUJIFILM dealer.












**Do not place the camera on an unstable surface.**














This can cause the camera to fall or tip over and cause injury.



**Never attempt to take pictures while in motion.**

Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident.

 <b>WARNING</b>	
	<b>Do not touch any metal parts of the camera during a thunderstorm.</b> This can cause an electric shock due to induced current from the lightning discharge.
	<b>Do not use the battery except as specified.</b> Load the battery as aligned with the indicator.
	<b>Do not heat, change or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Do not use chargers other than the specified model to charge the battery.</b> Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.
	<b>Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown.</b> The use of other power sources can cause a fire.
	<b>If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.</b>
	<b>Do not use the charger to charge batteries other than those specified here.</b> The Ni-MH battery charger is designed for Fujifilm HR-AA Ni-MH batteries. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.
	<b>When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape.</b> Contact with other metallic objects or battery could cause the battery to ignite or burst.
	<b>Keep Memory Cards out of the reach of small children.</b> Because Memory Cards are small, they can be swallowed by children. Be sure to store Memory Cards out of the reach of small children. If a child swallows a Memory Card, seek medical attention or call an emergency number.

 <b>CAUTION</b>	
	<b>Do not use this camera in locations affected by oil fumes, steam, humidity or dust.</b> This can cause a fire or electric shock.
	<b>Do not leave this camera in places subject to extremely high temperatures.</b> Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.
	<b>Keep out of the reach of small children.</b> This product could cause injury in the hands of a child.
	<b>Do not place heavy objects on the camera.</b> This can cause the heavy object to tip over or fall and cause injury.
	<b>Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.</b> This can damage the power cord or cables and cause a fire or electric shock.
	<b>Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.</b> This could cause a fire or electric shock.
	<b>Do not cover or wrap the camera or the AC power adapter in a cloth or blanket.</b> This can cause heat to build up and distort the casing or cause a fire.
	<b>When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.</b> Failure to do so can cause a fire or electric shock.
	<b>When charging ends, unplug the charger from the power socket.</b> Leaving the charger plugged into the power socket can cause a fire.
	<b>Using a flash too close to a person's eyes may temporarily affect the eyesight.</b> Take particular care when photographing infants and young children.
	<b>When a Memory Card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.</b>
	<b>Request regular internal testing and cleaning for your camera.</b> Build-up of dust in your camera can cause a fire or electric shock. • Contact your FUJIFILM dealer to request internal cleaning every 2 years. • Please note this is not a free of charge service.

**Power Supply and Battery**

\* Confirm your battery type before reading the following descriptions.

The following explains proper use of batteries and how to prolong their life. Incorrect use of batteries can cause shorter battery life, as well as leakage, excessive heat, fire or explosion.

**1 Camera uses the Rechargeable Lithium-ion Battery**

- \* When shipped, the battery is not fully charged. Always charge the battery before using it.
- \* When carrying the battery, install it in a digital camera or keep it in the soft case.

**Battery Features**

- The battery gradually loses its charge even when not used. Use a battery that has been charged recently (in the last day or two) to take pictures.
  - To maximize the life of the battery, turn the camera off as quickly as possible when it is not being used.
  - The number of available frames will be lower in cold locations or at low temperatures. Take along a spare fully charged battery. You can also increase the amount of power produced by putting the battery in your pocket or another warm place to heat it and then loading it into the camera just before you take a picture.
- If you are using a heating pad,

take care not to place the battery directly against the pad. The camera may not operate if you use a depleted battery in cold conditions.

**Charging the Battery**

- You can charge the battery using the battery charger (included).
- The battery can be charged at ambient temperatures between 0°C and +40°C (+32°F and +104°F). Refer to the OWNER'S MANUAL for the time of charging battery.
- You should charge the battery at an ambient temperature between +10°C and +35°C (+50°F and +95°F). If you charge the battery at a temperature outside this range, charging takes longer because the performance of the battery is impaired.
- You cannot charge the battery at temperatures of 0°C (+32°F) or below.
- The Rechargeable Lithium-ion Battery does not need to be fully discharged or exhausted flat before being charged.
- The battery may feel warm after it has been charged or immediately after being used. This is perfectly normal.
- Do not recharge a fully charged battery.

**Battery Life**

At normal temperatures, the battery can be used at least 300 times. If the time for which the battery provides power shortens markedly, this indicates that the battery has reached the end of its effective life and should be replaced.

**Notes on storage**

- If a battery is stored for long periods while charged, the performance of the battery can be impaired. If the battery will not be used for some time, run the battery out before storing it.
- If you do not intend to use the camera for a long period of time, remove the battery from the camera.
- Store the battery in a cool place.
  - The battery should be stored in a dry location with an ambient temperature between +15°C and +25°C (+59°F and +77°F).
- Do not leave the battery in hot or extremely cold places.

**Handling the Battery Cautions for Your Safety:**

- Do not carry or store battery with metal objects such as necklaces or hairpins.
- Do not heat the battery or throw it into a fire.
- Do not attempt to take apart or change the battery.
- Do not recharge the battery with chargers other than those specified.

- Dispose of used battery promptly.
- Do not drop the battery or otherwise subject it to strong impacts.
- Do not expose the battery to water.
- Always keep the battery terminals clean.
- Do not store batteries in hot places. Also, if you use the battery for a long period, the camera body and the battery itself will become warm. This is normal. Use the AC power adapter if you are taking pictures or viewing images for a long period of time.

**2 Camera uses AA-size alkaline or Ni-MH (nickelmetal hydride) rechargeable batteries**

- \* For details on the batteries that you can use, refer to the OWNER'S MANUAL of your camera.
- Cautions for Using Battery**
- Do not heat the batteries or throw them into a fire.
- Do not carry or store batteries with metal objects such as necklaces or hairpins.
- Do not expose the batteries to water, and keep batteries from getting wet or stored in moist locations.
- Do not attempt to take apart or change the batteries, including battery casings.
- Do not subject the batteries to strong impacts.

- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- Keep the batteries out of reach of babies and small children.
- Make sure that the battery polarity (⊕ and ⊖) is correct.
- Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.
- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries.



If any battery fluid comes into contact with your hands or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of eyesight if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

#### ■ Using the AA-size Ni-MH batteries correctly

- Ni-MH batteries left unused in storage for long periods can become “deactivated”. Also, repeatedly charging Ni-MH batteries that are only partially discharged can cause them to suffer from the “memory effect”. Ni-MH batteries that are “deactivated” or affected by “memory” suffer from the problem of only providing power for a short time after being charged. To prevent this problem, discharge and recharge them several times using the camera’s “Discharging rechargeable batteries” function. Deactivation and memory are specific to Ni-MH batteries and are not in fact battery faults. See OWNER’S MANUAL for the

procedure for “Discharging rechargeable batteries”.

#### ⚠ CAUTION

Do not use the “Discharging rechargeable batteries” function when alkaline batteries being used.

- To charge Ni-MH batteries, use the quick battery charger (sold separately). Refer to the instructions supplied with the charger to make sure that the charger is used correctly.
- Do not use the battery charger to charge other batteries.
- Note that the batteries feel warm after being charged.
- Due to the way the camera is constructed, a small amount of current is used even when the camera is turned off. Note in particular that leaving Ni-MH batteries in the camera for a long period will overdischarge the batteries and may render them unusable even after recharging.
- Ni-MH batteries will self-discharge even when not used, and the time for which they can be used may be shortened as a result.
- Ni-MH batteries will deteriorate rapidly if overdischarged (e.g. by discharging the batteries in a flashlight). Use the “Discharging rechargeable batteries” function provided in the camera to discharge the batteries.
- Ni-MH batteries have a limited service life. If a battery can only be

used for a short time even after repeated discharge-charge cycles, it may have reached the end of its service life.

#### ■ Disposing of Batteries

- When disposing of batteries, do so in accordance with your local waste disposal regulations.

#### 3 Notes on both models (1, 2)

#### ■ AC Power Adapter

Always use the AC Power Adapter with the camera. The use of an AC Power adapter other than FUJIFILM AC Power Adapter can be damaged to your digital camera.

For details on the AC power adapter, refer to the OWNER’S MANUAL of your camera.

- Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.

- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal.
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio.

#### Before Using the Camera

Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.

#### Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

- FUJIFILM Corporation cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

#### Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner,

unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of Memory Card containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

#### Handling Your Digital Camera


To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

#### Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin:  
Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye:  
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed:  
Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

#### Trademark Information

-  and **xD-Picture Card™** are trademarks of FUJIFILM Corporation.
- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- Macintosh, Quick-Time, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries.
- Windows 7, Windows Vista and the Windows logo are trademarks of the Microsoft group of companies.
- IrSimple™ Trademark is owned by the Infrared Data Association®.
- IrSS™ Trademark or IrSimpleShot™ Trademark is owned by the Infrared Data Association®.
- SDHC logo is a trademark.
- HDMI logo is a trademark.
- YouTube is a trademark of Google Inc.
- Other company or product names are trademarks or registered trademarks of the respective companies.

#### Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

#### Explanation of Color Television System

NTSC: National Television System Committee, color television telecasting specifications adopted mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

#### Exif Print (Exif ver. 2.3)

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

#### IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.



# About This Manual

Before using the camera, read this manual and the other supplied documents. For information on specific topics, consult the sources below.

## ✓ **Camera Q & A** .....pg. x

Know what you want to do but don't know the name for it? Find the answer in "Camera Q & A."

## ✓ **Troubleshooting** .....pg. 109

Having a specific problem with the camera? Find the answer here.

## ✓ **Glossary** .....pg. 122

The meanings of some technical terms may be found here.

## ✓ **Table of Contents** .....pg. xiii

The "Table of Contents" gives an overview of the entire manual. The principal camera operations are listed here.

## ✓ **Warning Messages and Displays** .....pg. 118

Find out what's behind that flashing icon or error message in the monitor or electronic viewfinder.

## ✓ **Restrictions on Camera Settings**

See the *Basic Manual* for restrictions on the options available in each shooting mode.

## **Memory Cards**

Pictures can be stored in the camera's internal memory or on optional SD and SDHC memory cards. In this manual, SD memory cards are referred to as "memory cards." For more information, see page 8.

## Camera Q & A

Find items by task.







### Camera Setup

Question	Key phrase	See page
How do I set the camera clock?	Date and time	12
Can I set the clock to local time when I travel?	Time difference	100
How do I keep the display from turning off automatically?	Auto power off	103
How do I make the display brighter or darker?	LCD brightness	103
How do I stop the camera beeping and clicking?	Operation and shutter volume	98
	Silent mode	19
Can I change the sound the shutter makes?	Shutter sound	98
What do the icons in the display mean?	Displays	3
How much charge is left in the battery?	Battery level	14


### Sharing Pictures

Question	Key phrase	See page
Can I print pictures on my home printer?	Printing pictures	56












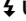

## Taking Pictures































Question	Key phrase	See page
How can I avoid blurred pictures?	Dual IS mode	17
How can I make good portraits?	Intelligent Face Detection	74
Can I choose my own settings for different scenes?	Scene position	27
Can the camera automatically adjust settings for different scenes?	 mode	14
Can I choose between clarity, reduced noise, and dynamic range?	 ,  , and  modes	21
How do I shoot a panorama?	Motion Panorama 360	23
How can I take good pictures of dogs or cats?	 DOG/  CAT	28
Can I prioritize to focus the specified person's face?	Face Recognition	80
How do I shoot close-ups?	Close-ups (macro mode)	37
How do I keep the flash from firing?	Flash mode	38
How do I stop my subjects' eyes glowing red when I use the flash?		
How do I "fill-in" shadows on back-lit subjects?		
How do I take a series of pictures in a single burst?	Continuous shooting mode	78
How do I take a group portrait that includes the photographer?	Self-timer mode	40
Can I choose shutter speed and aperture?	<b>P</b> , <b>A</b> , <b>S</b> , and <b>M</b> modes	30
How do I adjust exposure?	Exposure compensation	36
How do I simulate the effects of different types of film?	Film simulation	70
How do I keep a moving subject in focus?	Tracking	80
How do I shoot movies?	Recording movies	51

## Viewing Pictures

Question	Key phrase	See page
How do I view my pictures?	Single-frame playback	42
How do I delete the current picture?	The  button	20
Can I select other pictures for deletion?	Deleting pictures	45
Can I mark images with favorite (★) rating?	★ Favorites	42
Can I zoom in on pictures during playback?	Playback zoom	43
How do I view a lot of pictures at once?	Multi-frame playback	44
How do I find pictures?	Image search	49
Can I create photobooks from my favorite pictures?	Photobook assist	47
Can I protect my pictures from accidental deletion?	Protect	89
Can I hide the icons in the display when viewing my pictures?	Choosing a display format	42

# Table of Contents

Notes and Cautions .....	ii	<b>P PROGRAM AE</b> .....	31
IMPORTANT SAFETY INSTRUCTIONS .....	ii	<b>A APERTURE PRIORITY AE</b> .....	31
Safety Notes .....	iv	<b>S SHUTTER-PRIORITY AE</b> .....	32
About This Manual .....	ix	<b>Focus Lock</b> .....	33
Camera Q & A .....	x	 <b>Exposure Compensation</b> .....	36
<b>Before You Begin</b>		 <b>Macro Mode (Close-ups)</b> .....	37
<b>Introduction</b> .....	1	 <b>Using the Flash (Super Intelligent Flash)</b> .....	38
Symbols and Conventions .....	1	 <b>Using the Self-Timer</b> .....	40
Supplied Accessories .....	1	Set the timer .....	40
Parts of the Camera .....	2	 <b>AUTO RELEASE</b> .....	40
Camera Displays .....	3	10 SEC / 2 SEC .....	41
The Mode Dial .....	4	<b>More on Playback</b>	
<b>First Steps</b>		<b>Playback Options</b> .....	42
<b>Charging the Battery</b> .....	5	★ Favorites: Rating Pictures .....	42
<b>Inserting the Battery</b> .....	6	Playback Zoom .....	43
<b>Inserting a Memory Card</b> .....	8	Multi-Frame Playback .....	44
<b>Turning the Camera on and off</b> .....	11	 <b>Deleting Pictures</b> .....	45
Shooting Mode .....	11	 <b>Photobook Assist</b> .....	47
Playback Mode .....	11	Creating a Photobook .....	47
<b>Basic Setup</b> .....	12	Viewing Photobooks .....	48
<b>Basic Photography and Playback</b>		Editing and Deleting Photobooks .....	48
<b>Taking Pictures in  (EXR AUTO) Mode</b> .....	14	 <b>Image Search</b> .....	49
<b>Viewing Pictures</b> .....	20	Image Search based on categories .....	49
<b>More on Photography</b>		Using Playback Menu with Image Search .....	49
<b>Shooting Mode</b> .....	21	<b>Viewing Panoramas</b> .....	50
 <b>AUTO</b> .....	21	<b>Movies</b>	
 <b>EXR</b> .....	21	 <b>Recording Movies</b> .....	51
<b>Adv. ADVANCED</b> .....	22	 <b>Viewing Movies</b> .....	53
<b>SP SCENE POSITION</b> .....	27	<b>Connections</b>	
<b>M MANUAL</b> .....	30	<b>Viewing Pictures on TV</b> .....	54
		<b>Printing Pictures via USB</b> .....	56

Connecting the Camera .....	56	 CROP .....	90
Printing Selected Pictures .....	56	 RESIZE .....	91
Printing the DPOF Print Order .....	58	 IMAGE ROTATE .....	92
Creating a DPOF Print Order .....	59	 COPY .....	93
<b>Viewing Pictures on a Computer</b> .....	61	 VOICE MEMO .....	94
Installing the Software .....	61	 ERASE FACE RECOG. ....	96
Connecting the Camera .....	65	 DISP ASPECT .....	96
<b>Menus</b>		<b>The Setup Menu</b> .....	97
<b>Using the Menus: Shooting Mode</b> .....	67	Using the Setup Menu .....	97
Using the <i>F</i> -Mode Menu .....	67	Setup Menu Options .....	98
<i>F</i> -Mode Menu Options .....	68	 TIME DIFFERENCE .....	100
 ISO .....	69	 FORMAT .....	101
 IMAGE SIZE .....	69	 IMAGE DISP .....	101
 FILM SIMULATION .....	70	 FRAME NO. ....	102
Using the Shooting Menu .....	71	 PLAYBACK VOLUME .....	103
Shooting Menu Options .....	72	 LCD BRIGHTNESS .....	103
 FACE DETECTION .....	74	 AUTO POWER OFF .....	103
 IMAGE QUALITY .....	76	 DIGITAL ZOOM .....	104
 DYNAMIC RANGE .....	76	 POWER MANAGEMENT .....	105
 WHITE BALANCE .....	76		
 CONTINUOUS .....	78	<b>Technical Notes</b>	
 PHOTOMETRY .....	79	<b>Optional Accessories</b> .....	106
 AF MODE .....	79	Accessories from FUJIFILM .....	107
 FACE RECOGNITION .....	80	<b>Caring for the Camera</b> .....	108
<b>Using the Menus: Playback Mode</b> .....	85		
Using the <i>F</i> -Mode Menu .....	85	<b>Troubleshooting</b>	
<i>F</i> -Mode Menu Options .....	85	Troubleshooting .....	109
 SLIDE SHOW .....	86	Warning Messages and Displays .....	118
Using the Playback Menu .....	87		
Playback Menu Options .....	88	<b>Appendix</b>	
 RED EYE REMOVAL .....	89	<b>Glossary</b> .....	122
 PROTECT .....	89	<b>Internal Memory/Memory Card Capacity</b> .....	123
		<b>Specifications</b> .....	124

# Introduction

## Symbols and Conventions

The following symbols are used in this manual:

 **Caution:** This information should be read before use to ensure correct operation.

 
 **Note:** Points to note when using the camera.

 **Tip:** Additional information that may be helpful when using the camera.


Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

## Supplied Accessories


The following items are included with the camera:



*NP-50 rechargeable battery*

 


*BC-45W battery charger*

 

*USB cable*




 
*CD-ROM*



*A/V cable*

### **Attaching the Strap**


Attach the strap as shown.

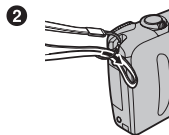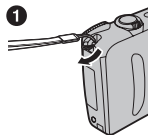

- *Strap*
- *Owner's Manual CD*  
(contains this manual)
- *Basic Manual*

## Parts of the Camera

For more information, refer to the page listed to the right of each item.

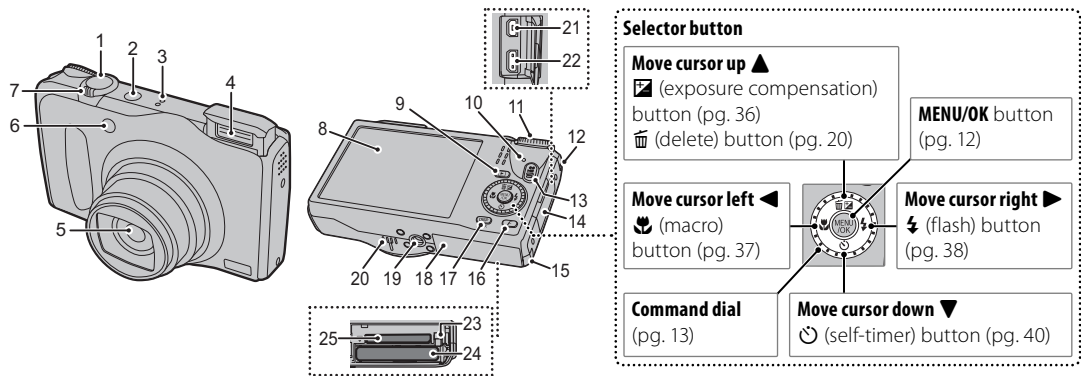


1	Shutter button.....	18	10	Indicator lamp.....	19	19	Tripod mount
2	ON/OFF button.....	11	11	Mode dial.....	4	20	Speaker.....
3	Microphone.....	94	12	Strap eyelet.....	1	21	Connector for USB cable.....
4	Flash.....	38	13	(movie recording) button.....	51		Connector for A/V cable.....
5	Lens and lens cover		14	Terminal cover.....	54, 56, 65	22	HDMI Micro Connector.....
6	AF-assist illuminator	35	15	DC coupler cable cover.....	107	23	Battery latch.....
	Self-timer lamp.....	41	16	F (photo mode) button.....	67, 85	24	Battery chamber.....
7	Zoom control.....	16, 44	17	DISP (display)/BACK button.....	17, 42	25	Memory card slot.....
8	Monitor.....	3		(silent mode) button.....	19		
9	▶ (playback) button.....	42	18	Battery-chamber cover.....	6		



## Camera Displays

The following indicators may appear during shooting and playback: The indicators displayed vary with camera settings.


### Shooting

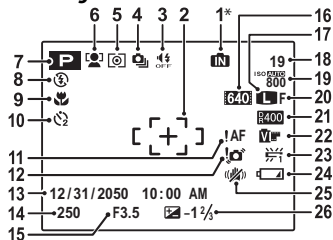

\* **IN**: indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (pg. 8).

1	Internal memory indicator*	14	Shutter speed
2	Focus frame.....33	15	Aperture
3	Silent mode indicator.....19	16	Movie quality.....52
4	Continuous shooting mode.....78	17	Image size.....69
5	Metering.....79	18	Number of available frames.....123
6	Intelligent Face Detection indicator.....74	19	Sensitivity.....69
7	Shooting mode.....21	20	Image quality.....76
8	Flash mode.....38	21	Dynamic range.....76
9	Macro (close-up) mode.....37	22	Film simulation.....70
10	Self-timer indicator.....40	23	White balance.....76
11	Focus warning.....18	24	Battery level.....14
12	Blur warning.....39	25	Dual IS mode.....17
13	Date and time.....12	26	Exposure compensation.....36


### Playback

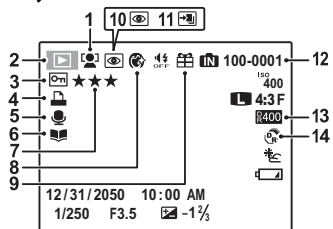

1	Intelligent Face Detection indicator.....43, 74	8	Portrait enhancer.....29
2	Playback mode indicator.....20, 42	9	Gift image.....42
3	Protected image.....89	10	Red-eye removal indicator.....89
4	DPOF print indicator.....58	11	Pro focus mode, Pro low-light mode.....25, 26
5	Voice memo indicator.....94	12	Frame number.....102
6	Photobook assist.....47	13	Dynamic range.....76
7	Favorites.....42	14	<b>EXR</b> mode.....21


## The Mode Dial

To select a shooting mode, align the mode icon with the mark next to the mode dial.

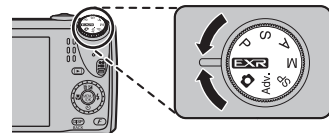

**EXR**: Improve clarity, reduce noise, increase dynamic range, or let the camera automatically adjust settings to suit the scene (pg. 21).

**📷 (AUTO)**: A simple “point-and-shoot” mode recommended for first-time users of digital cameras (pg. 21).

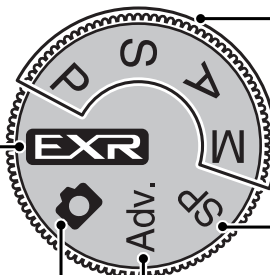

**P** (pg. 31), **S** (pg. 32), **A** (pg. 31), **M** (pg. 30): Select for full control over camera settings, including aperture (**M** and **A**) and/or shutter speed (**M** and **S**).

**SP (SCENE POSITION)**: Choose a scene suited to the subject or shooting conditions and let the camera do the rest (pg. 27).

**Adv. (ADVANCED)**: Sophisticated techniques made easy (pg. 22).

# Charging the Battery


The battery is not charged at shipment. Charge the battery before use.

## Batteries

The camera uses an NP-50 rechargeable battery.

### 1 Place the battery in the charger.

Insert the battery into the supplied battery charger as shown, making sure that the battery is in the orientation indicated by the  $\ominus$   $\uparrow$   $\oplus$  labels.

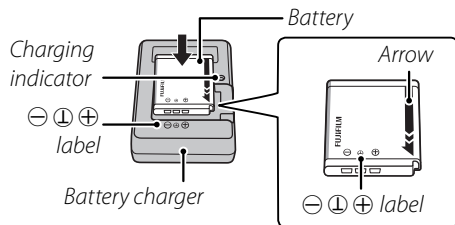

### 2 Plug the charger in.

Plug the charger into a power outlet. The charging indicator will light.

#### Caution

- Unplug the charger when it is not in use.

- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Charging times increase at low temperatures.

## The Charging Indicator

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
Off	Battery not inserted.	Insert the battery.
	Battery fully charged.	Remove the battery.
On	Battery charging.	—
Blinks	Battery fault.	Unplug the charger and remove the battery.

### 3 Charge the battery.

Remove the battery when charging is complete.


## Charging time

See specifications of the battery charger (pg. 128).

# Inserting the Battery

After charging the battery, insert it in the camera as described below.

## 1 Open the battery-chamber cover.

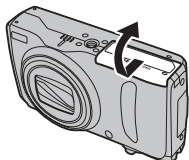

### Note



- Be sure the camera is off before opening the battery-chamber cover.

### Caution

- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

## 2 Insert the battery.

Insert the battery with the terminals first and the orange stripe aligned with the orange battery latch. Slide the battery into the camera, keeping the battery latch pressed to one side as shown below. Confirm that the battery is securely latched.

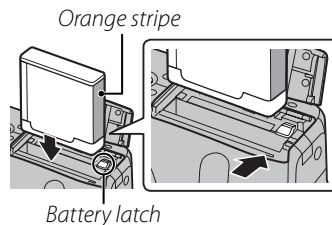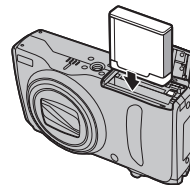

### Caution


- Insert the battery in the correct orientation. **Do not use force or attempt to insert the battery upside down or backwards.** The battery will slide in easily in the correct orientation.

### 3 Close the battery-chamber cover.



#### ● Removing the Battery

After turning the camera off, open the battery-chamber cover, press the battery latch to the side, and slide the battery out of the camera as shown.

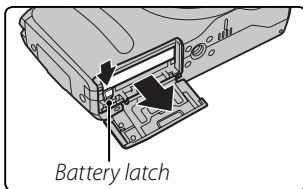

#### ⚠ Caution

- Turn the camera off before removing the battery.

#### 📖 Tip: Using an AC Adapter


- The camera can be powered by an optional AC adapter and DC coupler (sold separately). See manuals provided with the AC adapter and DC coupler for details.
- If the camera is powered by an AC adapter, demo mode instructions will be displayed when the camera is turned on. Selecting this option starts a slide show. To cancel, press the shutter button.

#### ⚠ Caution

- Do not affix stickers or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

## Inserting a Memory Card

Although the camera can store pictures in internal memory, SD memory cards (sold separately) can be used to store additional pictures.

**When no memory card is inserted**,  appears in the monitor and internal memory is used for recording and playback. Note that because camera malfunction could cause internal memory to become corrupted, the pictures in internal memory should periodically be transferred to a computer and saved on the computer hard disk or on removable media such as CDs or DVDs. The pictures in internal memory can also be copied to a memory card (see page 93). To prevent internal memory from becoming full, be sure to delete pictures when they are no longer needed.

 
**When a memory card is inserted** as described below, the card will be used for recording and playback.

### ■ *Compatible Memory Cards*

SanDisk SD and SDHC memory cards have been tested and approved for use in the camera. Use a card with a class 4 write speed (4 MB/s) or better when shooting HD movies. A complete list of approved memory cards is available at [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html). Operation is not guaranteed with other cards. The camera can not be used with MultiMediaCard (MMC) or *xD-Picture* Cards.

### **Caution**


- SD memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD memory card, slide the write-protect switch to the unlocked position.




*Write-protect switch*

## ■ Inserting a Memory Card

 - 1 Turn the camera off, and open the battery-chamber cover.




- 2 Insert the memory card firmly until you hear (feel) a click.  
Holding the memory card in the orientation shown below, slide it all the way in. Press firmly until it clicks into place.

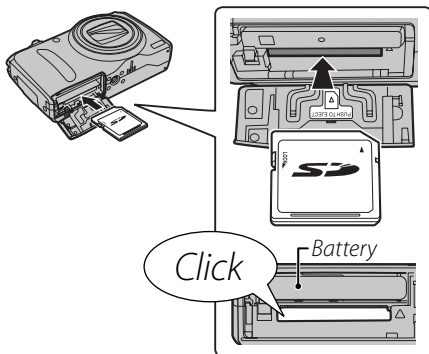

### ⚠ Caution

- Be sure card is in correct orientation; do not insert at an angle or use force. If the memory card is not inserted correctly, **IN** will appear in the monitor and images will be recorded to internal memory.
- 3 Close the battery-chamber cover.

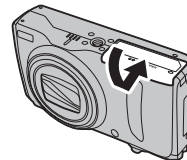

### Removing Memory Cards

After confirming that the camera is off, press the card in and then release it slowly. The card can now be removed by hand.



#### Caution

- The memory card may spring out if you remove your finger immediately after pushing the card in.
- Memory cards may be warm to the touch after being removed from the camera. This is normal and does not indicate a malfunction.

#### Caution

- ***Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card.*** Failure to observe this precaution could damage the card.
- Format SD memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see page 101.
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.


- miniSD or microSD adapters that are larger or smaller than the standard dimensions of an SD card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of SD memory card.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.



# Turning the Camera on and off


## ***Shooting Mode***

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.

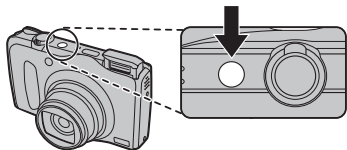

Press **ON/OFF** again to turn the camera off.



### **Tip: Switching to Playback Mode**

- Press the  button for about a second to start playback. Press the shutter button halfway to return to shooting mode.


### **Caution**

 
- Forcibly preventing the lens or flash from moving could damage the camera.
- Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.
- The **ON/OFF** button does not completely disconnect the camera from its power supply.

### **Tip: Auto Power Off**

- The camera will turn off automatically if no operations are performed for the length of time selected in the  **AUTO POWER OFF** menu (pg. 103). To turn the camera on, use the **ON/OFF** button or press the  button for about a second.


## ***Playback Mode***

To turn the camera on and begin playback, press the  button for about a second.



Press the **ON/OFF** button to turn the camera off.


### **Tip: Switching to Shooting Mode**

- To exit to shooting mode, press the shutter button halfway. Press the  button to return to playback.

# Basic Setup

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 98).

## 1 Choose a language.

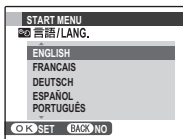


**1.1** Press the selector up or down to highlight a language.



**1.2** Press **MENU/OK**.



## 2 Set the date and time.

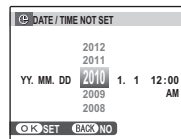

**2.1** Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change.




To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.

**2.2** Press **MENU/OK**.



### 3 Choose power management options.

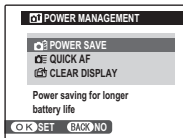

3.1 Press the selector up or down to highlight one of the following options:



- **POWER SAVE:** Save battery power.
- **QUICK AF:** Reduce focusing time, ensuring a quick shutter response.
- **CLEAR DISPLAY:** Choose this option for a brighter, higher quality display.

3.2 Press **MENU/OK**.




#### **Tip: The Camera Clock**

- If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on. Set up the camera again. If the battery is left in the camera or an optional AC adapter connected for about four days, the battery can be removed for about seven days without resetting clock, language selection, or power management options.

#### **Using the command dial**


You can select values, images, or menus easily by rotating the command dial. This manual shows operations when performed with the selector buttons.

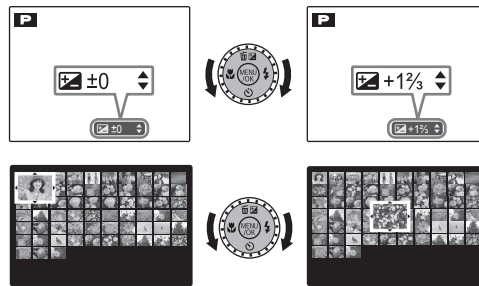

# Taking Pictures in **EXR AUTO** (EXR AUTO) Mode

This section describes how to take pictures in **EXR AUTO** (EXR AUTO) mode.


- 1 Turn the camera on.**  
Press the **ON/OFF** button to turn the camera on.

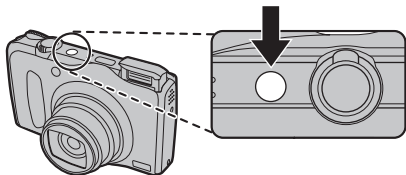





## Flash

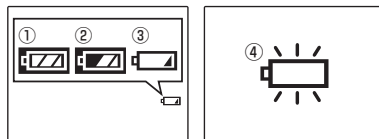
When the camera is turned on, the flash automatically pops up and when turned off it will retract. Do not push down the flash when turning on the camera.

- 2 Check the battery level.**  
Check the battery level in the display.



Indicator	Description
 (white)	Battery partially discharged.
 (white)	Battery more than half discharged.
 (red)	Low battery. Charge as soon as possible.
 (blinks red)	Battery exhausted. Turn camera off and charge battery.

- 3 Select **EXR** mode.**  
Rotate the mode dial to **EXR**.

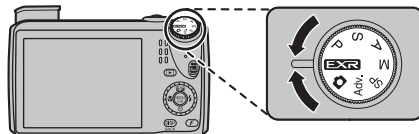







## 4 Frame a picture using the zoom control.

In this mode, the camera automatically analyzes the composition and selects the appropriate scene mode according to the subject and shooting conditions. The selected mode is displayed as shown below. When the shutter button is pressed halfway, the camera selects the optimal **EXR** mode, which is displayed next to the scene mode icon.





*Display when portrait subject is detected.*

Mode	Type of subject or scene detected
	<b>PORTRAIT:</b> Human portrait subject.
	<b>LANDSCAPE:</b> Man-made or natural landscape.
	<b>NIGHT:</b> Poorly lit landscape.
	<b>MACRO:</b> Subject close to camera.
	<b>BACKLIT PORTRAIT:</b> Back-lit portrait subject.
	<b>NIGHT PORTRAIT:</b> Poorly lit portrait subject.

### **IMAGE SIZE**

If **AUTO** is selected for  **IMAGE SIZE** in  mode, the camera will automatically select the optimal image size (pg. 69).



### **Note**

-  (**AUTO**) will be selected if the subject does not match the scenes listed above.
-  appears on the display. The camera continuously analyzes the scene, always trying to detect faces.
- The camera focuses continuously, increasing the drain on the battery. The sound of the camera focusing may be audible.

### How to use the zoom control

Select  to zoom out


Select  to zoom in

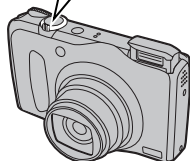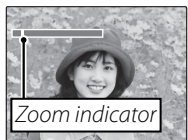


The zoom speed can be changed by adjusting the position of the zoom control.

### Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.

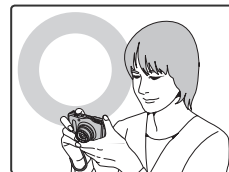


To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.

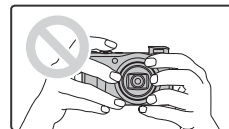




### Framing Guideline and Post-Shot Assist Window

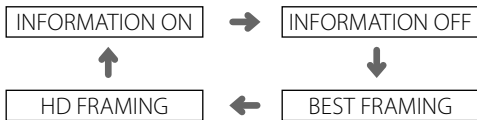In shooting mode, press **DISP/BACK** to select a shooting display format. The selection changes each time **DISP/BACK** is pressed.




- **BEST FRAMING:** To use the best framing, position the main subject at the intersection of two lines or align one of the horizontal lines with the horizon.
- **HD FRAMING:** Displays the High Definition (HD) 16:9 crop.

### Avoiding Blurred Pictures

If the subject is poorly lit, blurring caused by camera shake can be reduced by activating the  **DUAL IS MODE**.  **1 CONTINUOUS**,  **2 SHOOTING ONLY** or **OFF** can be set in the setup menu (pg. 97).



#### Tip

- When using the camera with a tripod,  **DUAL IS MODE** is recommended to be **OFF**.

#### Note

- Sensitivity is raised when dual IS is in effect. Note that blurring may still occur depending on the scene or shooting conditions.

## 5 Focus.

Press the shutter button halfway to focus.



### Note

- The lens may make a noise when the camera focuses. This is normal.

**If the camera is able to focus**, it will beep twice and the indicator lamp will glow green.

**If the camera is unable to focus**, the red colored focus frame and **!AF** will appear in the monitor, and the indicator lamp will blink green. Change the composition or use focus lock (pg. 33).


## 6 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



### Tip: The Shutter Button

- The shutter button has two positions. Pressing the shutter button halfway (①) sets focus and exposure; to shoot, press the shutter button the rest of the way down (②).

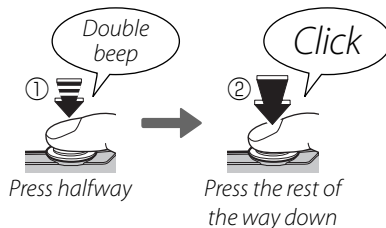


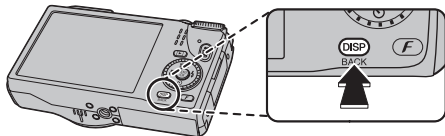
### Note



- If the subject is poorly lit, the flash may fire when the picture is taken. For information on using the flash when lighting is poor, see page 38.




### Silent Mode

In situations in which camera sounds or lights may be unwelcome, hold the **DISP/BACK** button down until  is displayed (note that silent mode is not available during movie or voice memo playback).



The camera speaker, flash, and AF-assist illuminator/self-timer lamp turn off and flash and volume settings can not be adjusted (note that the flash will still fire in  mode). To restore normal operation, press the **DISP/BACK** button until the  icon is no longer displayed. Silent mode can also be set from the setup menu (pg. 97).

### The Indicator Lamp

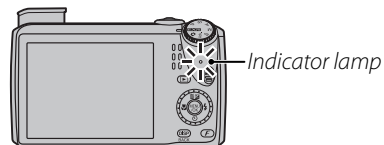

The indicator lamp shows camera status as follows:

Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Blur, focus, or exposure warning. Picture can be taken.
Blinks green and orange	Recording pictures. Additional pictures can be taken.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error (internal memory or memory card full or not formatted, format error, or other memory error).


#### Tip: Warnings

- Detailed warnings appear in the display. See pages 118–121 for more information.

# Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

- 1 Press the  button.

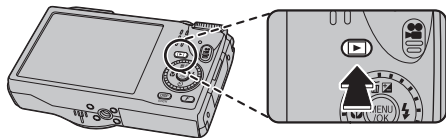

The most recent picture will be displayed in the monitor.





- 2 View additional pictures.


Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode.

## Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up () (). The following dialog will be displayed.

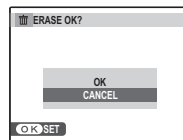

To delete the picture, highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.



### Tip: The Playback Menu

- Pictures can also be deleted from the playback menu (pg. 45).

# Shooting Mode

Choose a shooting mode according to the scene or type of subject. To choose a shooting mode, rotate the mode dial to the desired setting (pg. 4). The following modes are available:

## **AUTO**

Choose for crisp, clear snapshots. This mode is recommended in most situations.

## **EXR** **EXR**


To let the camera automatically optimize settings for your current subject, or to improve clarity, reduce noise, or enhance dynamic range, rotate the mode dial to **EXR** and follow the steps below:



- 1 Press **MENU/OK** to display the following menu.







### Note

- If the shooting menu is displayed, highlight  **EXR MODE** and press **MENU/OK**.

- 2 Press the selector up or down to highlight one of the following options.



Option	Description
 <b>EXR AUTO</b>	The camera automatically selects the scene and <b>EXR</b> mode according to shooting conditions (pg. 14).
 <b>RESOLUTION PRIORITY</b>	Choose for crisp, clear shots.
 <b>HIGH ISO &amp; LOW NOISE</b>	Reduce noise in pictures taken at high sensitivities.
 <b>D-RANGE PRIORITY</b>	Increase the amount of detail visible in highlights. <b>D-Range DYNAMIC RANGE</b> is set to <b>R800</b> (800%).

- 3 Press **MENU/OK** to select the highlighted option.



- 4 Press **DISP/BACK** to exit from the menu.




## Adv. **ADVANCED**

This mode combines “point-and-shoot” simplicity with sophisticated photographic techniques.


**1** Rotate the mode dial to **Adv.**.



**2** Press **MENU/OK** to display the **Adv.** menu.

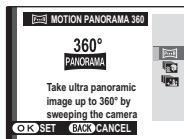

### ← Note

- If the shooting menu is displayed, highlight  **Adv. MODE** and press **MENU/OK**.

**3** Highlight the desired option.



**4** Press **MENU/OK** to select the highlighted option.



**5** Press **DISP/BACK** to return to shooting mode.



## MOTION PANORAMA 360

Follow an on-screen guide to take photos that will automatically be joined to form a panorama.

- 1 To select the angle through which you will pan the camera while shooting, press the selector down. Press the selector left or right to highlight an angle and press **MENU/OK**.



- 2 Press the selector right to view a choice of pan directions. Press the selector left or right to highlight a pan direction and press **MENU/OK**.




- 3 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.



### Note

- The camera zooms all the way out and zoom remains fixed at the widest angle until shooting is complete.
- 4 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the progress bar is full and the panorama is complete.

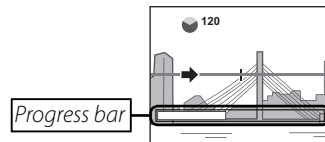

### Caution

- Depending on camera settings, the camera may have to be panned through a greater or lesser angle than selected. Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown by the arrow cancels shooting.

 **Tip**

- The completed panorama can be viewed on the camera (pg. 50).

 **Caution**

- Panoramas are created from multiple frames. The camera may in some cases be unable to stitch the frames together perfectly.
- The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.

 **For Best Results**

For best results, move the camera in a small circle at a steady speed, keeping the camera horizontal and being careful only to pan in the direction shown by the guides. If the desired results are not achieved, try panning at a different speed.



 **Printing Panoramas**

Depending on the page size and the size of the panorama, panoramas may print with their edges cropped out or with wide margins at the top and bottom or at both sides.

## PRO FOCUS MODE

Choose for soft focusing the background of a subject such as a portrait or a flower to make it impressive. When the shutter button is pressed, the camera automatically takes up to 3 pictures and creates one image with a sharp focused subject that has a soft focused background. The camera provides you with a soft focus effect like an SLR camera. Press the selector left or right to select **SOFTNESS** in 3 steps before shooting.

### Note

- When a subject is too close to the background, the camera may not create effect to a picture. When the message  **CANNOT CREATE EFFECT** appears during focus lock, take a little distance from your subject and use the zoom control to adjust.
- When shooting a moving subject, the function may not work.
- When the camera fails to create effect, the message  **PLAYBACK TO CHECK IMAGE** appears. Take a picture again.

### Caution

- Hold the camera firmly while you shoot.
- Frame coverage is reduced in this mode.

### Tip: **SAVE ORIGINAL IMAGE**

- Select **ON** for the  **SAVE ORIGINAL IMAGE** option in the setup menu (pg. 97) to save unprocessed copies of pictures.

## PRO LOW-LIGHT MODE

Choose for shooting a subject under low light or a still subject by using the telephoto zoom. When the shutter button is pressed, the camera automatically takes up to 4 pictures and merges the pictures together. Blurring caused by camera shake can be reduced and pictures with low noise can be taken even with high sensitivity.

### Note

- When shooting a moving subject, the function may not work.
- Pictures may be saved without merged, depending on the shooting condition, or when moving the camera a lot during shooting.

### Caution

- Hold the camera firmly while you shoot.
- Frame coverage is reduced in this mode.

### Tip: SAVE ORIGINAL IMAGE

- Select **ON** for the  **SAVE ORIGINAL IMAGE** option in the setup menu (pg. 97) to save unprocessed copies of pictures.




## **SP SCENE POSITION**

The camera offers a choice of “scenes,” each adapted to particular shooting conditions or a specific type of subject, which can be assigned to the **SP** position on the mode dial:

**1** Rotate the mode dial to **SP**.



**2** Press **MENU/OK** to display the following menu.

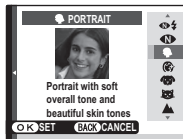

### **👉 Note**

- If the shooting menu is displayed, highlight **SCENE POSITION** and press **MENU/OK**.

**3** Press the selector up or down to highlight a scene (pg. 29).



**4** Press **MENU/OK** to select the highlighted option.









**5** Press **DISP/BACK** to exit from the menu.



Until the setting is changed as described above, the chosen scene will be selected whenever the mode dial is rotated to **SP**.

## DOG/ CAT






When  DOG or  CAT is selected, the camera detects and focuses the front face of a dog or cat.


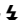




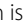


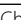











When  DOG or  CAT is selected for **SCENE POSITION**,  **AUTO RELEASE** is available in Self-Timer options. When the camera detects and focuses the face of a dog or cat in  **AUTO RELEASE**, the camera automatically releases the shutter.

The detected faces can be used with following functions.

- **SLIDE SHOW** (pg. 86)
- **IMAGE DISP. > ZOOM(CONTINUOUS)** (pg. 101)
- **PRINT ORDER(DPOF)** (pg. 58)
- **CROP** (pg. 90)

## Caution


- Although the camera detects faces of many kinds of dogs or cats in  DOG or  CAT, some kinds of dogs or cats may not be detected. Also, some shooting conditions may prevent the camera from detecting the face of a dog or cat.
- If no face is detected when the shutter button is pressed halfway, the camera will focus on the subject at the center of the display.
- When a face is not detected, place the subject in the center of a frame.
- If the face of a dog or cat is not detected, face zoom will not be available even when the  button is pressed during playback.
-  DOG and  CAT may not be effective under following conditions:
  - kinds of dogs or cats whose whole faces are black.
  - kinds of dogs or cats whose whole faces are covered with long hair.

Scene	Description
 <b>NATURAL &amp; </b>	Get good results with backlit subjects and other difficult lighting. The camera takes two shots: one without the flash and one with.
 <b>NATURAL LIGHT</b>	Capture natural light indoors, under low light, or where the flash can not be used.
 <b>PORTRAIT</b>	Choose for soft-toned portraits with natural skin tones.
 <b>PORTRAIT ENHANCER</b>	Choose for a smooth skin effect in soft-focus portraits.
 <b>DOG</b>	Choose for shooting a dog. The mode optimizes to focus on faces of dogs.
 <b>CAT</b>	Choose for shooting a cat. The mode optimizes to focus on faces of cats.
 <b>LANDSCAPE</b>	Choose for crisp, clear daylight shots of buildings and landscapes.
 <b>SPORT</b>	Choose when photographing moving subjects.  <b>QUICK AF</b> is automatically selected for  <b>POWER MANAGEMENT</b> and priority is given to faster shutter speeds.
 <b>NIGHT</b>	Choose this mode for poorly lit twilight or night scenes. Sensitivity is automatically raised to reduce blur caused by camera shake.
 <b>NIGHT (TRIPOD)</b>	Choose this mode for slow shutter speeds when shooting at night. Use a tripod to prevent blur.
 <b>FIREWORKS</b>	Slow shutter speeds are used to capture the expanding burst of light from a firework. Use a tripod to prevent blur.
 <b>SUNSET</b>	Record the vivid colors in sunrises and sunsets.
 <b>SNOW</b>	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 <b>BEACH</b>	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 <b>UNDERWATER</b>	Choose for vivid blues when using an optional waterproof case to take photographs underwater.
 <b>PARTY</b>	Capture indoor background lighting under low-light conditions.
 <b>FLOWER</b>	Choose for vivid close-ups of flowers. The camera focuses in the macro range.
 <b>TEXT</b>	Take clear pictures of text or drawings in print. The camera focuses in the macro range.

## **M MANUAL**

In this mode, you choose both shutter speed and aperture. If desired, exposure can be altered from the value suggested by the camera.

- 1 Rotate the mode dial to **M**.  
Highlighted aperture will be displayed.

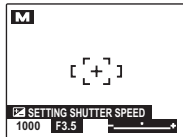

- 2 Rotate the command dial to choose the aperture.
- 3 Press the selector up (▲) to highlight shutter speed.



### ⬅ **Note**

- Highlight changes between the shutter speed and aperture each time the selector (▲) is pressed.

 
- 4 Rotate the command dial to choose the shutter speed.



### ⚠ **Caution**


- Noise in the form of randomly-spaced bright pixels may occur in long exposures.

- 5 Take pictures.



### ●● **The Exposure Indicator**

The amount the picture will be under- or over-exposed at current settings is shown by the exposure indicator.

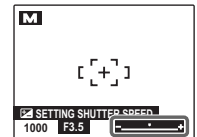

## **P PROGRAM AE**

In this mode, the camera sets exposure automatically.

- 1 Rotate the mode dial to **P**.



- 2 Take pictures.




### **⚠ Caution**

- If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "----". Press the shutter button halfway to measure exposure again.

## **A APERTURE PRIORITY AE**

You select the aperture while the camera adjusts shutter speed for optimal exposure.

- 1 Rotate the mode dial to **A**.  
Aperture will be displayed.

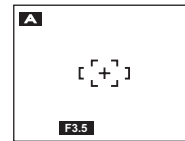

- 2 Rotate the command dial to choose the aperture.
- 3 Take pictures.




**Caution**

- If the correct exposure can not be achieved at the selected aperture, shutter speed will be displayed in red when the shutter button is pressed halfway. Adjust aperture until the correct exposure is achieved.
- If the subject is outside the metering range of the camera, the shutter speed display will show "F--". Press the shutter button halfway to measure exposure again.

**SHUTTER-PRIORITY AE**

You choose the shutter speed while the camera adjusts aperture for optimal exposure.


- 1 Rotate the mode dial to **S**.  
Shutter speed will be displayed.

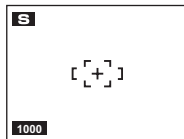

- 2 Rotate the command dial to choose the shutter speed.



 - 3 Take pictures.

**Caution**

- If the correct exposure can not be achieved at the selected shutter speed, aperture will be displayed in red when the shutter button is pressed halfway. Adjust shutter speed until the correct exposure is achieved.
- If the subject is outside the metering range of the camera, the aperture display will show "F--". Press the shutter button halfway to measure exposure again.

# Focus Lock

To compose photographs with off-center subjects:

## 1 Position the subject in the focus frame.



## 2 Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).



*Press  
halfway*



Repeat steps 1 and 2 as desired to refocus before taking the picture.

## 3 Recompose the picture.

Keeping the shutter button pressed halfway, re-compose the picture.



## 4 Shoot.

Press the shutter-release button the rest of the way down to take the picture.



*Press the rest of  
the way down*


### ●● Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock (pg. 33) to focus on another subject at the same distance and then recompose the photograph.

- Very shiny subjects such as mirrors or car bodies.



- Fast-moving subjects.

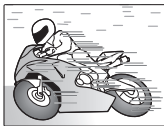

- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).

- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).
- Subjects positioned at some distance in front of or behind an object that is also in the focus frame (for example, a subject in a cage, where the both the subject and the bars of the cage are in the focus frame).
- Subjects dominated by regular geometric patterns, such as the windows in an office building.
- Subjects that contain many fine details, such as a field of flowers or other subjects that are small or lack variation in brightness.

### ●● Hybrid Autofocus

The camera's hybrid autofocus system ensures fast focus, particularly when a bright, high-contrast subject is positioned in the center of the frame.



### **The AF-Assist Illuminator**


If the subject is poorly lit, the AF-assist illuminator will light to assist the focus operation when the shutter button is pressed halfway.


#### **Note**

- Avoid shining the AF-assist illuminator directly into your subject's eyes. See page 97 for information on disabling the AF-assist illuminator.
- The camera may be unable to focus using the AF-assist illuminator in some cases. If the camera is unable to focus in macro mode (pg. 37), try increasing the distance to the subject.
- The AF-assist illuminator is not available in silent mode.

## Exposure Compensation

Use exposure compensation when photographing very bright, very dark, or high-contrast subjects.

- 1 Press the selector up ()  
The exposure indicator will be displayed.

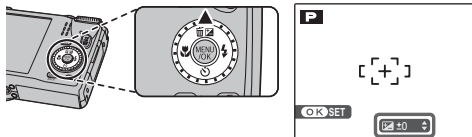

- 2 Choose a value.  
The effect is visible in the display.  
A value can also be selected by rotating the command dial.



*Choose positive (+) values  
to increase exposure*



*Choose negative (-) values  
to reduce exposure*




- 3 Return to shooting mode.  
Press **MENU/OK** to return to shooting mode.




- 4 Take pictures.

### Note


- A  icon and exposure indicator are displayed at settings other than  $\pm 0$ . Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of  $\pm 0$ .

## Macro Mode (Close-ups)

For close-ups, press the selector left () . The selection changes each time the selector is pressed.

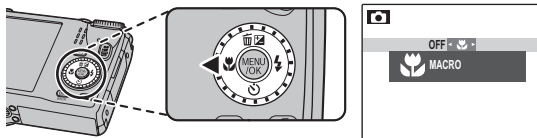

When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom control to compose pictures.

To exit macro mode, press the selector left () and select **OFF**. Macro mode can also be cancelled by turning the camera off or selecting another shooting mode.

### Note

 
- Use of a tripod is recommended to prevent blur caused by camera shake.
- The flash may fail to light the entire subject at very short ranges. Increase the distance to the subject and try again.








## ⚡ Using the Flash (Super Intelligent Flash)

When the flash is used, the camera's *Super Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.



### 1 Choose a flash mode.

Press the selector right (⚡). The flash mode changes each time the selector is pressed; in modes other than **AUTO**, the current mode is indicated by an icon in the display. Choose from the following options:



Mode	Description
AUTO/  (AUTO FLASH)	The flash fires when required. Recommended in most situations.
 /  (FORCED FLASH)	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.
 (SUPPRESSED FLASH)	The flash does not fire even when the subject is poorly lit.  will appear in the monitor at slow shutter speeds to warn that pictures may be blurred. Use of a tripod is recommended.
 /  (SLOW SYNCHRO)	Capture both the main subject and the background under low light (note that brightly lit scenes may be overexposed).

## 2 Focus.

Press the shutter button halfway to focus. If the flash will fire,  will be displayed when the shutter button is pressed halfway. At slow shutter speeds,  will appear in the display to warn that pictures may be blurred; use of a tripod is recommended.



## 3 Shoot.





Press the shutter button the rest of the way down to shoot.

### Caution

- The flash may fire several times with each shot. Do not move the camera until shooting is complete.
- Pressing the flash down turns off the flash.



### Red-Eye Removal

When Intelligent Face Detection is active (pg. 74), and **ON** is selected for  **RED EYE REMOVAL** in the setup menu (pg. 97), red-eye removal is available in  **AUTO**,  **FLASH OFF**, and  **SLOW** mode. Red-eye removal minimizes “*red-eye*” caused when light from the flash is reflected from the subject’s retinas as shown in the illustration at right.





## 🕒 Using the Self-Timer

The camera offers a “baby auto release timer” for taking pictures of babies, a ten-second timer (pg. 41) that allows photographers to appear in their own photographs, and a two-second timer (pg. 41) that can be used to avoid blur caused by the camera moving when the shutter button is pressed.

### ***Set the timer***

Press the selector down (🕒). The selection changes each time the selector is pressed. The current self-timer mode is displayed in the monitor.

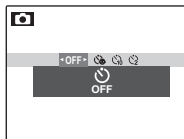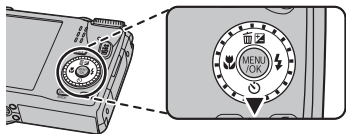

Select from the following options:

- 🕒 (OFF)
- 👶 (AUTO RELEASE)
- 10 (10 SEC)
- 2 (2 SEC)

### ***AUTO RELEASE***

The shutter is released automatically when the camera detects a human portrait subject facing the camera. Use for portraits of babies.



#### **Auto Release**

Pictures taken with the auto release timer can be displayed using image search (pg. 49). When a picture taken with the auto release timer is displayed, the camera can automatically select faces for red-eye removal (pg. 89), playback zoom (pg. 43), slide shows (pg. 86), printing (pg. 59), and cropping (pg. 90).

**10 SEC / 2 SEC**


- 1** Focus.  
Press the shutter button halfway to focus.

**Caution**


- Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.



- 2** Start the timer.  
Press the shutter button the rest of the way down to start the timer. The display in the monitor shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press **DISP/BACK**.

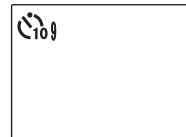


The self-timer lamp on the front of the camera will blink immediately before the picture is taken. If the two-second timer is selected, the self-timer lamp will blink as the timer counts down.

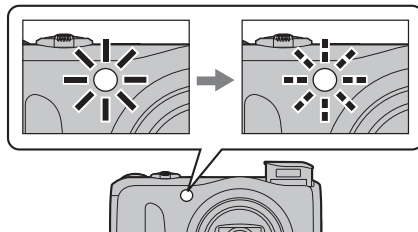**Note**

- The self-timer turns off automatically when the picture is taken, a different shooting mode is selected, playback mode is selected, or the camera is turned off.

## Playback Options

To view the most recent picture in the monitor, press the  button.

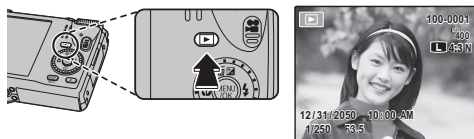

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.



### ★ Favorites: Rating Pictures

To rate the picture currently displayed in full-frame playback, press **DISP/BACK** and press the selector up and down to select from zero to five stars.

#### **Tip: Favorites**

 
• Ratings can be used for image search (pg. 49).

#### **Note**


• Pictures taken using other cameras are indicated by a  ("gift image") icon during playback.

### **Choosing a Display Format**

In playback mode, press **DISP/BACK** to select a playback display format.




The selection changes each time **DISP/BACK** is pressed.

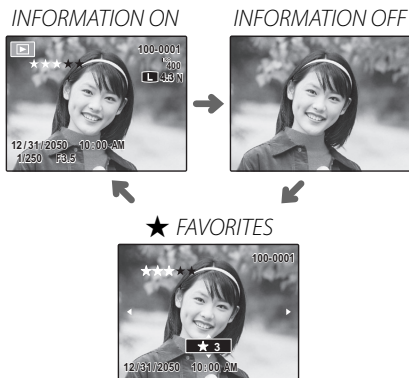



## Playback Zoom

Select **[Z]** to zoom in on pictures displayed in single-frame playback; select **[AAA]** to zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

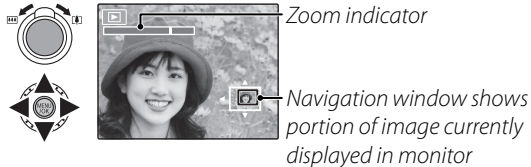

Press **DISP/BACK** to exit zoom.

### Note


- Playback zoom is not available with cropped or resized copies saved at a size of **640**.


## Intelligent Face Detection

Pictures taken with Intelligent Face Detection (pg. 74) are indicated by a **[F]** icon. Press the **[V]** button to zoom in on the subject selected with Intelligent Face Detection. You can then use the zoom control to zoom in and out.




## ***Multi-Frame Playback***

To change the number of images displayed, select  when a picture is shown full-frame in the monitor.

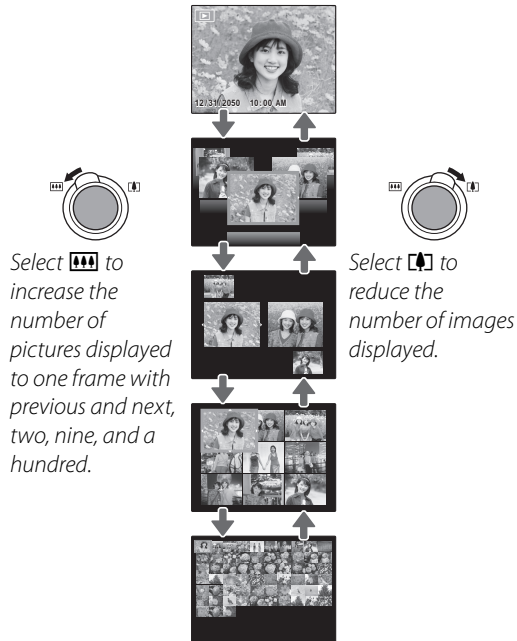

Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.


### **Tip: Two-Frame Display**

- Two-frame display can be used to compare pictures taken in  mode.



## Deleting Pictures

The **ERASE** option in the playback menu can be used to delete still pictures and movies, increasing the amount of space available on the memory card or in internal memory (for information on deleting pictures in single-frame playback, see page 20). *Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.*

- 1 Press **MENU/OK** to display the playback menu.
- 2 Press the selector up or down to highlight  **ERASE**.
- 3 Press the selector right to display delete options.
- 4 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.
- 5 Press **MENU/OK** to display options for the selected item (see following page).




### **Tip: Deleting Pictures**

- When a memory card is inserted, pictures will be deleted from the memory card; otherwise, pictures will be deleted from internal memory.
- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (pg. 89).
- If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

### ■ FRAME: *Deleting Selected Images*

Selecting **FRAME** displays the dialog shown at right.

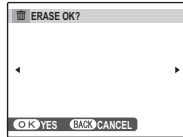


Press the selector left or right to scroll through pictures and press **MENU/OK** to delete the current picture (the picture is deleted immediately; be careful not to delete the wrong picture).



Press **DISP/BACK** to exit when all the desired pictures have been deleted.

### ■ ALL FRAMES: *Deleting All Images*


Selecting **ALL FRAMES** displays the confirmation shown at right.

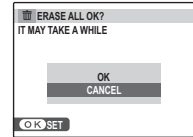

Highlight **OK** and press **MENU/OK** to delete all unprotected pictures.



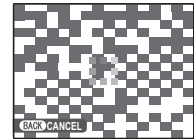


The dialog shown at right is displayed during deletion. Press **DISP/BACK** to cancel before all pictures have been deleted (any pictures deleted before the button was pressed can not be recovered).



## Photobook Assist

Create books from your favorite photos.

### ***Creating a Photobook***

- 1 Select  **PHOTOBOOK ASSIST** in the playback menu.
- 2 Highlight **NEW BOOK**.  

- 3 Press **MENU/OK** to display the new book dialog.  

- 4 Choose pictures for the new book.
  - **SELECT FROM ALL**: Choose from all the pictures available.
  - **SELECT BY IMAGE SEARCH**: Choose from pictures matching selected search conditions (pg. 49).

#### Note

- Neither photographs **640** or smaller nor movies can be selected for photobooks.


- 5 Scroll through the images and press the selector up to select or deselect the current image for inclusion in the book. To display the current image on the cover, press the selector down.

#### Note

- The first picture selected automatically becomes the cover image. Press the selector down to select a different picture for the cover.

- 6 Press **MENU/OK** to exit when the book is complete.

- 7 Highlight **COMPLETE PHOTOBOOK**.

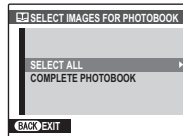

**Note**

- Choose **SELECT ALL** to select all photos, or all photos matching the specified search conditions, for the book.

**8** Press **MENU/OK**. The new book will be added to the list in the photobook assist menu.



**Caution**

- Photobooks can contain up to 300 pictures.
- Books that contain no photos are automatically deleted.


**Photobooks**

Photobooks can be copied to a computer using the supplied MyFinePix Studio software.

## **Viewing Photobooks**

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the selector left and right to scroll through the pictures. Press **DISP/BACK** to return to the photobook assist menu.

## **Editing and Deleting Photobooks**

- 1 Display the photobook and press **MENU/OK** to view book edit options. 
- 2 Choose from the following options:
  - **EDIT**: Edit the book as described in "Creating a Photobook" on page 47.
  - **ERASE**: Delete the current photobook.
- 3 Follow the on-screen instructions.

## Image Search

### ***Image Search based on categories***

Search for pictures by date, subject, scene, and file type. Select  **IMAGE SEARCH** in the playback menu (pg. 87).

- 1 Press the selector up or down to highlight the desired search category.



Option	Description
<b>BY DATE</b>	Show images based on the specified date.
<b>BY FACE</b>	Show images based on specified face information.
<b>BY ★ FAVORITES</b>	Find all pictures with a specified rating (pg. 42).
<b>BY SCENE</b>	Show images based on the specified scene mode.
<b>BY TYPE OF DATA</b>	Show images based on whether still pictures or movies.




- 2 Press **MENU/OK** to select the highlighted search category. A detailed search list will be displayed.



### ***Using Playback Menu with Image Search***

Three playback menus can be performed with image search mode. Press **MENU/OK** while the search results are displayed.


- For each operation, refer to the page listed.

Option	See Page
 <b>ERASE</b>	45
 <b>PROTECT</b>	89
 <b>SLIDE SHOW</b>	86



- Select **EXIT SEARCH** to go back to the normal playback mode.

## Viewing Panoramas

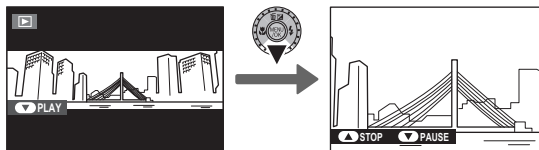To view a panorama, display in single-frame view and press the selector down.



Horizontal panoramas are displayed from left to right, vertical panoramas from top to bottom. The following operations can be performed during playback:


Operation	Button	Description
Start/pause playback		<b>Press the selector down</b> to start playback. Press again to pause.
End playback/delete		<b>Press the selector up</b> to end playback. To delete the panorama, press the selector up (🗑️) while playback is paused.



## Recording Movies

Shoot short movies with sound. Sound is recorded via the built-in microphone; do not cover the microphone during recording.

1 Press the  button to start recording.

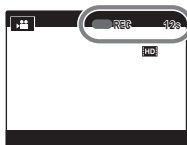

**REC** and time remaining are displayed


### Tip

- There is no need to keep the shutter button pressed during recording.



### Note

- Focus, exposure and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.
- Movies are recorded as motion JPEG files.
- If the subject is poorly lit, the AF-assist lamp may light to assist the focus operation. To turn the AF-assist lamp off, select **OFF** for the **AF- AF ILLUMINATOR** option in the setup menu (pg. 97).
- Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

- 2 Press the  button again to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.



 **Caution**

- The indicator lamp lights while movies are being recorded. Do not open the battery chamber during shooting or while the indicator lamp is lit. Failure to observe this precaution could prevent the movie from being played back.

 **Tip:  Intelligent Face Detection**



- The camera automatically detects faces and optimizes focus and exposure.

 **Choosing the Frame Size**

To choose the frame size, press **MENU/OK** and select

 **MOVIE QUALITY.**


Choose a pixel size in the following:

-  **1280** (1280 × 720) for high definition movies.
-  **640** (640 × 480) for standard definition movies.

Press **DISP/BACK** to return to movie recording mode.


## ▶ Viewing Movies

During playback, movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:

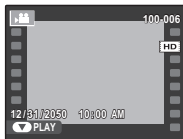

Operation	Description
Start/pause playback	<b>Press the selector down</b> to start playback. Press again to pause.
End playback/delete	<b>Press the selector up</b> to end playback. If playback is not in progress, pressing the selector up will delete the current movie.
Advance/rewind	<b>Press the selector right</b> to advance, <b>left</b> to rewind. If playback is paused, the movie will advance or rewind one frame each time the selector is pressed.
Adjust volume	<b>Press MENU/OK</b> to pause playback and display volume controls. Press the selector up or down to adjust the volume; press <b>MENU/OK</b> again to resume playback.

Progress is shown in the monitor during playback.

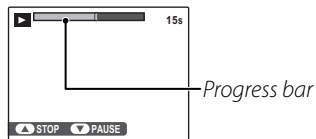

### Tip: Viewing Movies on a Computer


- Copy movies to the computer before viewing.

### Caution

- Do not cover the speaker during playback.

## Viewing Pictures on TV

Connect the camera to a TV and tune the television to the video channel to show pictures to a group. Connect the A/V cable, as shown below. Be sure that the camera is off before connecting the cable.

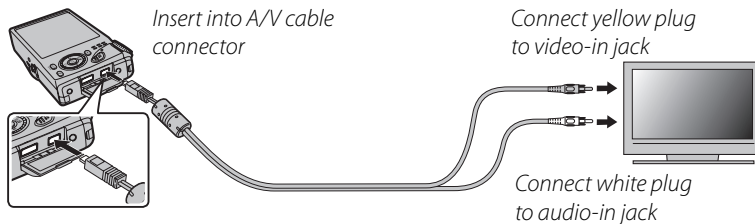


### Connecting the Camera to High Definition (HD) TVs

An HDMI cable (available from third-party suppliers) can be used to connect the camera to High Definition (HD) devices (playback only).



#### Note

- The USB cable and A/V cable cannot be used while an HDMI cable is connected.

Press  for about a second to turn the camera on. The camera monitor turns off and pictures and voice memos are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

 **Note**

- Image quality drops during movie playback.

 **Caution**

- When connecting the cable, be sure the connectors are fully inserted.
- Use an HDMI cable that is no longer than 2.0 m (6.6 ft.).


# Printing Pictures via USB


If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.




## Connecting the Camera

- 1 Connect the supplied USB cable as shown and turn the printer on.

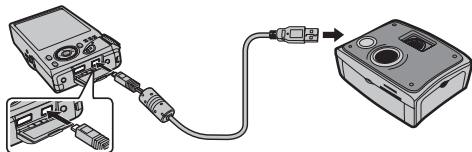

- 2 Press the  button for about a second to turn the camera on.  **USB** will be displayed in the monitor, followed by the PictBridge display shown below at right.

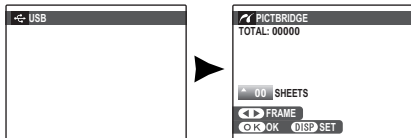

## Printing Selected Pictures

- 1 Press the selector left or right to display a picture you wish to print.




### ← Note

- To print one copy of the current picture, proceed directly to Step 3.

- 2 Press the selector up or down to choose the number of copies (up to 99). Repeat steps 1–2 to select additional pictures.



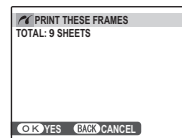

- 3 Press **MENU/OK** to display a confirmation dialog.



- 4 Press **MENU/OK** to start printing.



**Tip: Printing the Date of Recording**


- To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see “Printing the DPOF Print Order,” on pg. 58). Press the selector up or down to highlight **PRINT WITH DATE**  and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). To ensure that the date is correct, set the camera clock before taking pictures. Note that the **PRINT WITH DATE**  option is only available with printers that support date printing.


**Note**

- Use an optional AC adapter and DC coupler to power the camera for extended periods.
- Print pictures from internal memory or a memory card that has been formatted in the camera.
- When pictures are printed via direct USB connection, page size, print quality, and border selections are made using the printer.

**During Printing**

The message shown at right is displayed during printing. Press **DISP/BACK** to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).

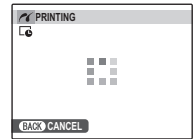


If printing is interrupted, press  to turn the camera off and then on again.


**Disconnecting the Camera**

Confirm that the above message is not displayed and turn the camera off. Disconnect the USB cable.

## **Printing the DPOF Print Order**

To print the print order created with  **PRINT ORDER (DPOF)** in the playback menu (pg. 56):


- 1** In the PictBridge display, press **DISP/BACK** to open the PictBridge menu.

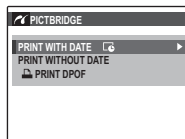

- 2** Press the selector up or down to highlight  **PRINT DPOF**.



- 3** Press **MENU/OK** to display a confirmation dialog.

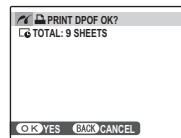

- 4** Press **MENU/OK** to start printing.





## Creating a DPOF Print Order


The **PRINT ORDER (DPOF)** option in the playback menu can be used to create a digital “print order” for PictBridge-compatible printers (pg. 56) or devices that support DPOF.


### DPOF

**DPOF** (Digital Print Order Format) is standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



### WITH DATE / WITHOUT DATE

To modify the DPOF print order, select **PRINT ORDER (DPOF)** in the playback menu and press the selector up or down to highlight **WITH DATE ** or **WITHOUT DATE**.

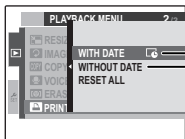

**WITH DATE **: Print date of recording on pictures.


**WITHOUT DATE**: Print pictures without date.

Press **MENU/OK** and follow the steps below.

**1** Press the selector left or right to display a picture you wish to include in or remove from the print order.



**2** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.

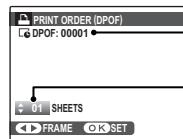

Total number of prints

Number of copies

### Tip: Intelligent Face Detection


- If the current picture was created with Intelligent Face Detection, pressing **▼** sets the number of copies to the number of faces detected.

**3** Repeat steps 1–2 to complete the print order. Press **MENU/OK** to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.




**4** The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.




The pictures in the current print order are indicated by a  icon during playback.




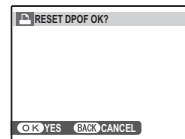
#### ← Note

- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above.
- Whether **WITH DATE** /**WITHOUT DATE** is available may depend on the printer setting. Check the printer.

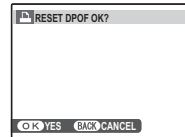

#### ■ RESET ALL

To cancel the current print order, select **RESET ALL** in the  **PRINT ORDER (DPOF)** menu. The confirmation shown at right will be displayed; press **MENU/OK** to remove all pictures from the order.



# Viewing Pictures on a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install the software as described below. **Do not connect the camera to the computer until installation is complete.**

## ***Installing the Software***

Two applications are supplied: MyFinePix Studio for Windows and FinePixViewer for the Macintosh. Installation instructions for Windows are on pages 61–62, those for the Macintosh on pages 63–64.

### **Windows: Installing MyFinePix Studio**

**1** Confirm that the computer meets the following system requirements:

	Windows 7*	Windows Vista*	Windows XP*
<b>CPU</b>	3 GHz Pentium 4 or better		2 GHz Pentium 4 or better
<b>RAM</b>	1 GB or more		512 MB or more
<b>Free disk space</b>	15 GB or more		2 GB or more
<b>Video</b>	<ul style="list-style-type: none"><li>• 1,024 × 768 pixels or more with 24-bit color or better</li><li>• A graphics processing unit (GPU) that supports DirectX 7 or later</li></ul>		
<b>Other</b>	<ul style="list-style-type: none"><li>• Built-in USB port recommended. Operation is not guaranteed other USB ports.</li><li>• Internet connection (broadband recommended) required to install .NET Framework (if necessary), to use auto update feature, and when performing such tasks as sharing pictures on-line or via e-mail.</li></ul>		

\* Other versions of Windows are not supported. Only pre-installed operating systems are supported; operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

- 2 Start the computer. Log in to an account with administrator privileges before proceeding.
- 3 Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

#### **Windows 7/Windows Vista**

If an AutoPlay dialog is displayed, click **SETUP.EXE**. A “User Account Control” dialog will then be displayed; click **Yes** (Windows 7) or click **Allow** (Windows Vista).

The installer will start automatically; click **Installing MyFinePix Studio** and follow the on-screen instructions to install MyFinePix Studio.

#### **If the Installer Does Not Start Automatically**

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu, then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **SETUP** or **SETUP.EXE**.

- 4 If prompted to install Windows Media Player, DirectX, or .NET Framework, follow the on-screen instructions to complete installation.
- 5 Remove the installer CD from the CD-ROM drive when installation is complete. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.

Installation is now complete. Proceed to “Connecting the Camera” on page 65.

## Macintosh: Installing FinePixViewer

**1** Confirm that the computer meets the following system requirements:

<b>CPU</b>	PowerPC or Intel
<b>OS</b>	Pre-installed versions of Mac OS X version 10.3.9–10.6 (for the latest information, visit <a href="http://www.fujifilm.com/">http://www.fujifilm.com/</a> )
<b>RAM</b>	256 MB or more
<b>Free disk space</b>	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running
<b>Video</b>	800 × 600 pixels or more with thousands of colors or better
<b>Other</b>	<ul style="list-style-type: none"> <li>• Built-in USB port recommended. Operation is not guaranteed other USB ports.</li> <li>• Internet connection (broadband recommended) required to use auto update feature and when performing such tasks as sharing pictures on-line or via e-mail.</li> </ul>

- 2** After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive and double-click **Installer for Mac OS X**.
- 3** An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

- 4 Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.
- 5 **Mac OS X 10.5 or earlier:** Open the “Applications” folder, start Image Capture, and select **Preferences...** from the Image Capture application menu. The Image Capture preferences dialog will be displayed. Choose **Other...** in the **When a camera is connected, open** menu, then select **FPVBridge** in the “Applications/FinePixViewer” folder and click **Open**. Quit Image Capture.

**Mac OS X 10.6:** Connect the camera and turn it on. Open the “Applications” folder and start Image Capture. The camera will be listed under **DEVICES**; select the camera and choose **FPVBridge** from the **Connecting this camera opens** menu and click **Open**. Quit Image Capture.

Installation is now complete. Proceed to “Connecting the Camera” on page 65.

## ***Connecting the Camera***

- 1 If the pictures you wish to copy are stored on a memory card, insert the card into the camera (pg. 8). If no card is inserted, pictures will be copied from internal memory.


### **← Note**

- Windows users may require the Windows CD when starting the software for the first time.

### **⚠ Caution**

- Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Charge the battery before connecting the camera.

- 2 Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.

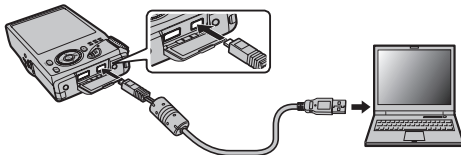

- 3 Press the **▶** button for about a second to turn the camera on. MyFinePix Studio or FinePixViewer will start automatically; follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

### **⚠ Caution**

- If the software does not start automatically, the software may not be correctly installed. Disconnect the camera and reinstall the software.

For more information on using the supplied software, start the application and select the appropriate option from the **Help** menu.

 **Caution**

- If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure that the computer does not display a message stating that copying is in progress and that the indicator lamp is out before turning the camera off or disconnecting the USB cable (if the number of images copied is very large, the indicator lamp may remain lit after the message has cleared from the computer display). Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using the supplied software in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

 **Disconnecting the Camera**

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.

 **Uninstalling the Supplied Software**

Only uninstall the supplied software when it is no longer required or before beginning reinstallation. After quitting the software and disconnecting the camera, drag the “FinePixViewer” folder from “Applications” into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use “Programs and Features” (Windows 7/Windows Vista) or “Add or Remove Programs” (Windows XP) to uninstall MyFinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.



## Using the Menus: Shooting Mode

The **F**-mode and shooting menu contain settings for a wide range of shooting conditions.

### Using the **F**-Mode Menu

**1** Press the **F** button to display the **F-MODE** menu.



**2** Press the selector up or down to highlight the desired menu item.



**3** Press the selector right to display options for the highlighted item.



**4** Press the selector up or down to highlight the desired option.
















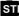





**5** Press **MENU/OK** to select the highlighted option.



**6** Press **DISP/BACK** to exit from the menu.



***F-Mode Menu Options***

Menu item	Description	Options	Default
 ISO	Adjust ISO sensitivity (pg. 69). Choose higher values when the subject is poorly lit.	AUTO/AUTO (1600)/ AUTO (800)/AUTO (400)/ 12800/6400/3200/1600/ 800/400/200/100	AUTO
 IMAGE SIZE	Choose image size and aspect ratio (pg. 69).	 4:3 /  3:2 /  16:9/  4:3 /  3:2 /  16:9/  4:3 /  3:2 /  16:9	 4:3
 FILM SIMULATION	Simulate the effects of different types of film (pg. 70).	 PROVIA/STANDARD/  Velvia/VIVID /  ASTIA/SOFT /  B&W /  SEPIA	 PROVIA/ STANDARD

**Note**

- Some options are not available in all shooting modes.

**ISO ISO**

Control the camera's sensitivity to light. Higher values can be used to reduce blur when lighting is poor; note, however, that mottling may appear in pictures taken at high sensitivities, particularly at settings above **1600**. If **AUTO** or an option such as **AUTO (1600)** is selected, the camera will adjust sensitivity automatically in response to shooting conditions. In the case of **AUTO (1600)**, **AUTO (800)**, and **AUTO (400)**, the value in parentheses is the maximum sensitivity that will be selected when the subject is poorly lit.

Settings other than **AUTO** are shown by an icon in the display.

**IMAGE SIZE**

Choose the size and aspect ratio at which still pictures are recorded. Large pictures can be printed at large sizes with no drop in quality; small pictures require less memory, allowing more pictures to be recorded.

Option	Prints at sizes up to
<b>L 4:3</b>	34×25 cm (13.5×10 in.)
<b>L 3:2</b>	34×23 cm (13.5×9 in.)
<b>L 16:9</b>	34×19 cm (13.5×7.5 in.)
<b>M 4:3</b>	24×18 cm (9.5×7 in.)
<b>M 3:2</b>	24×16 cm (9.5×6 in.)
<b>M 16:9</b>	24×13 cm (9.5×5.5 in.)
<b>S 4:3</b>	17×13 cm (7×5 in.)
<b>S 3:2</b>	17×12 cm (7×4.5 in.)
<b>S 16:9</b>	17×9 cm (7×3.5 in.)

The number of pictures that can be taken at current settings (pg. 123) is displayed to the top right in the monitor.

### Aspect Ratio

Pictures with an aspect ratio of 4:3 have the same proportions as the camera display. Pictures with an aspect ratio of 3:2 have the same proportions as a frame of 35-mm film, while an aspect ratio of 16:9 is suited to display on High Definition (HD) devices.



4:3



3:2



16:9

### FILM SIMULATION

Simulate the effects of different types of film, including sepia and black-and-white.

Option	Description
<b>STD</b> <b>PROVIA/STANDARD</b>	Standard color reproduction. Suited to a wide range of subjects, from portraits to landscapes.
<b>V</b> <b>Velvia/VIVID</b>	A high-contrast palette of saturated colors, suited to nature photographs.
<b>S</b> <b>ASTIA/SOFT</b>	A soft-toned palette of less saturated colors.
<b>B</b> <b>B&amp;W</b>	Take pictures in black and white.
<b>SEPIA</b> <b>SEPIA</b>	Take pictures in sepia.

#### Note

- Image quality is not reset when the camera is turned off or another shooting mode is selected.

## ***Using the Shooting Menu***

**1** Press **MENU/OK** to display the shooting menu.



**2** Press the selector up or down to highlight the desired menu item.



**3** Press the selector right to display options for the highlighted item.



**4** Press the selector up or down to highlight the desired option.
























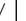


























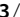


**5** Press **MENU/OK** to select the highlighted option.

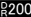

**6** Press **DISP/BACK** to exit from the menu.



## ***Shooting Menu Options***

Menu item	Description	Options	Default
 <b>EXR MODE</b>	Choose options for <b>EXR</b> mode (pg. 21).	 /  / 	
 <b>Adv. MODE</b>	Choose an advanced shooting mode (pg. 22).	 /  / 	
 <b>SCENE POSITION</b>	Choose a scene for <b>SP</b> mode (pg. 27).	 /  /  /  /  /  /  /  /  /  /  /  /  / 	
 <b>ISO</b>	Adjust ISO sensitivity (pg. 69). Choose higher values when the subject is poorly lit.	AUTO / AUTO (1600) / AUTO (800) / AUTO (400) / 12800 / 6400 / 3200 / 1600 / 800 / 400 / 200 / 100	AUTO
 <b>IMAGE SIZE</b>	Choose image size and aspect ratio (pg. 69).	 4:3 /  3:2 /  16:9 /  4:3 /  3:2 /  16:9 /  4:3 /  3:2 /  16:9	 4:3
 <b>IMAGE QUALITY</b>	Choose image quality (pg. 76).	FINE / NORMAL	NORMAL
 <b>DYNAMIC RANGE</b>	Enhance details in highlights for natural contrast (pg. 76).	AUTO /  100% /  200% /  400% /  800%	AUTO
 <b>FILM SIMULATION</b>	Simulate the effects of different types of film (pg. 70).	 PROVIA/STANDARD /  Velvia/VIVID /  ASTIA/SOFT /  B&W /  SEPIA	 PROVIA/ STANDARD


Menu item	Description	Options	Default
<b>WHITE BALANCE</b>	Adjust color for different light sources (pg. 76).	<b>AUTO</b> /	<b>AUTO</b>
<b>CONTINUOUS</b>	Shoot a series of pictures (pg. 78).	/OFF	<b>OFF</b>
<b>FACE DETECTION</b>	Turn Intelligent Face Detection on or off (pg. 74).	<b>ON/OFF</b>	<b>OFF</b>
<b>PHOTOMETRY</b>	Choose how the camera meters exposure (pg. 79).		
<b>AF MODE</b>	Choose how the camera selects a focus area (pg. 79).		
<b>FACE RECOGNITION</b>	Personal information (name, birthday, etc.) can be registered with a specified face (pg. 80).	—	—
<b>MOVIE QUALITY</b>	Choose movie quality (pg. 52).	<b>HD 1280</b> / <b>640</b>	<b>HD 1280</b>


#### Note

- Some options are not available in all shooting modes.


## FACE DETECTION

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits (in vertical or horizontal orientations) to prevent the camera from focusing on the background. Intelligent Face Detection also offers a red-eye removal option for removing “red-eye” effects caused by the flash.

 icon appears in monitor when Intelligent Face Detection is on.

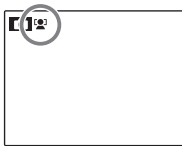

### Note

- When removing red-eye effect, select **ON** for  **RED EYE REMOVAL** in the setup menu (pg. 97).

## 1 Frame the picture.

If a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.



*Green border*

## 2 Focus.

Press the shutter button halfway to focus on the subject in the green border. Note that, in some shooting modes, exposure is adjusted for the current shooting mode and may not be optimized for the selected subject.





**Caution**

- If no face is detected when the shutter button is pressed halfway (pg. 112), the camera will focus on the subject at the center of the display and red-eye will not be removed.



**3 Shoot.**

Press the shutter button all the way down to shoot.

**Caution**

- If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

**Tip: Red-Eye Removal**

- Select **ON** for the  **SAVE ORIGINAL IMAGE** option in the setup menu (pg. 97) to save unprocessed copies of pictures created with  **RED EYE REMOVAL**.

**Intelligent Face Detection**

Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (pg. 40).

If a face has been registered, the camera prioritizes focus and exposure to that face when there are several faces detected.



The following functions can be used with Intelligent Face Detection.

**RED EYE REMOVAL** (pg. 89)/**IMAGE SEARCH** (pg. 49)/**SLIDE SHOW** (pg. 86)/**IMAGE DISP.** >  
**ZOOM(CONTINUOUS)** (pg. 101)/**PRINT ORDER (DPOF)** (pg. 58)/**CROP** (pg. 90)

**📷 IMAGE QUALITY**

Choose how much image files are compressed. Select **FINE** (low compression) for higher image quality, **NORMAL** (high compression) to increase the number of pictures that can be stored.

**📷 DYNAMIC RANGE**




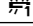
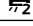
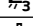


Control contrast. Higher values are recommended for scenes that include both sunlight and deep shade or for increased contrast when photographing such subjects as sunlight on water, brightly-lit autumn leaves, and portraits taken against a blue sky; note, however, that mottling may appear in pictures taken at higher values. If **AUTO** is selected, the camera will automatically select values between 100% and 400% in response to shooting conditions.


**👉 Note**

- **800** is available only when **DYNAMIC RANGE** is selected in **EXR** mode and an option other than **Velvia/VIVID** or **ASTIA/SOFT** is selected for **FILM SIMULATION**.


**WB WHITE BALANCE**

For natural colors, choose a setting that matches the light source (for an explanation of “white balance,” see the Glossary on page 122).


Option	Description
<b>AUTO</b>	White balance adjusted automatically.
	Measure a value for white balance.
	For subjects in direct sunlight.
	For subjects in the shade.
	Use under “daylight” fluorescent lights.
	Use under “warm white” fluorescent lights.
	Use under “cool white” fluorescent lights.
	Use under incandescent lighting.
	For underwater photography.

If **AUTO** does not produce the desired results (for example, when taking close-ups), select  and measure a value for white balance or choose the option that matches the light source.

**← Note**

- At settings other than , auto white balance is used with the flash. Turn the flash off (pg. 38) to take pictures at other settings.
- Results vary with shooting conditions. Play pictures back after shooting to check colors in the monitor.

**■ : Custom White Balance**

Choose  to adjust white balance for unusual lighting conditions. The options will be displayed; frame a white object so that it fills the monitor and press the shutter button all the way down to measure white balance.

**If “COMPLETED!” is displayed**, press **MENU/OK** to set white balance to the measured value. This value is stored even when the battery is removed and can be reselected by pressing **MENU/OK** when custom white balance options are displayed.

**If “UNDER” is displayed**, raise exposure compensation (pg. 36) and try again.

**If “OVER” is displayed**, lower exposure compensation and try again.


** Tip**

- To give a deliberate color cast to your photographs, measure a value for custom white balance using a colored instead of a white object.



## CONTINUOUS


Capture motion in a series of pictures.

### Note



- The flash turns off automatically. The previously-selected flash mode is restored when **OFF** is selected for  **CONTINUOUS**.
- Frame rate varies with shutter speed.

### /

While the shutter button is pressed, the camera takes up to 40 pictures, but only the last 23 shots ( or 5 shots ( are recorded.

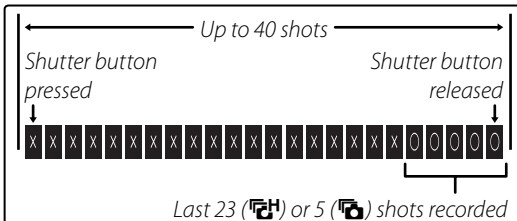

### /

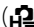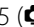

The camera takes up to 23 ( or 5 ( pictures while the shutter button is pressed.

### Note: / / /

- Focus and exposure are determined by the first frame in each series.
  - The number of pictures that can be recorded depends on the memory available. Additional time may be required to record pictures when shooting ends.
- The pictures are displayed in the monitor while recording is in progress.



### Note: The Self-Timer

- If the self-timer is used, only one picture will be taken when  or  is selected.

## 📷 PHOTOMETRY


Choose how the camera meters exposure when Intelligent Face Detection is off.

- **📷 MULTI:** Automatic scene recognition is used to adjust exposure for a wide range of shooting conditions.
- **📷 SPOT:** The camera meters lighting conditions at the center of the frame. Recommended when the background is much brighter or darker than the main subject. Can be used with focus lock (pg. 33) to meter off-center subjects.
- **📷 AVERAGE:** Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.


## 📷 AF MODE

This option controls how the camera selects the focus area. Regardless of the option selected, the camera will focus on the subject in the center of the monitor when macro mode is on (pg. 37).

- **📷 CENTER:** The camera focuses on the subject in the center of the frame. This option can be used with focus lock.
- **📷 MULTI:** When the shutter button is pressed halfway, the camera detects high-contrast subjects near the center of the frame and selects the focus area automatically (if the focus frame is not displayed, select **📷 CENTER** and use focus lock; pg. 33).

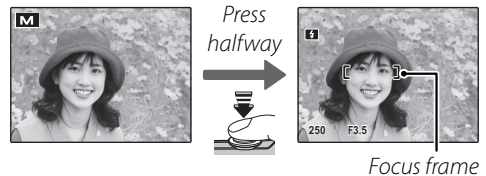

- **[ ] CONTINUOUS:** While the shutter button is pressed halfway, the camera continuously adjusts focus to reflect changes in the distance to the main subject in the focus frame (note that this increases the drain on the battery and that the sound of the camera focusing will be audible). Choose this option when photographing moving subjects.
- **[ ] TRACKING:** When **[ ]** is set, the focus frame is displayed in the center of the monitor as shown. Place the subject in the focus frame and press the **[ ]** button to set **TRACKING**. The focus frame will track the moving subject, keeping it in focus.

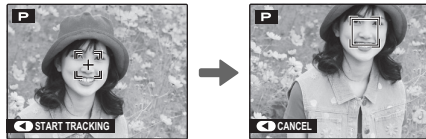

#### ← Note

- **TRACKING** may not work depending on the subject.


## **[ ] FACE RECOGNITION**

Once personal information is registered with a face, the camera recognizes the registered face and prioritizes focus and exposure to that face. When playing back the face, the registered information (name, birthday, etc.) can be displayed.

### ■ *Activating* **[ ] FACE RECOGNITION**


- 1 Select **[ ] FACE RECOGNITION** from shooting menu to display options.
- 2 Press the selector up or down to highlight **FACE RECOGNITION**.
- 3 Press **MENU/OK** to display options.
- 4 Press the selector up or down to highlight **ON**.



- 5** Press **MENU/OK** to activate  **FACE RECOGNITION**.

## ■ REGISTER

### Shooting

- 1** Select **REGISTER** from  **FACE RECOGNITION**.
- 2** Press **MENU/OK** to turn to shooting mode.
- 3** Press the shutter button to shoot. Capture a front face.



- 4** Press **MENU/OK** to display **PERSONAL INFO**.



### ← Note

- When the message **!CANNOT REGISTER** is displayed, the camera has failed to register the face. Take a shot again.

### Registering a name

- 1** Press the selector up or down to highlight **NAME** in **PERSONAL INFO**.
- 2** Press **MENU/OK** to display **NAME** window.
- 3** Press the selector left, right, up or down to highlight a letter.
- 4** Press **MENU/OK** to input the letter.
- 5** Repeat from step 2 to step 4 to input a name.



6 Press the selector left, right, up or down to highlight **SET**.



7 Press **MENU/OK** to register.



#### ← Note

- Highlight **DEL** and press **MENU/OK** to erase a letter.
- Highlight **→** and press **MENU/OK** to put a space.
- Up to 14 letters can be displayed.

### Registering a birthday

1 Press the selector up or down to highlight **BIRTHDAY** in **PERSONAL INFO**.



2 Press **MENU/OK** to display **BIRTHDAY**.



3 Input the date of birthday in the same way as setting **🕒 DATE/TIME** (pg. 12).

4 Press **MENU/OK** to register.



#### ← Note

- If shooting date matches the birthday of the person with the green border during face zoom, **Happy Birthday!** will be displayed with the name.

### Registering a category

1 Press the selector up or down to highlight **CATEGORY** in **PERSONAL INFO**.



2 Press the selector up or down to highlight a category.




3 Press **MENU/OK** to register.





## VIEW & EDIT

- 1 Select **VIEW & EDIT** from **FACE RECOGNITION** to display **REGISTERED FACE**.

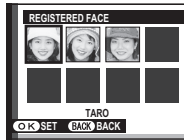

- 2 Press the selector left or right to highlight a face to view or edit.



- 3 Press **MENU/OK** to display **PERSONAL INFO**.



- 4 View the registration or edit as the same way of **REGISTER** (pg. 81).

### Note


- Select **REPLACING IMAGE** to take another face image and replace the registered image with it.

## ERASE

- 1 Select **ERASE** from **FACE RECOGNITION**.
- 2 Press the selector left or right to highlight a face to erase.



- 3 Press **MENU/OK** to display **ERASE** window.

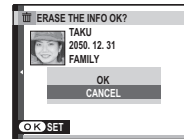



- 4 Press the selector up or down to highlight **OK**.



- 5 Press **MENU/OK** to delete a registration.





## ■ AUTO REGISTRATION

Select **AUTO REGISTRATION** from  **FACE RECOGNITION** and set it to **ON**. After shooting the same face several times with  **FACE DETECTION** turned on, the camera automatically recognizes the face.

### 👉 Note

- When the camera recognizes a face that has been shot many times, the message **REGISTER THIS PERSON?** appears. Press **MENU/OK** to display **PERSONAL INFO** so that you can register the face and its personal information.
- Using only **AUTO REGISTRATION** may be difficult to recognize a face. In that case, register a face and its personal information from **REGISTER**.


## **FACE RECOGNITION**

- Up to 8 people's information can be registered. If 8 people's information has already been registered, the confirmation window appears when trying to add a new one. Delete a registered person from **VIEW & EDIT** and register the new person.
- When 8 people's information has already been registered, **AUTO REGISTRATION** does not function.
- If the camera detects two or more faces registered by  **FACE RECOGNITION**, a green border and orange border(s) will be displayed on the faces when to shoot. A registered name will appear only on the face with the green border. White borders will be displayed on faces which have not been registered. When no name has been registered, "---" is displayed.
-  **FACE RECOGNITION** may not function in the following:
  - the subject does not face front.
  - the face is not positioned within a frame.
  - the feature of the face varies (because of age or expression).

## Using the Menus: Playback Mode



The **F-MODE** and playback menus are used to manage the pictures in internal memory or on the memory card.

### Using the F-Mode Menu

- 1 Press the  button to enter playback mode (pg. 11).
- 2 Press the **F** button to display the **F-MODE** menu.
- 3 Press the selector up or down to highlight the desired menu item.
- 4 Press the selector right to display options for the highlighted item.
- 5 Press the selector up or down to highlight the desired option.
- 6 Press **MENU/OK** to select the highlighted option.





### F-Mode Menu Options

Option	Description
 <b>PHOTOBOOK ASSIST</b>	Create books from your favorite photos (pg. 47).
 <b>SLIDE SHOW</b>	View pictures in a slide show (pg. 86).

**SLIDE SHOW**


View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view on-screen help. When a movie is displayed, movie playback will begin automatically, and the slide show will continue when the movie ends. The show can be ended at any time by pressing **MENU/OK**.

Option	Displayed in
<b>NORMAL</b>	Press selector left or right to go back or skip ahead one frame. Select <b>FADE-IN</b> for fade transitions between frames.
<b>FADE-IN</b>	
<b>NORMAL</b> 	As above, except that camera automatically zooms in on faces selected with Intelligent Face detection.
<b>FADE-IN</b> 	
<b>MULTIPLE</b>	Display several pictures at once.

**Note**

- The camera will not turn off automatically while a slide show is in progress.

## ***Using the Playback Menu***

- 1** Press  to enter playback mode (pg. 11).
- 2** Press **MENU/OK** to display the playback menu.
- 3** Press the selector up or down to highlight the desired menu item.

















- 4** Press the selector right to display options for the highlighted item.
- 5** Press the selector up or down to highlight the desired option.
- 6** Press **MENU/OK** to select the highlighted option.




## ***Playback Menu Options***

The following options are available:



Option	Description
 <b>PHOTOBOOK ASSIST</b>	Create books from your favorite photos (pg. 47).
 <b>IMAGE SEARCH</b>	Search images based on categories (pg. 49).
 <b>ERASE</b>	Delete all or selected pictures (pg. 45).
 <b>SLIDE SHOW</b>	View pictures in a slide show (pg. 86).
 <b>RED-EYE REMOVAL</b>	Create copies with reduced red eye (pg. 89).
 <b>PROTECT</b>	Protect pictures from accidental deletion (pg. 89).
 <b>CROP</b>	Create cropped copies of pictures (pg. 90).
 <b>RESIZE</b>	Create small copies of pictures (pg. 91).
 <b>IMAGE ROTATE</b>	Rotate pictures (pg. 92).
 <b>COPY</b>	Copy pictures between internal memory and a memory card (pg. 93).
 <b>VOICE MEMO</b>	Add voice memos to pictures (pg. 94).
 <b>ERASE FACE RECOG.</b>	Erase personal information registered with a face that has been selected (pg. 96).
 <b>PRINT ORDER (DPOF)</b>	Select pictures for printing on DPOF- and PictBridge-compatible devices (pg. 59).
 <b>DISP ASPECT</b>	Choose a display mode for viewing photographs on an HDTV (pg. 54; available when an HDMI cable is connected) (pg. 96).

## RED EYE REMOVAL

If the current picture is marked with a  icon to indicate that it was taken with Intelligent Face Detection, this option can be used to remove red-eye. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.



### Note

- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with  **RED EYE REMOVAL** are indicated by a  icon during playback.


## PROTECT

Protect pictures from accidental deletion. The following options are available.


### ■ FRAME

Protect selected pictures.

- 1 Press the selector left or right to display the desired picture.

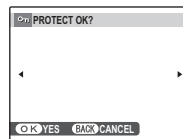

*Picture not protected*

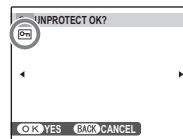

*Protected picture*

- 2 Press **MENU/OK** to protect the picture. If the picture is already protected, pressing **MENU/OK** will remove protection from the image.
- 3 Repeat steps 1–2 to protect additional images. Press **DISP/BACK** to exit when the operation is complete.



**■ SET ALL**

Press **MENU/OK** to protect all pictures, or press **DISP/BACK** to exit without changing picture status.

**■ RESET ALL**

Press **MENU/OK** to remove protection from all pictures, or press **DISP/BACK** to exit without changing picture status.

If the number of pictures affected is very large, it may take a while to process. Press **DISP/BACK** to exit before the operation is complete.


**⚠ Caution**

- Protected pictures will be deleted when the memory card or internal memory is formatted (pg. 101).

**📐 CROP**

To create a cropped copy of a picture, play the picture back and select **📐 CROP** in the playback menu.


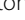
- Use the zoom control to zoom in and out and use the selector to scroll the picture until the desired portion is displayed (to exit to single-frame playback without creating a cropped copy, press **DISP/BACK**).

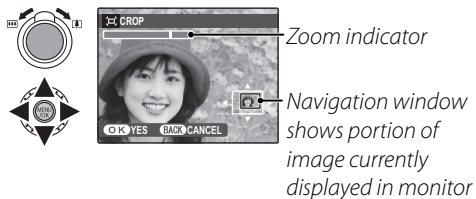

If the size of the final copy will be **640**, **OK** will be displayed in yellow.



**Tip: Intelligent Face Detection**

If the picture was shot with Intelligent Face Detection (pg. 74),  will be displayed in the monitor. Press the  button to zoom in on the selected face.




- 2** Press **MENU/OK**. A confirmation dialog will be displayed.



Copy size is shown at the top. Larger crops produce larger copies; all copies have an aspect ratio of 4:3.

- 3** Press **MENU/OK** to save the cropped copy to a separate file.

**RESIZE**

To create a small copy of a picture, play the picture back and select  **RESIZE** in the playback menu.

- 1** Press the selector up or down to highlight **M**, **S**, or **640**.



- 2** Press **MENU/OK** to select the highlighted option.



- 3** Press **MENU/OK** to copy the picture at the selected size.

**Note**

- Available resized file size varies depending on the size of an original file.

Original file size	Available resized file size
<b>L</b>	<b>M</b> , <b>S</b> , <b>640</b>
<b>M</b>	<b>S</b> , <b>640</b>
<b>S</b>	<b>640</b>

## IMAGE ROTATE

By default, pictures taken in tall orientation are displayed in wide orientation. Use this option to display pictures in the correct orientation in the monitor. It has no effect on pictures displayed on a computer or other device.

### Note

- Protected pictures can not be rotated. Remove protection before rotating pictures (pg. 89).
- The camera may not be able to rotate pictures created with other devices.

To rotate a picture, play the picture back and select  **IMAGE ROTATE** in the playback menu.

- 1 Press the selector down to rotate the picture 90° clockwise, up to rotate the picture 90° counterclockwise.



- 2 Press **MENU/OK** to confirm the operation (to exit without rotating the picture, press **DISP/BACK**).



The next time the picture is played back, it will automatically be rotated.

**COPY COPY**

Copy pictures between internal memory and a memory card.

- 1 Press the selector up or down to highlight **IN INTERNAL MEMORY** → **SD CARD** (copy pictures from internal memory to the memory card) or **SD CARD** → **IN INTERNAL MEMORY** (copy pictures from a memory card to internal memory).



- 2 Press the selector right to display options for the highlighted item.



- 3 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



- 4 Press **MENU/OK**.

**Tip: Copying Pictures Between Memory Cards**

- To copy pictures between two memory cards, insert the source card and copy the pictures to internal memory, then remove the source card, insert the destination card, and copy the pictures from internal memory.

**FRAME**

Copy selected frames.

- 1 Press the selector left or right to display the desired picture.



- 2 Press **MENU/OK** to copy the picture.



- 3 Repeat steps 1–2 to copy additional images. Press **DISP/BACK** to exit when the operation is complete.

**ALL FRAMES**

Press **MENU/OK** to copy all pictures, or press **DISP/BACK** to exit without copying pictures.

**Caution**

- Copying ends when the destination is full.
- DPOF print information is not copied (pg. 58).

**VOICE MEMO**


To add a voice memo to a still picture, select

**VOICE MEMO** after displaying the picture in playback mode.


**Note**

- Voice memos can not be added to movies or protected pictures. Remove protection from pictures before recording voice memos (pg. 89).

**1** Hold the camera at a distance of about 20 cm (8 in.) and face the microphone.

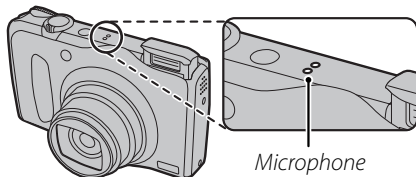

**2** Press **MENU/OK** to start recording.

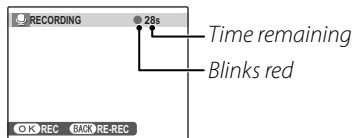



**3** Press **MENU/OK** again to end recording. Recording ends automatically after 30 seconds.


**Note**

- If a voice memo already exists for the current picture, the options will be displayed. Select **RE-REC** to replace the existing memo.
- Voice memos are recorded as PCM-format WAV files.

### ■ **Playing Voice Memos**

To play back a voice memo, select a picture for which a voice memo has been recorded (i.e., a picture indicated by ) and then select **PLAY** on the  **VOICE MEMO** screen in the playback menu.

To end playback, press the selector up. Press the selector left to rewind, right to fast forward. Volume controls can be displayed by pressing the **MENU/OK** button; press the selector up or down to adjust the volume, and press **MENU/OK** again to resume playback.

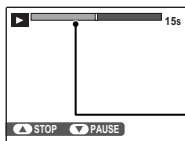

*Progress is shown in the monitor.*


*Progress bar*

### ← **Note**

- The camera may not play voice memos recorded with other devices.

### ⚠ **Caution**

- Do not cover the speaker during playback.

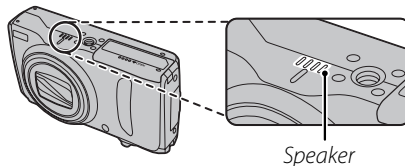

**[Ⓜ] ERASE FACE RECOG.**

When playing back an image containing a registered face with personal information, select **[Ⓜ] ERASE FACE**

**RECOG.** to enlarge the face. Press **MENU/OK** to erase the personal information.

**← Note**

- Personal information cannot be erased when the image size is **640**.

**[Ⓜ] DISP ASPECT**

Choose the aspect ratio used when photographs with at a 4:3 aspect ratio (pg. 70) are viewed on a High Definition device (pg. 54). This option is available when an HDMI cable is connected.

- **16:9**: The image fills the screen, with the top and bottom cropped out.
- **4:3**: The entire image is displayed, with black bands at the right and left sides.

Photographs with an aspect ratio of 16:9 are displayed full screen, those with an aspect ratio of 3:2 in a black frame.

# The Setup Menu

## Using the Setup Menu

### 1 Display the setup menu.

1.1 Press **MENU/OK** to display the menu for the current mode.



1.2 Press the selector left to highlight a left tab.



1.3 Press the selector up or down to select **SET**.  
The setup menu appears.



### 2 Adjust settings.

2.1 Press the selector right to activate the setup menu.



2.2 Press the selector up or down to highlight a menu item.



2.3 Press the selector right to display options for the highlighted item.



2.4 Press the selector up or down to highlight an option.












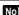









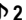
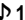

2.5 Press **MENU/OK** to select the highlighted option.

















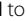




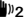


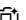

2.6 Press **DISP/BACK** to exit from the menu.



## Setup Menu Options

Menu item	Description	Options	Default
 <b>DATE/TIME</b>	Set the camera clock.	—	—
 <b>TIME DIFFERENCE</b>	Set the clock to local time (pg. 100).		
 <b>言語/LANG.</b>	Choose a language.	See page 126	<b>ENGLISH</b>
 <b>SILENT MODE</b>	Turn off the speaker, flash, and AF-assist illuminator/self-timer lamp.	<b>ON/OFF</b>	<b>OFF</b>
 <b>RESET</b>	Reset all settings except <b>DATE/TIME</b> , <b>TIME DIFFERENCE</b> , <b>BACKGROUND COLOR</b> , and <b>VIDEO SYSTEM</b> to default values. A confirmation dialog will be displayed, highlight <b>OK</b> and press <b>MENU/OK</b> .	—	—
 <b>FORMAT</b>	Format internal memory or memory cards (pg. 101).	—	—
 <b>IMAGE DISP.</b>	Choose how long pictures are displayed after shooting (pg. 101).	<b>3 SEC/1.5 SEC/ ZOOM (CONTINUOUS) / OFF</b>	<b>1.5 SEC</b>
 <b>FRAME NO.</b>	Choose how files are named (pg. 102).	<b>CONTINUOUS / RENEW</b>	<b>CONTINUOUS</b>
 <b>OPERATION VOL.</b>	Adjust the volume of camera controls.	 (high) /  (mid) /  (low) /  OFF (mute)	
 <b>SHUTTER VOLUME</b>	Adjust the volume of the shutter sound.		
 <b>SHUTTER SOUND</b>	Choose the sound made by the shutter.	 1 /  2	 1
 <b>PLAYBACK VOLUME</b>	Adjust the volume for movie and voice memo playback (pg. 103).	—	<b>7</b>



Menu item	Description	Options	Default
 <b>LCD BRIGHTNESS</b>	Control the brightness of the display (pg. 103).	—	<b>0</b>
 <b>AUTO POWER OFF</b>	Choose the auto power off delay (pg. 103).	<b>5 MIN / 2 MIN / OFF</b>	<b>2 MIN</b>
 <b>DUAL IS MODE</b>	Reduce blur. Choose whether the function is performed at all times when the camera is in the shooting mode (  <b>CONTINUOUS</b> ), only when the shutter button is pressed halfway (  <b>SHOOTING ONLY</b> ) or <b>OFF</b> .	 <b>CONTINUOUS</b> /  <b>SHOOTING ONLY</b> / <b>OFF</b>	
 <b>RED EYE REMOVAL</b>	Remove "red-eye" effects caused by the flash.	<b>ON / OFF</b>	<b>ON</b>
 <b>DIGITAL ZOOM</b>	Enable or disable digital zoom (pg. 104).	<b>ON / OFF</b>	<b>OFF</b>
 <b>AF ILLUMINATOR</b>	Turn the AF-assist illuminator on or off (pg. 35).	<b>ON / OFF</b>	<b>ON</b>
 <b>SAVE ORG IMAGE</b>	Choose whether to save unprocessed copies of pictures taken using  <b>RED EYE REMOVAL</b> ,  <b>PRO LOW-LIGHT</b> , or  <b>PRO FOCUS</b> . Select <b>ON</b> to save unprocessed copies.	<b>ON / OFF</b>	<b>OFF</b>
 <b>AUTOROTATE PB</b>	Choose <b>ON</b> to automatically rotate "tall" (portrait-orientation) pictures during playback.	<b>ON / OFF</b>	<b>ON</b>
 <b>BACKGROUND COLOR</b>	Choose a color scheme for menus and cursors.	—	<b>BLUE</b>
 <b>GUIDANCE DISPLAY</b>	Choose whether to display tool tips.	<b>ON / OFF</b>	<b>ON</b>
 <b>VIDEO SYSTEM</b>	Choose a video mode for connection to a TV (pg. 54).	<b>NTSC / PAL</b>	—
 <b>POWER MANAGEMENT</b>	Optimize camera performance for increased battery life, quick focus, or display quality (pg. 105).	 /  / 	

## TIME DIFFERENCE

When traveling, use this option to switch the camera clock instantly from your home time zone to the local time at your destination.

### 1 Specify the difference between local time and your home time zone.

1.1 Press the selector up or down to highlight  **LOCAL**.



1.2 Press the selector right to display the time difference.



1.3 Press the selector left or right to highlight **+**, **-**, hours, or minutes; press up or down to edit. The minimum increment is 15 minutes.




1.4 Press **MENU/OK** when settings are complete.



### 2 Switch between local time and your home time zone.



To set the camera clock to local time, highlight  **LOCAL** and press **MENU/OK**.

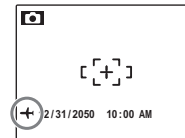To set the clock to the time in your home time zone, select  **HOME**. If  **LOCAL** is selected,  will be displayed in the monitor for three seconds after the camera enters shooting mode, and the date will be displayed in yellow.



After changing time zones, check that the date and time are correct.

**FORMAT**

Format internal memory or a memory card. If a memory card is inserted in the camera,  will be displayed in the dialog and this option will format the memory card. If no memory card is inserted,  will be displayed and this option will format internal memory. Highlight **OK** and press **MENU/OK** to begin formatting.

**Caution**





- All data—including protected pictures—will be deleted. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery cover during formatting.

**IMAGE DISP.**





Choose how long pictures are displayed in the monitor after shooting.

- **3 SEC:** Pictures are displayed for about 3 s before being recorded to the memory card.
- **1.5 SEC:** Pictures are displayed for about 1.5 s before being recorded to the memory card.
- **ZOOM (CONTINUOUS):** Pictures are displayed until the **MENU/OK** button is pressed. Pictures can be zoomed in to check fine details.

When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

When the picture was taken with  **FACE DETECTION** or  **AUTO RELEASE**, or taken in the  **DOG** or  **CAT** mode, a detected face is zoomed. When two or more faces have been detected, you can move to the next face by pressing **▼**.

**ZOOM (CONTINUOUS)** is disabled in the following case:


- ,  or  is selected in the shooting mode.
- An option other than **OFF** is selected for  **CONTINUOUS**.

#### Note

- Pictures taken in continuous shooting modes are always displayed after shooting.
- The colors displayed at settings of **1.5 SEC** and **3 SEC** may differ from those in the final picture.

#### **FRAME NO.**

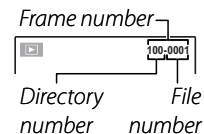

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used.



The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.

- **CONTINUOUS:** Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
- **RENEW:** Numbering is reset to 0001 after formatting or when a new memory card is inserted.

**← Note**

- If the frame number reaches 999-9999, the shutter release will be disabled (pg. 120).
- Selecting  **RESET** (pg. 98) resets  **FRAME NO.** to **CONTINUOUS** but does not reset frame numbering.
- Frame numbers for pictures taken with other cameras may differ.

** PLAYBACK VOLUME**

Press the selector up or down to choose volume for movie and voice memo playback and press **MENU/OK** to select.


** LCD BRIGHTNESS**

Press the selector up or down to choose display brightness and press **MENU/OK** to select.











** AUTO POWER OFF**

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that regardless of the option selected, the camera will not turn off automatically when connected to a printer (pg. 56) or computer (pg. 65) or when a slide show is in progress (pg. 86).



** Tip: Reactivating the Camera**



- To reactivate the camera after it has turned off automatically, use the **ON/OFF** button or press the  button for about a second (pg. 11).

### ← Note

- Although **OFF** is selected for  **AUTO POWER OFF**, the camera will turn off automatically if no operations are performed for five minutes in the following case:
  -  **QUICK AF** or  **CLEAR DISPLAY** is selected for  **POWER MANAGEMENT**.
  -  is selected in **EXR MODE**.
  -  is displayed in the shooting mode.
  - , , , or  mode is selected in the shooting mode.

### **DIGITAL ZOOM**

If **ON** is selected, selecting  at the maximum optical zoom position will trigger digital zoom, further magnifying the image. To cancel digital zoom, zoom out to the minimum digital zoom position and select .

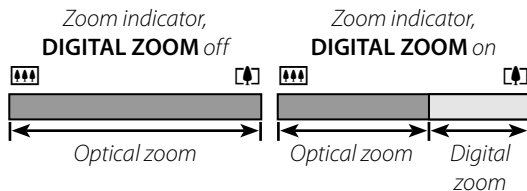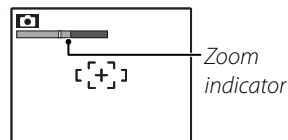




### **Caution**



- Digital zoom produces lower quality images than optical zoom.

## POWER MANAGEMENT

Optimize camera performance for increased battery life, quick focus response, or improved display quality. The following options are available:


-  **POWER SAVE:** Monitor refresh rate is reduced. If no operations are performed for 10 s, the monitor will dim automatically to save power. This option is recommended when the camera is used for extended periods at high temperatures to prevent mottled vertical streaks from appearing in photographs.
-  **QUICK AF:** Reduces focusing time, ensuring a quick shutter response.
-  **CLEAR DISPLAY:** Choose this option for a brighter, higher quality display.

### Note

-  **POWER SAVE** does not take effect when Intelligent Face Detection is on.
- At settings other than  **POWER SAVE**, the monitor will dim automatically if no operations are performed for 30 s.

## Optional Accessories

The camera supports a wide range of accessories from FUJIFILM and other manufacturers.


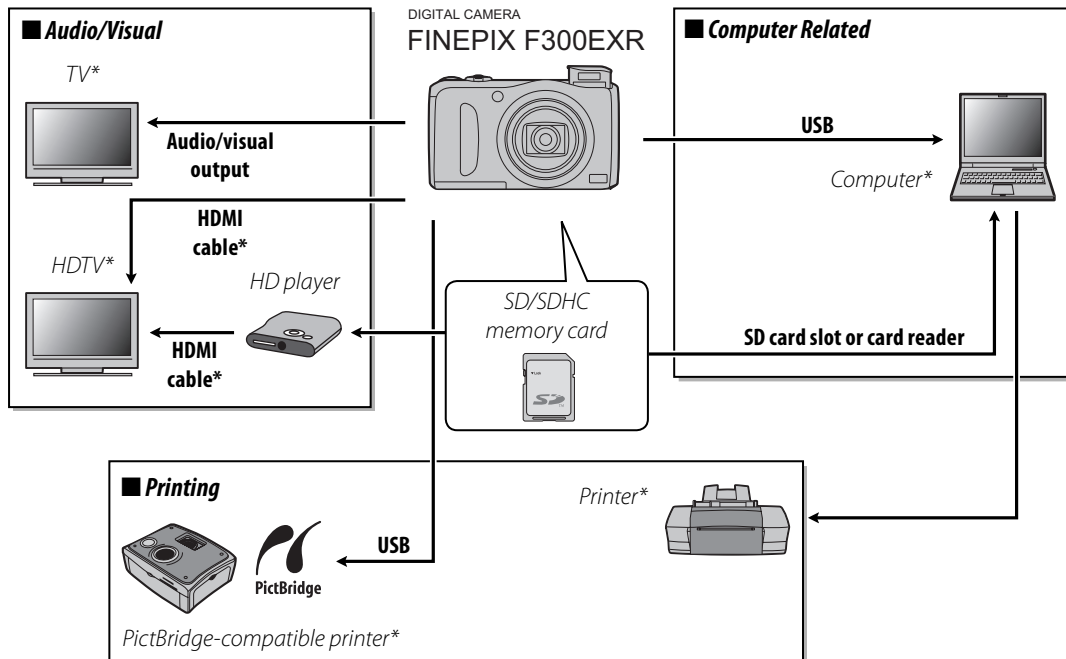

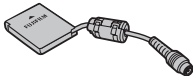



\* Available from third-party suppliers.



## **Accessories from FUJIFILM**

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative or visit [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html).
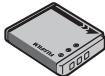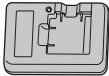
<b>Rechargeable Li-ion battery</b>	<b>NP-50</b> (supplied)	Additional NP-50 large-capacity batteries can be purchased as required.	
<b>Battery charger</b>	<b>BC-45W</b> (supplied)	Replacement battery chargers can be purchased as required. The BC-45W charges an NP-50 battery in about 150 minutes at +20°C (+68°F).	
<b>AC power adapter</b>	<b>AC-5VX</b> (requires <b>CP-50</b> )	Use for extended playback or when copying pictures to a computer (shape of adapter and plug vary with region of sale).	
<b>DC coupler</b>	<b>CP-50</b>	Connect the <b>AC-5VX</b> to the camera.	
<b>HD player</b>	<b>HDP-L1</b>	Still pictures and movies in SD card can be viewed by HDTV (requires HDMI cable, available from third-party suppliers).	

# Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

## **Storage and Use**

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

## **■ Water and Sand**

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

## **■ Condensation**

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

## **Cleaning**

Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

## **Traveling**

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

# Troubleshooting

## Power and Battery


Problem		Possible cause	Solution	Page
Power supply	The camera does not turn on.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	5, 14
		The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	6
		The battery-chamber cover is not latched.	Latch the battery-chamber cover.	7
		The AC adapter and DC coupler are not connected properly.	Make sure that the AC adapter and DC coupler are properly connected.	—
	The battery runs down quickly.	The battery is cold.	Warm the battery by placing it in a pocket or other warm place and re-insert it in the camera immediately before taking a picture.	—
		There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	—
		The camera is in <b>EXR</b> mode.	Select another shooting mode.	21
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery.	—
		<b>QUICK AF</b> or <b>CLEAR DISPLAY</b> is selected for <b>POWER MANAGEMENT</b> .	Select <b>POWER SAVE</b> to reduce the drain on the battery.	—
	<b>CONTINUOUS</b> or <b>TRACKING</b> is selected for <b>AF MODE</b> .	Select a different AF mode.	79	
	The camera turns off suddenly.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	5, 14
		The AC adapter or DC coupler has been disconnected.	Make sure that the AC adapter and DC coupler are properly connected.	—



	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
Battery charger	Charging does not start.	The battery is not correctly inserted.	Re-insert the battery in the charger.	5
		The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	5
	Charging is slow.	The temperature is low.	Charge the battery at room temperature.	—
	The charging lamp lights, but the battery does not charge.	There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	—
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM dealer.	—
	The charger is not correctly plugged into a power outlet.	Plug the charger correctly into the power outlet.	—	



### Menus and Displays





	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
	Menus and displays are not in English.	English is not selected for the  言語/LANG. option in the setup menu.	Select <b>ENGLISH</b> .	12, 97

**Shooting**

	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
Taking pictures	No picture is taken when the shutter button is pressed.	Memory is full.	Insert a new memory card or delete pictures.	8, 45
		Memory is not formatted.	Format the memory card or internal memory.	101
		There is dirt on the memory card contacts.	Clean the contacts with a soft, dry cloth.	—
		The memory card is damaged.	Insert a new memory card.	8
		The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
	The camera has turned off automatically.	Turn the camera on.	11	
	The monitor goes dark after shooting.	The flash has fired.	The monitor may darken while the flash charges. Wait for the flash to charge.	38
Focus	The camera does not focus.	The subject is close to the camera.	Select macro mode.	37
		The subject is far away from the camera.	Cancel macro mode.	
		The subject is not suited to autofocus.	Use focus lock.	33
EXR AUTO	Image size varies from shot to shot.	<b>AUTO</b> is selected for  <b>IMAGE SIZE</b> .	Select another image size or shooting mode.	21, 69
Panoramas	Cannot shoot.	The indicator lamp glows orange: pictures are being recorded.	Wait until the indicator lamp turns off.	23



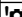

	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
Intelligent Face Detection	Face detection not available.	Intelligent Face Detection is not available in the current shooting mode.	Choose a different shooting mode.	21
		 <b>TRACKING</b> is selected for  <b>AF MODE</b> .	Select a different AF mode.	79
	No face is detected.	The subject's face is obscured by sunglasses, a hat, long hair, or other objects.	Remove the obstructions.	74
		The subject's face occupies only a small area of the frame.	Change the composition so that the subject's face occupies a larger area of the frame.	
		The subject's head is at an angle or the subject is not facing the camera.	Ask the subject to face the camera and hold their head straight.	
		The camera is tilted.	Hold the camera straight.	16
	The subject's face is poorly lit.	Shoot in bright light.	—	
Wrong subject selected.	The selected subject is closer to the center of the frame than the main subject.	Recompose the picture or turn face detection off and frame the picture using focus lock.	33, 74	
Close-ups	Macro mode is not available.	Macro mode is not available in the current shooting mode.	Choose a different shooting mode.	21

Problem		Possible cause	Solution	Page
Flash	The flash does not fire.	The flash is charging.	Wait for the flash to charge.	38
		The flash is not available in the current shooting mode.	Choose a different shooting mode.	21
		The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
		An option other than <b>OFF</b> is selected for  <b>CONTINUOUS</b> .	Turn  <b>CONTINUOUS</b> off.	78
		The flash is pressed.	Do not touch the flash.	39
	Flash mode not available.	The desired flash mode is not available in the current shooting mode.	Choose a different shooting mode.	21
		The camera is in silent mode.	Turn silent mode off.	19
	The flash does not fully light the subject.	The subject is not in range of the flash.	Position the subject in range of the flash.	126
The flash window is obstructed.		Hold the camera correctly.	16	
Fast shutter speed selected.		Choose a slower shutter speed.	30	
AC adapter	Help text is displayed.	The camera was turned on while being powered by an AC adapter.	Follow the on-screen instructions to enter demo mode or press the shutter button to cancel.	—

	Problem	Possible cause	Solution	Page
Problem images	Pictures are blurred.	The lens is dirty.	Clean the lens.	108
		The lens is blocked.	Keep objects away from the lens.	16
		<b>!</b> AF is displayed during shooting and the focus frame is displayed in red.	Check focus before shooting.	18
		 is displayed during shooting.	Use the flash or a tripod.	39
	Pictures are mottled.	Slow shutter speed selected and the subject is poorly lit.	Choose a faster shutter speed.	30
	Vertical lines appear in pictures.	The camera has been used continuously at high temperatures.	Turn the camera off and wait for it to cool down.	—
	Smear appears in pictures.	The sun or another bright object was in the frame.	White or purple vertical lines may appear when a very bright object is framed in the display. This is normal and does not indicate a malfunction. Smear is not recorded in photographs but may appear in movies. If possible, avoid shooting movies with bright objects in or close to the frame.	51
Recording	Pictures are not recorded.	Power was interrupted during shooting.	Turn the camera off before connecting the AC adapter/DC coupler. Leaving the camera on can result in corrupted files or damage to the memory card or internal memory.	—
Continuous	Only one picture is taken.	The self-timer is on and  or  is selected for  <b>CONTINUOUS</b> .	Turn the self-timer off.	40





## Movie

	Problem	Possible cause	Solution	Page
Recording	The sound of camera focusing is heard.	 <b>CONTINUOUS</b> is selected for  <b>AF MODE</b> .	Select  <b>CENTER</b> for  <b>AF MODE</b> .	79
		Zoom in or out while recording a movie.	Stop zoom operation.	51
		Intelligent Face Detection is on.	Turn off Intelligent Face Detection.	73

## Playback

	Problem	Possible cause	Solution	Page
Pictures	Pictures are grainy.	The pictures were taken with a different make or model of camera.	—	—
	Playback zoom unavailable.	The pictures were taken with a different make or model of camera.	—	—
The pictures were cropped or resized to the size of <b>640</b> .				
Audio	No sound in voice memo and movie playback.	The camera is in silent mode.	Turn silent mode off.	19
		Playback volume is too low.	Adjust playback volume.	103
		The microphone was obstructed.	Hold the camera correctly during recording.	94
		The speaker is obstructed.	Hold the camera correctly during playback.	95
Deletion	Selected pictures are not deleted.	Some of the pictures selected for deletion are protected.	Remove protection using the device with which it was originally applied.	89
Frame no.	File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on.	Turn the camera off before opening the battery-chamber cover.	6, 102

**Connections**






	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
TV	Monitor is off.	The camera is connected to a TV.	View pictures on the TV.	54
	No picture or sound.	The camera is not properly connected.	Connect the camera correctly.	54
		An A/V cable was connected during movie playback.	Connect the camera once movie playback has ended.	53, 54
		Input on the television is set to "TV".	Set input to "VIDEO".	—
		The camera is not set to the correct video standard.	Match the camera  <b>VIDEO SYSTEM</b> setting to the TV.	97
		The volume on the television is too low.	Adjust the volume.	—
No color.	The camera is not set to the correct video standard.	Match the camera  <b>VIDEO SYSTEM</b> setting to the TV.	97	
Computer	The computer does not recognize the camera.	The camera is not properly connected.	Connect the camera correctly.	65
PictBridge	Pictures can not be printed.	The camera is not properly connected.	Connect the camera correctly.	56
		The printer is off.	Turn the printer on.	—
	Only one copy is printed. The date is not printed.	The printer is not PictBridge-compatible.	—	—



**Miscellaneous**

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
Nothing happens when the shutter button is pressed.	Temporary camera malfunction.	Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler.	6
	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	6
The camera does not function as expected.	Temporary camera malfunction.	Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler. If the problem persists, contact your FUJIFILM dealer.	6

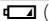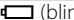

## Warning Messages and Displays

The following warnings are displayed in the monitor:

Warning	Description	Solution
 (red)	The battery is low.	Insert a fresh or fully-charged spare battery.
 (blinks red)	The battery is exhausted.	
	Slow shutter speed. Picture may be blurred.	Use the flash or mount the camera on a tripod.
<b>!AF</b> (displayed in red with red focus frame)	The camera can not focus.	<ul style="list-style-type: none"> <li>• Use focus lock to focus on another subject at the same distance, then recompose the picture (pg. 33).</li> <li>• If the subject is poorly lit, try focusing at a distance of about 2 m (6.6 ft.).</li> <li>• Use macro mode to focus when taking close-ups.</li> </ul>
Aperture or shutter speed shown in red	The subject is too bright or too dark. The picture will be over- or under-exposed.	If the subject is dark, use the flash.
<b>FOCUS ERROR</b> <b>TURN OFF THE CAMERA</b> <b>AND TURN ON AGAIN</b>	Camera malfunction.	Turn the camera off and then on again, taking care not to touch the lens. If the message persists, contact a FUJIFILM dealer.
	The lens barrel is touched.	
<b>NO CARD</b>	No memory card inserted when  <b>COPY</b> is selected in the playback menu.	Insert a memory card.
<b>CARD NOT INITIALIZED</b>	The memory card or internal memory is not formatted or the memory card was formatted in a computer or other device.	Format the memory card or internal memory using the  <b>FORMAT</b> option in the camera setup menu (pg. 101).
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 101). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
<b>PROTECTED CARD</b>	The memory card is locked.	Unlock the memory card (pg. 8).
<b>BUSY</b>	The memory card is incorrectly formatted.	Use the camera to format the memory card (pg. 101).

Warning	Description	Solution
CARD ERROR	The memory card is not formatted for use in the camera.	Format the memory card (pg. 101).
	The memory card contacts require cleaning or the memory card is damaged.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 101). If the message persists, replace the memory card.
	Incompatible memory card.	Use a compatible memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
 MEMORY FULL	The memory card or internal memory is full; pictures can not be recorded or copied.	Delete pictures or insert a memory card with more free space.
 MEMORY FULL		
INTERNAL MEMORY IS FULL INSERT A NEW CARD		
WRITE ERROR	Not enough memory remaining to record additional pictures.	Delete pictures or insert a memory card with more free space.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 101).
	Memory card error or connection error.	Re-insert the memory card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer.
READ ERROR	The file is corrupt or was not created with the camera.	The file can not be played back.
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 101). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.

Warning	Description	Solution
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999).	Format the memory card and select <b>RENEW</b> for the <b>FRAME NO.</b> option in the <b>SET SET-UP</b> menu. Take a picture to reset frame numbering to 100-0001, then return to the <b>FRAME NO.</b> menu and select <b>CONTINUOUS</b> .
TOO MANY FRAMES	An attempt was made to execute <b>IMAGE SEARCH</b> over too many pictures.	<b>IMAGE SEARCH</b> cannot process 30,000 pictures or more.
CANNOT EXECUTE CANNOT EXECUTE	Red-eye removal cannot be applied to the selected picture or movie.	—
PROTECTED FRAME	An attempt was made to delete, rotate, or add a voice memo to a protected picture.	Remove protection before deleting, rotating, or adding voice memos to pictures.
ERROR	Voice memo file is corrupt. Camera malfunction.	The voice memo can not be played back. Contact a FUJIFILM dealer.
NO IMAGE NO IMAGE	The source device selected in the playback <b>COPY</b> menu contains no pictures.	Select a different source.
CAN NOT CROP	An attempt was made to crop a  picture.	These pictures can not be cropped.
CAN NOT CROP	The picture selected for cropping is damaged or was not created with the camera.	
CANNOT EXECUTE CANNOT EXECUTE CANNOT EXECUTE	An attempt was made to resize a , , or  picture to the size of . An attempt was made to resize a , or  picture to the size of . An attempt was made to resize a  picture to the size of .	<b>RESIZE</b> is not available in these cases.

Warning	Description	Solution
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images.	Copy the pictures to internal memory and create a new print order.
CAN NOT SET DPOF	The picture can not be printed using DPOF.	—
 CAN NOT SET DPOF	Movies can not be printed using DPOF.	—
CAN NOT ROTATE	The picture is protected.	Remove protection before rotating pictures (pg. 89).
 CAN NOT ROTATE	Movies can not be rotated.	—
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode.	Exit silent mode before choosing a flash mode or adjusting the volume.
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device.	Confirm that the device is turned on and that the USB cable is connected.
PRINTER ERROR	Printer out of paper or ink, or other printer error.	Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?		Check printer (see printer manual for details). If printing does not resume automatically, press <b>MENU/OK</b> to resume.
CAN NOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer.	Movies and some pictures created with other devices can not be printed. If the picture was created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

# Glossary

**Digital zoom:** Unlike optical zoom, digital zoom does not increase the amount of visible detail. Instead, details visible using optical zoom are simply enlarged, producing a slightly “grainy” image.

**DPOF (Digital Print Order Format):** A standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



**EV (Exposure Value):** The exposure value is determined by the sensitivity of the image sensor and the amount of light that enters the camera while the image sensor is exposed. Each time the amount of light doubles, EV increases by one; each time the amount of light is halved, EV decreases by one. The amount of light entering the camera can be controlled by adjusting aperture and shutter speed.

**HDMI (High-Definition Multimedia Interface):** An interface standard for the transmission of images and sound that adds audio input to the DVI interface used to connect computers to displays.

**Motion JPEG:** An AVI (Audio Video Interleave) format that stores sound and JPEG images in a single file. Motion JPEG files can be played in Windows Media Player (requires DirectX 8.0 or later) or QuickTime 3.0 or later.

**Smear:** A phenomenon specific to CCDs which causes white streaks to appear when very bright light sources, such as the sun or reflected sunlight, appear in the frame.

**White balance:** The human brain automatically adapts to changes in the color of light, with the result that objects that appear white under one light source still appear white when the color of the light source changes. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This process is known as “white balance.”



## Internal Memory/Memory Card Capacity

The following table shows the recording time or number of available frames at different image qualities. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate. You can take a few pictures for trial without a memory card.




Medium		Internal memory (approx. 40 MB)		4 GB		8 GB	
		FINE	NORMAL	FINE	NORMAL	FINE	NORMAL
Photographs	<b>L</b> 4:3	8	13	830	1,330	1,680	2,670
	<b>L</b> 16:9	10	17	1,110	1,770	2,240	3,550
	<b>M</b> 4:3	13	26	1,340	2,640	2,700	5,290
	<b>M</b> 16:9	17	35	1,770	3,440	3,550	6,910
	<b>S</b> 4:3	25	49	2,480	4,770	4,980	9,570
	<b>S</b> 16:9	37	57	3,760	5,640	7,540	11,310
Movies *1	<b>HD</b> #2	—		20 min.		42 min.	
	<b>640</b>	30 sec.		50 min.		100 min.	

\*1 Individual movies cannot exceed 2GB in size, regardless of capacity of memory card.



Recording times shown here are the approximate total time of all recorded movies.

\*2 Use a card with a class 4 write speed (4 MB/s) or better when shooting HD movies.

# Specifications

System	
<b>Model</b>	Digital Camera FinePix F300EXR
<b>Effective pixels</b>	12 million
<b>CCD</b>	½-in. Super CCD EXR
<b>Storage media</b>	• Internal memory (approx. 40 MB) • SD/SDHC memory cards (see page 8)
<b>File system</b>	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)
<b>File format</b>	• <b>Still pictures:</b> Exif 2.3 JPEG (compressed) • <b>Movies:</b> AVI-format Motion JPEG • <b>Audio:</b> WAV
<b>Image size (pixels)</b>	• <b>L 4:3:</b> 4,000×3,000 • <b>L 3:2:</b> 4,000×2,664 • <b>L 16:9:</b> 4,000×2,248 • <b>M 4:3:</b> 2,816×2,112 • <b>M 3:2:</b> 2,816×1,864 • <b>M 16:9:</b> 2,816×1,584 • <b>S 4:3:</b> 2,048×1,536 • <b>S 3:2:</b> 2,048×1,360 • <b>S 16:9:</b> 1,920×1,080 •  <b>Motion Panorama 360:</b> Vertical; 7,680×1,080, Horizontal; 7,680×720 •  <b>Motion Panorama 240:</b> Vertical; 5,120×1,080, Horizontal; 5,120×720 •  <b>Motion Panorama 120:</b> Vertical; 2,560×1,080, Horizontal; 2,560×720
<b>Lens</b>	Fujinon 15× optical zoom lens, F3.5 (wide angle)–F5.3 (telephoto)
<b>Focal length</b>	f=4.4 mm–66.0 mm (35-mm format equivalent: 24 mm–360 mm)
<b>Digital zoom</b>	• <b>L / M:</b> Approx. 4.0× (up to 60× when combined with optical zoom) • <b>S:</b> Approx. 4.4× (up to 66× when combined with optical zoom)
<b>Aperture</b>	F3.5/F7.1/F10.0 (wide angle), F5.3/F11.0/F16.0 (telephoto), uses Neutral Density (ND) filter
<b>Focus range (distance from front of lens)</b>	Approx. 45 cm (1.5 ft.)–infinity (wide angle); 250 cm (8.2 ft.)–infinity (telephoto) Macro: approx. 5 cm–3.0 m/2 in.–9.8 ft. (wide angle); 120 cm–3.0 m/3.9 ft.–9.8 ft. (telephoto) Quick AF: approx. 1 m (3.3 ft.)–infinity (wide angle); 4.5 m (14.8 ft.)–infinity (telephoto)
<b>Sensitivity</b>	Standard output sensitivity equivalent to ISO 100, 200, 400, 800, 1600, 3200*1, 6400*2, 12800*2; AUTO, AUTO (400), AUTO (800), AUTO (1600) *1 image size <b>M</b> or <b>S</b> , *2 image size <b>S</b> only

System	
<b>Metering</b>	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE
<b>Exposure control</b>	Programmed AE; aperture-priority AE; shutter-priority AE; manual exposure
<b>Exposure compensation</b>	-2 EV – +2 EV in increments of 1/3 EV
<b>Scene modes</b>	(NATURAL AND FLASH LIGHTING),  (NATURAL LIGHT),  (PORTRAIT),  (PORTRAIT ENHANCER),  (DOG),  (CAT),  (LANDSCAPE),  (SPORT),  (NIGHT),  (NIGHT (TRIPOD)),  (FIREWORKS),  (SUNSET),  (SNOW),  (BEACH),  (UNDERWATER),  (PARTY),  (FLOWER),  (TEXT)
<b>Advanced mode</b>	(MOTION PANORAMA 360),  (PRO FOCUS),  (PRO LOW-LIGHT)
<b>Picture stabilization</b>	Optical stabilization (CCD shift)
<b>Intelligent Face Detection</b>	Available
<b>Shutter speed (combined mechanical and electronic shutter)</b>	<ul style="list-style-type: none"> <li>: 1/4 s–1/1,000 s</li> <li>*: 3 s–1/1,000 s</li> <li>: 4 s–1/2 s</li> <li><b>S</b>: 3 s–1/2,000 s</li> <li><b>Manual selection</b>: 8 s–1/2,000 s</li> <li><b>Other modes</b>: 1/4 s–1/2,000 s</li> </ul>
<b>Continuous</b>	<ul style="list-style-type: none"> <li>: up to 1.5 fps; max. 5 frames</li> <li>*: up to 4.5 fps; max. 23 frames</li> <li>: up to 1.5 fps; last 5 frames recorded</li> <li>*: up to 4.5 fps; last 23 frames recorded</li> </ul> <p>* image size <b>S</b> only, ISO 200–3200</p>
<b>Focus</b>	<ul style="list-style-type: none"> <li><b>Mode</b>: Center AF, Multi AF, Continuous AF, Tracking AF</li> <li><b>Autofocus system</b>: Hybrid AF (contrast-detect AF/phase detection AF)</li> </ul>
<b>White balance</b>	Automatic scene detection; seven manual preset modes for direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, incandescent, and underwater lighting; custom white balance

System	
<b>Self-timer</b>	Off, 2 sec., 10 sec.,  auto release,  auto release
<b>Flash</b>	Auto flash; effective range when sensitivity is set to <b>ISO 800</b> is approx. 15 cm–3.2 m/0.5 ft.–10.5 ft. (wide angle), 90 cm–1.9 m/3 ft.–6.2 ft. (telephoto)
<b>Flash modes</b>	Auto, forced flash, off, slow synchro (red-eye removal off); auto with red-eye removal, forced flash with red-eye removal, off, slow synchro with red-eye removal (red-eye removal on)
<b>Monitor</b>	3.0-in., 460k-dot color LCD monitor
<b>Frame coverage</b>	Approx. 100%
<b>Movies</b>	Frame size 1,280×720 (24 fps) or 640×480 (30 fps); monaural sound; AF mode; white balance; Intelligent Face Detection; Exposure compensation
<b>Shooting options</b>	EXR mode (EXR AUTO, RESOLUTION PRIORITY, HIGH ISO & LOW NOISE, D-RANGE PRIORITY), FACE RECOGNITION, motion panorama 360, Intelligent Face Detection with red-eye removal, PRO LOW-LIGHT, PRO FOCUS, Dog/Cat detection, power management, framing guideline, frame number memory, film simulation
<b>Playback options</b>	Intelligent Face Detection, red-eye removal, micro thumbnail, multi-frame playback, image search, crop, resize, slide show, image rotation, voice memo, favorites, photobook assist
<b>Other options</b>	PictBridge, Exif Print, language selection (Japanese / English / French / German / Spanish / Italian / Simplified Chinese / Korean / Dutch / Portuguese / Russian / Thai / Turkish / Traditional Chinese / Czech / Hungarian / Polish / Swedish / Slovak / Danish / Norwegian / Finnish / Arabic / Farsi / Greek / Lithuanian / Ukraine / Hebrew / Romanian / Indonesian / Vietnamese), time difference, silent mode

Input/output terminals	
<b>A/V OUT (audio/video output)</b>	8-pin multi-connector for NTSC or PAL output with monaural sound
<b>Digital input/output</b>	USB 2.0 High Speed; shares A/V OUT connector
<b>HDMI output</b>	HDMI Micro Connector
Power supply/other	
<b>Power supply</b>	NP-50 rechargeable battery; optional AC power adapter AC-5VX and DC coupler CP-50
<b>Guide to the number of available frames for battery operation</b>	<p><b>Battery Type</b> NP-50    <b>Number of frames</b> Approx. 250 frames (AUTO mode)</p> <p>According to the CIPA (Camera &amp; Imaging Products Association) standard procedure for measuring digital still camera battery consumption (extract):</p> <p>When using a battery, use the battery supplied with the camera. The storage media should be SD memory card.</p> <p>Note that the number of shots that can be taken with a fully-charged battery varies with temperature and shooting conditions.</p>
<b>Camera dimensions (W × H × D)</b>	103.5 mm × 59.2 mm × 32.6 (22.9*) mm/4.1 in. × 2.3 in. × 1.3 (0.9*) in. * excluding projecting parts, measured at the thinnest part
<b>Camera weight</b>	Approx. 195 g/6.9 oz., excluding batteries, accessories, and memory cards
<b>Shooting weight</b>	Approx. 215 g/7.6 oz., including batteries and memory card
<b>Operating conditions</b>	Temperature: 0°C to +40°C (+32°F to +104°F) 80% humidity or less (no condensation)

**NP-50 rechargeable battery**

<b>Nominal voltage</b>	DC 3.6V
<b>Nominal capacity</b>	1000mAh
<b>Operating temperature</b>	0°C – +40°C/+32°F – +104°F
<b>Dimensions (W × H × D)</b>	35.4 mm × 40.0 mm × 6.6 mm/1.4 in. × 1.6 in. × 0.3 in.
<b>Weight</b>	Approx. 18 g/0.6 oz.

**BC-45W battery charger**

<b>Rated input</b>	100V–240V AC, 50/60 Hz
<b>Input capacity</b>	8.0VA (100V) 12VA (240V)
<b>Rated output</b>	4.2V DC, 550 mA
<b>Supported batteries</b>	NP-50 rechargeable batteries
<b>Charging time</b>	Approx. 150 minutes (+20°C/+68°F)
<b>Dimensions (W × H × D)</b>	91 mm × 62 mm × 23 mm/3.6 in. × 2.4 in. × 0.9 in.
<b>Weight</b>	Approx. 67 g/2.4 oz., excluding battery
<b>Operating temperature</b>	0°C – +40°C/+32°F – +104°F

The weight and dimensions vary with the country or region of sale.

### **Color Television Systems**

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

### **Notices**

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<http://www.fujifilm.com/>







