

The Samsung logo is located in the top left corner of the cover. It consists of the word "SAMSUNG" in a bold, white, sans-serif font, enclosed within a white oval shape that has a slight 3D effect with a shadow on the right side. The background of the entire cover is a vibrant blue with abstract, flowing white and light blue patterns that create a sense of motion and depth.

SAMSUNG

User Manual

PL20/PL21

Thank you for buying a Samsung Camera. This user manual includes detailed usage instructions for your camera. Please read this manual thoroughly.

 [Click a topic](#)

Basic troubleshooting

Quick reference

Contents

Basic functions

Extended functions

Shooting options

Playback/Editing

Settings

Appendixes

Index

Health and safety information

Always comply with the following precautions and usage tips to avoid dangerous situations and ensure peak performance of your camera.



Warning—situations that could cause injury to yourself or others

Do not disassemble or attempt to repair your camera.

This may result in electric shock or damage to the camera.

Do not use your camera near flammable or explosive gases and liquids.

This may cause a fire or explosion.

Do not insert flammable materials into the camera or store these materials near the camera.

This may cause a fire or electric shock.

Do not handle your camera with wet hands.

This may result in electric shock.

Prevent damage to subjects' eyesight.

Do not use the flash in close proximity (closer than 1 m/3 ft) to people or animals. If you use the flash too close to your subject's eyes, this can cause temporary or permanent eyesight damage.

Keep your camera away from small children and pets.

Keep your camera and all accessories out of the reach of small children and animals. Small parts may cause choking or serious injury if swallowed. Moving parts and accessories may present physical dangers as well.

Do not expose the camera to direct sunlight or high temperatures for an extended period of time.

Prolonged exposure to sunlight or extreme temperatures can cause permanent damage to your camera's internal components.

Avoid covering the camera or charger with blankets or clothes.

The camera may over-heat, which may distort the camera or cause a fire.

If liquid or foreign objects enter your camera, immediately disconnect all power sources, such as the battery or charger, and then contact a Samsung service center.



Caution—situations that could cause damage to your camera or other equipment

Remove the batteries from your camera when storing it for an extended period of time.

Installed batteries may leak or corrode over time and cause serious damage to your camera.

Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries. Do not damage or heat the battery.

This may cause a fire or personal injuries.

Use only Samsung-approved batteries, chargers, cables and accessories.

- Unauthorized batteries, chargers, cables or accessories can cause batteries to explode, damage your camera, or cause injury.
- Samsung is not responsible for damages or injuries caused by unapproved batteries, chargers, cables or accessories.

Do not use batteries for unintended purposes.

This may cause a fire or electric shock.

Do not touch the flash while it fires.

The flash is very hot when fired and may burn your skin.

When you use AC charger, turn off the camera before you disconnect the power to the AC charger.

Failing to do so may result in fire or electric shock.

Disconnect chargers from power sources when not in use.

Failing to do so may result in fire or electric shock.

Do not use a damaged power supply cord, plug, or loose outlet when you charge batteries.

This may cause a fire or electric shock.

Do not allow the AC charger to come in contact with the +/- terminals on the battery.

This may cause a fire or electric shock.

Do not force the camera's parts or apply pressure to the camera.

This may cause your camera to malfunction.

Exercise caution when you connect cables or adapters and install batteries and memory cards.

If you force the connectors, improperly connect cables, or improperly install batteries and memory cards, you can damage ports, connectors, and accessories.

Keep cards with magnetic strips away from the camera case.

Information stored on the card may be damaged or erased.

Never use a damaged charger, battery, or memory card.

This may result in electric shock or camera malfunction or cause a fire.

Check that the camera is operating properly before use.

The manufacturer takes no responsibility for any loss of files or damages that may result from camera malfunction or improper use.

You must plug the end of the cable with the indicator light (▲) into your camera.

If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

Copyright information







- Microsoft Windows and the Windows logo are registered trademarks of the Microsoft Corporation.
- Mac is a registered trademark of the Apple Corporation.
- Trademarks and trade names used in this manual are the property of their respective owners.

- Camera specifications or contents of this manual may be changed without prior notice due to upgrade of camera functions.
- For Open Source License information, refer to the "OpenSourceInfo.pdf" in the provided CD-ROM.

Organization of the user manual

Basic functions	11
Learn about your camera's layout, icons, and basic functions for shooting.	
Extended functions	27
Learn how to take a photo by selecting a mode and how to record a video or voice memo.	
Shooting options	35
Learn about the options you can set in shooting mode.	
Playback/Editing	52
Learn how to play back photos, videos, or voice memos and edit photos or videos. You will also learn how to connect your camera to your photo printer or TV.	
Settings	73
Refer to options to configure your camera's settings.	
Appendixes	79
Refer to error messages, specifications, and maintenance tips.	




Indications used in this manual

Shooting mode	Indication
Smart Auto	
Program	
DIS	
Photo Help Guide	
Scene	
Movie	


Shooting mode icons

These icons indicate that a function is available in the corresponding modes. The  mode may not support functions for all scenes.

e.g.)

Adjusting the exposure manually (EV)   



Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.



Darker (-) Neutral (0) Brighter (+)

Available in the Program, DIS, and Movie modes

Icons used in this manual

Icon	Function
	Additional information
	Safety warnings and precautions
[]	Camera buttons; for example: [Shutter] represents the shutter button.
()	Page number of related information
→	The order of options or menus you must select to perform a step. For example: Select Shooting → White Balance represents select Shooting, and then select White Balance .
*	Annotation


Abbreviations used in this manual

Abbreviation	Definition
ACB	Auto Contrast Balance
AEB	Auto Exposure Bracket
AF	Auto Focus
DIS	Digital Image Stabilization
DPOF	Digital Print Order Format
EV	Exposure Value
ISO	International Organization for Standardization
WB	White Balance

Expressions used in this manual

Pressing the shutter

- Half-press [**Shutter**]: Press the shutter halfway down
- Press [**Shutter**]: Press the shutter all the way down

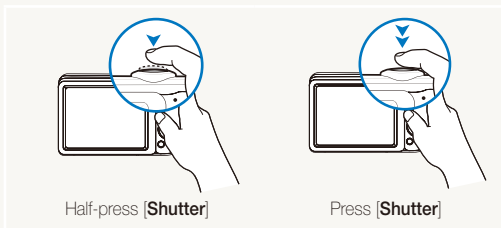


Exposure (Brightness)

The amount of light that enters your camera determines the exposure. You can alter the exposure with shutter speed, aperture value, and ISO speed. By altering the exposure, your photos will be darker or lighter.




Normal exposure

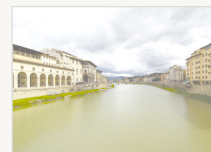

Overexposure (too bright)





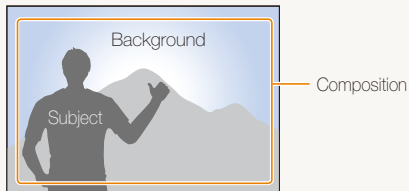










Subject, background, and composition

- **Subject**: The main object of a scene, such as a person, animal, or still life.
- **Background**: The objects around the subject.
- **Composition**: The combination of a subject and background.



Basic troubleshooting



You can get answers to common questions. Solve problems easily by setting shooting options.

	The subject's eyes appear red.	<p>This is caused by a reflection from the camera flash.</p> <ul style="list-style-type: none">• Set the flash option to  Red-eye or  Red-eye Fix. (p. 40)• If the photo has already been taken, select  Red-eye Fix in the edit menu. (p. 62)
	Photos have dust spots.	<p>Dust particles floating in the air may be captured in photos when using the flash.</p> <ul style="list-style-type: none">• Turn off the flash or avoid taking photos in a dusty place.• Set ISO speed options. (p. 40)
	Photos are blurred.	<p>This may be caused by taking photos in low light conditions or holding the camera incorrectly.</p> <ul style="list-style-type: none">• Press [Shutter] halfway down to make sure the subject is focused. (p. 25)• Use the  mode. (p. 31)
	Photos are blurred when shooting at night.	<p>As the camera tries to let in more light, the shutter speed slows. This can make it difficult to steady the camera and may result in camera shake.</p> <ul style="list-style-type: none">• Select  Night in the  mode. (p. 30)• Turn on the flash. (p. 39)• Set ISO speed options. (p. 40)• Use a tripod to prevent your camera from shaking.
	Subjects come out too dark because of backlighting.	<p>When the light source is behind the subject or when there is a high contrast between the light and dark areas, the subject may come out shaded.</p> <ul style="list-style-type: none">• Avoid shooting with the sun behind your subject.• Select  Backlight in the  mode. (p. 30)• Set the flash option to  Fill in. (p. 40)• Set the Auto Contrast Balance (ACB) option. (p. 46)• Adjust the exposure. (p. 46)• Set the metering option to  Spot if a bright subject is in the center of the frame. (p. 47)

Quick reference





Taking photos of people

-  mode > Beauty Shot ▶ 30
-  mode > Portrait ▶ 30
- Red-eye, Red-eye Fix (to prevent or correct red-eye) ▶ 40
- Face Detection ▶ 43



Taking photos at night or in the dark

-  mode > Night ▶ 30
-  mode > Sunset, Dawn ▶ 30
- Flash options ▶ 39
- ISO speed (to adjust the sensitivity to light) ▶ 40



Taking action photos

- Continuous, Motion Capture ▶ 49



Taking photos of insects, or flowers

-  mode > Close Up ▶ 30
- Macro, Auto Macro (to take close-up photos) ▶ 41
- White Balance (to change the color tone) ▶ 47



Adjusting the exposure (brightness)

- ISO speed (to adjust the sensitivity to light) ▶ 40
- EV (to adjust exposure) ▶ 46
- ACB (to compensate for subjects against bright backgrounds) ▶ 46
- Metering ▶ 47
- AEB (to take three photos of the same scene with different exposures) ▶ 49



Applying a different effect

- Smart Filter (to apply effects) ▶ 50
- Image adjust (to adjust saturation, sharpness, or contrast) ▶ 51



Reducing camera shake

-  mode ▶ 31

- Viewing files by category in Smart Album ▶ 54
- Deleting all files on the memory card ▶ 56
- Viewing files as a slide show ▶ 57
- Viewing files on a TV ▶ 64
- Connecting your camera to a computer ▶ 65
- Adjusting sound and volume ▶ 75
- Adjusting the brightness of the display ▶ 75
- Changing the display language ▶ 76
- Setting the date and time ▶ 76
- Formatting the memory card ▶ 76
- Troubleshooting ▶ 90

Contents

Basic functions	11	Shooting options	35
Unpacking	12	Selecting a resolution and quality	36
Camera layout	13	Selecting a resolution	36
Inserting the battery and memory card	15	Selecting image quality	36
Charging the battery and turning your camera on	16	Using the timer	37
Charging the battery	16	Shooting in the dark	39
Turning on your camera	16	Preventing red-eye	39
Performing the initial setup	17	Using the flash	39
Learning icons	18	Adjusting the ISO speed	40
Selecting options	19	Changing the camera's focus	41
Setting the display and sound	21	Using macro	41
Changing the display type	21	Using auto focus	41
Setting the sound	21	Adjusting the focus area	42
Taking photos	22	Using face detection	43
Zooming	23	Detecting faces	43
Tips for getting a clearer photo	25	Taking a self-portrait shot	44
		Taking a smile shot	44
		Detecting eye blinking	45
Extended functions	27	Adjusting brightness and color	46
Shooting modes	28	Adjusting the exposure manually (EV)	46
Using the Smart Auto mode	28	Compensating for backlighting (ACB)	46
Using the Photo Help Guide mode	29	Changing the metering option	47
Using the Scene mode	30	Selecting a light source (White balance)	47
Using the Beauty Shot mode	30	Using burst modes	49
Using the DIS mode	31	Improving your photos	50
Using the Program mode	32	Applying filter effects	50
Recording a video	32	Adjusting your photos	51
Recording voice memos	34		
Recording a voice memo	34		
Adding a voice memo to a photo	34		

Playback/Editing	52
Playing back	53
Starting Playback mode	53
Viewing photos	57
Playing a video	58
Playing voice memos	59
Editing a photo	60
Resizing photos	60
Rotating a photo	60
Applying smart effects	61
Correcting exposure problems	62
Creating a print order (DPOF)	63
Viewing files on a TV	64
Transferring files to your Windows computer	65
Transferring files using Intelli-studio	67
Transferring files by connecting the camera as a removable disk	69
Disconnecting the camera (for Windows XP)	70
Transferring files to your Mac computer	71
Printing photos with a PictBridge photo printer	72
Settings	73
Camera settings menu	74
Accessing the settings menu	74
Sound	75
Display	75
Settings	76

Appendixes	79
Error messages	80
Camera maintenance	81
Cleaning your camera	81
Using or storing the camera	82
About memory cards	84
About the battery	86
Before contacting a service center	90
Camera specifications	93
Glossary	96
FCC notice	101
Index	102

Basic functions

Learn about your camera's layout, icons, and basic functions for shooting.


Unpacking	12
Camera layout	13
Inserting the battery and memory card ...	15
Charging the battery and turning your camera on	16
Charging the battery	16
Turning on your camera	16
Performing the initial setup	17
Learning icons	18
Selecting options	19
Setting the display and sound	21
Changing the display type	21
Setting the sound	21
Taking photos	22
Zooming	23
Tips for getting a clearer photo	25

Unpacking

Check your product box for the following items.



 Camera

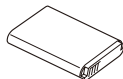


Rechargeable battery



AC adapter / USB cable



 Strap

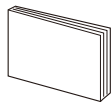


Quick Start Manual



Software CD-ROM
(User manual included)

 
Optional accessories

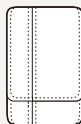


Camera case



Memory cards

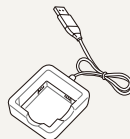

Battery charger

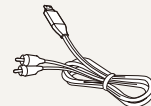 


AV cable



The illustrations may differ from your actual items.

Camera layout


Before you start, familiarize yourself with your camera's parts and their functions.

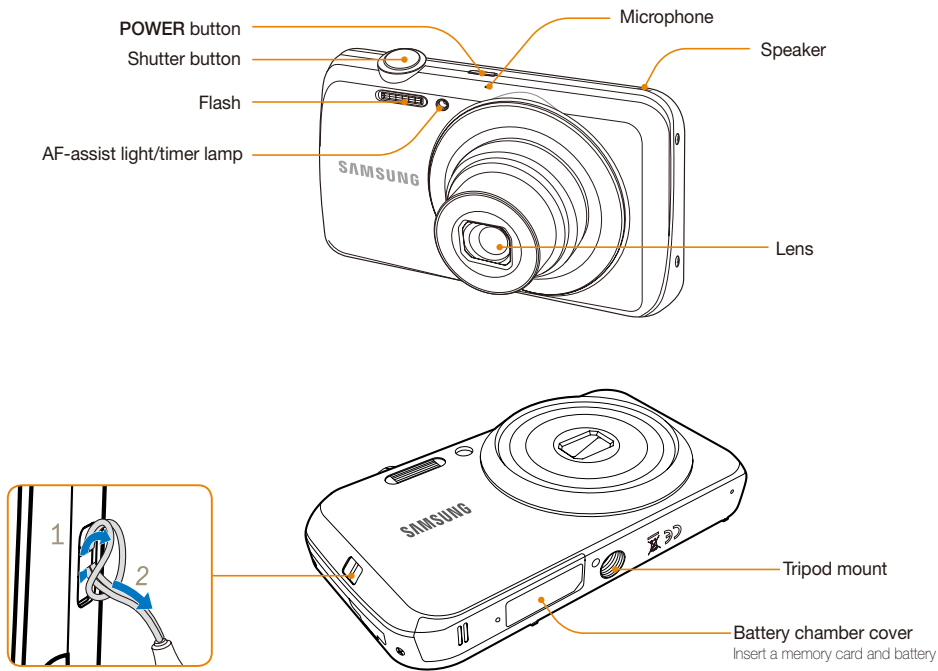

Status lamp

- **Blinking:** When the camera is saving a photo or video, being read by a computer or printer, or out of focus
- **Steady:** When the camera is connecting to a computer or in focus

Display

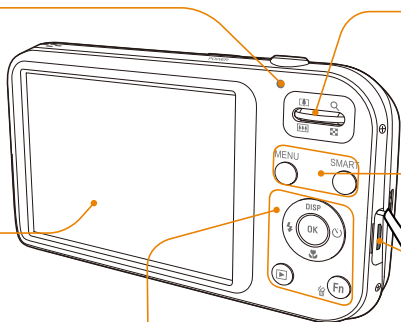

Zoom button

- Zoom in or out in Shooting mode.
- Zoom in on part of a photo or view files as thumbnails in Playback mode.


MENU button

Access options and settings menu, or return to the previous mode

SMART button

Press this button, Select / Cancel "Smart Auto" mode

Button	Description			
	Navigation	In Shooting mode	While setting	
		DISP	Change the display option	Move up
			Change the macro option	Move down
			Change the flash option	Move left
			Change the timer option	Move right
	OK	Confirm the highlighted option or menu		
	Playback	Enter Playback mode		
	Function	<ul style="list-style-type: none"> • Access options in Shooting mode • Delete files in Playback mode 		

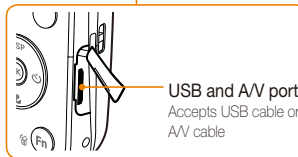


USB and AV port


Accepts USB cable or AV cable

Inserting the battery and memory card



Learn to insert the battery and an optional memory card into the camera.

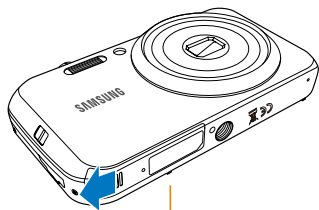


Insert a memory card with the gold-colored contacts facing down.

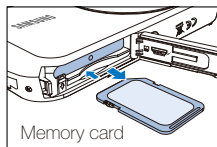


Insert the battery with the Samsung logo facing down.

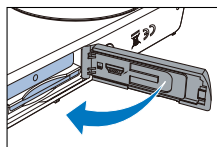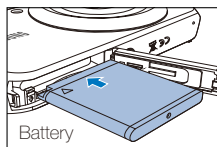

Removing the battery and memory card

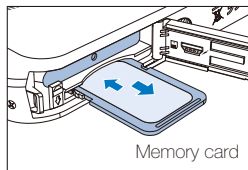

Push the card gently until the card disengages from the camera, and then pull it out of the slot.

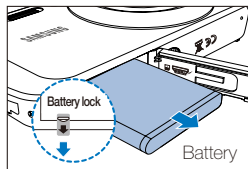

Push the lock down to release the battery.




- You can use the internal memory as a temporary storage device when the memory card is not inserted.
- Insert a memory card in the correct direction. Inserting a memory card in the wrong direction may damage your camera and memory card.

Charging the battery and turning your camera on

Charging the battery

Before using the camera for the first time, you must charge the battery. Attach the USB cable to the AC adapter, and then plug the end of cable with the indicator light into your camera.

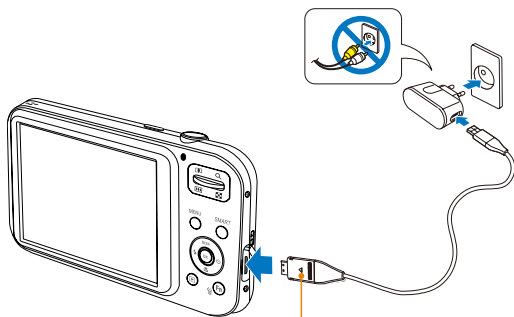


- Indicator light
- Red: Charging
 - Green: Fully charged

Turning on your camera


Press **[POWER]** to turn your camera on or off.

- The initial setup screen appears when you turn on the camera for the first time. (p. 17)

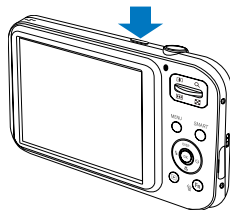

Turning on your camera in Playback mode

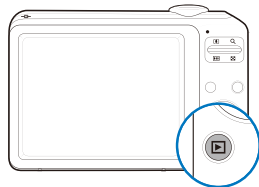

Press **[▶]**. The camera turns on and accesses Playback mode immediately.




 




When you turn on your camera by pressing and holding **[▶]** for about 5 seconds, the camera does not emit any camera sounds.


Performing the initial setup

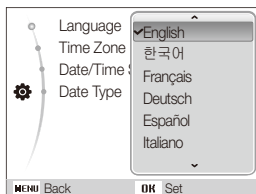



When the initial setup screen appears, follow the steps below to configure the camera's basic settings.


- 1 Press **[POWER]**.
 - The initial setup screen appears when you turn on the camera for the first time.
- 2 Press **[] or **[OK]** to select **Language** and press **[] or **[OK]**.****

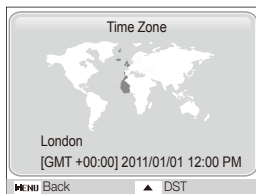




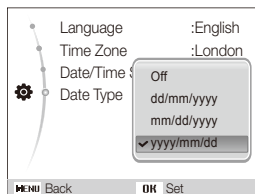
- 3 Press **[DISP]** or **[] to select a language and press **[OK]**.**
- 4 Press **[DISP]** or **[] to select **Time Zone** and press **[] or **[OK]**.****
- 5 Press **[] or **[] to select a time zone and press **[OK]**.
 - To set the daylight-saving time, press **[DISP]**.****

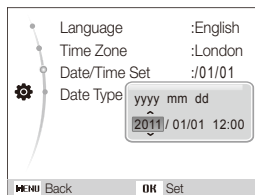


- 6 Press **[DISP]** or **[] to select **Date/Time Set** and press **[] or **[OK]**.****
- 7 Press **[] or **[] to select an item.****




- 8 Press **[DISP]** or **[] to set the date and time, and press **[OK]**.**
- 9 Press **[DISP]** or **[] to select **Date Type** and press **[] or **[OK]**.****



- 10 Press **[DISP]** or **[] to select a Date Type and press **[OK]**.**
- 11 Press **[MENU]** to switch to Shooting mode.

Learning icons

The icons displayed will change according to the mode you select or the options you set.

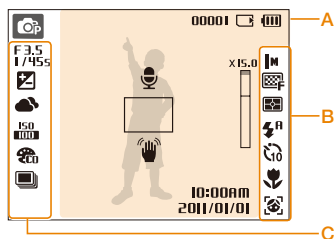

A. Information

Icon	Description
	Selected shooting mode
00001	Available number of photos
00:00:20	Available recording time
	Memory card is not inserted
	Memory card inserted
	<ul style="list-style-type: none"> : Fully charged : Partially charged (Red) : Charging needed
	Voice memo

Icon	Description
	Auto focus frame
	Camera shake
	Zoom ratio
10:00AM 2011/01/01	Current date and time

B. Icons on the right

Icon	Description
1M	Photo resolution
640	Video resolution
30	Frame rate
	Photo quality
	Metering option
	Flash option
	Timer option
	Auto focus option
	Face detection

C. Icons on the left




Icon	Description
F3.5 1/45s	Aperture and shutter speed
	Exposure value
	White balance
	Face tone
	Face retouch
ISO 1000	ISO speed
	Smart filter
	Image adjustment (contrast, sharpness, saturation)
	Voice muted
	Burst type


Selecting options

You can select options by pressing [**MENU**], and then using the navigation buttons ([**DISP**], [, [, []).



You can also access shooting options by pressing [**Fn**], but some options are not available.

- 1 In Shooting mode, press [**MENU**].
- 2 Use the navigation buttons to scroll to an option or menu.
 - To move left or right, press [] or [].
 - To move up or down, press [**DISP**] or [].

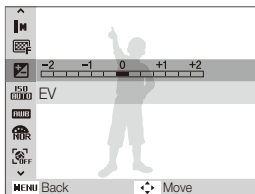

- 3 Press [**OK**] to confirm the highlighted option or menu.





Going back to the previous menu


Press [**MENU**] again to go back to the previous menu.






Press [**Shutter**] to return to Shooting mode.

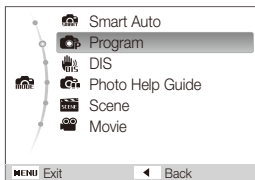

Example: Selecting a White Balance option in the P mode


- 1 In Shooting mode, press **[MENU]**.
- 2 Press **[DISP]** or **[ to scroll to **Mode**, and then press **[ or **[OK]**.****
- 3 Press **[DISP]** or **[ to scroll to **Program**, and then press **[ or **[OK]**.****

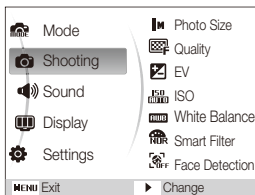


- 4 Press **[MENU]**.
- 5 Press **[DISP]** or **[ to scroll to **Shooting**, and then press **[ or **[OK]**.****



- 6 Press **[DISP]** or **[ to scroll to **White Balance**, and then press **[ or **[OK]**.****

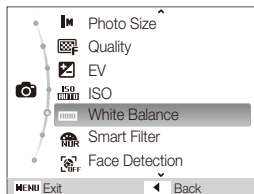

- 7 Press **[ or **[ to scroll to a White Balance option.****

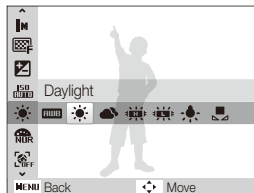

- 8 Press **[OK]**.


Setting the display and sound

Learn how to change the basic display and sound settings.

Changing the display type

Select a display type for Shooting or Playback mode. Each type displays different shooting or playback information.

Press **[DISP]** repeatedly to change a display type.

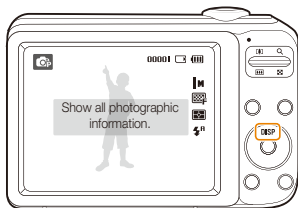

Modes	Display Type Choices
Shooting	<ul style="list-style-type: none">• Display all information about shooting• Hide information about shooting, except the available number of photos (or available recording time) and the battery icon
Playback	<ul style="list-style-type: none">• Display all information about the current photo• Hide all information about the current file• Display information about the current file, except the shooting settings and captured date

Setting the sound



Set whether your camera emits a specified sound when you operate your camera.


- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Sound** → **Beep Sound** → an option.

Options	Description
Off	The camera does not emit any sounds.
1/2/3	The camera emits one of three sounds, depending on the option you select.


Taking photos

Learn how to take photos easily and quickly in the **Smart Auto** mode.


- 1 In Shooting mode, press **[MENU]**.
- 2 Press **[DISP]** or  to scroll to **Mode**, and then press  or **[OK]**.
- 3 Press **[DISP]** or  to scroll to **Smart Auto**, and then press **[OK]**.

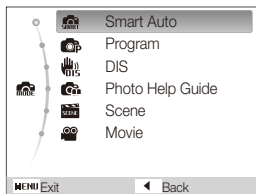

- 4 Align your subject in the frame.

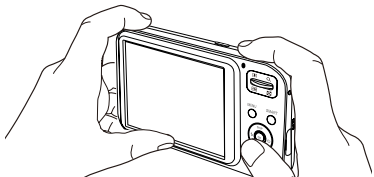

- 5 Half-press **[Shutter]** to focus.
 - A green frame means the subject in focus.
 - A red frame means the subject is out of focus.

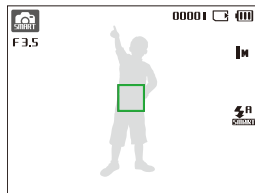

- 6 Press **[Shutter]** to take a photo.




See page 25 for tips to get clearer photos.

Zooming

You can shoot close-up photos by adjusting the zoom. Your camera has a 5X optical zoom, 2X Intelli zoom, and 3X digital zoom. Intelli zoom and digital zoom cannot be used at the same time.


Push **[Zoom]** up to zoom in on your subject. Push **[Zoom]** down to zoom out.

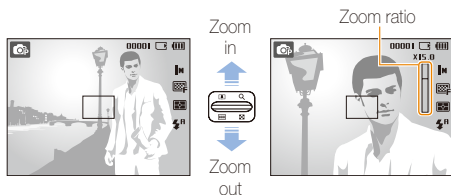

Available zoom ratio for videos differs from photo zoom ratio.

Digital zoom


If the zoom indicator is in the digital range, your camera is using the digital zoom. The picture quality may deteriorate when you use the digital zoom. By using both the optical zoom and digital zoom, you can zoom in up to 15 times.

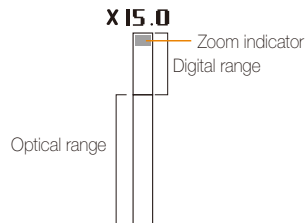

- The digital zoom is not available when you use the (in some scenes) and modes.
- It may take longer to save a photo when you are using the digital zoom.

Intelli zoom

If the zoom indicator is in the Intelli range, your camera is using the Intelli zoom. Photo resolution varies according to the zoom rate if you use the Intelli zoom. By using both the optical zoom and Intelli zoom, you can zoom in up to 10 times.

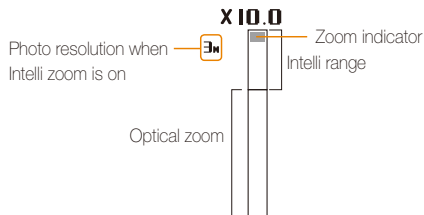

- The Intelli zoom is available only in and (in some scenes) modes.
- The Intelli zoom is available only when you set a 4:3 resolution ratio. If you set another resolution ratio with Intelli zoom on, the Intelli zoom will be turned off automatically.
- Intelli zoom helps you capture a photo with less quality deterioration than the digital zoom. However, the photo quality may be lower than when you use the optical zoom.


Setting Intelli zoom

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Intelli Zoom** → an option.

Options	Description
	Off: Deactivate the Intelli zoom.
	On: Activate the Intelli zoom.


Tips for getting a clearer photo

☺ Holding your camera correctly

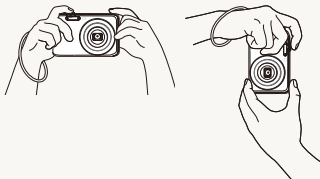


Make sure nothing is blocking the lens.

☺ Half-pressing the shutter button

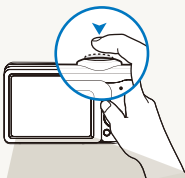

Half-press **[Shutter]** and adjust the focus. The camera adjusts the focus and exposure automatically.

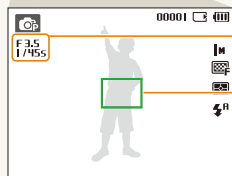


The camera sets the aperture value and shutter speed automatically.

Focus frame


- Press **[Shutter]** to take the photo if the focus frame appears in green.
- Change the frame and half-press **[Shutter]** again if it appears in red.

☺ Reducing camera shake



- Select the  mode to reduce camera shake digitally. (p. 31)

☺ When is displayed

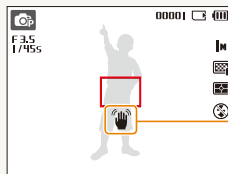

Camera shake

When shooting in the dark, avoid setting the flash option to **Slow Sync** or **Off**. The aperture remains open longer and it may be harder to hold the camera still.

- Use a tripod or set the flash option to **Fill in**. (p. 40)
- Set ISO speed options. (p. 40)

Preventing your subject from being out of focus

It may be difficult to get your subject in focus when:

- there is little contrast between the subject and background
(When your subject is wearing clothing that is similar in color to the background)
- the light source behind the subject is too bright
- the subject is shiny
- the subject includes horizontal patterns, such as blinds
- the subject is not positioned in the center of the frame



Use the focus lock

Half-press **[Shutter]** to focus. When the subject is in focus, you can reposition the frame to change the composition.

When you are ready, press **[Shutter]** to take your photo.




- When you take photos in low light



Turn on the flash.
(p. 39)

- When subjects are moving fast

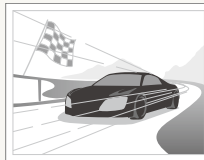

Use the continuous
or motion capture
function. (p. 49)

Extended functions

Learn how to take a photo by selecting a mode and how to record a video or voice memo.

Shooting modes	28
Using the Smart Auto mode	28
Using the Photo Help Guide mode	29
Using the Scene mode	30
Using the Beauty Shot mode	30
Using the DIS mode	31
Using the Program mode	32
Recording a video	32
Recording voice memos	34
Recording a voice memo	34
Adding a voice memo to a photo	34

Shooting modes

Take photos or record videos by selecting the best shooting mode for the conditions.

Using the Smart Auto mode


In this mode, your camera automatically chooses the appropriate camera settings based on the type of scene it detects. Smart Auto Mode is helpful if you are not familiar with the camera settings for various scenes.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Mode** → **Smart Auto**.



Press [**SMART**] to go to  mode directly.

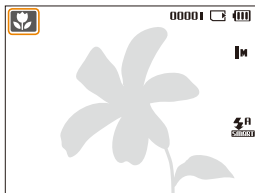

- 3 Align your subject in the frame.
 - The camera selects a scene automatically. An appropriate scene mode icon appears at the top left of the screen. The icons are listed below.



Icon	Description
	Appears when taking photos of landscapes.
	Appears when taking photos with bright white backgrounds.
	Appears when taking photos of landscapes at night. This is available only when the flash is off.
	Appears when taking portraits at night.
	Appears when taking photos of landscapes with backlighting.
	Appears when taking portraits with backlighting.
	Appears when taking portraits.
	Appears when taking close-up photos of objects.
	Appears when taking close-up photos of text.
	Appears when taking photos of sunsets.
	Appears when taking photos of clear skies.
	Appears when taking photos of forested areas.
	Appears when taking close-up photos of colorful subjects.
	Appears when the camera is stable (on a tripod, for example) and the subject is motionless for a period of time. This is available only when you are shooting in the dark.
	Appears when taking photos of actively moving subjects.
	Appears when taking photos of fireworks. This is available only when you use a tripod.

- 4 Half-press [**Shutter**] to focus.
- 5 Press [**Shutter**] to take the photo.



- If the camera does not recognize a proper scene mode,  appears and the camera uses default settings.
- Even if it detects a face, the camera may not select a portrait mode depending on the subject's position or lighting.
- The camera may not select the correct scene depending on the shooting conditions, such as camera shake, lighting, and distance to the subject.
- Even if you use a tripod, the camera may not detect the  mode depending on the subject's movement.

Using the Photo Help Guide mode

Helps the user learn the correct picture taking method and includes solutions for potential problems that may occur. This also enables the user to practice the best way to take the pictures.


- 1 In Shooting mode, press [**MENU**].
- 2 Select **Mode** → **Photo Help Guide**.
- 3 Select the options you need.



Using the Scene mode

Take a photo with options preset for a specific scene.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Mode** → **Scene** → a scene.

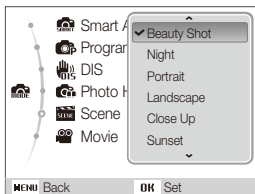


- To change the scene mode, press [**MENU**], and then select **Mode** → **Scene** → a scene.
 - For the Beauty Shot mode, see "Using the Beauty Shot mode" on page 30.
- 3 Align your subject in the frame, and then half-press [**Shutter**] to focus.
 - 4 Press [**Shutter**] to take the photo.

Using the Beauty Shot mode


Take a photo of a person with options to hide facial imperfections.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Mode** → **Scene** → **Beauty Shot**.
- 3 To make the subject's skin tone appear lighter (face only), press [**MENU**], and then go to Step 4. To hide facial imperfections, press [**MENU**], and then go to Step 5.
- 4 Select **Shooting** → **Face Tone** → an option.
 - Select a higher setting to make skin tone appear lighter.

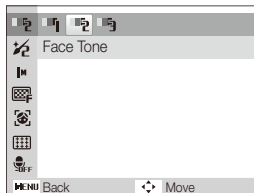

5 Select **Shooting** → **Face Retouch** → an option.

- Select a higher setting to hide a greater number of imperfections.

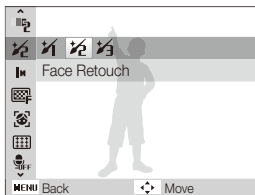

6 Align your subject in the frame, and then half-press [**Shutter**] to focus.


7 Press [**Shutter**] to take the photo.



The focus distance will be set to **Auto Macro**.

Using the DIS mode

Reduce camera shake and prevent blurred photos with Digital Image Stabilization functions.

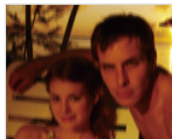

Before correction



After correction

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Mode** → **DIS**.
- 3 Align your subject in the frame, and then half-press [**Shutter**] to focus.
- 4 Press [**Shutter**] to take the photo.




- The digital zoom does not work in this mode.
- If your subject is moving rapidly, the photo may be blurry.
- The DIS function may not work in a place where the lighting is brighter than that of a fluorescent lamp.

Using the Program mode

In the Program mode, you can set various options except the shutter speed and aperture value, which the camera sets automatically.

1 In Shooting mode, press **[MENU]**.

2 Select **Mode** → **Program**.

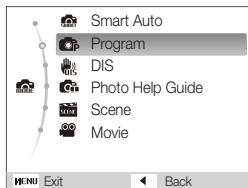

3 Set options.

(For a list of options, refer to “Shooting options.”)

4 Align your subject in the frame, and then half-press **[Shutter]** to focus.

5 Press **[Shutter]** to take the photo.

Recording a video

You can record videos of up to 4 GB or 2 hours each. The recorded video is saved as an MJPEG file.



- Some memory cards may not support high definition recording. If this occurs, set a lower resolution. (p. 36)

1 In Shooting mode, press **[MENU]**.

2 Select **Mode** → **Movie**.

3 Press **[MENU]**.




4 Select **Movie** → **Frame Rate** → a frame rate (the number of frames per second).

- As the frame rate increases, action appears more natural, but the file size also increases.



- The zoom ratio and angle of view might decrease when shooting video.

- 5 Press [**MENU**].
- 6 Select **Movie** → **Voice** → a sound option.


Option	Description
	On: Record a video with sound.
	Off: Record a video without sound.
	Zoom Mute: The camera stops recording sound temporarily when you use the zoom.

- 7 Set other options as desired.
(For options, refer to “Shooting options.”)
- 8 Press [**Shutter**] to start recording.
- 9 Press [**Shutter**] again to stop recording.

To pause recording

The camera allows you to pause a video temporarily while recording. With this function, you can record several scenes as a single video.

Press [**OK**] to pause while recording. Press it again to resume.

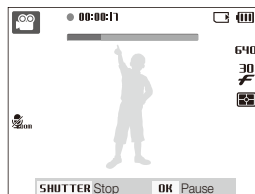

Recording voice memos



Learn how to record a voice memo that you can play back at any time. You can add a voice memo to a photo as a short reminder of shooting conditions.



You will get the best sound quality when recording 16 inches (40 cm.) away from the camera.

Recording a voice memo

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Voice** → **Record**.
- 3 Press [**Shutter**] to record.
 - You can record voice memos of up to 10 hours in length.
 - Press [**OK**] to pause or resume recording.



- 4 Press [**Shutter**] to stop.
 - Press [**Shutter**] again to record a new voice memo.
- 5 Press [**MENU**] to switch to Shooting mode.

Adding a voice memo to a photo

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Voice** → **Memo**.
- 3 Align your subject in the frame, and then take a photo.
- 4 Record a short voice memo (10 seconds maximum).
 - Begin recording the voice memo right after taking the photo.
 - Press [**Shutter**] to stop recording a voice memo before the 10 seconds are up.



You cannot add voice memos to photos in the burst mode.

Shooting options

Learn about the options you can set in shooting mode.

Selecting a resolution and quality	36	Adjusting brightness and color	46
Selecting a resolution	36	Adjusting the exposure manually (EV)	46
Selecting image quality	36	Compensating for backlighting (ACB)	46
Using the timer	37	Changing the metering option	47
Shooting in the dark	39	Selecting a light source (White balance)	47
Preventing red-eye	39	Using burst modes	49
Using the flash	39	Improving your photos	50
Adjusting the ISO speed	40	Applying filter effects	50
Changing the camera's focus	41	Adjusting your photos	51
Using macro	41		
Using auto focus	41		
Adjusting the focus area	42		
Using face detection	43		
Detecting faces	43		
Taking a self-portrait shot	44		
Taking a smile shot	44		
Detecting eye blinking	45		

Selecting a resolution and quality










Learn how to change the image resolution and quality settings.

Selecting a resolution


As you increase the resolution, your photo or video will include more pixels, so it can be printed on larger paper or displayed on a larger screen. When you use a high resolution, the file size also increases.

When taking a photo:

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Photo Size** → an option.

Option	Description
	4320 X 3240: Print on A1 paper.
	4320 X 2880: Print on A1 paper in wide ratio (3:2).
	4000 X 3000: Print on A1 paper.
	4320 X 2432: Print on A2 paper in panorama ratio (16:9) or play back on an HDTV.
	3264 X 2448: Print on A3 paper.
	2592 X 1944: Print on A4 paper.
	1984 X 1488: Print on A5 paper.
	1920 X 1080: Print on A5 paper in panorama ratio (16:9) or play back on an HDTV.
	1024 X 768: Attach to email.

When recording a video:




- 1 In the  mode, press **[MENU]**.
- 2 Select **Movie** → **Movie Size** → an option.

Option	Description
	1280 X 720: For play back on an HDTV.
	640 X 480: For play back on a standard, analog TV.
	320 X 240: To post on a web page.

Selecting image quality

The camera compresses and saves the photos you take in JPEG format. Higher quality images result in larger file sizes.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Quality** → an option.

Option	Description
	Super Fine
	Fine
	Normal


The options may differ depending on the shooting mode.

Using the timer



Learn how to set the timer to delay shooting.

1 In Shooting mode, press [ON].

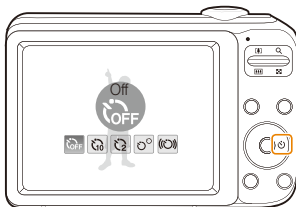

2 Select an option.

Option	Description
	Off: The timer is not active.
	10 Sec: Takes a photo in 10 seconds.
	2 Sec: Takes a photo in 2 seconds.
	Double: Takes a photo in 10 seconds, and then takes another 2 seconds later.
	Motion Timer: Detects your movement, and then takes a photo. (p. 38)

The options may differ depending on the shooting mode.

3 Press [Shutter] to start the timer.


- The AF-assist light/timer lamp blinks. The camera automatically takes a photo at the specified time.



- Press [ON] to cancel the timer.
- Depending on the face detection option you have selected, the timer function or some timer options may not be available.
- When you set burst options, you cannot use the timer function.

Using the motion timer


- 1 In Shooting mode, press [ⓘ].
- 2 Select (C).
- 3 Press [Shutter].
- 4 Stand within 10 ft. (3 m) of the camera within 6 seconds after pressing [Shutter].
- 5 Make a motion, such as waving your arms, to activate the timer.
 - The AF-assist light/timer lamp starts to blink rapidly when the camera detects you.

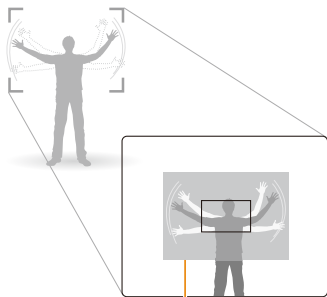

The detection range of the motion timer

- 6 Pose for your photo while the AF-assist light/timer lamp is blinking.

- The AF-assist light/timer lamp stops blinking just before the camera automatically takes a photo.

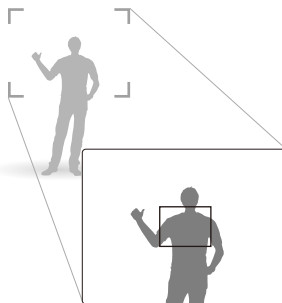

The motion timer may not work when:

- you are more than 10 ft. (3 m) away from the camera
- your movements are too subtle
- there is too much light or backlight

Shooting in the dark

Learn how to take photos at night or in low light conditions.


Preventing red-eye


If the flash fires when you take a photo of a person in the dark, a red glow may appear in the person's eyes. To prevent this, select **Red-eye** or **Red-eye Fix**. Refer to flash options in "Using the flash."






Using the flash



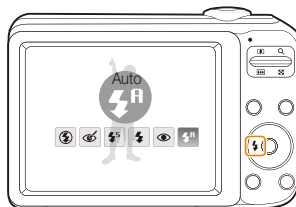


Use the flash when taking photos in the dark or when you need more light in your photos.

1 In Shooting mode, press [].



2 Select an option.

Option	Description
	Off: <ul style="list-style-type: none">The flash does not fire.The camera displays the camera shake warning () when you are shooting in low light.
	Auto: The camera selects a proper flash setting for the scene it detects in the  mode.

Option	Description
	<p>Red-eye Fix*:</p> <ul style="list-style-type: none"> The flash fires twice when the subject or background is dark. The subject should not move until the flash fires a second time. The camera corrects red-eyes through its advanced software analysis.
	<p>Slow Sync:</p> <ul style="list-style-type: none"> The flash fires and the shutter stays open longer. Select this when you want to capture ambient light to reveal more details in the background. Use a tripod to prevent your photos from blurring.
	<p>Fill in:</p> <ul style="list-style-type: none"> The flash always fires. The camera adjusts light intensity automatically.
	<p>Red-eye*:</p> <ul style="list-style-type: none"> The flash fires twice when the subject or background is dark. The camera reduces red-eyes.
	<p>Auto: The flash fires automatically when the subject or background is dark.</p>

The options may differ depending on the shooting mode.


* There is an interval between two bursts of the flash. Do not move until the flash fires a second time.



- Flash options are not available if you set burst options or select **Blink Detection**.
- Make sure that your subjects are within the recommended distance from the flash. (p. 93)
- If light from the flash is reflected or there is a large amount of dust in the air, tiny spots may appear in your photo.

Adjusting the ISO speed

The ISO speed is the measure of a film's sensitivity to light as defined by the International Organization for Standardization (ISO). The higher ISO speed you select, the more sensitive to light your camera becomes. With a higher ISO speed, you can get a better photo without using the flash.

- In Shooting mode, press **[MENU]**.
- Select **Shooting** → **ISO** → an option.
 - Select  to use an appropriate ISO speed based on the brightness of the subject and lighting.



- The higher ISO speed you select, the more image noise you may get.
- When you select **Motion Capture**, the camera sets the ISO speed to **Auto**.

Changing the camera's focus

Learn how to adjust the camera's focus.

Using macro


Use macro to take close-up photos of subjects, such as flowers or insects. Refer to macro options in "Using auto focus."




- Try to hold the camera very still to prevent blurry photos.
- Turn off the flash if the distance to the subject is less than 15.7 in. (40 cm).




Using auto focus

To take sharp photos, select the appropriate focus according to your distance from the subject.

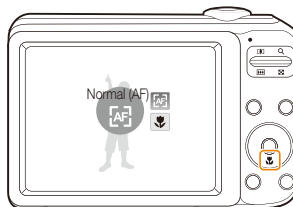1 In Shooting mode, press .



2 Select an option.



Option	Description
	Normal (AF): Focus on a subject farther than 31.5 in. (80 cm) from the camera. Farther than 39 in. (1 m) when using the zoom.
	Macro: Focus on a subject 2 to 31.5 in. (5 - 80 cm) from the camera.
	Auto Macro: Focus on a subject farther than 2 in. (5 cm). Farther than 39 in. (1 m) when using the zoom.

The options may differ depending on the shooting mode.

Adjusting the focus area

You can get clearer photos by selecting an appropriate focus area according to your subject's location in the scene.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Focus Area** → an option.

Option	Description
	Center AF: Focus on the center. Suitable when subjects are located in the center.
	Multi AF: Focus on one or more of 9 possible areas.

The options may differ depending on the shooting mode.

Using face detection




If you use face detection options, your camera can automatically detect a human face. When you focus on a human face, the camera adjusts the exposure automatically. Take photos quickly and easily by using **Blink Detection** to detect closed eyes or **Smile Shot** to capture a smiling face.



- In some scene modes, face detection is unavailable.
- Face detection may not be effective when:
 - the subject is far from the camera (The focus frame will appear orange for **Smile Shot** and **Blink Detection**.)
 - it is too bright or too dark
 - the subject is not facing the camera
 - the subject is wearing sunglasses or a mask
 - the subject is backlit or the lighting condition is unstable
 - the subject's facial expression changes remarkably
- Face detection is not available when using a smart filter or image adjustment option.
- Depending on the face detection option you selected, the timer or some timer options are not available.
- Depending on the face detection option you selected, some burst options are not available.

Detecting faces

Your camera automatically detects human faces (up to 10 faces in one scene).

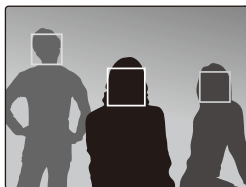

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Face Detection** → **Normal**.
 - The nearest face appears in a white focus frame and the rest of the faces appear in gray focus frames.



- The closer you are to the subject, the quicker your camera detects faces.

Taking a self-portrait shot

Take photos of yourself. The camera automatically sets the photo distance to close-up and emits a beep when ready.



A beeping sound will start and increase in frequency as the face comes into focus.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Face Detection** → **Self-Portrait**.
- 3 When you hear a beep, press [**Shutter**].



- The beeps will not be heard if the **Volume** is set to **Off** in the camera settings menu.(p. 75)

Taking a smile shot

The camera automatically releases the shutter when it detects a smiling face.



- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Face Detection** → **Smile Shot**.
 - When your subject smiles broadly, your camera can detect the smile more easily.

Detecting eye blinking

If your camera detects closed eyes, it automatically takes two photos in succession.



1 In Shooting mode, press **[MENU]**.

2 Select **Shooting** → **Face Detection** → **Blink Detection**.



- Hold your camera still while **"Capturing"** is displayed on the screen.
- When blink detection fails, the **"Picture taken with eyes closed."** message appears. Take another photo.

Adjusting brightness and color

Learn how to adjust the brightness and color for better image quality.

Adjusting the exposure manually

(EV)   

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.



Darker (-)



Neutral (0)



Brighter (+)

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **EV**.
- 3 Select a value to adjust the exposure.



- Once you adjust the exposure, the setting will remain the same. You may need to change the exposure value later to avoid overexposure or underexposure.
- If you cannot decide on an appropriate exposure, select **AEB** (Auto Exposure Bracket). The camera takes three photos, each with a different exposure: normal, underexposed, and overexposed. (p. 49)

Compensating for backlighting (ACB)

When the light source is behind your subject or there is high contrast between your subject and the background, your subject is likely to appear dark in the photo. If this occurs, turn the Auto Contrast Balance (ACB) option on.



Without ACB



With ACB

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **ACB** → an option.

Option	Description
 Off	Off: ACB is off.
 On	On: ACB is on.






- The ACB feature is not available when you set **Continuous**, **Motion Capture**, or **AEB** options.

Changing the metering option

The metering mode refers to the way in which a camera measures the quantity of light. The brightness and lighting of your photos will vary depending on the metering mode you select.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Metering** → an option.

Option	Description
	<p>Multi:</p> <ul style="list-style-type: none"> • Your camera divides the scene into several areas, and then measures the light intensity of each area. • Suitable for general photos.
	<p>Spot:</p> <ul style="list-style-type: none"> • Your camera measures only the light intensity of the very center of the frame. • If a subject is not in the center of the scene, your photo may be improperly exposed. • Suitable for a subject with backlighting.
	<p>Center-weighted:</p> <ul style="list-style-type: none"> • Your camera averages the meter reading of the entire frame with emphasis placed on the center. • Suitable for photos with subjects in the center of the frame.

Selecting a light source (White balance)

The color of your photo depends on the type and quality of the light source. If you want the color of your photo to be realistic, select a white balance setting that matches the lighting conditions, such as Daylight, Cloudy, or Tungsten.



 (Auto WB)



 (Daylight)










 (Cloudy)




 (Tungsten)

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **White Balance** → an option.

Icon	Description
	Auto WB: Automatically sets the white balance based on the lighting conditions.
	Daylight: Select when taking outdoor photos on a sunny day.
	Cloudy: Select when taking outdoor photos on a cloudy day or in shadows.
	Fluorescent_H: Select when shooting under a daylight fluorescent or three-way fluorescent light.
	Fluorescent_L: Select when shooting under white fluorescent light.
	Tungsten: Select when taking indoor photos under incandescent bulbs or halogen lamps.
	Measure: Shutter: Use white balance settings you defined. (See procedure at right.)

Defining your own white balance

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **White Balance** → **Measure: Shutter**.
- 3 Aim the lens at a piece of white paper.

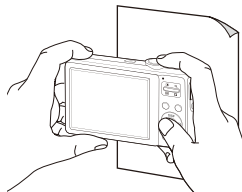

- 4 Press **[Shutter]**.





Using burst modes

It can be difficult to take photos of fast-moving subjects or capture natural facial expressions and gestures of your subjects in photos. In these cases, select one of the burst modes to take multiple pictures rapidly.



- You can use the flash, timer, and ACB only when you select **Single**.
- When you select **Motion Capture**, the resolution is set to VGA and the ISO speed is set to **Auto**.
- Depending on the face detection option you selected, some burst options are not available.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Drive** → an option.

Option	Description
	Single: Take a single photo.
	Continuous: <ul style="list-style-type: none">• While you are pressing [Shutter], the camera takes photos continuously.• The maximum number of photos depends on the capacity of your memory card.
	Motion Capture: <ul style="list-style-type: none">• While you are pressing [Shutter], the camera takes VGA photos (6 photos per second; maximum of 30 photos).
	AEB: <ul style="list-style-type: none">• Take 3 photos with different exposures: normal, underexposed, and overexposed.• Use a tripod to prevent blurry photos.

The options may differ depending on the shooting mode.

Improving your photos

Learn how to improve your photos by applying smart filter effects, or by making some adjustments.

Applying filter effects

Apply various filter effects to your photos to create unique images.



Vivid



Retro



Cool


- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Smart Filter** → an option.
 - Select **Custom RGB** to define your own RGB tone.



- If you use this function, you cannot set face detection and image adjustment options.

Defining your own RGB tone

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Smart Filter** → **Custom RGB**.
- 3 Select a color (R: Red, G: Green, B: Blue).

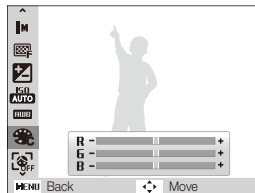

- 4 Adjust the amount of the selected color.
(-: less or +: more)

Adjusting your photos

Adjust the contrast, sharpness, and saturation of your photos.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Image Adjust**.
- 3 Select an adjustment option.
 - Contrast
 - Sharpness
 - Saturation
- 4 Select a value to adjust the selected item.

Contrast option	Description
-	Decrease the color and brightness.
+	Increase the color and brightness.

Sharpness option	Description
-	Soften the edges on your photos. Suitable for editing the photos on your computer.
+	Sharpen the edges to improve the clarity of your photos. This may also increase the noise on your photos.

Saturation option	Description
-	Decrease the saturation.
+	Increase the saturation.



- Select **0** if you do not want to apply any effects (suitable for printing).
- If you set an Image Adjust option, Smart Filter function is not available.

Playback/Editing

Learn how to play back photos, videos, or voice memos and edit photos or videos. You will also learn how to connect your camera to your photo printer or TV.

Playing back	53	Transferring files to your Windows	
Starting Playback mode	53	computer	65
Viewing photos	57	Transferring files using Intelli-studio	67
Playing a video	58	Transferring files by connecting the camera	
Playing voice memos	59	as a removable disk	69
Editing a photo	60	Disconnecting the camera	
Resizing photos	60	(for Windows XP)	70
Rotating a photo	60	Transferring files to your Mac computer ...	71
Applying smart effects	61	Printing photos with a PictBridge photo	
Correcting exposure problems	62	printer	72
Creating a print order (DPOF)	63		
Viewing files on a TV	64		

Playing back

Learn to play back photos, videos, or voice memos, and manage files.

Starting Playback mode


View photos or play videos and voice memos stored in your camera.

- 1 Press [▶].
 - The most recent file you have taken or recorded is displayed.
 - If the camera is off, it will turn on.
- 2 Press [⚡] or [😊] to scroll through files.
 - Press and hold to scroll through files quickly.



- If you want to play videos and voice memos stored in your camera, please turn off camera and remove your memory card, and then turn on the camera into playback mode to play.
- The camera will not properly play back files that are too large or those taken with cameras from other manufacturers.

Display in Playback mode

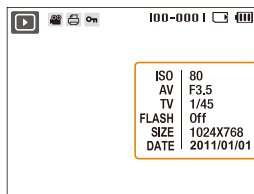

Information

Icon	Description
	Photo includes a voice memo
	Video file
	Print order has been set (DPOF)
	Protected file
100-0001	Folder name – File name




- If you want to view the file information, press the [DISP] button.

Viewing files by category in Smart Album

View and manage files by categories, such as date, file type, or week.

- 1 In Playback mode, push **[Zoom]** down.
- 2 Press **[MENU]**.
- 3 Select a category.

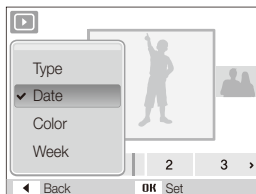

Option	Description
Type	View files by file type.
Date	View files by the date they were saved.
Color	View files by the dominant color of the image.
Week	View files by the weekday they were saved.



It may take some time for the camera to open Smart Album or to change the category and recognize files.


- 4 Press **[⏪]** or **[⏩]** to scroll through files.
 - Press and hold to scroll through files quickly.
- 5 Press **[OK]** to return to the normal view.

Viewing files as thumbnails

Scan thumbnails of files.



In Playback mode, push **[Zoom]** down to display 9 or 20 thumbnails (push **[Zoom]** up to return to the previous mode).

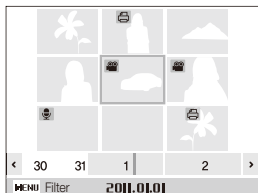


To	Do this
Scroll through files	Press [DISP] , [L] , [R] or [C] .
Delete files	Press [Fn] , and then select Yes .

Protecting files

Protect your files from accidental deletion.

- 1 In Playback mode, press **[MENU]**.
- 2 Select **File Options** → **Protect** → **Select**.
- 3 To protect all files, select **All** → **Lock**.
- 4 To protect a single file, select the file you want to protect, and then press **[OK]**.
 - Press **[OK]** again to cancel your selection.

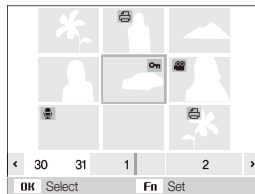

- 5 Repeat Step 4 to protect additional files individually.
- 6 Press **[Fn]**.

Deleting files

Delete single files or all files at once. You cannot delete protected files.

To delete a single file,

- 1 In Playback mode, select a file, and then press [**Fn**].
- 2 Select **Yes** to delete the file.

To delete multiple files,

- 1 In Playback mode, press [**Fn**].
- 2 Select **Multiple Delete**.
- 3 Select the files you want to delete, and then press [**OK**].
 - Press [**OK**] again to cancel your selection.
- 4 Press [**Fn**].
- 5 Select **Yes**.

To delete all files,

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **Delete** → **All** → **Yes**.

Viewing photos


Zoom in on part of a photo or view photos in a slide show.

Enlarging a photo



In Playback mode, push **[Zoom]** up to enlarge a photo (push **[Zoom]** down to reduce a photo).

The enlarged area and zoom ratio are indicated on the top of the screen. The maximum zoom ratio may vary depending on the resolution.

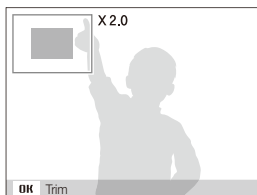

To	Do this
Move the enlarged area	Press [DISP] , [M] , [L] or [R] .
Trim the enlarged photo	Press [OK] . The trimmed photo is saved as a new file.

Starting a slide show

You can apply effects and add audio to your slide show.

- 1 In Playback mode, press **[MENU]**.
- 2 Select **Multi Slide Show**.
- 3 Select a slide show effect option.
 - Skip to step 5 to start a slide show with no effects.

Option	Description
Images	Select the photos you want to view as a slide show. <ul style="list-style-type: none"> • All: View all photos in a slide show. • Date: View photos captured on a specific date in a slide show. • Select: View selected photos in a slide show.
Effect	<ul style="list-style-type: none"> • Select a transition effect. • Select Off for no effects.
Interval	<ul style="list-style-type: none"> • Set the interval between photos. • This is available when you select Off in the Effect option. See below.
Music	Select a background audio.

4 Set the slide show effect.

5 Select **Start** → **Play**.

- To loop the slide show, select **Repeat**.
- Press [**OK**] to pause or resume the slide show.




To stop the slide show and switch to Playback mode, press [**OK**], and then [**⏮**] or [**⏭**].

Playing a video

You can play a video or capture an image from a video.

1 In Playback mode, select a video, and then press [**OK**].

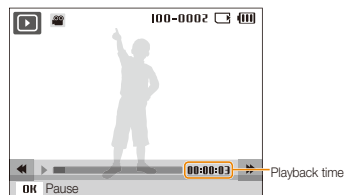

2 Use the following buttons to control playback.

Press	To
[⏮]	Scan backward.
[OK]	Pause or resume playback.
[⏭]	Scan forward.

Capturing an image during playback

- 1 Press **[OK]** at the point where you want to save a still image.
- 2 Press **[📷]**.



A captured image has the same resolution as the original video file and is saved as a new file.

Playing voice memos

Playing a voice memo

- 1 In Playback mode, select a voice memo, and then press **[OK]**.
- 2 Use the following buttons to control playback.

Press	To
[⏮]	Scan backward.
[OK]	Pause or resume playback.
[⏭]	Scan forward.
[📷]	Stop playback.

Adding a voice memo to a photo

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **File Options** → **Voice memo** → **On**.
- 3 Press **[Shutter]** to record a short voice memo (10 seconds maximum).
 - Press **[Shutter]** to stop recording a voice memo.



You cannot add a voice memo to protected files.

Playing a voice memo added to a photo

In Playback mode, select a photo that includes a voice memo, and then press **[OK]**.

- Press **[OK]** to pause or resume playback.

Editing a photo


Perform photo editing tasks, such as resizing, rotating, eliminating red-eyes, and adjusting brightness, contrast, or saturation.



The camera saves edited photos as new files.

Resizing photos


- 1 In Playback mode, select a photo, and then press [MENU].
- 2 Select **Edit** → **Resize** → an option.
 - Select to save the photo as a start image. (p. 75)

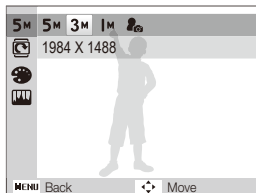

Available options differ depending on the size of the selected photo.

Rotating a photo

- 1 In Playback mode, select a photo, and then press [MENU].
- 2 Select **Edit** → **Rotate** → an option.

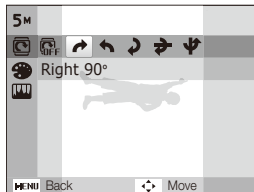

Applying smart effects

Apply various filter effects to your photos to create unique images.

The edited photo will be saved as a new file but it could be resized to a lower resolution.



Miniature




Fish-eye




Vignetting

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Smart Filter** → an option.
- 3 Select **Custom RGB** to define your own RGB tone.

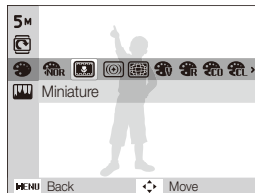

Defining your own RGB tone

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Smart Filter** → **Custom RGB**.
- 3 Select a color (R: Red, G: Green, B: Blue).

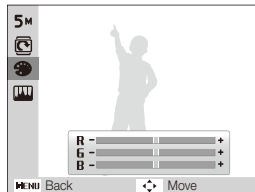

- 4 Adjust the amount of the selected color.
(-: less or +: more)

Correcting exposure problems

Adjust ACB (Auto Contrast Balance), brightness, contrast, or saturation; remove red-eye; hide facial imperfections; or add noise to the photo.

Adjusting ACB (Auto Contrast Balance)

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **ACB**.

Removing red-eye




- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Red-eye Fix**.

Hiding facial imperfections

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Face Retouch**.

- 3 Select a level.
 - As the number increases, the face becomes clearer.

Adjusting brightness/contrast/saturation

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust**.
- 3 Select an adjustment option.
 - : Brightness
 - : Contrast
 - : Saturation
- 4 Select a value to adjust the selected item.
(-: less or +: more)

Adding noise to the photo

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Add Noise**.

Creating a print order (DPOF)


Select photos to be printed and set options, such as the number of copies or paper size.



- You can take the memory card to a print shop that supports DPOF (Digital Print Order Format) or you can print photos directly through a DPOF-compatible printer at home.
- Wide photos may print with the left and right edges cut off, so be aware of the dimensions of your photos.
- You cannot set the DPOF for the photos stored in the internal memory.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **DPOF** → **Standard** → an option.

Option	Description
Select	Print the selected photos.
All	Print all photos.
Reset	Reset to the default settings.

- 3 If you select **Select**, scroll to a photo, and then push [**Zoom**] up or down to select the number of copies. Repeat for the photos you want to print, and then press [**Fn**].
 - If you select **All**, press [**DISP**] or [OK].

- 4 Press [**MENU**].
- 5 Select **File Options** → **DPOF** → **Size** → an option.

Option	Description
Select	Specify the print size for the selected photo.
All	Specify the print size for all photos.
Reset	Reset to the default settings.

- 6 If you select **Select**, scroll to a photo, and then push [**Zoom**] up or down to select the print size. Repeat for the photos you want to print, and then press [**Fn**].
 - If you select **All**, press [**DISP**] or [OK].

Printing photos as thumbnails

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **DPOF** → **Index** → **Yes**.




If you specify the print size, you can print photos only with DPOF 1.1-compatible printers.

Viewing files on a TV

Play back photos or videos by connecting your camera to a TV using the A/V cable.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Settings** → **Video Out**.
- 3 Select a video signal output according to your country or region.
- 4 Turn off your camera and TV.
- 5 Connect your camera to your TV using the A/V cable.

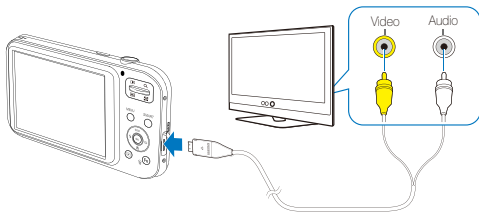

- 6 Turn on your TV, and then select the video output mode using the TV remote control.
- 7 Turn on your camera, and then press **[▶]**.

- 8 View photos or play videos using the buttons on your camera.



- On some TVs, digital noise may occur or part of an image may not appear.
- Images may not appear centered on the TV screen depending on your TV settings.
- You can capture photos or videos while the camera is connected to a TV.

Transferring files to your Windows computer

Transfer files by connecting your camera to your Windows PC.

Requirements for Intelli-studio

Item	Requirements
CPU	Intel Pentium 4, 3.2 GHz or higher/ AMD Athlon™ FX 2.6 GHz or higher
RAM	Minimum 512 MB RAM (1 GB and above recommended)
OS	Windows XP SP2/Vista/7
Hard disk capacity	250 MB or more (1 GB or more recommended)
Others	<ul style="list-style-type: none">• CD-ROM drive• nVIDIA Geforce 7600GT or higher/ATI X1600 series or higher• 1024 x 768 pixels, 16-bit color display compatible monitor (1280 x 1024 pixels, 32-bit color display recommended)• USB port, Microsoft DirectX 9.0c or later

* The programs may not work properly on 64-bit Edition of Windows XP, Vista and 7.




- Intelli-studio may not perform correctly on some computers, even when the computer meets the requirements.
- If your computer does not meet the requirements, videos may not play correctly or it may take longer to edit videos.
- Install DirectX 9.0c or above before you use the program.
- Your computer must have Windows XP/Vista/7 or Mac OS 10.4 or later for you to connect the camera to the computer as a removable disk.



Using a self-assembled PC or a PC and OS that are not supported may void your warranty.

Installing Intelli-studio

- 1 Insert the installation CD in a compatible CD-ROM drive.
- 2 When the setup screen appears, click **Samsung Digital Camera Installer** to start installation.

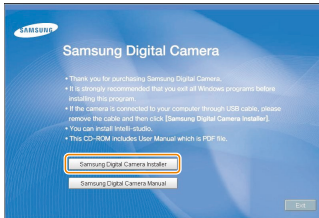

- 3 Select the programs to install, and then follow the onscreen instructions.
- 4 Click **Exit** to complete the installation, and then restart your computer.


Transferring files using Intelli-studio

You can easily transfer files on your camera to your computer by using Intelli-studio.



The battery will be charged while the camera is connected to a computer with the USB cable.

- 1 Connect the camera to your computer with the USB cable.

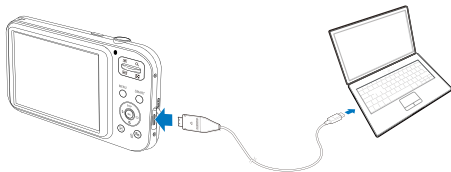

You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

- 2 Run Intelli-studio.

- 3 Turn on the camera.

- The computer recognizes the camera automatically.



If the camera fails to connect, a pop-up window will appear. Select **Computer**.

- 4 Select a folder on your computer to save new files.

- If your camera has no new files, the pop-up window for saving new files will not appear.

- 5 Select **Yes**.


- New files are transferred to the computer.

Using Intelli-studio

The Intelli-studio allows you to play back and edit files. You can also upload files to websites, such as Flickr or YouTube. For details, select **Help** → **Help** in the program.



- You cannot edit files directly on the camera. Transfer files to a folder on your computer before editing.
- You cannot copy files in your computer to the camera.
- Intelli-studio supports the following formats:
 - Videos: MP4 (Video: H.264, Audio: AAC), WMV (WMV 7/8/9), AVI (MJPEG)
 - Photos: JPG, GIF, BMP, PNG, TIFF

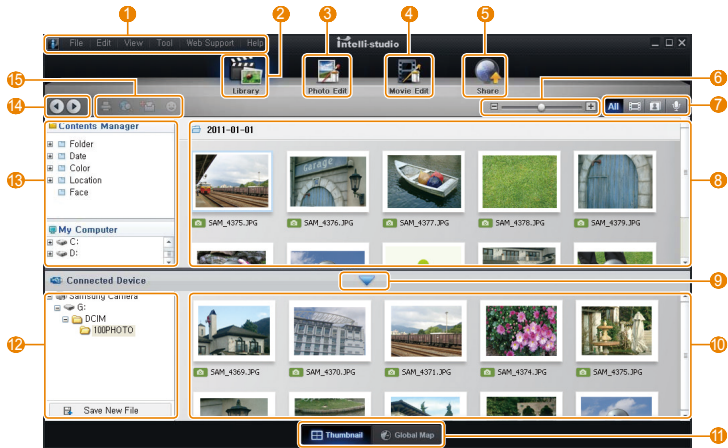

Icon	Description
1	Open menus
2	Display files in the selected folder
3	Change to the Photo edit mode
4	Change to the Video edit mode
5	Change to the Sharing mode (You can send files by email or upload files to websites, such as Flickr or YouTube.)
6	Enlarge or reduce the thumbnails in the list
7	Select a file type
8	View files of the selected folder on your computer
9	Show or hide files of the connected camera
10	View files of the selected folder on the camera
11	View files as thumbnails or on a map
12	Browse folders in the connected device
13	Browse folders in your computer
14	Move to the previous or next folder
15	Print files, view files on a map, store files in My Folder, or register faces


Transferring files by connecting the camera as a removable disk

You can connect the camera to your computer as a removable disk.

- 1 Connect the camera to your computer with the USB cable.



You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

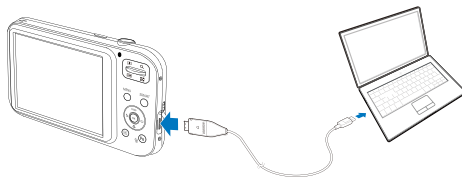

- 2 Turn on the camera.
 - The computer recognizes the camera automatically.




If the camera fails to connect, a pop-up window will appear.
Select **Computer**.

- 3 On your computer, select **My Computer** → **Removable Disk** → **DCIM** → **100PHOTO**.
- 4 Select the files you want and drag or save them to your computer.

Disconnecting the camera (for Windows XP)

The way to disconnect the USB cable for Windows Vista/7 is similar.

- 1 If the status lamp on your camera is blinking, wait until it stops.
- 2 Click  on the tool bar at the bottom right of your PC screen.



- 3 Click the pop-up message.
- 4 Remove the USB cable.



The camera may not be removed safely when Intelli-studio is running.
End the program before disconnecting the camera.

Transferring files to your Mac computer

When you connect the camera to a Macintosh computer, the computer recognizes the camera automatically. You can transfer files directly from the camera to the computer without installing any programs.




Mac OS 10.4 or later is supported.

- 1 Connect your camera to a Macintosh computer with the USB cable.



You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

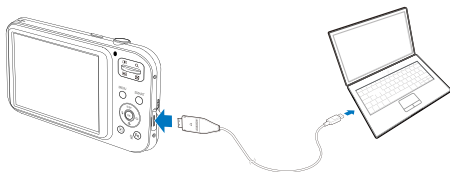

- 2 Turn on the camera.

- The computer recognizes the camera automatically and displays a removable disk icon.




If the camera fails to connect, a pop-up window will appear. Select **Computer**.

- 3 Double-click the removable disk icon.
- 4 Transfer photos or videos to the computer.

Printing photos with a PictBridge photo printer


Print photos with a PictBridge-compatible printer by connecting your camera directly to the printer.



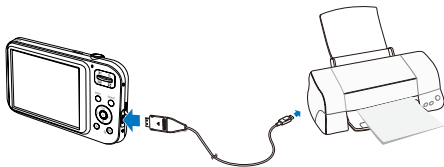



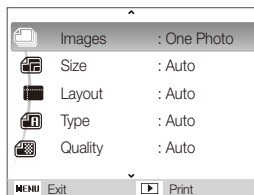

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Settings** → **USB**.
- 3 Select **Printer**.
- 4 With the printer on, connect your camera to the printer with the USB cable.



- 5 Turn on your camera.
 - The printer recognizes the camera automatically.
- 6 Press [**⚡**] or [**☺**] to select a photo.
 - Press [**MENU**] to set printing options. See "Configuring print settings."
- 7 Press [**OK**] to print.
 - Printing starts. Press [**⚡**] to cancel printing.

Configuring print settings



Option	Description
	Images: Select whether to print the current photo or all photos.
	Size: Specify the size of the print.
	Layout: Create thumbnail prints.
	Type: Select the type of paper.
	Quality: Set the printing quality.
	Date: Set to print the date.
	File Name: Set to print the name of the file.
	Reset: Reset the print options.



Some options are not supported by some printers.

Settings

Refer to options to configure your camera's settings.


Camera settings menu	74
Accessing the settings menu	74
Sound	75
Display	75
Settings	76




Camera settings menu

Learn about various options to configure your camera's settings.


Accessing the settings menu

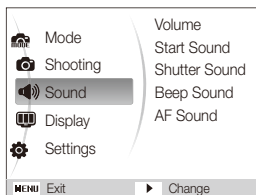- 1 In Shooting or Playback mode, press [**MENU**].
- 2 Select a menu.



Menu	Description
	Sound: Set various camera sounds and the volume. (p. 75)
	Display: Customize the display settings, such as start image and brightness. (p. 75)
	Settings: Change the settings for the camera system, such as memory format, default file name, and USB mode. (p. 76)

- 3 Select an option and save your settings.

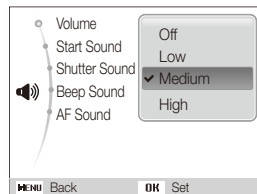

- 4 Press [**MENU**] to return to the previous screen.




Sound

* Default


Item	Description
Volume	Adjust the volume of any sound. (Off, Low, Medium*, High)
Start Sound	Select the sound the camera emits when you turn it on. (Off*, 1, 2, 3)
Shutter Sound	Select the sound the camera emits when you press the shutter button. (Off, 1*, 2, 3)
Beep Sound	Select the sound the camera emits when you press buttons or switch modes. (Off, 1*, 2, 3)
AF Sound	Select the sound the camera emits when you half-press the shutter button. (Off, On*)

Display

* Default


Item	Description
Function Description	Display a brief description of an option or menu. (Off, On*)
Start Image	<p>Set a start image to display when the camera turns on.</p> <ul style="list-style-type: none"> • Off*: Display no start image. • Logo: Display a default image stored in the internal memory. • User Image: Display the image you want. (p. 60) <p> Only one user image will be saved in the memory.</p> <p> If you select a new photo as a user image or reset your camera, the current image will be deleted.</p>
Display Brightness	<p>Adjust the brightness of the screen. (Auto*, Dark, Normal, Bright)</p> <p> Normal is fixed in Playback mode even if you have selected Auto.</p>
Quick View	Set the duration for reviewing a captured image before returning to the Shooting mode. (Off, 0.5 sec*, 1 sec, 3 sec)

* Default


Item	Description
Power Save	<p>If you perform no operations for 30 seconds, the camera automatically switches to Power save mode (press any button to deactivate the Power save mode). (Off*, On)</p> <p> If the Power save mode is deactivated, the display will dim to save battery life when you perform no operations for about 30 seconds.</p>

Settings



* Default

Item	Description
Format	<p>Format the memory card. Format deletes all files, including protected files. (Yes, No)</p> <p> If you use a memory card used with cameras from different manufacturers or a memory card reader, or one formatted on a computer, your camera may read the card incorrectly. Format the card before using it.</p>
Reset	<p>Reset menus and shooting options. Date and time, language, and video output settings are not reset. (Yes, No)</p>
Language	<p>Select a language for the display text.</p>
Time Zone	<p>Select a region and set the daylight-saving time (DST).</p>
Date/Time Set	<p>Set the date and time.</p>
Date Type	<p>Select a date format. (Off, dd/mm/yyyy, mm/dd/yyyy, yyyy/mm/dd*)</p>

* Default

Item	Description
File No.	<p>Specify how to name files.</p> <ul style="list-style-type: none"> • Reset: Set the file number to start from 0001 when inserting a new memory card, formatting a memory card, or deleting all files. • Series*: Set the file number to follow the previous file number when inserting a new memory card, formatting a memory card, or deleting all files. <p> • The default name of the first folder is 100PHOTO and the default name of the first file is SAM_0001.</p> <ul style="list-style-type: none"> • The file number increases one at a time from SAM_0001 to SAM_9999. • The folder number increases one at a time from 100PHOTO to 999PHOTO. • The maximum number of files that can be stored in one folder is 9999. • The camera defines file names according to the Digital rule for Camera File system (DCF) standard. If you change the names of files intentionally, the camera may not play back the files.

* Default

Item	Description
Imprint	<ul style="list-style-type: none"> • Select whether to display the date and time on your photos when printing. (Off, Date, Date & Time) <p> • The date and time is displayed on the bottom-right corner of the photo.</p> <ul style="list-style-type: none"> • Some printer models may not print the date and time.
Auto Power Off	<ul style="list-style-type: none"> • Set the camera to turn off automatically when you are not using it. (Off, 1 min, 3 min*, 5 min, 10 min) <p> • Your settings will not change after replacing the battery.</p> <ul style="list-style-type: none"> • The camera will not automatically turn off when: <ul style="list-style-type: none"> - it is connected to a computer or printer - you are playing a slide show or videos - you are recording a voice memo
AF Lamp	<ul style="list-style-type: none"> • Turn on an assistant light to help you focus in dark places. (Off, On*)
Video Out	<p>Set the video signal output according to your region.</p> <ul style="list-style-type: none"> • NTSC*: USA, Canada, Japan, Korea, Taiwan, Mexico. • PAL (supports only BDGHI): Australia, Austria, Belgium, China, Denmark, Finland, Germany, England, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway.

* Default

Item	Description
USB	<p>Select the function to use when you connect the camera to a computer or printer using a USB cable.</p> <ul style="list-style-type: none">• Auto*: Set your camera to select a USB mode automatically.• Computer: Connect your camera to a computer for transferring files.• Printer: Connect your camera to a printer for printing files.


Appendixes

Refer to error messages, specifications, and maintenance tips.

Error messages	80
Camera maintenance	81
Cleaning your camera	81
Using or storing the camera	82
About memory cards	84
About the battery	86
Before contacting a service center	90
Camera specifications	93
Glossary	96
FCC notice	101
Index	102

Error messages

When the following error messages appear, try these remedies.

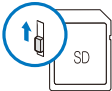
Error message	Suggested remedies
Card Error	<ul style="list-style-type: none">• Turn off your camera, and then turn it on again.• Remove your memory card, and insert it again.• Format your memory card. (p. 76)
Card Locked	Unlock the memory card.  An icon showing a blue circle with a white padlock symbol inside, overlaid on a white SD card. The card has 'SD' printed on it.
Card not supported.	The inserted memory card is not compatible with your camera. Insert an appropriate memory card.
DCF Full Error	File names do not match the DCF standard. Transfer the files on the memory card to your computer, and then format the card. (p. 76)
File Error	Delete the damaged file or contact a Samsung service center.
Low Battery	Insert a charged battery or recharge the battery.
Memory Full	Delete unnecessary files or insert a new memory card.
No Image File	Take photos or insert a memory card that has some photos.

Camera maintenance

Cleaning your camera


Camera lens and display

Use a blower brush to remove dust, and then wipe the lens gently with a soft cloth. If any dust remains, apply lens cleaning liquid to a piece of lens cleaning paper, and then wipe gently.

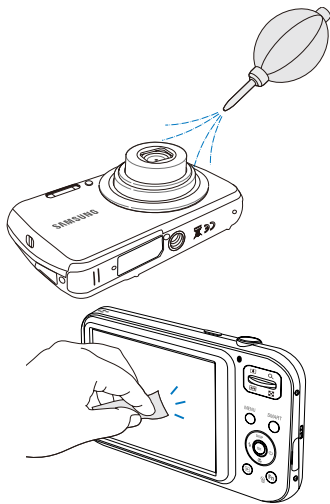

Camera body

Wipe gently with a soft, dry cloth.

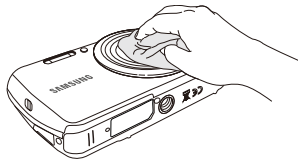

- Never use benzene, thinners, or alcohol to clean the device. These solutions can damage the camera or cause it to malfunction.
- Do not press on the lens cover or use a blower brush on the lens cover.

Using or storing the camera

Inappropriate places to use or store the camera

- Avoid exposing the camera to very cold or very hot temperatures.
- Avoid using your camera in areas with extremely high humidity, or where the humidity changes drastically.
- Avoid exposing the camera to direct sunlight and storing it in hot, poorly-ventilated areas, such as in a car during summer time.
- Protect your camera and the display from impact, rough handling, and excessive vibration to avoid serious damage.
- Avoid using or storing your camera in dusty, dirty, humid, or poorly-ventilated areas to prevent damage to moving parts and internal components.
- Do not use your camera near fuels, combustibles, or flammable chemicals. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the camera or its accessories.
- Do not store the camera where there are mothballs.

Using on beaches or shores

- Protect your camera from sand and dirt when you use it on beaches or in other similar areas.
- Your camera is not waterproof. Do not handle the battery, adapter, or memory card with wet hands. Operating the camera with wet hands may cause damage to your camera.

Storing for extended period of time

- When you store the camera for an extended period, place it in a sealed container with an absorbent material, such as silica gel.
- Remove the batteries from your camera when storing it for an extended period. Installed batteries may leak or corrode over time and cause serious damage to your camera.
- Over time, unused batteries will discharge and must be recharged before use.

Exercise caution when using the camera in humid environments

When you transfer the camera from a cold environment to a warm one, condensation can form on the lens or internal components of the camera. In this situation, turn off the camera and wait for at least 1 hour. If condensation forms on the memory card, remove the memory card from the camera and wait until all moisture has evaporated before reinserting it.


Other cautions

- Do not swing your camera by the strap. This may cause injury to yourself or others or damage to your camera.
 - Do not paint your camera, as paint can clog moving parts and prevent proper operation.
 - Turn off the camera while not in use.
 - Your camera consists of delicate parts. Avoid impacts to the camera.
 - Protect the display from external force by keeping it in the case when not in use. Protect the camera from scratches by keeping it away from sand, sharp implements, or loose change.
 - Do not expose the lens to direct sunlight, as this may discolor the image sensor or cause it to malfunction.
 - Protect your lens from fingerprints and scratches. Clean your lens with a soft, clean, debris-free lens cloth.
 - The camera may turn off if impacted from the outside. This is to protect the memory card. Turn on the camera to use it again.
 - While you use the camera, it may heat up. This is normal and should not affect your camera's lifespan or performance.
 - When you use the camera in low temperatures, it may take some time to turn on, the color may be changed temporarily, or after-images may appear. These conditions are not malfunctions and they will correct themselves when the camera is returned to normal temperatures.
- Paint or metal on the outside of the camera may cause allergies, itchy skin, eczema, or swelling for people with sensitive skin. If you have experience any of these symptoms, stop using the camera immediately and consult a doctor.
 - Do not insert foreign objects into any of your camera's compartments, slots, or access points. Damage due to improper use may not be covered by your warranty.
 - Do not allow unqualified personnel to service the camera or attempt to service the camera yourself. Any damage that results from unqualified service is not covered by your warranty.

About memory cards

Supported memory cards

Your camera supports SD (Secure Digital), or SDHC (Secure Digital High Capacity) memory cards.

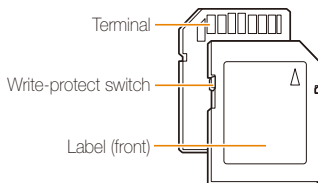

You can prevent files from being deleted by using the write-protect switch on the SD or SDHC card. Slide the switch down to lock or slide it up to unlock. Unlock the card when shooting.

Memory card capacity

The memory capacity may differ depending on the scenes you shoot or the shooting conditions. These capacities are based on a 1 GB SD card:

	Size	Super Fine	Fine	Normal	30 FPS	24 FPS	15 FPS
P h o t o s	4M	129	240	292	-	-	-
	12M	152	249	312	-	-	-
	2M	147	284	403	-	-	-
	10M	179	282	353	-	-	-
	8M	232	391	510	-	-	-
	5M	411	583	823	-	-	-
	3M	643	858	1,029	-	-	-
	2M	870	1,144	1,437	-	-	-
	1M	1,584	1,765	1,993	-	-	-
	* V i d e o s	1280	-	-	-	-	Approx. 7'16"
640		-	-	-	Approx. 9'53"	-	Approx. 18'54"
320		-	-	-	Approx. 26'19"	-	Approx. 49'15"

* Available recording time may vary if you use the zoom.

Several videos were recorded in succession to determine the total recording time.

Cautions when using memory cards

- Insert a memory card in the correct direction. Inserting a memory card in the wrong direction may damage your camera and memory card.
- Do not use memory cards that have been formatted by other cameras or by a computer. Reformat the memory card with your camera.
- Turn off the camera when you insert or remove the memory card.
- Do not remove the memory card or turn off your camera while the lamp is blinking, as this may damage your data.
- When the lifespan of a memory card has expired, you cannot store any more photos on the card. Use a new memory card.
- Do not bend, drop, or subject memory cards with heavy impact or pressure.
- Avoid using or storing memory cards near strong magnetic fields.
- Avoid using or keeping memory cards in areas with high temperature, high humidity, or corrosive substances.
- Prevent memory cards from making contact with liquids, dirt, or foreign substances. If dirty, wipe the memory card clean with a soft cloth before you insert the memory card in your camera.
- Do not allow liquids, dirt, or foreign substances to come in contact with memory cards or the memory card slot. Doing so may cause memory cards or the camera to malfunction.

- When you carry a memory card, use a case to protect the card from electrostatic discharges.
- Transfer important data to other media, such as a hard disk, CD, or DVD.
- When you use the camera for an extended period, the memory card may become warm. This is normal and does not indicate a malfunction.



The manufacturer is not responsible for any loss of data.

About the battery


Be sure to use rechargeable battery for reuse. Available batteries for this camera are listed below.

Battery specifications

Specification	Description
Model	BP70A
Type	Lithium-ion battery
Cell capacity	740 mAh (Minimum: 700 mAh)
Voltage	3.7V
Charging time* (when the camera is switched off)	Approximately 150 min

* Charging the battery by connecting it to a computer may take longer.

Battery life

Average shooting time / Number of photos		Test conditions (when the battery is fully charged)
Photos	Approximately 110 min/ Approximately 220 photos	The battery life was measured under the following conditions: in  mode, at 14M resolution, on Fine quality. <ol style="list-style-type: none"> Set the flash option to Fill in, take a single shot, and zoom in or out. Set the flash option to Off, take a single shot, and zoom in or out. Perform steps 1 and 2 for 30 seconds and repeat for 5 minutes. Then turn off the camera for 1 minute. Repeat steps 1 to 3.
Videos	Approximately 90 min	Record videos at 1280 X 720 resolution and 24 FPS.

- The figures above are based on Samsung's standards. Your results may differ depending on your actual usage.
- Several videos were recorded in succession to determine the total recording time.

Low battery message

When the battery charge has fully discharged, the battery icon will turn red and the **'Low Battery'** message will appear.

Notes about using the battery

- Avoid exposing batteries or memory cards to very cold or very hot temperatures (below 0° C/32° F or above 40° C/104° F). Extreme temperatures can reduce the charging capacity of your batteries and can cause memory cards to malfunction.
- When you use the camera for an extended period, the area around the battery chamber may become warm. This does not affect the normal use of the camera.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- In temperatures below 0 ° C, battery capacity and battery life may decrease.
- Battery capacity may decrease in low temperatures but will return to normal in milder temperatures.

Cautions about using the battery

Protect batteries, chargers, and memory cards from damage

Prevent batteries from making contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage and may cause a fire or electric shock.

Notes about charging the battery

- If the indicator light is off, make sure that the battery is inserted correctly.
- If the camera is on while charging, the battery may not fully charge. Turn off the camera before charging the battery.
- Do not use your camera when you charge the battery. This may cause a fire or electric shock.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- Wait to turn on the camera until after the battery has charged for at least 10 minutes.
- If you connect the camera to an external power source while the battery is depleted, using some high energy-consuming functions will cause the camera to turn off. To use the camera normally, recharge the battery.

- Using the flash or recording videos depletes the battery quickly. Charge the battery until the indicator light turns green.
- If the indicator light blinks in orange or does not illuminate, reconnect the cable, or remove the battery and insert it again.
- If you charge the battery when the cable is overheated or the temperature is too high, the indicator light may turn orange. Charging will start when the battery cools down.
- Overcharging batteries may shorten battery life. After charging is finished, disconnect the cable from your camera.
- Do not bend or place heavy objects on the AC cable. Doing so may damage the cable.

Notes about charging with a computer connected

- Use only the provided USB cable.
- The battery may not charge when:
 - you use a USB hub
 - other USB devices are connected to your computer
 - you connect the cable to the port on the front side of your computer
 - the USB port of your computer does not support the power output standard (5 V, 500 mA)

Handle and dispose of batteries and chargers with care

- Never dispose of batteries in a fire. Follow all local regulations when you dispose of used batteries.
- Never place batteries or cameras on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when they are overheated.



Personal injury or death can occur if the battery is handled carelessly or improperly. For your safety, follow these instructions for proper battery handling:

- The battery can ignite or explode if not handled properly. If you notice any deformities, cracks, or other abnormalities in the battery, immediately discontinue use of the battery and contact a service center.
- Use only authentic, manufacturer-recommended battery chargers and adapters and charge the battery only by the methods described in this user manual.
- Do not place the battery near heating devices or expose it to excessively warm environments, such as the inside of an enclosed car in the summertime.
- Do not place the battery in a microwave oven.
- Avoid storing or using the battery in hot, humid places, such as spas or shower enclosures.
- Do not rest the device on flammable surfaces, such as bedding, carpets, or electric blankets for a prolonged period.
- When the device is switched on, do not leave it in any confined space for a prolonged period.
- Do not allow battery terminals to come in contact with metallic objects, such as necklaces, coins, keys, or watches.
- Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries.

- Do not disassemble or puncture the battery with any sharp object.
- Avoid exposing the battery to high pressure or crushing forces.
- Avoid exposing the battery to major impacts, such as dropping it from high places.
- Do not expose the battery to temperatures of 60° C (140° F) or above.
- Do not allow the battery to come in contact with moisture or liquids.
- Do not expose the battery to direct sunlight, fire, or any other source of excessive heat.

Disposal guidelines

- Dispose of the battery with care.
- Do not dispose of the battery in a fire.
- Disposal regulations may differ by country or region. Dispose of the battery in accordance with all local and federal regulations.




Guidelines for charging the battery

Charge the battery only by the method described in this user manual. The battery can ignite or explode if not charged properly.

Before contacting a service center

If you are having trouble with your camera, try these troubleshooting procedures before contacting a service center. If you have attempted the troubleshooting solution and are still having problems with your device, contact your local dealer or service center.

Situation	Suggested remedies
Cannot turn on the camera	<ul style="list-style-type: none">• Make sure that the battery is inserted.• Make sure that the battery is inserted correctly.• Charge the battery.
The power turns off suddenly	<ul style="list-style-type: none">• Charge the battery.• Your camera may be in Power save mode. (p. 76)• The camera may turn off to prevent the memory card from being damaged due to an impact. Turn on your camera again.
The camera is losing battery power quickly	<ul style="list-style-type: none">• The battery may lose power more quickly in low temperatures (below 0° C). Keep the battery warm by putting it into your pocket.• Using the flash or recording videos depletes the battery quickly. Recharge if needed.• Batteries are consumable parts that must be replaced over time. Get a new battery if the battery life is diminishing quickly.

Situation	Suggested remedies
Cannot take photos	<ul style="list-style-type: none">• There is no space on the memory card. Delete unnecessary files or insert a new card.• Format the memory card. (p. 76)• The memory card is defective. Get a new memory card.• Make sure that the camera is switched on.• Charge the battery.• Make sure that the battery is inserted correctly.
The camera freezes	Remove the battery and insert it again.
The flash does not work	<ul style="list-style-type: none">• The flash option may be set to Off. (p. 39)• You cannot use the flash in the , , or some  modes.
The flash fires unexpectedly	The flash may fire due to static electricity. This is not a malfunction.
The date and time are incorrect	Set the date and time in the display settings menu. (p. 76)

Situation	Suggested remedies
The display or buttons do not work	Remove the battery and insert it again.
The camera screen works poorly	If you use your camera at low temperatures, it can cause the camera screen to malfunction or discolor. For better performance of your camera screen, use your camera at normal temperatures.
The memory card has an error	The memory card has not been reset. Format the card. (p. 76)
Cannot play back files	If you change the name of a file, your camera may not play the file. (Note: File names should meet the DCF standard.) If you encounter this situation, play back the files on your computer.
The photo is blurry	<ul style="list-style-type: none"> • Make sure that the focus option you set is suitable for close-up shots. (p. 41) • Make sure that the lens is clean. If not, clean the lens. (p. 81) • Make sure that the subject is within range of the flash. (p. 93)
The colors in the photo do not match the actual scene	An incorrect white balance can create unrealistic color. Select the proper white balance option to suit the light source. (p. 47)

Situation	Suggested remedies
The photo is too bright	<ul style="list-style-type: none"> • Turn off the flash. (p. 39) • Your photo is overexposed. Adjust the exposure value. (p. 46)
The photo is too dark	Your photo is underexposed. <ul style="list-style-type: none"> • Turn on the flash. (p. 39) • Adjust the ISO speed. (p. 40) • Adjust the exposure value. (p. 46)
The TV does not display your photos	<ul style="list-style-type: none"> • Make sure that the camera is correctly connected to the TV with the A/V cable. • Make sure that your memory card contains photos.
Your computer does not recognize your camera	<ul style="list-style-type: none"> • Make sure that the USB cable is connected correctly. • Make sure that your camera is switched on. • Make sure that you are using a supported operating system. (p. 65)
Your computer disconnects the camera while transferring files	The file transmission may be interrupted by static electricity. Disconnect the USB cable and connect it again.

Situation	Suggested remedies
Your computer cannot play videos	<ul style="list-style-type: none">• Depending on the video player programs installed on your PC, video files captured by your camera may not play. To ensure the video files play on your computer, install and use the Intelli-studio. (p. 67)• Make sure that the USB cable is connected correctly.
Intelli-studio is not functioning properly	<ul style="list-style-type: none">• End Intelli-studio and restart the program.• You cannot use Intelli-studio on Macintosh computers.• Depending on your computer's specification and environments, the program may not launch automatically. In this case, click Start → All Programs → Samsung → Intelli-studio → Intelli-studio on your computer.

Camera specifications

Image sensor			
Type	1/2.3" (Approx. 7.78 mm) CCD		
Effective pixels	Approx. 14.2 Mega-pixels		
Total pixels	Approx. 14.58 Mega-pixels		
Lens			
Focal length	Samsung Lens f = 4.9 ~ 24.5 mm (35 mm film equivalent: 27 - 135 mm)		
F No.	F3.5 (W) ~ F5.9 (T)		
Digital zoom	<ul style="list-style-type: none"> • Still Image mode : 1.0X ~ 3.0X • Play mode : 1.0X ~ 13.5X (depends on image size) 		
Display			
Type	TFT LCD		
Feature	2.7" (6.9 cm), 230K		
Focusing			
Type	TTL auto focus (Multi AF, Center AF, Face Detection AF)		
Range		Wide (W)	Tele (T)
	Normal	80 cm - infinity	100 cm - infinity
	Macro	5 cm - 80 cm	100 cm - 150 cm
	Auto Macro	5 cm - infinity	100 cm - infinity

Shutter speed

- Smart Auto: 8 - 1/2,000 sec.
- Program: 1 - 1/2,000 sec.
- Night: 8 - 1/2,000 sec.

Exposure

Control	Program AE
Metering	Multi, Spot, Center-weighted
Compensation	±2EV (1/3EV steps)
ISO equivalent	Auto, 80, 100, 200, 400, 800, 1600

Flash

Mode	Off, Auto, Red-eye, Fill in, Slow Sync, Red-eye Fix
Range	<ul style="list-style-type: none"> • WIDE: 0.2 m - 2.63 m (ISO Auto) • TELE: 0.5 m - 1.56 m (ISO Auto)
Recharging time	Approx. 4 sec. (depending on battery condition)

Shake reduction

Digital Image Stabilization (DIS)

Effect

- | | |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shooting mode | <ul style="list-style-type: none"> • Smart Filter: Normal, Fish-eye, Vivid, Retro, Cool, Classic, Negative, Custom RGB • Image Adjust :Sharpness, Contrast, Saturation |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

White Balance

Auto WB, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom

Date Imprinting

Date&Time, Date, Off

Shooting

Photos	<ul style="list-style-type: none"> • Mode: Smart Auto (Portrait, Night Portrait, Backlight Portrait, Backlight, Landscape, White, Action, Tripod, Night, Macro, Macro Text, Blue Sky, Sunset Sky, Macro Color, Natural Green, Fireworks), Program, DIS, Photo Help Guide , Scene (Beauty Shot, Night, Portrait, Landscape, Close Up, Sunset, Dawn, Backlight, Beach & Snow) • Drive: Single, Continuous, Motion Capture, AEB • Timer: 10 Sec, 2 Sec, Double, Motion Timer
Videos	<ul style="list-style-type: none"> • Format: MJPEG (Max recording time: 2 hours) • Size: 1280x720 (24FPS,15FPS), 640x480 (30 FPS,15 FPS), 320x240 (30 FPS,15 FPS) • Frame Rate: 30 FPS, 24 FPS, 15 FPS • Voice: On, Off, Zoom Mute • Video editing (embedded): Pause during recording, Still image capture

Playback

Type	<p>Single image, Thumbnails, Multi Slide show, Movie Clip</p> <p>* Slide show : Slide show with Effect & Music</p>
Edit	<p>Resize, Rotate, Smart Filter, Image Adjust</p>
Effect	<ul style="list-style-type: none"> • Smart Filter: Normal, Miniature, Vignetting, Fish-eye, Vivid, Retro, Cool, Classic, Negative, Custom RGB • Image Adjust : ACB, Red-eye Fix, Face Retouch, Brightness, Contrast, Saturation, Add Noise










Voice recording

- Voice Recording (max. 10 hours)
- Voice Memo in Still Image (max. 10 sec.)

Storage

Media	<ul style="list-style-type: none"> • Internal memory: Approx. 9 MB • External memory (Optional): <ul style="list-style-type: none"> - SD Card(up to 2GB guaranteed) - SDHC (up to 8GB guaranteed) <p>* Internal memory capacity is subject to change without prior notice.</p>
File format	<ul style="list-style-type: none"> • Still Image : JPEG (DCF), EXIF 2.21, DPOF 1.1, PictBridge 1.0 • Movie Clip : AVI (MJPEG) • Audio : WAV

Camera specifications

	For 1GB SD				
		Super Fine	Fine	Normal	
Image size	 4M	4320 X 3240	129	240	292
	 12M	4320 X 2880	152	249	312
	 12M	4000 X 3000	147	284	403
	 10M	4320 X 2432	179	282	353
	 8M	3264 X 2448	232	391	510
	 5M	2592 X 1944	411	583	823
	 3M	1984 X 1488	643	858	1,029
	 2M	1920 X 1080	870	1,144	1,437
	 1M	1024 X 768	1,584	1,765	1,993
These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.					
Interface					
Digital output connector	USB 2.0				
Audio output	Microphone : Mono Internal Speaker : Mono				
Video output	NTSC, PAL (user selectable)				
DC power input	4.2V				

Power source

Rechargeable battery	Lithium-ion battery: BP70A, 740 mAh (Minimum: 700 mAh)
----------------------	-----------------------------------------------------------

The power source may differ depending on your region.

Dimensions (W x H x D)

96.8 × 58 × 20.3 mm (excluding protrusions)

Weight

103 g (without battery and memory card)

Operating temperature

0 - 40° C

Operating humidity

5 - 85 %

Software

Intelli-studio

Specifications are subject to change without prior notice.

Glossary

ACB (Auto Contrast Balance)

This feature automatically improves the contrast of your images when the subject is backlit or when there is a high contrast between your subject and the background.

AEB (Auto Exposure Bracket)

This feature automatically captures several images at different exposures to help you capture a properly-exposed image.

AF (Auto Focus)

A system that automatically focuses the camera lens on the subject. Your camera uses the contrast to focus automatically.

Aperture

The aperture controls the amount of light that reaches the camera's sensor.

Camera shake (Blur)

If the camera is moved while the shutter is open, the entire image may appear blurred. This occurs more often when the shutter speed is slow. Prevent camera shake by raising the sensitivity, using the flash, or using a faster shutter speed. Alternately, use a tripod, the DIS or OIS function to stabilize the camera.

Composition

Composition in photography means arranging objects in a photo. Usually, abiding by the rule of thirds leads to a good composition.

DCF (Design rule for Camera File system)

A specification to define a file format and file system for digital cameras created by the Japan Electronics and Information Technology Industries Association (JEITA).

Depth of field

The distance between the nearest and farthest points that can be acceptably focused in a photograph. Depth of field varies with lens aperture, focal length, and distance from the camera to the subject. Selecting a smaller aperture, for example, will increase the depth of field and blur the background of a composition.

Digital zoom

A feature that artificially increases the amount of zoom available with zoom lens (optical zoom). When using the digital zoom, the image quality will deteriorate as the magnification increases.

DPOF (Digital Print Order Format)

A format for writing printing information, such as selected images and number of prints, on a memory card. DPOF-compatible printers, sometimes available at photo shops, can read the information from the card for convenient printing.

EV (Exposure Value)

All the combinations of the camera's shutter speed and lens aperture that result in the same exposure.

EV Compensation

This feature allows you to quickly adjust the exposure value measured by the camera, in limited increments, to improve the exposure of your photos. Set the EV compensation to -1.0 EV to adjust the value one step darker and 1.0 EV to one step brighter.

Exif (Exchangeable Image File Format)

A specification to define an image file format for digital cameras created by the Japan Electronic Industries Development Association (JEIDA).

Exposure

The amount of light allowed to reach the camera's sensor.

Exposure is controlled by a combination of the shutter speed, the aperture value, and ISO sensitivity.

Flash

A speed light that helps to create adequate exposure in low-light conditions.

Focal length

The distance from the middle of the lens to its focal point (in millimeters). Longer focal lengths result in narrower angles of view and the subject is magnified. Shorter focal lengths result in wider angles of view.

Histogram

A graphical representation of the brightness of an image. The horizontal axis represents the brightness and the vertical axis represents the number of pixels. High points at the left (too dark) and right (too bright) on the histogram indicate a photo that is improperly exposed.

Image sensor

The physical part of a digital camera that contains a photosite for each pixel in the image. Each photosite records the brightness of the light that strikes it during an exposure. Common sensor types are CCD (Charge-coupled Device) and CMOS (Complementary Metal Oxide Semiconductor).

ISO sensitivity

The sensitivity of the camera to light, based on the equivalent film speed used in a film camera. At higher ISO sensitivity settings, the camera uses a higher shutter speed, which can reduce blur caused by camera shake and low light. However, images with high sensitivity are more susceptible to noise.

JPEG (Joint Photographic Experts Group)

A lossy method of compression for digital images. JPEG images are compressed to reduce their overall file size with minimal deterioration of the image resolution.

LCD (Liquid Crystal Display)

A visual display commonly used in consumer electronics. This display needs a separate backlight, such as CCFL or LED, to reproduce colors.

Macro

This feature allows you to capture close-up photos of very small objects. When using the macro feature, the camera can maintain a sharp focus on small objects at a near life-size ratio (1:1).

Metering

The metering refers to the way in which the camera measures the quantity of light to set the exposure.

MJPEG (Motion JPEG)

A video format which is compressed as a JPEG image.

Noise

Misinterpreted pixels in a digital image that may appear as misplaced or random, bright pixels. Noise usually occurs when photos are shot with a high sensitivity or when a sensitivity is automatically set in a dark place.

Optical zoom

This is a general zoom which can enlarge images with a lens and does not deteriorate quality of images.

Quality

An expression of the rate of compression used in a digital image. Higher quality images have a lower rate of compression, which usually results in a larger file size.

Resolution

The number of pixels present in a digital image. High resolution images contain more pixels and typically show more detail than low resolution images.

Shutter speed

Shutter speed refers to the amount of time it takes to open and close the shutter, and it is an important factor in the brightness of a photo, as it controls the amount of light which pass through the aperture before it reaches the image sensor. A fast shutter speed allows less time to let light in and the photo becomes darker and more easily freezes subjects in motion.

Vignetting

A reduction of an image's brightness or saturation at the periphery (outer edges) compared to the center of the image. Vignetting can draw interest to subjects positioned in the center of an image.

White balance (color balance)

An adjustment of the intensities of colors (typically the primary colors red, green, and blue), in an image. The goal of adjusting the white balance, or color balance, is to correctly render the colors in an image.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

 (Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



PlanetFirst represents Samsung Electronics' commitment to the sustainable development and social responsibility through eco-driven business and management activities.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

This Class [B] digital apparatus complies with Canadian ICES-003.

- **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate, or relocate, the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

- **CAUTION:**

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- **Declaration of Conformity**

Trade Name	: Samsung Electronics America, Inc.
Model No.	: Samsung PL20/PL21
Responsible Party	: Samsung Electronics America, Inc.
Address	: 85 Challenger Road, Ridgefield Park, NJ 07660
Telephone No.	: 1-800-SAMSUNG (726-7864)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Index

A

ACB

- in Playback mode 62
- in Shooting mode 46

Adjusting

- Brightness 62
- Contrast
 - in Playback mode 62
 - in Shooting mode 51
- Saturation
 - in Playback mode 62
 - in Shooting mode 51
- Sharpness 51

AF Lamp 77

AF Sound 75

Auto Contrast Balance (ACB) 46

B

Battery

- Charging 87
- Specifications 86

Beauty Shot mode 30

Blink detection 45

Burst

- Auto Exposure Bracket (AEB)
49
- Continuous 49
- Motion capture 49

C

Camera shake 25

Capturing an image from a video 59

Cleaning

- Body 81
- Display 81
- Lens 81

D

Date/Time Set 76

Date Type 76

Deleting files 56

Digital Image Stabilization 31

Digital zoom 23

Disconnecting the device 70

DIS mode 31

Display brightness 75

Display type 21

DPOF 63

E

Editing 60

Enlarging 57

Error messages 80

Exposure 46

F

Face detection

- Blink Detection 45
- Normal 43
- Self-Portrait 44
- Smile Shot 44

Facial brightness 30

Facial imperfections 31

Flash

- Auto 40
- Fill in 40
- Off 39
- Red-eye 40
- Red-eye Fix 40
- Slow Sync 40

Focus area

- Center AF 42
- Multi AF 42

Focus distance

- Macro 41
- Normal (AF) 41

Format 76

Frame rate 32

Function button 14

Function description 75

H

Half-pressing 6

I

Icons 18

Image adjust

- ACB 62
- add noise 62
- brightness 62
- contrast 62
- face retouch 62
- red-eye fix 62
- saturation 62

Imprint 77

Intelli-studio 68

ISO speed 40

L

Light source (White balance)
47

M

Macro 41

Maintenance 81

Memory card

- Capacity 84

MENU button 14

Metering

- Center-weighted 47
- Multi 47
- Spot 47

MJPEG (Motion JPEG) 94

Motion Timer 38

Movie mode 32

Muting

- Camera 16
- Video 33

N

Navigation button 14

P

Photo quality 36

Photo styles

in Playback mode 61

in Shooting mode 50

Playback button 16

Playback mode 53

Printing photos 72

Print order 63

Program mode 32

Protecting files 55

Q

Quick View 75

R

Recording

- Video 32
- Voice memo 34

Red-eye

- in Playback mode 62
- in Shooting mode 39

Reset 76

Resizing 60

Resolution

- Photo 36
- Video 36

RGB tone

- in Playback mode 61
- in Shooting mode 50

Rotating 60

S

Scene mode 30

Self-Portrait 44

Service center 90

Settings

- Accessing 74
- Camera 76
- Display 75
- Sound 75

Shooting mode

- DIS 31
- Movie 32
- Program 32

Scene 30
Smart Auto 28

Slide show 57

Smart Album 54

Smart Auto mode 28

Smile shot 44

Start image 60, 75

T

Timer 37

Transferring files

for Mac 71

for Windows 65

V

Video

Playing 58

Recording 32

Video Out 77

Viewing files

as thumbnails 55

by category 54

on TV 64

Slide show 57

Voice memo

Playing 59

Recording 34

Volume 75

W

White Balance 47

Z

Zoom button 14

Zooming 23



Please refer to the warranty that came with your product or visit our website <http://www.samsung.com/> for after-sales service or inquiries.

