



Preparation

The battery pack


- 1 Charge the battery pack until the CHARGE lamp lights off.
For customers in the U.S.A. and Canada

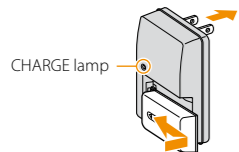

For customers in countries/regions other than the U.S.A. and Canada

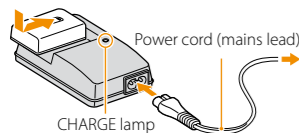


- 2 Insert the battery pack into the camera.

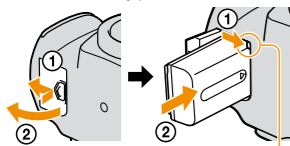

Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.


The lens

- 1 Remove the body cap on the camera and packaging lid on the rear of the lens.

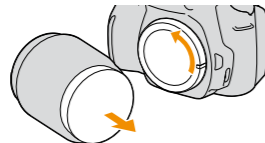

- Do not touch inside parts.
- If dust enters the camera, it may appear on the photo image. Do not leave the camera and lens without the caps. When you change the lens, do it quickly in a location free from dust.


- 2 Mount the lens by aligning the index marks as illustrated.

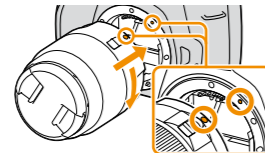

- Turn the lens until it clicks.
- Remove the lens cap during shooting.

The memory card

- 1 Open the memory card cover.

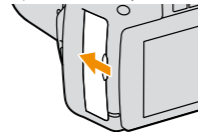


- 2 Insert a memory card and select the type of the memory card you want to use using the memory card switch. Face side (SD memory card)






- When inserting a memory card, turn the camera off.
- For available memory cards, refer to the Instruction Manual.

Date/time setup

- 1 Turn the camera on.

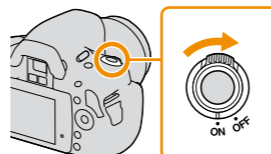


- 2 Set up the date/time.

 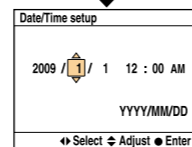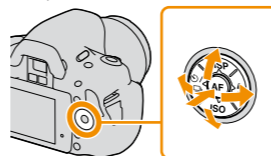

Shooting


- 1 Set the mode dial to AUTO.

- Check that the LIVE VIEW/OVF switch is set to "LIVE VIEW."

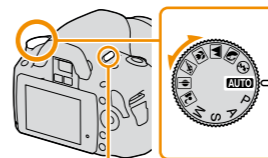

LIVE VIEW/OVF switch

- 2 Check the subject on the LCD monitor.

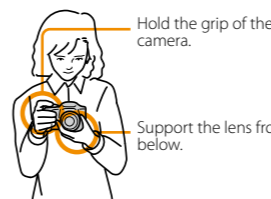


Hold the grip of the camera.

Support the lens from below.

- 3 Press the shutter button halfway down to focus.

- Pressing the shutter button halfway down and holding it activates the autofocus.

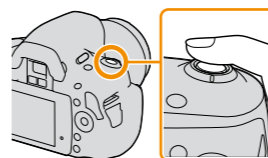


- 4 Press the shutter button fully down to shoot.



Playback

- Press .

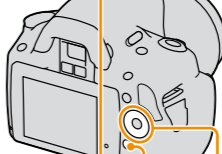

Control button



To play back a previous or next image: press on the control button.

To return to the shooting mode: .

To delete the image

Press .

To fully enjoy the features of your single lens reflex camera, consult the "Instruction Manual."

