



nüvi® 3700 series owner's manual



for use with these nüvi models:
3750, 3760, 3790

© 2010 Garmin Ltd. or its subsidiaries

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, the Garmin logo, nüvi®, and MapSource® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Lock™, myGarmin™, myGarmin Agent™, ecoRoute™, cityXplorer™, myTrends™, nüMaps Guarantee™, nüRoute™, and trafficTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. Mac® is a registered trademark of Apple Computer, Inc. microSD™ is a trademark of SanDisk or its subsidiaries. microSD is a trademark of the SD Card Association.



Table of Contents

| | | | |
|----------------------------------|----------|--------------------------------|-----------|
| Getting Started..... | 1 | Taking a Detour | 9 |
| Setting Up Your Device..... | 1 | Stopping the Route..... | 9 |
| Powering the Device..... | 1 | Navigating Off Road | 9 |
| Mounting The Device..... | 2 | Finding Locations | 10 |
| Configuring The Device | 3 | Finding an Address..... | 10 |
| Front Cover..... | 3 | Using the Go! Page | 11 |
| Acquiring Satellites | 4 | Setting a Home Location | 12 |
| Rotating the Screen..... | 4 | Viewing a List of Recently | |
| About the Automatic Screen | | Found Locations | 12 |
| Lock | 4 | About Favorites | 13 |
| Main Menu..... | 5 | Finding Parking..... | 14 |
| Using the On-screen Buttons | 5 | Planning a Trip..... | 15 |
| Adjusting the Master Volume..... | 5 | Using the Map Buttons | 16 |
| Transportation Modes..... | 6 | Browsing the Map by | |
| Finding a Point of Interest..... | 6 | Touching the Screen | 16 |
| Using the On-screen Keyboard . | 7 | Entering Coordinates..... | 18 |
| Adding Points to the Active | | Using Photo Navigation..... | 18 |
| Route | 8 | Speaking Commands | 19 |
| Changing the Destination of the | | About Voice Commands..... | 19 |
| Active Route..... | 8 | Setting your Wakeup Phrase... | 19 |
| | | Activating Voice Command..... | 19 |

| | |
|-----------------------------------|-----------|
| Tips for Using Voice | |
| Commands..... | 20 |
| Navigating to a Popular Location | |
| Using Voice Commands..... | 20 |
| Speaking an Address..... | 21 |
| About Icons and Tones..... | 21 |
| About the Map Pages..... | 22 |
| Viewing the Map While | |
| Navigating..... | 22 |
| About myTrends™..... | 23 |
| Viewing Trip Information..... | 23 |
| Viewing the Turn List..... | 24 |
| Viewing the Next Turn..... | 25 |
| Viewing the Junction View..... | 25 |
| Using the Pedestrian | |
| Navigation Map..... | 26 |
| Hands-free Phone Calls ... | 27 |
| Pairing Your Devices..... | 27 |
| Receiving a Call..... | 29 |
| Using the Device During a | |
| Call..... | 29 |
| Dialing a Point of Interest..... | 30 |
| Dialing a Number..... | 30 |
| Entering Your Phone | |
| Number..... | 30 |
| Placing Calls Using | |
| Voice Dial..... | 31 |
| Checking the Phone Status..... | 31 |
| Using the Tools..... | 32 |
| Viewing Current Location | |
| Information..... | 32 |
| Using Help..... | 32 |
| About ecoRoute™..... | 32 |
| Maximizing Your Fuel | |
| Economy..... | 33 |
| Viewing Fuel Economy | |
| Information..... | 34 |
| Using the Picture Viewer..... | 36 |
| Using the World Clock..... | 36 |
| Using the Calculator..... | 37 |
| Capturing Screen Shots..... | 37 |
| Using the Unit Converter..... | 37 |
| Traffic..... | 39 |
| Traffic Receiver..... | 39 |

| | | | |
|-------------------------------------|-----------|-----------------------------------|-----------|
| Subscription Activation | 39 | Language Settings..... | 52 |
| Receiving Traffic Information... | 40 | Viewing Map Information | 52 |
| About the Traffic Icon..... | 40 | Bluetooth Settings | 52 |
| Traffic on Your Route..... | 41 | Enabling Traffic..... | 53 |
| Viewing the Traffic Map | 41 | About Traffic Subscriptions..... | 53 |
| Searching for Traffic Delays | 41 | Restoring All Original Settings . | 54 |
| About Offers | 42 | Appendix | 55 |
| Data Management..... | 44 | About GPS Satellite | |
| File Types | 44 | Signals | 55 |
| Connecting Your Device to | | Caring for Your Device..... | 55 |
| Your Computer | 45 | Locking Your Device | 57 |
| Transferring Files To Your | | Updating the Software | 58 |
| Computer | 45 | Clearing User Data | 58 |
| Deleting Files | 46 | Battery Information | 58 |
| Customizing the Device... 47 | | Changing the Fuse in the | |
| System Settings..... | 47 | Vehicle Power Cable..... | 59 |
| Automobile Navigation | | Mounting on Your Dashboard.. | 60 |
| Settings | 48 | Removing the Device, | |
| Pedestrian Navigation | | Cradle, and Mount | 60 |
| Settings | 49 | nüMaps Guarantee™ | 61 |
| Route Preferences..... | 50 | nüMaps Lifetime™ | 61 |
| Display Settings..... | 51 | Purchasing Additional Maps | 61 |

Table of Contents

| | |
|--|-----------|
| About Extras | 62 |
| Contacting Garmin Product Support | 63 |
| Registering Your Device | 63 |
| Specifications | 64 |
| Troubleshooting | 65 |
| Index | 67 |

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Setting Up Your Device

When using your device for the first time, complete the following tasks.

1. Power your device ([page 1](#)).
2. Mount your device ([page 2](#)).
3. Configure your device ([page 3](#)).
4. Turn the device on and off ([page 3](#)).
5. Acquire satellites ([page 4](#)).
6. Understand the main menu ([page 5](#)).

Powering the Device

Connect your device to the vehicle power cable while it is plugged into your vehicle.

Your nüvi charges as you drive.

Power Cables

Your device can be powered three ways.

- Vehicle power cable
- USB cable ([page 45](#))
- AC adapter (optional accessory)

If you do not plan to use your device while it is connected to a power source, press the **Power** button to lock the device. For more on locking the device, see [page 4](#).

Mounting The Device

WARNING


This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

NOTICE


Before mounting the device, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

1. Remove the clear plastic from the suction cup.
2. Place the suction cup on the windshield.
3. Flip the lever back toward the windshield.

4. Snap the mount onto the suction cup arm.

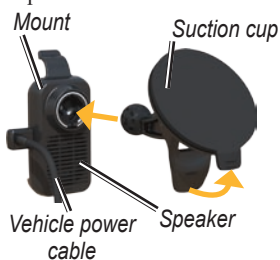

5. Fit the bottom of your device into the mount.
6. Tilt your device back until it snaps into place.

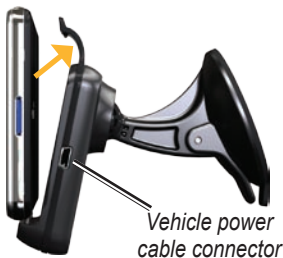


Configuring The Device

1. Plug the vehicle power cable into the mount.
2. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

The device should turn on automatically if it is plugged in and the vehicle is running.

3. Follow the on-screen instructions.
4. If you are using a traffic receiver in Europe, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.

Front Cover

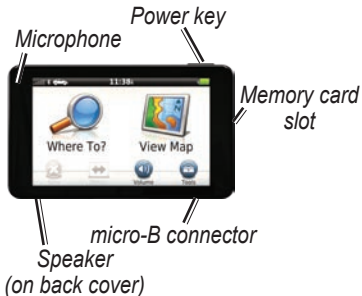

Turning the Device On and Off


Press and hold the **Power** key.

Resetting Your Device

You can reset your device if it stops functioning.

Press and hold the **Power** key for 10 seconds.

Acquiring Satellites

The  bars indicate satellite strength.

1. Go outdoors to an open area, away from tall buildings and trees.
2. If necessary, turn on your device.

Acquiring satellite signals can take a few minutes.

Rotating the Screen

Rotate your device to view in horizontal (landscape) or vertical (portrait) mode.



About the Automatic Screen Lock


The device automatically locks if you do not use it for a specified amount of time.

If the device is in the mount with external power, the screen will not automatically lock.

Manually Locking the Device

Press the **Power** key.

Unlocking the Device






1. Quickly press the Power key, if necessary.
2. Double-tap .

Main Menu



- ① Touch to select a transportation mode.
- ② Touch to find a destination.
- ③ Touch to view the map.
- ④ Touch to stop a route.
- ⑤ Touch to detour a route.
- ⑥ Touch to make a call when connected to a compatible mobile phone.
See www.garmin.com/bluetooth for information.
- ⑦ Touch to adjust the volume.
- ⑧ Touch to open the menu of tools and settings.

Using the On-screen Buttons

- Touch and hold  to quickly return to the main menu.
- Touch  and  to see more choices.
- Touch and hold  and  to scroll faster.

Adjusting the Master Volume

1. Touch **Volume**.
2. Adjust the slider left to right.

Muting the Audio

1. Touch **Volume** > .

Transportation Modes



Pedestrian



Bicycle



Automobile

The device offers several transportation modes for navigation methods. Routing is calculated differently based on your mode.

Changing Your Transportation Mode

1. Touch the transportation mode icon on the upper-left corner.
2. Select a mode.
3. Touch **Save**.

Finding a Point of Interest








The detailed maps loaded in your device contain points of interest, such as restaurants, hotels, and auto services.

1. From the main menu, touch **Where To? > Points of Interest**.
2. Select a category.
3. If necessary, select a subcategory.
4. Select a destination.
5. Touch **Go!**.

Finding a Location by Spelling the Name

1. From the main menu, touch **Where To? > Points of Interest > Spell Name**.
2. Enter all or part of the name.
3. Touch **Done**.
4. Select a destination.
5. Touch **Go!**.

Using the On-screen Keyboard


- Touch a character on the keyboard to enter a letter or number.
- Touch  to add a space.
- Touch  and  to move the cursor.
- Touch  to delete a character.
- Touch and hold  to erase the entire entry.
- Touch  to select the keyboard language mode.
- Touch  to enter special characters, such as punctuation marks.

Finding Points of Interest in Pedestrian Mode

While in pedestrian mode in certain cities, you may use cityXplorer™ maps to navigate using public transit. Go to www.garmin.com for more information on cityXplorer maps.


1. Select Pedestrian transportation mode ([page 6](#)).
2. From the main menu, touch **Where To? > Points of Interest**.
3. Select a category.
4. If necessary, select a subcategory.
5. Select a destination.
6. Select an option:
 - Touch **Walk** to calculate a route you will navigate by walking.
 - Touch **Public Transit** to calculate a route that uses public transit and walking.
7. Touch **Go!**

Adding Points to the Active Route

1. While navigating a route, touch  to return to the main menu.
2. From the main menu, touch **Where To?**.
3. Select a category.
4. If necessary, select a subcategory.
5. Select a destination.
6. Touch **Go!**.
7. Touch **Add to Current Route**.

Changing the Destination of the Active Route


Before you can change destinations, you must be navigating a route.

1. Touch  to return to the main menu.
2. Touch **Where To?**.
3. Search for the location.
4. Touch **Go!**.
5. Touch **Start New Route**.


Taking a Detour

While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

NOTE: If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

1. While navigating a route, touch .
2. From the main menu, touch **Detour** or **Recalculate**.

Stopping the Route

1. While navigating a route, touch .
2. From the main menu, touch **Stop**.

Navigating Off Road

If you are not following roadways as you navigate, use Off Road mode.

1. From the main menu, touch **Tools > Settings > Navigation > nüRoute > Calculation Mode**.
2. Touch **Off Road**.
3. Touch **Save**.

Finding Locations

The Where To? menu provides several different categories you can use to search for locations. To perform a simple search, see [page 6](#).

Finding an Address

NOTE: Depending on the version of the built in map data on your device, the button names and the order of steps could be different than the steps below.

1. From the main menu, touch **Where To? > Address**.
2. If necessary, change the state, the country, or the province.
3. Touch **Spell City**
4. Enter the city/postal code.
TIP: If you are unsure of the city/postal code, touch **Search All**.
5. Touch **Done**.

6. If necessary, select the city/postal code.

NOTE: Not all map data provides postal code searching.

7. Enter the number of the address.
8. Touch **Done**.
9. Enter the street name.
10. Touch **Done**.
11. If necessary, select the street.
12. If necessary, select the address.

Using the Go! Page

The Go! page opens when you select a location to navigate to.



- ① Touch to call the selected location when your device is connected to phone, or to save the location to your favorites.
- ② Touch to switch between 2-D and 3-D view.
- ③ Touch to rotate the view.
- ④ Touch to view more information for the location.
- ⑤ Touch to zoom in and out.
- ⑥ Touch to return to the previous page. Touch and hold to return to the main menu.

- ⑦ Touch to create a turn-by-turn route to this location.

Reporting an Incorrect Point of Interest

When your search results contain an outdated or incorrect point of interest, you can remove the location from future searches.

1. From the Go! page, touch the information box.
2. Touch **≡** > **Report Error** > **Yes**.
The location is removed from future searches.

Setting a Home Location

You can set your home location for the location you return to most often.


1. From the main menu, touch **Where To? > Go Home**.
2. Select **Enter My Address**, **Use My Current Location**, or **Recently Found**.

Going Home


Before you can navigate to home, you must set a home location.

From the main menu, touch **Where To? > Go Home**.

Resetting Your Home Location

1. From the main menu, touch **Where To? >  > Set Home Location**.
2. Select an option to change your address.

Editing Your Home Location Information

1. From the main menu, touch **Where To? > Favorites > Home**.
2. Touch ** > Edit**.
3. Enter your changes
4. Touch **Done**.

Viewing a List of Recently Found Locations

Your device stores the last 50 locations you have found.

From the main menu, touch **Where To? > Recently Found**.

Clearing the List of Recently Found Locations

From the main menu, touch **Where To? > Recently Found > ≡ > Clear > Yes.**

About Favorites

You can save locations in your Favorites so you can quickly find them and create routes to them. Your home location is also stored in Favorites.

Saving Your Current Location to Favorites

1. From the map, touch the vehicle icon.
2. Touch **Save**.
3. Enter a name.
4. Touch **Done**.

The location is saved in **Favorites**.

Saving Locations to Favorites

1. Search for the location ([page 6](#)).
2. From the Go! page, touch **≡ > Save > OK**.

Finding Favorites

1. From the main menu, touch **Where To? > Favorites**.
2. If necessary, select a category.
3. Select a saved location.

Editing Favorites

1. From the main menu, touch **Where To? > Favorites**.
2. Select a category.
3. Select a favorite.
4. Touch the information box.
5. Touch **☰ > Edit**.
6. Select an option:
 - **Name**
 - **Phone Number**
 - **Categories**
 - **Assign Photo**—touch to select a saved photo (page 36).
 - **Change Map Symbol**
7. Edit the information.
8. Touch **Done**.

Finding Parking

1. From the main menu, touch **Where To? > Parking > Find Parking**.
2. Select a parking location.
3. Touch **Go!**.



Finding Your Last Parking Spot

The device saves your parking spot when you remove the device from the mount while power is applied to it.

From the main menu, touch **Where To? > Parking > Last Spot**.

Planning a Trip


You can use Trip Planner to create and save a trip with multiple destinations.

1. From the main menu, touch **Where To? > Trip Planner**.
2. Touch .
3. Touch **Select Start Location**.
4. Search for a location (page 6).
5. Touch **Select**.
6. Touch  to add an additional location.
7. Touch **Select**.
8. Repeat steps 4–6 to add additional locations to your trip.
9. Touch **Next**.
10. Enter a name.
11. Touch **Done**.





Navigating to a Saved Trip

1. From the main menu, touch **Where To? > Trip Planner**.
2. Select a saved trip.
3. Touch **Go!**.

Editing a Saved Trip

1. From the main menu, touch **Where To? > Trip Planner**.
2. Select a saved trip.
3. Touch .
4. Select an option:
 - Touch **Rename Trip** to edit the trip name.
 - Touch **Edit Destinations** to add or delete locations.
 - Touch **Delete Trip** to delete the entire trip.
 - Touch **Optimize Order** to arrange your trip locations in the most efficient order.

Using the Map Buttons

1. From the main menu, touch **Where To? > Browse Map**.
2. Touch anywhere on the map.
 - Touch  and  to zoom in and out.
 - Touch  to switch between 2D and 3D views.
 - Touch  to rotate the view.

Browsing the Map by Touching the Screen

- Touch an area on the map to select a location.

An information box appears next to the location.
- Touch and drag the map to view different parts of the map.
- Tap the map twice to zoom in and center on a location.

- Touch two points near the center of the map and drag your fingers apart to zoom in.
- Touch two points near opposite edges of the screen and drag your fingers toward the center of the screen to zoom out.
- Touch and drag two fingers down the map to move from an aerial view to a birds-eye view.
- Touch and drag two fingers up the map to move from a birds-eye view to an aerial view.
- Touch and drag two fingers right or left to rotate the map.

Finding a Location Using the Map

1. From the main menu, touch **Where To? > Browse Map**.
2. Touch a location.
An information box appears next to the location.
3. Touch the information box.
4. Select an option:
 - Touch **≡** > **Save**.
5. Touch **Go!**.

Setting a Simulated Location

You can use the GPS simulator to select another location, near which you can search for and save points of interest. This may be helpful when planning trips.


1. From the main menu, touch **Tools > Settings > System > GPS Simulator > On**.
2. From the main menu, touch **Where To? > Browse Map**.
3. Touch an area on the map.
4. Touch **≡** > **Set Location**.

Entering Coordinates

If you know the geographic coordinates of your destination, you can use your device to navigate to the destination using the latitude and longitude coordinates. This can be especially helpful when geocaching.

1. From the main menu, touch **Where To? > Coordinates**.
2. Touch a field to enter the latitude and longitude data.
3. Touch **View on Map**.
4. Touch **Go!**.

Changing the Map Coordinate Format

1. From the Home Screen, touch **Where To? > Coordinates >  > Format**.
2. Select a format.

Using Photo Navigation

You can upload onto your device or memory card pictures that include location information and create routes to the pictured locations.

1. Connect your device to your computer ([page 45](#)).
2. Go to <http://connect.garmin.com/photos>.
3. Follow the instructions on the Web site to select and load pictures.
4. From the main menu, touch **Where To? > Favorites > Photos**.

A list of pictures with location information appears.

5. Touch a picture.
6. Touch **Go!**.

Speaking Commands

About Voice Commands

NOTE: The voice command feature is not available for all languages or regions. The voice command feature is available on some device models.

The voice commands allow you to use your device by speaking the words you see on the screen or by speaking certain commands. The voice command menu provides a list of available commands to use.

Setting your Wakeup Phrase

The wakeup phrase is a word or phrase you can say to activate voice command. The default wakeup phrase is **Voice Command**.

1. From the main menu, touch **Tools > Voice Command > Customize Phrase**.
2. Enter a new wakeup phrase.
3. Touch **Done**.

Activating Voice Command

Speak your wakeup phrase.

The Voice Command menu appears.

Tips for Using Voice Commands

- Speak in a normal voice directed at the device.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the device as needed.
- To reduce the number of accidental Voice Command wake-ups, increase the length of your Wakeup Phrase.
- Speak **Exit** to exit voice command.

Navigating to a Popular Location Using Voice Commands

You can speak the names of very popular, well-known locations.

1. Speak your wakeup phrase.

2. Speak **Find by Name**.
3. Listen for the voice prompt and speak the name of the location.

A list of locations appears.




4. Speak the line number.



"Line 1"

5. Speak an option:
 - Speak **Navigate** to navigate to the location.


- Speak **Call** to call the location when connected to a compatible mobile phone.
- Wait until the  icon is green to speak your command.

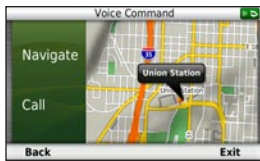

Speaking an Address

1. Speak **Voice Command**.
2. Speak **Find Address**.
3. Follow the on-screen prompts.

About Icons and Tones

- The device sounds two tones when it enters and exits voice recognition mode.
- A  red icon appears in the upper-right corner of the screen when the device is not ready for your command.

About the Map Pages

Viewing the Map While Navigating

NOTICE

In no event shall Garmin be liable for any incidental, special, indirect, or consequential damages, including, without limitation, damages for any traffic fines or citations, whether resulting from the use, misuse, or inability to use the product or from defects in the product. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Your route is marked with a magenta line. A checkered flag marks your destination.

As you travel, your device guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your device recalculates the route and provides new directions.

A speed limit icon displaying the current speed limit may appear as you travel on major roadways.

Using the Navigation Map



① Touch to view the next turn.

The turn indicator also tells you which lane you should be in to prepare for your next maneuver, when available.

- ② Touch to view the turn list.
- ③ Touch to zoom in and zoom out.
- ④ Touch to return to the main menu.
- ⑤ Touch to display a different data field.
- ⑥ Touch to view information for the location.
- ⑦ Touch to view trip information.

About myTrends™

When the myTrends feature is enabled, your estimated time of arrival and traffic information for your frequent destinations, like your workplace, automatically appear in the navigation bar at the top of the map.

When myTrends information appears in the navigation bar, you can touch the navigation bar to view route options for the suggested destination.

Enabling myTrends

From the main menu, touch **Tools > Settings > Navigation > Automobile > nüRoute > myTrends > Enabled.**

Viewing Trip Information


The trip information page displays your present speed and provides statistics about your trip.

TIP: If you make frequent stops, leave the device turned on so it can accurately measure elapsed time during the trip.

From the map, touch the **Speed** field.



Resetting Trip Information


1. From the map, touch the **Speed** field.
2. Touch .
3. Select an option:
 - Touch **Reset Trip Data** to reset the information on the trip computer.
 - Touch **Reset Max. Speed** to reset the maximum speed.
 - Touch **Reset Trip B** to reset the odometer.

Viewing the Turn List

When you are navigating a route, you can view all of the turns for your entire route and the distance between turns.

1. From the map, touch the text bar on the top of the map.




2. Select an option:
 - Select a turn on the list to view the next turn.
 - Touch  > **Show Map** to view the entire route on the map.

Viewing the Next Turn

Before you can view the next turn, you must be navigating a route.

The next turn shows the turn on the map and the distance and time left before you reach the turn.

Touch the turn indicator in the top left corner of the map.

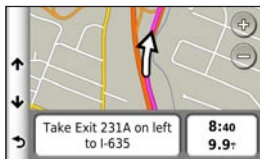

Viewing the Junction View

Before you can view the junction view, you must be navigating a route.

On some device models, the junction view displays a view of some upcoming junctions and in which lane you should be driving.

From the map, touch the upper-left corner of the screen.



Using the Pedestrian Navigation Map











In Pedestrian mode, your route is displayed on a two-dimensional map.

- 1 Touch to switch between legs of the route.
- 2 Touch to view the route itinerary.
- 3 Touch to center the map on your current location.
- 4 Touch to zoom in and zoom out.

Public Transit Options

If you have cityXplorer maps installed, your device calculates a route that uses a combination of public transit options, such as riding a bus or subway, and walking.

NOTE: cityXplorer maps are not included with your device. See <http://my.garmin.com> to purchase cityXplorer maps.

The , , , , , , and  icons indicate the navigation method used in each section of the route. For example, when you see , board a bus at that point in the route.

The black dots on the map are public transit stops along your route.

Hands-free Phone Calls

Bluetooth® wireless technology establishes a wireless link between two devices, such as a mobile phone and your device. To determine whether your mobile phone with Bluetooth technology is compatible with the device, go to www.garmin.com/bluetooth.

Pairing Your Devices

The first time you use two devices together, you must pair them by establishing a relationship using a PIN or passkey.

Your phone and the device must be turned on and be within 33 ft. (10 m) of each other.

Pairing Using Your Phone Settings

You can initiate pairing from your phone. Refer to your phone instructions.

1. From the main menu of the device, touch **Tools > Settings > Bluetooth > Enabled**.
2. Enable the Bluetooth component on your phone.

NOTE: This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.

3. Search for Bluetooth devices using your phone.
4. Select the device from the list of devices.
5. Enter the device Bluetooth PIN (**1234**) into your phone.

Pairing Using the Device Settings

1. From the main menu of the device, touch **Tools > Settings > Bluetooth > Enabled**.
2. Touch **Tools > Settings > Bluetooth > Add Phone**.
3. Enable the Bluetooth component on your phone.
4. Enable Find Me/Discoverable/Visible mode on your phone.
NOTE: This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.
5. Touch **OK** on the device.
6. Select your phone from the list of devices.
7. Touch **Save**.
8. Enter the device Bluetooth PIN (**1234**) in your phone.

Tips After Pairing Your Devices


- After the initial pairing, the two devices can connect automatically each time you turn them on.
- When your phone is connected to your device, you are ready to make phone calls.
- When you turn on the device, it tries to connect to the last phone to which it was connected.
- You might have to set your mobile phone to connect to the device automatically when it is turned on.

Receiving a Call

- Touch **Answer**.
The internal microphone is in the front of the device. Speak normally.
- Touch **Ignore** to ignore the call.

Using the Device During a Call

During a call,  appears. Depending on the screen shown on your device, the In Call icon could look different.

1. From the main menu, touch  > **End Call**.
2. Select an option:
 - Touch **Keypad** to view a keypad page for using automated systems such as voice mail.


- Touch **Use Handset** to turn off the device but remain on the call, or if you need privacy.

TIP: To switch back, touch **Use nÜvi**.

- Touch **Mute** to turn off the sound on a call.

Using Call Waiting

When you are on a call and you receive a second call (call waiting), a window appears.

- Touch **Answer** to answer the call and place the first call on hold.
- Touch  > **Switch To**.
- Touch **End Call** to hang up.
This does not disconnect the call on hold.

Dialing a Point of Interest

1. From the main menu, touch **Phone > Points of Interest**.
2. Search for a point of interest.
3. Touch **Call**.

Dialing a Number

1. From the main menu, touch **Phone > Dial**.
2. Enter the number.
3. Touch **Dial**.

Entering Your Phone Number

You can enter the phone number you want the device to call when you touch **Call Home**.

1. From the main menu, touch **Phone > Call Home**.
2. Touch **Enter Phone Number**.
3. Enter the phone number.
4. Touch **Done > Yes**.

The device dials your home phone number.

Calling Home

Before you can call home using the Call Home button, you must enter a phone number for your home location. (page 30).

From the main menu, touch
Phone > Call Home.

Placing Calls Using Voice Dial

Before you can place calls using voice dial, you may need to train your phone to recognize your voice dial commands. Refer to your phone instructions.

1. From the main menu, touch
Phone > Voice Dial.
2. Speak the contact name.

Checking the Phone Status

You can check the battery level and signal strength for your phone.

From the main menu, touch
Phone > Phone Status.

Using the Tools

Viewing Current Location Information

Use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the main menu, touch **Tools** > **Where Am I?**

Finding Nearby Services

1. From the main menu, touch **Tools** > **Where Am I?**
2. Touch **Hospitals, Police Stations**, or **Fuel** to view the nearest locations in that category.

Using Help

From the main menu, touch **Tools** > **Help** to view information about using your device.

Searching Help Topics

From the main menu, touch **Tools** > **Help**.

About ecoRoute™

The ecoRoute feature calculates your vehicle fuel economy, carbon footprint, and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute feature are estimates only. The data is not actually read from your vehicle. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy ([page 33](#)).

Using ecoRoute

1. From the main menu, touch **Tools** > **ecoRoute**.
2. If prompted, enter fuel and mileage information.

The first time you use the ecoRoute features, you must enter vehicle information.

Calibrating the Fuel Economy

Calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. Calibrate when you fill up your fuel tank.

1. From the main menu, touch **Tools** > **ecoRoute** > **At the Pump**.
2. Enter the current fuel price.
3. Enter how much fuel your vehicle has used since the last fill up.
4. Enter the distance you have traveled since the last fill up.

5. **Touch Next.**

The device calculates your average fuel economy.

Maximizing Your Fuel Economy

The ecoChallenge helps you maximize your fuel economy by scoring your driving habits. The higher your ecoChallenge scores, the more fuel you save. The ecoChallenge collects data and calculates a score whenever your device is moving and in Automobile transportation mode.

Viewing Your ecoChallenge Scores

From the main menu, touch **Tools** > **ecoRoute** > **ecoChallenge**.

About Your ecoChallenge Score

The leaf color on the ecoChallenge icon changes depending on your performance in the challenge.



Overall—displays an average of the speed, acceleration, and braking score.

Speed—displays your score for driving at your vehicle's optimal speed for conserving fuel (45-60 mph for most vehicles).



Acceleration—displays your score for smooth and gradual acceleration. You lose points for rapid acceleration.

Braking—displays your score for smooth and gradual braking. You lose points for hard braking.

Removing the ecoChallenge Score From the Map

From the map, touch  >  > **Settings** > **Hide**.

Resetting the ecoChallenge

From the map, touch  >  > **Reset**.

Viewing Fuel Economy Information

1. From the main menu, touch **Tools** > **ecoRoute** > **Fuel Economy**.
2. Touch a section of the graph to zoom in.

Adjusting Your Vehicle Profile

1. From the main menu, touch **Tools** > **ecoRoute** > **Vehicle Profile**.
2. Select an option to manually adjust your fuel settings.
 - **Fuel Type**
 - **City Fuel Economy**
 - **Hwy. Fuel Economy**
 - **Fuel Price**

TIP: For best results, calibrate your fuel economy (page 33) instead of adjusting the city and highway fuel efficiency.

About the Mileage Report

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on your device, a mileage

report is created for the distance you traveled.

Viewing a Mileage Report


You can view saved mileage reports on your device. You can also access mileage reports in the Reports folder on your device drive/volume (page 45).

1. From the main menu, touch **Tools** > **ecoRoute** > **Mileage Report**.
2. Select a report.

Viewing Driving Tips

From the main menu, touch **Tools** > **ecoRoute** > **Tips**.

Resetting ecoRoute Data


1. From the main menu, touch **Tools** > **ecoRoute**.
2. Select a category.
3. Touch  > **Reset**.

Using the Picture Viewer

View pictures that you have stored in your device or on a memory card.


See [page 44](#) for more information about loading pictures on your device.

From the main menu, touch **Tools** > **Picture Viewer**.


- Touch the arrows to scroll through the images.
- Touch a picture to view a larger image of it.
- Touch  to view a slide show of the pictures.

Touch anywhere on the screen to stop the slide show.

Setting a Picture as Wallpaper

1. From the main menu, touch **Tools** > **Picture Viewer**.
2. Touch a picture.
3. Touch  > **Set as Wallpaper**.

Deleting Pictures

1. From the main menu, touch **Tools** > **Picture Viewer**.
2. Select a picture.
3. Touch  > **Delete** > **Yes**.

Using the World Clock

1. From the main menu, touch **Tools** > **World Clock**.
2. Touch a city name.
3. Enter a new city name
4. Touch **Done**.
5. If necessary, select a city.

Viewing the World Map


From the main menu, touch **Tools**
> **World Clock** > .

Nighttime hours appear in the shaded area.

Using the Calculator

From the main menu, touch **Tools**
> **Calculator**.

Capturing Screen Shots

1. From the main menu, touch **Tools** > **Settings** > **Display** > **Screenshot**.
2. Touch **Enabled**.
3. Touch  to take a screen shot.

The picture bitmap file is saved in the **screenshots** folder on the device drive ([page 45](#)).

Using the Unit Converter

1. From the main menu, touch **Tools**
> **Unit Converter**.
2. Touch the box with a unit of measure listed.
3. Select a unit of measure.
4. Touch **Save**.
Two units of measure are listed.
5. Touch a unit of measure to change.
6. Select a unit of measure.
7. Touch **Done**.
8. Repeat steps 5–6, if necessary.
9. Enter a value.
10. Touch **Done**.

Setting Currency Conversion Rates Manually

You can update the currency conversion rates manually so that you are always using the most-current rates.

1. From the main menu, touch **Tools** > **Unit Converter**.
2. Touch the box with a currency listed.
3. Select **Currency**.
4. Touch **Save**.
5. Touch a currency box.
6. Select the currency you want to update.
7. Repeat steps 3–6 to select a currency to convert to, if necessary.
8. Touch a box under a currency.
9. Enter a new value for the currency.

10. Touch **Done**.

11. Repeat steps 8–9, if necessary.

Traffic

NOTICE


Garmin is not responsible for the accuracy or timeliness of the traffic information.

Your device can receive FM Traffic Message Channel (TMC) traffic content.

For information about traffic receivers and coverage areas, go to www.garmin.com/traffic.

The FM TMC traffic receiver, which is integrated in the vehicle power cable, is included in some packages and is an optional accessory for all series models.

Traffic Receiver

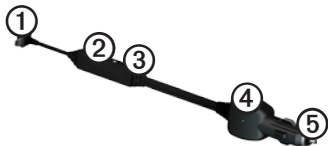

- ① Mini-USB connector
- ② Internal antenna
- ③ External antenna connector
- ④ Power LED
- ⑤ Vehicle power adapter

Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your device acquires satellite signals while receiving traffic signals from the pay service provider.

Receiving Traffic Information

The vehicle power cable and the device must be in data range of an FM station transmitting traffic information.

1. Connect the traffic receiver to an external power source.
2. Connect the traffic receiver to the device.

NOTE: Heated (metallized) windshields could degrade the performance of the traffic receiver.

About the Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.


| Color | Description | Meaning |
|--------|-----------------|---|
| Green | Low severity | Traffic is flowing freely. |
| Yellow | Medium severity | Traffic is moving but there is a delay. There is moderate traffic congestion. |
| Red | High severity | Traffic is not moving or moving very slowly. There is a severe delay. |
| Gray | No data | Traffic information is not available |

Traffic on Your Route

When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the device automatically recalculates the route.


You might still be routed through traffic if no better alternative routes exist.

Manually Avoiding Traffic on Your Route


1. From the map, touch the .
2. Touch **Traffic On Route**.
3. If necessary, touch the arrows to view other traffic delays on your route.
4. Touch **Avoid**.

Viewing the Traffic Map



The traffic map shows color-coded traffic flow and delays on nearby roads.

1. From the map, touch .
2. Touch **Traffic Map** to view the traffic incidents on a map.

Searching for Traffic Delays

1. From the map page, touch .
2. Touch **Traffic Search** to view a list of roads with traffic delays.
3. Touch an item in the list to view delays on the road.
4. If there is more than one delay, touch the arrows to view additional delays.

Adding a Subscription

1. From the main menu, touch **Tools** > **Settings** > **Traffic**.
2. Select an option:
 - For non-North American units, touch **Subscriptions** > .
 - For North American units, touch .
3. Write down the FM traffic receiver unit ID.
4. Go to www.garmin.com/fmtraffic to purchase a subscription and get a 25-character code.
5. Touch **Next** on the device.
6. Enter the code.
7. Touch **Done**.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM

traffic receivers, you must obtain a new code for each receiver.

About Offers

If your device package includes a traffic receiver, you will receive location-relevant offers and coupons. Ad-based traffic information is only available in North America.

The traffic receiver must be connected to external power and you must be in a coverage area to receive ad-based traffic information.

See our privacy statement at www.garmin.com/privacy for important privacy information.

Viewing Offers

 **CAUTION**

Do not attempt to write down the coupon codes while driving.

1. Touch an offer that appears on the screen to search for the nearest location related to that offer.
2. If the offer includes an icon, touch the icon on the Go! page to receive a coupon code.
3. Write down this code and present it when you arrive at the location.

Viewing an Offer List

From the main menu, touch **Tools > Offers**.

Disabling Traffic and Offers

Before you can disable offers, you must disable traffic.

1. From the main menu, touch **Tools > Settings > Traffic**.
2. Select **Disabled**.

Data Management

You can store files, such as JPEG image files, on your device. The device has a memory card slot for additional data storage.

NOTE: The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

File Types

The device supports the following file types:

- JPEG and JPG image files ([page 36](#)).
- Maps and GPX waypoint files from MapSource® ([page 61](#)).
- GPI custom POI files from Garmin POI Loader ([page 62](#)).

About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase preloaded MapSource detailed map data cards from your Garmin dealer. In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

Installing a Memory Card

1. Insert a memory card into the slot on the right side of the device.
2. Press it in until it clicks.

Connecting Your Device to Your Computer

1. Connect the USB cable to a USB port on your computer.
2. Connect the micro-B connector to the device.

An option to install myGarmin Agent™ appears. This service monitors your computer USB ports and allows you to easily check for available updates (page 63).



micro-B connector

3. Connect the larger end of the cable to a USB port on your computer.

Your device and memory card appear as removable drives in My Computer in Windows and as mounted volumes on Mac computers.

NOTE: Some computers with multiple network drives cannot display nüvi drives. See your operating system Help file to learn how to map the drives.



Transferring Files To Your Computer

1. Browse your computer for a file.
2. Highlight the file.
3. Click **Edit > Copy**.
4. Open the “Garmin” or memory card drive or volume.
5. Select **Edit > Paste**.

The file appears in the list of files in the device memory or on the memory card.

- Repeat steps 1–5 to transfer additional files.

Disconnecting the USB Cable

- Complete an action:
 - For Windows computers, click the eject icon  in your system tray.
 - For Mac computers, drag the volume icon to the **Trash** .
- Disconnect the cable from your computer.

Deleting Files

NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- Open the “Garmin” drive or volume.
- If necessary, open a folder or volume.
- Select a file.
- Press the **Delete** key on your keyboard.

Customizing the Device

1. From the main menu, touch **Tools** > **Settings**.



2. Touch a setting category.
3. Touch the setting to change it.


System Settings

From the main menu, touch **Tools** > **Settings** > **System**.

- **GPS Simulator**—stops the device from receiving a GPS signal, and saves battery power.

- **Units**—allows you to change the units of measure for distance.
- **Time Format**—allows you to select a 12-hour or a 24-hour display time.
- **Current Time**—allows you to manually change the time.
- **Safe Mode**—disables all functions that require significant operator attention and could become a distraction while driving.
- **Garmin Lock**—locks the device ([page 57](#)).
- **About**—displays the software version number, the unit ID number, and information on several other software features.
NOTE: You need this information when you update the system software or purchase additional map data ([page 61](#)).
- **End User License Agreements**

Restoring the System Settings

From the main menu, touch **Tools**
> **Settings** > **System** >  >
Restore.

Automobile Navigation Settings

From the main menu, touch
Tools > **Settings** > **Navigation** >
Automobile.

- **nüRoute™** (page 50)
- **Map Detail**—sets the level of detail on the map. More detail may result in slower map drawing.

- **Map View**—sets the perspective on the Map page (page 49).
- **Map Theme**—changes the color of the map data.
- **Map Data Layout**—changes the amount of data visible on the map.
- **Vehicle**—changes the icon to represent your position on the map. Go to www.garmin.com for more icons.
- **Trip Log**
 - **Show on Map**—displays the path of your travels on the map.
 - **Clear Trip Log**

Changing the Map Perspective

1. From the main menu, touch **Tools > Settings > Navigation > Automobile > Map View**.
2. Select an option:
 - Touch **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
 - Touch **North Up** to display the map in 2-D with North at the top.
 - Touch **3-D** to display the map in three dimensions.

Pedestrian Navigation Settings

From the main menu, touch **Tools > Settings > Navigation > Pedestrian**.

- **Limit Walking**—controls how much of a public transit route will include walking.
- **Public Transit**—avoids selected transit types.
- **Trip Log**—displays the path of your travels on the map.

Avoiding Transit Types

NOTE: Transit types are available when cityXplorer maps are loaded ([page 26](#)).

1. From the main menu, touch **Tools > Settings > Navigation > Pedestrian > Public Transit**.
2. Select the transit type to avoid on your routes.

Route Preferences

From the main menu, touch **Tools > Settings > Navigation > Automobile > nüRoute > Calculation Mode.**

The route calculation is based on road speeds and vehicle acceleration data for a given route.

- **Faster Time**—calculates routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—calculates routes that are shorter in distance but can take more time to drive.
- **Less Fuel**—calculates routes that could use less fuel than other routes.
- **Off Road**—calculates point-to-point routes (without roads).

Avoiding Road Features

1. From the main menu, touch **Tools > Settings > Navigation > Automobile > nüRoute > Avoidances.**
2. Select the road features to avoid on your routes.
3. Touch **Save.**


About trafficTrends™

When the trafficTrends feature is enabled, your device uses historic traffic information to calculate more-efficient routes. Different routes may be calculated based on traffic trends for the day of the week or based on the time of day.

Enabling trafficTrends

1. From the main menu, touch **Tools > Settings > Navigation > Automobile > nüRoute > trafficTrends.**
2. Select **Enabled.**

Restoring the Original Navigation Settings

From the main menu, touch **Tools** > **Settings** > **Navigation** >  > **Restore**.


Display Settings

From the main menu, touch **Tools** > **Settings** > **Display**.

- **Color Mode**—sets a light background (**Day**), a dark background (**Night**), or automatically switches between the two based on the sunrise time and the sunset time for your current location (**Auto**).

- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power.
- **Display Timeout**—sets how the screen automatically shuts off if the device is inactive for the selected length of time.
- **Screenshot**—allows you to take a picture of the device screen ([page 37](#)).

Restoring the Original Display Settings

From the main menu, touch **Tools** > **Settings** > **Navigation** >  > **Restore**.

Language Settings


From the main menu, touch **Tools** > **Settings** > **Language**.

- **Voice Language**—sets the language for voice prompts.
- **Text Language**—sets all on-screen text to the selected language.

NOTE: Changing the text language does not change the language of user-entered data or map data, such as street names.

- **Keyboard Language**—sets the language for your keyboard.
- **Keyboard Layout**—sets the keyboard layout.

Restoring the Original Language Settings

From the main menu, touch **Tools** > **Settings** > **Language** >  > **Restore**.

Viewing Map Information

From the main menu, touch **Tools** > **Settings** > **myMaps**.


Enabling Maps

1. From the main menu, touch **Tools** > **Settings** > **myMaps**.
2. Touch a map.

Bluetooth Settings

From the main menu, touch **Tools** > **Settings** > **Bluetooth**.



- **Add Phone** or **Phone**—see ([page 53](#)).
- **Bluetooth**—enables the Bluetooth component.

The  **Bluetooth** icon appears on the main menu if the Bluetooth component is turned on.


- **Friendly Name**—allows you to enter a friendly name that identifies your nūvi on devices with Bluetooth technology.

Managing the Bluetooth Device List

You can add, disconnect, or delete phones that your device detects while Bluetooth is enabled.

1. From the main menu, touch **Tools** > **Settings** > **Bluetooth** > **Phone**.
2. Select an option:
 - Select a phone for your device to connect with.
 - Touch  to add a phone to the menu.
 - Touch  to delete a phone from the device memory.
 - Touch **None** to drop your current connection.

Restoring the Original Bluetooth Settings

From the main menu, touch **Tools** > **Settings** > **Bluetooth** >  > **Restore**.

Enabling Traffic

The traffic receiver is included in some device packages.

From the main menu, Touch **Tools** > **Settings** > **Traffic** > **Traffic** > **Enabled**.

About Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to www.garmin.com/fmtraffic.

Viewing Traffic Subscriptions

From the main menu, touch
Tools > Settings > Traffic > Subscriptions.

Restoring the Original Traffic Settings

From the main menu, touch **Tools > Settings > Traffic > ☰ > Restore.**



Restoring All Original Settings

From the main menu, touch **Tools > Settings > ☰ > Restore > Yes.**

Appendix

About GPS Satellite Signals

The device must acquire satellite signals in order to navigate.

When the device has acquired satellite signals, the signal strength bars on the main menu are green . When it loses satellite signals, the bars turn red or clear .

For more information about GPS, go to www.garmin.com/aboutGPS.

Caring for Your Device

- Avoid dropping your device and operating it in high-shock and high-vibration environments.
- Do not expose the device to water.

Contact with water can cause this device to malfunction.

- Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Never use a hard or sharp object to operate the touchscreen, or damage may result.

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

1. Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
2. Wipe the device dry.

Cleaning the Touchscreen

1. Use a soft, clean, lint-free cloth.
2. If necessary, use water, isopropyl alcohol, or eyeglass lens cleaner.
3. Apply the liquid to the cloth.
4. Gently wipe the screen with the cloth.

Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device at <http://my.garmin.com>.
- Use the Garmin Lock feature (page 57).

Locking Your Device

Garmin Lock is a theft-deterrent system that locks your device. Each time you turn on the device, you must enter the PIN or drive to the security location.

1. From the main menu, touch **Tools** > **Settings** > **System** > **Garmin Lock** > **Lock Device**.

The Garmin Lock menu appears.

2. Touch **Enabled**.
3. Enter a 4-digit PIN twice.
4. Drive to a security location.
5. Touch **Set**.

Changing Your Garmin Lock PIN

1. From the Garmin Lock menu, touch **Change PIN**.
2. Enter a new 4-digit PIN twice.

Changing Your Security Location

1. From the Garmin Lock menu, touch **Security Location**.
2. Drive to the new security location.
3. Touch **Set**.

About the Security Location

Your security location should be a location you return to often, such as your home. If the device has satellite signals and you are at the security location, you do not need to enter the PIN.

NOTE: If you forget your PIN and your security location, you must send your device to Garmin to get it unlocked. You must also send a valid product registration or proof of purchase.

Updating the Software

1. Connect the device to your computer using the micro-B cable ([page 45](#)).

The AutoPlay menu opens.

2. Select an option:
 - If you are using a PC, double-click ▲ to open the myGarmin Agent download page.
 - If you are on a Mac computer, go to www.garmin.com/agent.
 - If the AutoPlay menu does not open go to www.garmin.com/agent.
3. Follow the on-screen instructions.

After you have installed myGarmin Agent, you are prompted to open myDashboard when you connect your device to your computer.


myDashboard checks your device for current software and provides additional information about your device.

Clearing User Data

1. Turn the device on.
2. Hold your finger on the lower-right corner of the device screen.
3. Keep your finger pressed until the pop-up window appears.
4. Touch **Yes** to clear all user data.

All original settings are restored. Any items that you have saved are erased.

Battery Information

The  battery icon in the status bar indicates the status of the internal battery.

To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it. Do not unplug the device until it is fully charged.

Maximizing the Battery Life


- Press and quickly release the power key to lock the screen and put the device in sleep mode.
- From the main menu, touch **Tools > Settings > Display > Brightness** to turn down the backlight.
- From the main menu, touch **Tools > Settings > Display > Display Timeout** to reduce the timeout length.
- Do not leave your device in direct sunlight.
- Avoid prolonged exposure to excessive heat.

Changing the Fuse in the Vehicle Power Cable

NOTICE

When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position. The vehicle power cable does not work unless it is assembled correctly.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

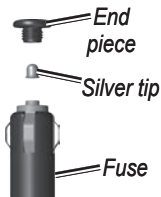

1. Use a coin to push down the silver tip, and turn the coin counter-clockwise one-quarter turn.
2. Remove the end piece, the silver tip, and the fuse.

3. Install a 2 A fast-blow fuse.
4. Verify that the silver tip is located in the end piece.
Using a coin, replace the end piece.

Mounting on Your Dashboard

NOTICE

The permanent mounting adhesive is extremely difficult to remove after it is installed.

Use the enclosed mounting disk to mount your device to the dashboard and comply with certain state regulations.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.

3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk.
6. Flip the lever down (toward the disk).

Removing the Device, Cradle, and Mount

Removing the Device from the Cradle

1. Press up on the tab on the top of the cradle.
2. Tilt the device forward.

Removing the Cradle from the Mount

1. Turn the cradle to the right or left.
2. Apply pressure until the socket on the cradle releases the ball on the mount.

Removing the Suction Cup Mount from the Windshield

1. Flip the lever on the suction cup mount toward you.
2. Pull the tab on the suction cup toward you.

nüMaps Guarantee™

To receive one free map update (if available), register your device at <http://my.garmin.com> within 60 days of acquiring satellites while driving with your device. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you acquire satellites while driving with your device. For more information, go to www.garmin.com/numaps.

nüMaps Lifetime™

For a one-time payment, you can receive up to four map updates each year for the life of your device. For more information, go to www.garmin.com, and click on **Maps**.

Purchasing Additional Maps

You can purchase additional maps for your device.

1. Go to your device product page on the Garmin Web site (www.garmin.com).
2. Click the **Maps** tab.
3. Follow the on-screen instructions.

About Extras

You can download additional content, such as custom POIs, from www.garmin.com.

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

You can create or download custom POI lists and install them on your device using POI Loader software available at www.garmin.com. See the POI Loader Help file for more information.

Finding Extras

1. From the main menu, touch **Where To? > Extras**.
2. Touch a category.

Safety Cameras

CAUTION

Garmin is not responsible for the accuracy of, or the consequences of using, a custom point of interest or a safety camera database.

Safety camera information is available in some locations. Go to <http://www.garmin.com/safetycamera> for availability. For these locations, the device includes the locations of hundreds of safety cameras. Your device alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

Contacting Garmin Product Support

You can contact Garmin Product Support if you have any questions about this product.

- In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020.
- In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.
- In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Registering Your Device

You can register your device using myGarmin Agent.

1. Connect the device to your computer using the micro-B cable (page 44).

The AutoPlay menu icon appears on your taskbar.

2. Double-click ▲ to open the myGarmin Agent download page.
3. Follow the on-screen instructions to install myGarmin.
4. Keep the original sales receipt, or a photocopy, in a safe place.

After you have registered your device, you can subscribe to the latest Garmin online services.

Specifications

| | |
|-----------------------------|--|
| Physical size | 4.79 × 2.85 × .35 in. (12.2 × 7.2 × .9 cm) |
| Weight | 4.14 oz. (117.5 g) |
| Display | 4.3 in. diagonal, 800 × 480 pixels; 16.2 million colors; bright WVGA TFT display |
| Case | Not waterproof (IPX0) |
| Operating temperature range | 32°F–140°F (0°C–60°C) |
| Charging temperature range | 32°F–113°F (0°C–45°C) |
| Computer interface | USB 2.0 high speed mass storage |
| Operating system | Garmin |
| Charge time | Up to 4 hours |
| Power Input | Vehicle power using included vehicle power cable or AC power using an optional accessory |
| Usage | 10 W max |

| | |
|--------------------|------------------------------|
| Battery life | Up to 3 hours |
| Battery type | Rechargeable lithium-ion |
| GPS receiver | High-sensitivity with HotFix |
| Acquisition times* | Warm: <1 second |
| | Cold: <38 second |
| | Factory Reset: <45 second |
| Memory card slot | microSD™ card |

*Average acquisition times for a stationary receiver with a clear view of the sky.

Troubleshooting

| Problem | Solution |
|---|---|
| My device is not acquiring satellite signals. | <ul style="list-style-type: none"> • Verify that the GPS simulator is turned off. • From the main menu, touch Tools > Settings > System > GPS Simulator > Off. • Take your device out of parking garages and away from tall buildings and trees. • Remain stationary for several minutes. |
| The suction cup will not stay on my windshield. | <ul style="list-style-type: none"> • Clean the suction cup and windshield with rubbing alcohol. • Dry with a clean, dry cloth. • Mount the suction cup (page 2). |
| The device does not charge in my vehicle. | <ul style="list-style-type: none"> • Check the fuse in the vehicle power cable (page 59). • Verify the vehicle is turned on and is supplying power to the power outlet. • Your device can only charge between 32°F and 113°F (between 0°C and 45°C). If the device is placed in direct sunlight or in a hot environment, it cannot charge. |
| My battery does not stay charged for very long. | To maximize the time between charges, turn down the backlight (page 51). |
| How do I clear all of my user data? | <ol style="list-style-type: none"> 1. Hold your finger on the lower-right corner of the device screen while it is turning on. 2. Keep your finger pressed until the message appears. 3. Touch Yes to clear all user data. |
| My battery gauge does not seem accurate | Allow the unit to fully discharge, and fully charge it (without interrupting the charge cycle). |

| | |
|---|--|
| How do I know my device is in USB mass storage mode? | When your device is in USB mass storage mode, a picture of a device connected to a computer is shown on the device screen. Also, you should see two new removable disk drives listed in My Computer . |
| The device is connected to the computer, but it will not go into mass storage mode. | <ol style="list-style-type: none">1. Disconnect the USB cable from your computer.2. Turn off the device.3. Plug the USB cable into a USB port on your computer and into your device. The device automatically turns on and goes into USB mass storage mode.4. Verify your device is connected to a USB port and not a USB hub. |
| I cannot see any new removable drives in my list of drives. | If you have several network drives mapped on your computer, Windows can have trouble assigning drive letters to your device drives. Refer to your operating system Help file to learn how to map or assign drive letters. |
| My phone will not connect to the device. | <ul style="list-style-type: none">• From the main menu, touch Tools > Settings > Bluetooth. The Bluetooth field must be set to Enabled.• Your phone must be turned on and be less than 33 feet (about 10 meters) away from your device.• Go to www.garmin.com/bluetooth for more help. |

Index

Symbols

2-D, 3-D map view 49

A

accessories 62–63

adding a stop 8

additional maps 61

addresses 10

anti-theft feature 57

audio version 47

avoiding

 public transit types 49

 road types 50

 theft 56

 traffic 41

B

battery

 maximizing battery

 life 59

battery information 58, 65

Bluetooth technology

 27–31

calling from Go!

 page 11

friendly name 53

pairing with phone 27

settings 52

brightness 51

browsing the map 16

C

calculator 37

calls

 answering 29

 call waiting 29

 hanging up 29

 home 31

 muting 29

caring for your device 55

changing destinations 8

charging your device 65

city maps 26

cityXplorer maps 7, 26

cleaning your device 56

computer, connecting 45

 to computer 56

configuring your device 3

converting

 currency 38

 units 37

coordinates 18

current location, saving

 13

customizing the device

 47–53

custom POIs 62

D

dashboard disk 60

deleting

 all user data 58

 character 7

 recent finds list 13

 trips 15

detailed maps 7, 44, 52

detours 9

diacritical characters 7

display settings 51

driving directions 24

E

ecoRoute 32–35

 calibrate fuel economy

- 33
- ecoChallenge score
 - 33
- fuel economy
 - information 34
 - mileage report 35
 - tips 35
 - vehicle profile 32
- editing
 - change categories 14
 - change map symbol
 - 14
 - destinations 15
 - favorites 14
 - home location 12
 - saved trip 15
- end user license agreements 47
- extras 62–63
- F**
 - Favorites 13
 - feedback on POI's 11

- files
 - deleting 46
 - supported types 44
- finding locations
 - by address 10
 - by coordinates 18
 - by name 6
 - by postal code 10
 - recent selections 12
 - saved locations
 - (Favorites) 13
 - using photos 18
 - using the map 17
 - free map updates 61
 - fuse, changing 59
- G**
 - Garmin Lock 57
 - Garmin Product Support
 - 63
 - geocaching 18
 - Go! page options 11
 - go home 12

- GPS
 - about GPS 55
 - settings 47
 - simulator 17
- H**
 - Help 32
 - home
 - phone number 31
 - setting a location 12
- J**
 - JPEG image files 44
 - junction view 25
- K**
 - keyboard 7
 - language mode 7, 52
- L**
 - latitude and longitude 18
 - lithium-ion battery 58
 - locking
 - the device 57
 - the screen 4

M

- main menu 4
- map data layout 48
- maps 22
 - adding 61
 - browsing 16
 - detail level 48
 - errors 11
 - information 52
 - pedestrian 26
 - theme 48
 - view 49
 - zooming 16
- MapSource 44, 61
- mass storage mode 44
- measurements, converting 37
- memory card 44
- micro-B connector 45
- mileage report 35
- mobile phone features 27
- modes
 - transportation 6

- mounting the device
 - on dashboard 60
 - on windshield 65
 - removing from mount 60

Mute

- audio 5
 - phone call 29
- myTrends 23

N

- navigation 22
 - off road 9
 - pedestrian 26
 - photo 18
 - settings 48
- nearby services 32
- next turn 25
- nüMaps Guarantee 61

O

- off-road navigation 9, 50
- offers 42
 - disabling 43
 - viewing 43

- on-screen buttons 5
- orienting the screen 4

P

- pairing a mobile phone 27
- Panoramio pictures 18
- parking 14
- pedestrian mode
 - settings 49
- photo navigation
 - loading pictures 18
- picture viewer 36
- PIN
 - Bluetooth 27
 - Garmin Lock 57
- points of interest
 - finding 6, 10
 - in pedestrian mode 7
 - POI loader 44
- power button 3
- product support 63
- protecting your device 55

public transit
 avoidances 49
 city maps 26

R

recalculating routes 9
recently found locations
 12
registering 56
removing the mount 60
renaming trips 15
reporting map errors 11
resetting
 home location 12
 the max speed 24
 trip data 24
 your device 3
routes
 calculation 50
 off road 9, 50
 stopping 9

S

safe mode 47

safety cameras
 alerts 62
 database 62
satellite signals 55
 acquiring 4
saving
 found locations 13
 your current location
 13
school zone database 62
screen
 brightness 51
 orient 4
screenshots 37
search area 12
security
 location 57
settings 47–54
software
 updating 58
 version 47
specifications 64
speech recognition 19

speed limit icon 22
storing the nüvi 55
suction cup mount 2
system settings 47

T

text language 52
time settings 47
tools 32–37
touchscreen
 settings 51
Track Up 49
traffic 39–43
 activating a
 subscription 39
 adding traffic
 subscriptions 53
 icons 40
 incidents 40
 receiver 39
 trafficTrends 50
transportation mode 6
 changing 6

- trip computer 23
 - resetting information 23
- trip planner 15
- troubleshooting 65
- turn-by-turn directions 24
- turning on and off the device 3
- turn list 24
- U**
- unit converter 37
- unit ID 47
- updating
 - maps 61
- USB 66
- user data, deleting 58
- V**
- vehicle profile 35
- voice command
 - activating 19
 - icons and tones 21
 - navigating with 20
 - red icon 21
 - tips for using 20
 - wakeup phrase 19
- voice dial 31
- voice language 52
- voice mail 29
- volume
 - adjusting 5
- W**
- WebUpdater 58
- Where Am I? 32
- world clock 36
- Z**
- zoom 16

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

www.garmin.com