

# User Manual

## Main function introduction

1. Starting up.....	4
2. Power saving.....	5
3. Main Functions.....	5
3.1 GPS.....	6
3.2 Music.....	7
3.2.1 Music Play.....	7
3.2.2 Music List.....	9
3.2.3 Equalizer.....	10
3.3 Movie.....	11
3.3.1 Video.....	12
3.3.2 Video list.....	13
3.4 Photo.....	13
3.4.1 Photo.....	14

3.4.2 Photo list.....	15
3.4.3 Full screen.....	15
3.5 Ebook.....	16
3.5.1 Ebook.....	17
3.5.2 Ebook List.....	18
3.5.3 Font Setting.....	19
3.5.4 Color Setting.....	19
3.5.5 Bookmark.....	20
3.5.6 Bookmark list.....	21
3.6 Flash.....	22
3.6.1 Flash List.....	23
3.7 Bluetooth.....	24
3.7.1 Dial.....	25
3.7.2 Dail Record.....	26
3.7.3 Pair.....	27
3.7.4 Setting.....	28
3.7.5 Pair Devices.....	29
3.7.6 Outgoing call.....	30
3.7.7 Call fail.....	31
3.7.8 Incoming call.....	32
3.7.9 Active call.....	32
3.8 Games.....	32

3.8.1 Memory.....	33
3.8.2 Linlink.....	34
3.8.3 Russia Block.....	34
3.8.4 JawBreaker.....	35
3.8.5 BoxMan.....	35
3.8.6 BreakOut.....	36
3.8.7 Snake.....	37
3.9 Tools.....	37
3.9.1 Calculator.....	38
3.9.2 Unit.....	39
3.10 Setting.....	39
3.10.1 Volume.....	41
3.10.2 Backlight.....	43
3.10.3 Language.....	44
3.10.4 FM Transmitter.....	44
3.10.5 DateTime.....	47
3.10.6 Calibration.....	49
3.10.7 System Info.....	49
3.10.8 USB.....	50
3.10.9 Factory Reset.....	51
3.10.10 Nav Path.....	51
3.11 GPS Info.....	52

# Main function introduction

## 1. Starting up


Insert the supplied SD card (optional) into the slot at the bottom of device.



Starting up then enter into the main function operation screen as below.



## 2. Power saving

Press the power button  on the top side of your device to turn off your device, the device actually enters a suspend state and the system stops operation. Once you turn on the system again, it resumes.

## 3. Main Functions

Press the power button to turn on the GPS unit. The Main Menu screen will be displayed as below:



Tap the icon  or  can choose function



### 3.1 GPS

Double tap the “GPS” icon  or  to start program.




### 3.2 Music

Tap the icon "Music" on the main menu and enter into following interface.



#### 3.2.1 Music Play


Tap the "Music" icon  or  on the main menu again and enter into following interface.


**B**





K


A

: return to the main menu


: minimize

: order of play: random, repeat, single, play all, repeat all

: equalizer


: previous


: speed bar

: pause/play



: next

: stop

: music list

: volume control


### 3.2.2 Music List


Tap the “Music List” icon and enter into the following interface.




A

D

: previous

 : increase single

 : increase all

 
 : delete single


 : delete all


### 3.2.3 Equalizer

Tap the “Equalizer” icon and enter into the following interface. **B**


**A**

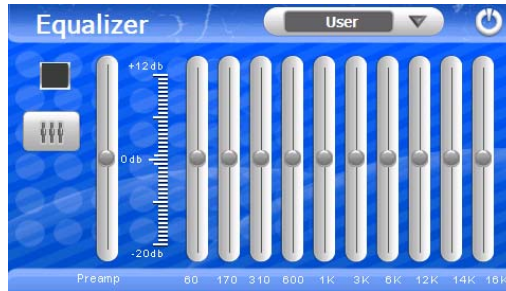


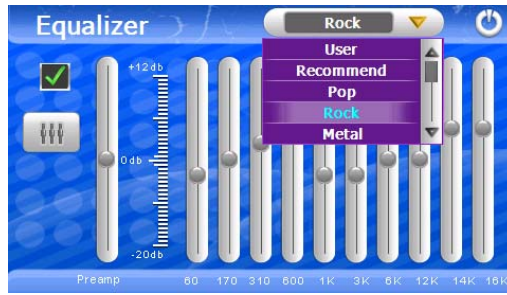 
 : previous

 : tap it and can select play style as blew

interface

: tap it and can use the equalizer

: reset the equalizer





### 3.3 Movie

Tap the icon "Video" on the main menu and enter into following interface.




### 3.3.1 video


Tap the “video” icon  or  on the main menu again and enter into following interface.





**F**

: pause/play

: speed bar


: stop

: video list

: return to the main menu

: volume control

### 3.3.2 video list

Tap the  icon and enter into the following interface.





### 3.4 Photo

Tap the icon "Photo" on the main menu and enter into following interface.



### 3.4.1 photo

Tap the “Photo” icon  or  on the main menu again and enter into following interface.



: previous


: next

: zoom in


: zoom out

: rotate


**G H**

 : full screen

 : photo list

 : return to the main menu

### 3.4.2 photo list

Tap the  icon and enter into the following interface.



### 3.4.3 full screen

Tap the “photo list” icon and enter into the full screen.  
Then tap the screen again and enter into the following

interface.



 : set time for playing

picture, 1s~10s.

Previous: tap the screen once more



### 3.5 Ebook

 
Tap the icon "Ebook" on the main menu and enter into following interface.





### 3.5.1 Ebook


Tap the icon  or  on the main menu again and enter into following interface.

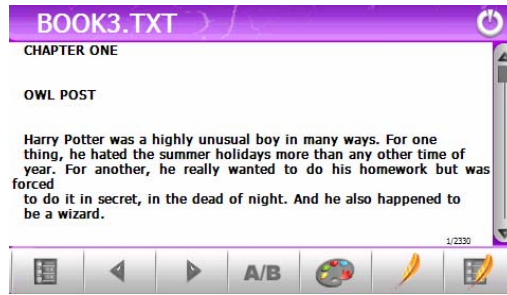


A

F


G

: return to the main menu

: previous

: next

: font setting

: color setting


: bookmark

: bookmark list

: ebook list

### 3.5.2 Ebook List

 Tap the icon "ebook list" and enter into following interface.

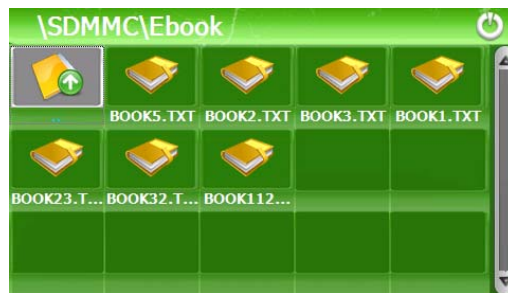


### 3.5.3 Font Setting

Tap the icon "font setting" and enter into following interface.

**B A**



 
: previous


: saving


### 3.5.4 Color Setting

Tap the icon "color setting" and enter into following interface.

**B A**

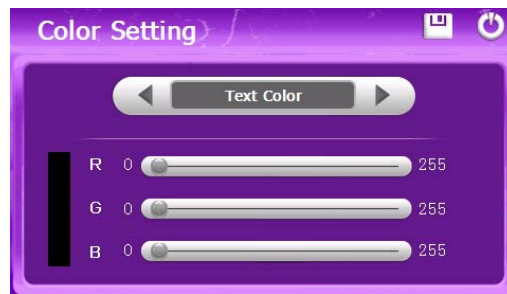

: previous


: saving

### 3.5.5 bookmark

 Choose to add as part of the bookmark text, click on the




icon, and enter into following interface. Choose “OK” or “Cancel”

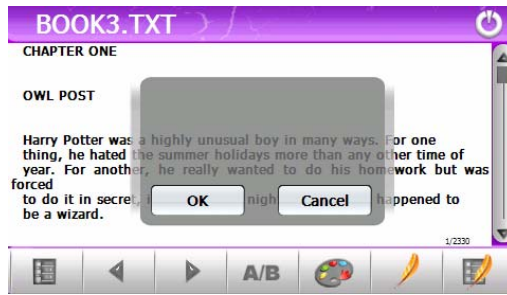

### 3.5.6 bookmark list

 
Tap the icon "bookmark list" and enter into following interface.

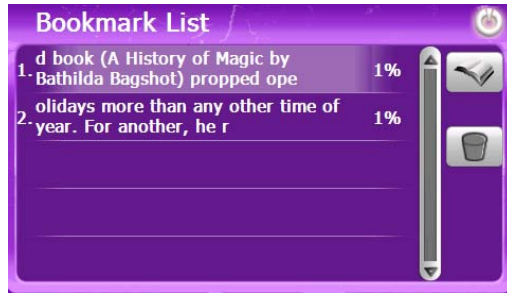



A

B

C

: previous

 : enter into bookmark

 : delete bookmark

### 3.6 Flash


Tap the icon "Flash" on the main menu and enter into following interface.




Tap the icon  or  on the main menu again and enter into following interface.





**F**

: pause/play

: stop

: speed bar

 
: flash list

: return to the main menu

: volume control


### 3.6.1 Flash List

Tap the icon "flash list" and enter into following interface.

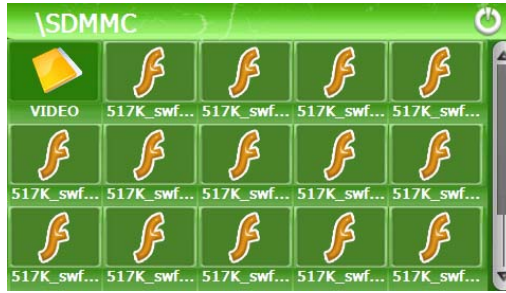

### 3.7 Bluetooth

 Tap the icon "Bluetooth" on the main menu and enter into following interface.




Tap the icon A or B or C on the main menu again and enter into following interface.





### 3.7.1 Dial



Tap the icon  on the Bluetooth menu and enter into the following interface.



**A**


**B**


**C**

**D**


: return to the Bluetooth menu

 
: backspace

: pair and connect with the mobile you want

: call Record

### 3.7.2 Dial Record

Tap the icon  on the Bluetooth menu and enter into the following interface.

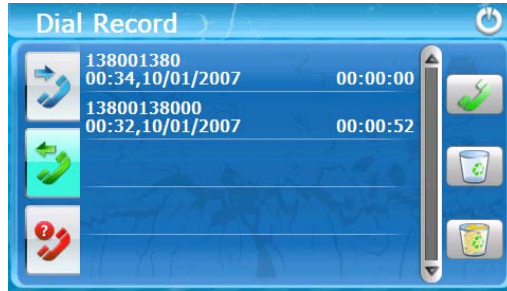

: return to the Bluetooth menu

A  
H  
B  
C  
D  
I



: connect with the mobile you want



: delete the recorded number you chose



: delete all the call records



: incoming call record



: outgoing call record



: missed call record




: previous




: next

### 3.7.3 Pair

 Tap the icon  on the Bluetooth menu and enter into


the following interface.

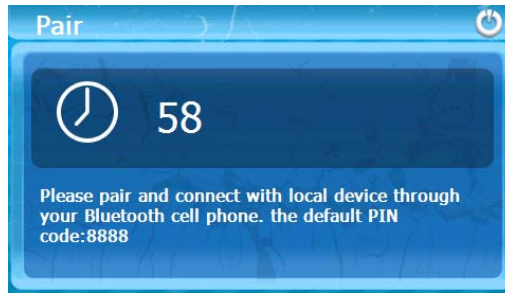

### 3.7.4 Setting



 Tap the icon on the Bluetooth menu and enter into the following interface.

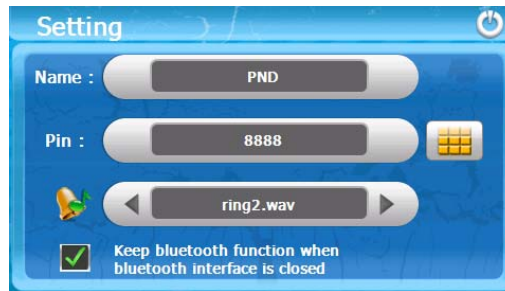

**A**

 
**B**




: PIN setting

: music selecting

Tap “PIN setting” button and enter into the following interface.

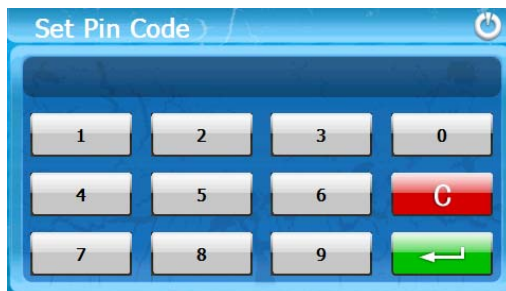

### 3.7.5 Pair Devices

Tap the icon  on the Bluetooth menu and enter into the following interface.




**A**


**B**

**C**

**D**

 
: return to the Bluetooth menu

: connect the Devices you chose

: disconnect the Devices you chose

: delete all the Devices information


### **3.7.6 Outgoing call**

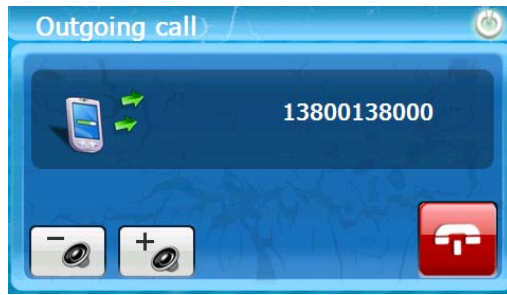


**3.7.7 call fail**



 **3.7.8 incoming call**

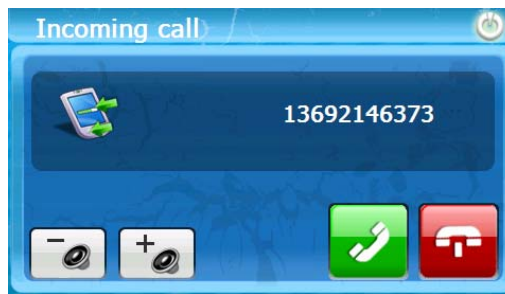

### 3.7.9 active call

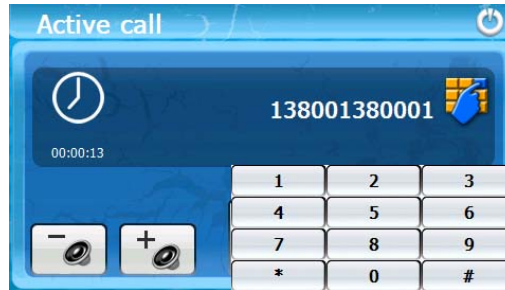 



### 3.8 Games

Tap the icon "Games" on the main menu and enter into following interface.




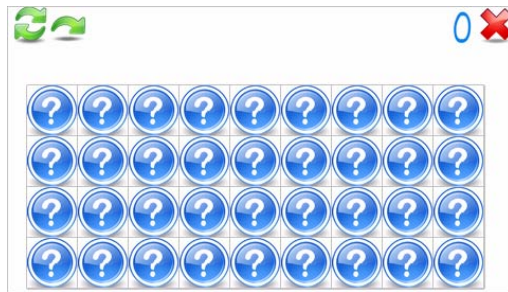 


Tap the icon  or  on the main menu again and enter into following interface.




### 3.8.1 Memory

Tap the icon  and enter into following interface.




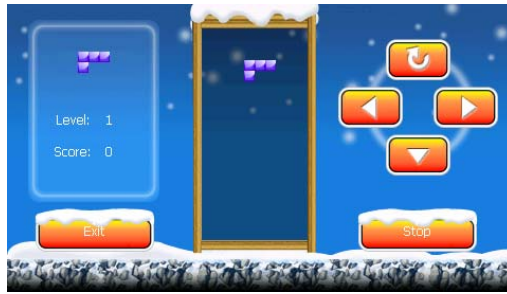 
### 3.8.2 Linlink

Tap the icon  and enter into following interface.




### 3.8.3 Russia Block

Tap the icon  and enter into following interface.




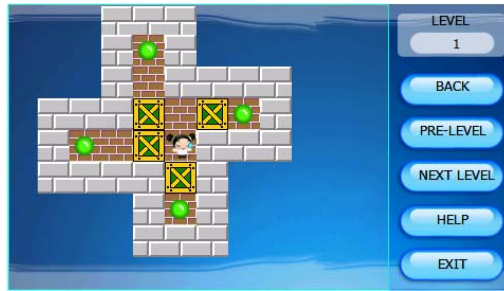 
### 3.8.4 JawBreaker

Tap the icon  and enter into following interface.




### 3.8.5 BoxMan

Tap the icon  and enter into following interface.



 
### 3.8.6 BreakOut

 
Tap the icon  and enter into following interface.



### 3.8.7 Snake





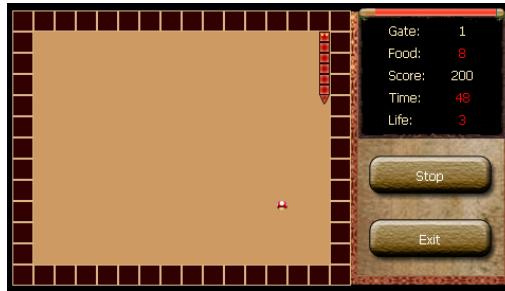Tap the icon  and enter into following interface.




### 3.9 Tools

 
Tap the icon "Tools" on the main menu and enter into the following interface.




Tap the icon  or  on the main menu again and enter into following interface.

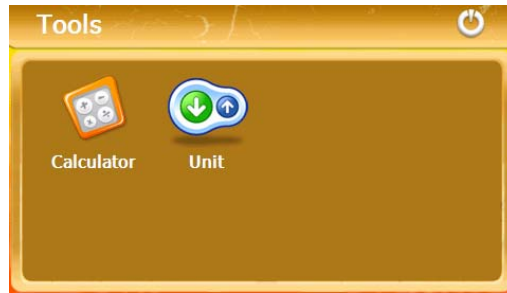

### 3.9.1 Calculator

 Tap the icon  and enter into following interface.

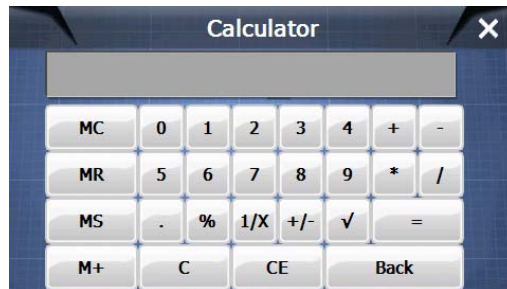


### 3.9.2 Unit



 Tap the icon and enter into following interface.

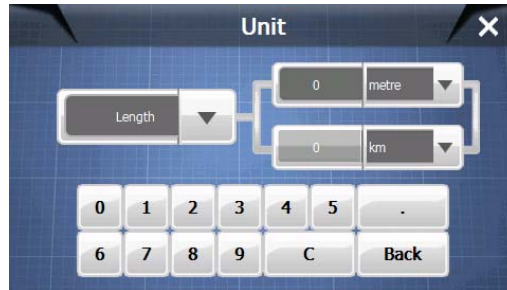

Unit: Length, Weight Mass, Cubic Capacity, Square Area, Circular Angular, Power, Pressure, Speed, Temperature



### 3.10 Setting

Tap the icon "Setting" on the main menu and enter into the following interface.



Tap the icon  or  on the main again menu and enter into following interface.







### 3.10.1 Volume

 
Tap the icon A on the main menu or B on the system as below






And enter into following interface.


**B**

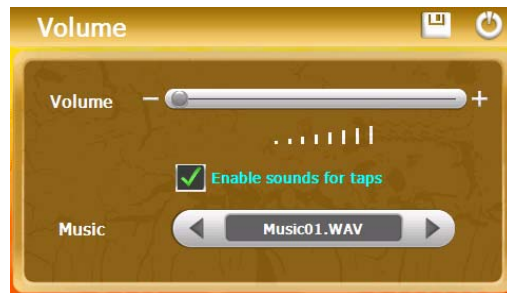

**A**

 
**E**

: previous

: saving



: volume control



: can select "Enable sounds for taps"

or not




: star-up music

### 3.10.2 Backlight



 
Tap the icon on the system menu and enter into following interface.

**B A**

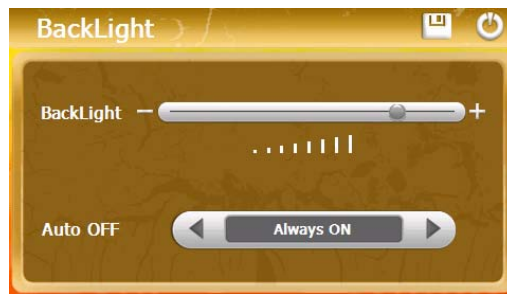

**D**


: previous

: saving

: backlight control

: select auto off time

### 3.10.3 Language

Tap the icon  on the system menu and enter into following interface.



### 3.10.4 FM Transmitter

Tap the icon A on the main menu or B on the system menu as below





**B**


And enter into following interface.




**E**

: previous

: saving

: select use FM

 : select emissive frequency of FM

: tap "+" or "-" icon to increase or decrease the emissive frequency of FM

### 3.10.5 DateTime

Tap the icon A on the main meun or B on the system meun as below



A





And enter into following interface.


B A



E

: previous

: saving

: tap  or  icon to adjust the time

: tap  or  icon to adjust the date

: tap “<” or “>” icon to adjust the time zone.



### 3.10.6 Calibration



Tap the icon on the system menu and enter into following interface.



### 3.10.7 System Info

Tap the icon A on the main menu or icon B on the System menu as below






And enter into the following display




### 3.10.8 USB

Tap the icon  on the System menu, to set the USB working mode.




### 3.10.9 Factory Reset

Tap the icon  on the System menu and enter into following interface.



### 3.10.10 Nav Path

Tap the icon  on the System menu and enter into following interface.



### 3.11 GPS Info

Tap the icon "GPS Info" on the main menu and enter into the following interface.



 
Tap the icon A or B or C on the main menu as below



→ B

And enter into the following interface

C

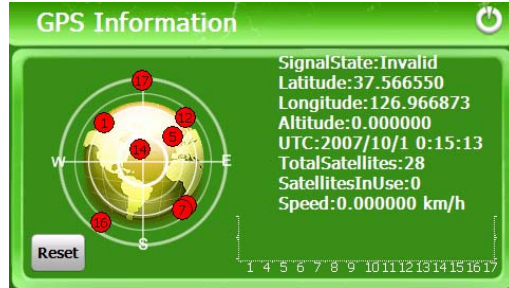

This document is for guidance only and does not form part of any contract, and may be subject to change without notice.