

audio AU232

User Manual



For your Safety

Warning

- To prevent electric shock or other injury, please do not disassemble or repackage this product.
- To prevent a fire, electric shock, or device malfunction, please do not use this product in a wet environment such as a bathroom.
If the product gets wet, do not turn it on. Contact a Service Center.
- Do not leave the player in areas above 40°C (104°F). Such as inside a sauna or parked car.
- This product is an electronic device; please avoid dropping it or subjecting it to other severe shock.
- For your safety and the safety of others, do not use headphones while driving, cycling or conducting any other similar activities.
- Avoid using your player at high volume levels, as it may result in permanent hearing damage. If you experience ringing in your ears while using the earphones, remove the earphones immediately and lower the volume.

Notice

- Do not dismantle the player personally or use alcohol, thinner or benzene to clean the surface of the player.
- Do not disconnect the player while formatting, uploading or downloading, otherwise it may cause a program error
- When transferring files, do not turn the power off or restart this device. No responsibility is provided for any damage to or loss of any program, data, or other information stored on any media or any part of this device serviced hereunder.
- Battery service life may vary according to actual using conditions, manufacturer and manufacturing date.

Table of contents

For your Safety

Chapter 1. Introduction	4
Chapter 2. Product Features	4
Chapter 3. Diagram of the player	5
Chapter 4. Package Contents	5
Chapter 5. Basic Functions.....	5
Power On/ Off.....	5
Hold Function	5
Connect to Computer and Data File Transmission	5
Volume Control.....	6
Chapter 6. System Menu	6
Main menu setup.....	6
MP3 PLAYER Mode	6
Setting Mode	6
Version	6
Chapter 7. Listen to Music	6
Music Playing/Stop	6
Music settings.....	7
Lyrics Display	7
Chapter 8. Setting mode.....	7
Equalizer setting	7
Repeat Mode	8
Screen	8
Language	9
Delete file	9
Auto Off	9
Storage.....	9
Chapter 9. Troubleshooting	10
Chapter 10. Service and Support.....	11
Chapter 11. Product specifications	11

λ Chapter 1. Introduction

Thanks for your purchase of the Apacer Audio MP3 Player.

Before operating the unit, please read this manual thoroughly and keep it for future reference. This manual will help you learn to use many of the exciting features of this device and make your experience more enjoyable.

This manual contains important safety measurements and operational information, so please read all the information carefully before you use the device in order to avoid any unexpected accidents.

We make no representation for the errors, omissions or updates of this document. We also make no representation for the data or music files lost of the player.


Microsoft Windows Media and Windows are trademarks of Microsoft Corporation. Trademarks of other products mentioned in this user's manual are owned by their respective companies or organizations.

λ Chapter 2. Product Features

- Slim and small for easy carrying (width 5.5cm,length 6cm, height 1.35cm)
- MP3/WMA playback with 6 EQ modes.
- Supports SD/SDHC/MMC card.
- Supports AAA battery.

Chapter 3. Diagram of the player

 1. ►► : **Next / Fast-forward** key
2. ◀◀ : **Previous / Rewind** key
3. + : **Vol + & Menu** key
4. - : **Vol - & Hold** key
5. ►|| : **PLAY & Power on / Power off** key
6. SD/MMC card slot
7. USB port
8. Earphone jack

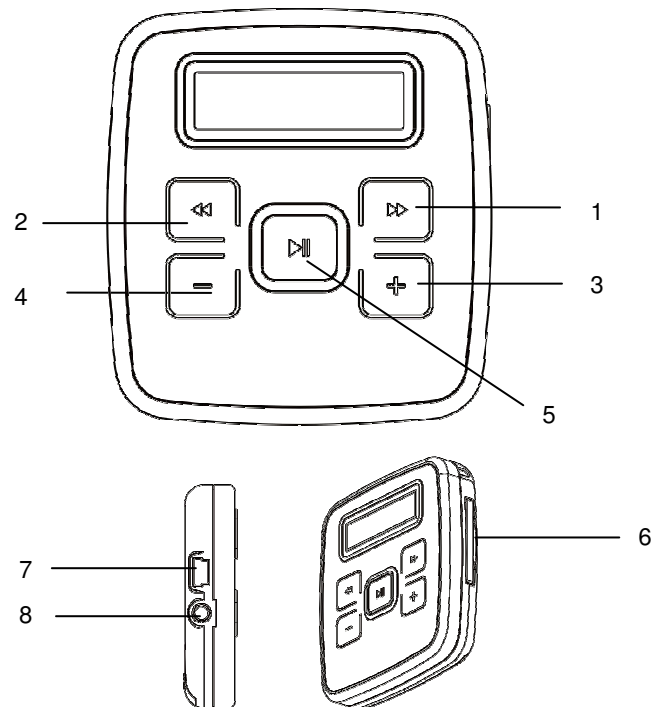

λ Chapter 4. Package Contents

- Audio Steno AU232 MP3 Player x 1
- Earphone x 1
- Quick Start Guide x 1
- USB Cable x 1
- AAA Battery x 1

λ Chapter 5. Basic Functions

● Power On/ Off

Power on: Press and hold the ►|| button for 3 seconds. Power is turned on.

Power off: Press and hold the ►|| button for 3 seconds. Power is turned off.

● Hold Function

Follow the below steps to enable Hold function to avoid the accidental operation.

Hold on: Press and hold the - key to lock all key.

Hold off: Press and hold the - key to unlock.

Note: Once the Hold function is enabled, it will prompt **LOCK** signal when any key is pressed.

● Connect to Computer and Data File Transmission

1. Connect the USB cable to your MP3 player, and then connect the other end of USB cable to the USB port on your PC.
2. Select and organize files and folders in preparation for transfer to your MP3 player.



- **Volume Control**

In the Music playing mode, short press the **+** key or **-** key to increase or decrease the volume.

λ Chapter 6. System Menu

- **Main menu setup**

1. Press and hold the **+** key to enter the main menu under any status after your turning on your player.
2. Press the **◀** or **▶** key to select: MP3 player; Setting; Version.
3. Press the **⏏** key to enter into the following setting:



- **MP3 PLAYER Mode**

See Listen to Music section.

- **Setting Mode**

See Setting Mode section.

- **Version**

1. Select “Version“ option in the Main menu , press **⏏** key to enter.
2. You can see firmware version.
3. Press **⏏** key again to exit.

λ Chapter 7. Listen to Music

- **Music Playing/Stop**

1. Press and hold the **⏏** key to power on the player.
2. Press the **⏏** key to play MP3 file, Press the **⏏** key again to pause.



Play



Pause

3. In playing or pause mode, press the ◀◀ or ▶▶ key to select previous or next track.
4. In playing mode, keep press the ◀◀ or ▶▶ key to fast rewind or fast forward the current track.

● Music settings

1. In Music mode, press and hold the ▶|| key for 2 seconds to stop.
2. In stop mode, press the ◀◀ or ▶▶ key to select track or file folder, press ▶|| to play your choosed track or folder.



Note:

1. If you want to play tracks in the memory card, please enter "Storage" option in the Setting menu and select "SD Card" option in advance.
2. "DIR" icon display folder indicator, press ▶|| to enter this folder for selecting track.
3. "DIR .." icon display exit indicator, press ▶|| to exit this folder.

● Lyrics Display

1. Save the lyrics files into your MP3 player with the same name as the music file, in *.LRC format.
2. The lyric of the music will display with the music playing.

The player only supports the Lyric Synchronous Display of for files that share the same name as the MP3 format file, e.g., the for a music file is named "Angel.mp3", the LRC file must be named "Angel.lrc", they must also be in the same directory.

λ Chapter 8. Setting mode

1. In the Main menu, press the ◀◀ or ▶▶ key to select "Setting" option, press the ▶|| key to enter.



2. Press the ◀◀ or ▶▶ key to select: EQ mode, Repeat mode, Screen, Language, Delete file, Auto Off, Storage, press the ▶|| key to enter.

● Equalizer setting

1. Select "EQ mode" option in the Setting menu, press ▶|| key to enter.



2. Press the ◀◀ or ▶▶ key to select: Normal, Rock, Jazz, Classic, Pop, Bass, Exit.



3. Press ▶▶ key to select and save.

● **Repeat Mode**

1. Select “Repeat mode” option in the Setting menu, press ▶▶ key to enter:



2. Press the ◀◀ or ▶▶ key to select: Normal, One, All, Random, Exit.



3. Press ▶▶ key to select and save.

● **Screen**

1. Select “Screen” option in the Setting menu, press ▶▶ key to enter.



2. Select “Contrast” option ,press ▶▶ key to enter
3. Press the ◀◀ or ▶▶ key to select: Level 1, Level 2, Level 3 & Exit.



4. Press ▶▶ key to select and save .
5. Select “Back light” option in the Screen menu, press ▶▶ key to enter.
6. Press the ◀◀ or ▶▶ key to select: 3 sec; 5 sec ; 10 sec & exit .



 
7. Press ▶▶ key to select and save.

- **Language**

1. Select “Language” option in the Setting menu, press the ► key to enter.



2. Press the ◀◀ or ▶▶ key to select the desired language.



3. Press the ► key to confirm your selection.

 
- **Delete file**

1. Select “Delete file” option in the Setting menu, press ► key to enter.



2. Press the ◀◀ or ▶▶ key to select file. Press ► to delete.

3. Press + or - to exit.



- **Auto Off**

1. Select “Auto Off “ option in the Setting menu, press ► key to enter:



2. Press the ◀◀ or ▶▶ key to select: 2 min, 5 min, 10 min, 15 min, No, Exit.

3. Press ► key to select and save.

- **Storage**

1. Select “Storage” option in the Setting menu, press the ► key to enter.



2. Press the ◀◀ or ▶▶ key to select music files from Flash (built-in memory) or SD card (memory card).



3. Press  key save and exit.

λ Chapter 9. Troubleshooting

If a malfunction is experienced, check the following.

Problem	Causes
● Power will not turn on	Power will not turn on if the AAA battery is not well placed in right direction.
● Power automatically turn off	The power is automatically turned off when the battery is low or running out. Please replace a new one.
● The screen will not turn on	<ul style="list-style-type: none"> ● The screen may not be visible under direct sunlight. ● Check if you have selected the “Power Save” setting.
● Playing is disabled	<ul style="list-style-type: none"> ● Check if the desired file has been saved in the memory. ● Check if the music file is correct or the format is not supported. ● Check if there is enough battery power.
● No music or sound	<ul style="list-style-type: none"> ● Check if the volume is not reduced to the 0 level. ● Check that the earphones are connected well and keep the earphones clean. ● Corrupted music files may result in unplayability, please confirm the integrity of the files. Re-format the disk.
● Connection to PC is disabled	<ul style="list-style-type: none"> ● Insert the USB cable well after the power is turned on, or plug in the player again via USB cable. ● Correctly reinstall the driver again.
● Abnormal Play Time Displayed while playing	Check if that the file is in VBR (Variable Bit Rate) format
● Actual memory capacity is different from what is listed on package	Small discrepancies are due to different file formats and algorithms used by various operating systems.
● Abnormal wording or file name display	Make sure that you have selected the correct language.

λ Chapter 10. Service and Support

Please contact our local distributor or our customer service center, if you have any technical problems.

Customer Service Center: <http://www.apacer.com>

λ Chapter 11. Product specifications

USB interface	USB 2.0
Built-in Memory Capacity	1GB/ 2GB/ 4GB
Flash Card Supported List	SD,SDHC,miniSD*,miniSDHC*,microSD*,microSDHC*,MMC,MMCplus,RS-MMC*, MMCmobile*, MMCmicro* (* = need adapter)
Display	Full dots screen
User interface	18 languages (ID3 display supported)
Music supported format	MP3: MP3 64Kbs~320Kbps, WMA: 64Kbs ~ 320Kbps
EQ modes	Normal, Rock, Pop, Classic, Bass, Jazz
S/N ratio	> 85 dB
Power source	AAA battery
Certification	CE, FCC,BSMI
Dimensions / Weight	(L)60 x (W)55 x (H)13.5mm / 25g
Operating temperature	-10°C ~ 40°C (14°F ~ 104°F)
Operating humidity	10 % ~ 75%
Support O/S	Windows 98(SE)*/ ME/ 2000/ XP/ Vista (* = need driver)
Supported file system	FAT16, FAT32
Accessories	Earphone, USB Cable, Quick Start Guide, AAA Battery

audio AU232

The copyright on this user manual remains with our company. No part of this user manual may be transmitted, reproduced or changed. The product specifications, design and this user manual's content are subject to change without notice.