

ENJOY 52 HOURS OF CONTINUOUS PLAYBACK & LOSSLESS MUSIC

Accessories Components,
Installation CD (Manual included),
QuickStartGuide, Earphones,
USB Cable

E50 MANUAL

Contents...

Chapter 01 Getting Started

- 4 Components
- 5 Locating the Controls
- 6 LCD Display
- 7 Installing Applications

Chapter 02 Basic Operations

- 9 Turning the Product on/off & Mode Selection
- 10 Using HOLD and RESET
- 11 Connecting Products

Chapter 03 Using the Product

- 15 Music
- 17 Videos
- 19 Pictures
- 21 FM Radio
- 23 Recordings
- 25 File Browser

Chapter 04 Setting up the E50

- 27 Setting up the E50

Chapter 05 Other Information

- 30 Using iriver plus 3
- 33 Using Windows Media Player 11
- 36 Copyrights/Certification/ Trademarks/Limited Liability
- 37 Safety Instructions
- 40 Troubleshooting

iriver E50

UJAGL E50

Chapter 01 Getting Started

4 Components

5 Locating the Controls

6 LCD Display

7 Installing Applications

 Installing iriver plus 3

 
 Installing Windows Media Player 11

Components

Components are subject to change without notice and may vary from images shown.



Quick Start Guide &
Warranty Card




E50



Installation CD
(with Instruction Guide)



 
Earphones



USB Cable

Locating the Controls

 Appearance, printed or contoured sections of the product may vary depending on model.

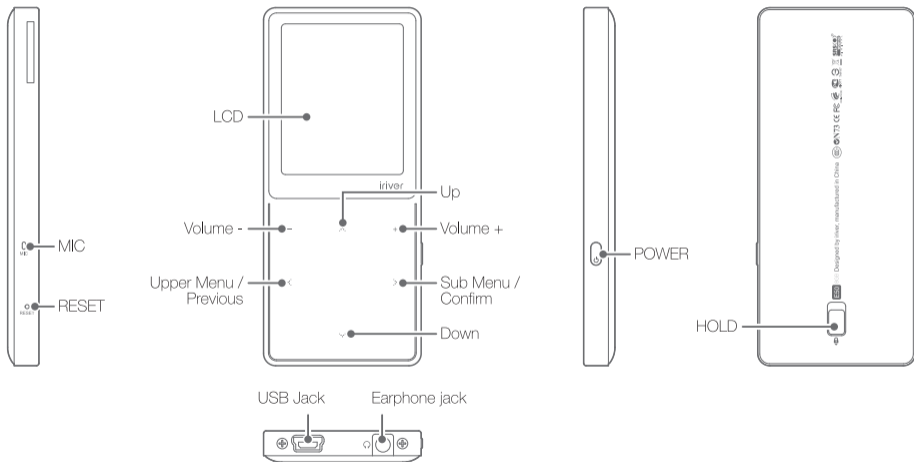


LCD Display


While playing music



 FM Radio

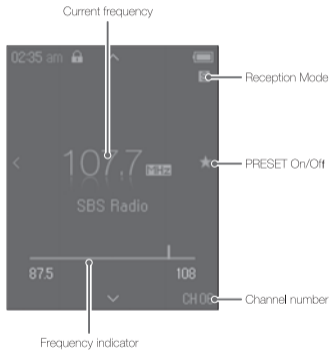

While recording voice

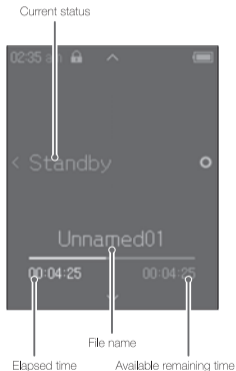 

Installing Applications

iriver plus 3 and Windows Media Player 11 are integrated software applications that efficiently manage various multimedia files. iriver plus 3 and Windows Media Player 11 give you freedom to transfer music, video and picture files from PC to the product.

Installing iriver plus 3

1. Insert the installation CD into your PC to display the installation process screen.
2. Click iriver plus 3 and complete the installation process by following the on-screen instructions.

Installing Windows Media Player 11

1. Insert the installation CD into your PC to display the installation process screen.
2. Click Windows Media Player 11 and complete the installation process by following the on-screen instructions.

■ Minimum requirements for software applications

• Windows® 2000/XP

- Intel® Pentium® II 233 MHz or higher processor speed
- 64 MB or greater memory
- 30 MB or greater hard disk space
- 16-bit enabled speaker and sound card
- Microsoft Internet Explorer version 6.0 or later
- SVGA or high resolution monitor (1024x768 resolution or greater)

• Windows® Vista (Windows® Vista only supports the 32-bit version and does not support the 64-bit version.)

- Intel® Pentium® II 800MHz or higher processor speed
- 512 MB or greater memory
- 20 MB or greater hard disk space
- 16-bit enabled speaker and sound card
- Microsoft Internet Explorer version 6.0 or later
- SVGA or high resolution monitor (1024x768 resolution or greater)

■ For more information on using iriver plus 3, refer to pages 30–32.

■ For more information on using Windows Media Player 11, refer to pages 33–35.

■ To connect the product to iriver plus 3, select SET > Advanced > Connection Type and set to MSC and to connect the product to Windows Media Player 11, select SET > Advanced > Connection Type and set to MTR. (Refer to page 28.)

Chapter 02 Basic Operations

- 9 Turning the Product on/off & Mode Selection
 - Turning the Product on/off
 - Mode Selection
- 10 Using HOLD and RESET
 - Using HOLD
 - Using RESET
- 11 Connecting Products
 - Connecting Earphones
 - Charging the Product
 - Connecting the Product to Your PC
 - Disconnecting the Product from Your PC
 - Copying files / folders to the product
 - Deleting files / folders from the product

Turning the Product on/off & Mode Selection

Turning the Product on/off

1. Press the [⏻] button on the product to turn it on.
2. Press and hold the [⏻] button on the product again to turn it off.



- This product has an automatic power saving function to save battery power. Based on the settings in power save mode, the product will be automatically turned off after a pre-determined period without operation. For more information on setting this mode, refer to Settings > Timer > Auto Power off. (Refer to page 28.)

Mode Selection


1. Turn on the power to display the main mode screen.
While operating any mode, press and hold the [⏪] button to display the main mode screen.
2. Press the [⏩ / ⏪] button to select the mode and press the [⏩] button to enter the mode.

- In the main mode, press and hold [⏩] to play music you have played recently.
- In the main mode, press and hold [⏪] to start recording.

Using HOLD and RESET

Using HOLD

1. Slide the HOLD switch to the direction of arrow to lock the product.

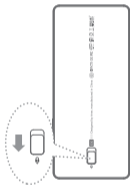

2. Slide the HOLD switch to the opposite direction of arrow to unlock the product.

Using RESET

1. If the product stops and fails to respond to any operation commands, press the RESET pinhole at the left side of product.




- If you enable the reset function, the Date & Time setting will be deleted.
- The product will not be turned on after performing reset. Press the [⏻] button on the product to turn it on.

Connecting Products

Connecting Earphones

1. Connect earphones to the Earphone jack.

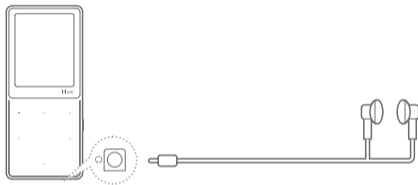

Charging the Product

1. Turn on your PC and connect the E50 to it using the USB cable provided.
2. The integrated battery will charge automatically.



- Do not use any USB cable other than the one included with the product. This may cause a malfunction.
- Check if the product is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as some types of keyboards and USB hubs without integrated power may not provide enough power to charge.
- While the PC is switched to standby mode, the product may not be charged.
- Charge the product only at room temperature. The product may not be charged in extremely hot or cold place.
- The battery will be fully charged within about 2.5 hours. (Based on fully discharged, power OFF)
- The available usage time of charged battery becomes short over time.
- The charging time might be extended if you use the product while charging.

Connecting Products

Connecting the E50 to Your PC

1. Press the [⏻] button on the product to turn it on.
2. Turn on your PC and connect the E50 to it using the USB cable provided.

 


3. The Select Connection Type message appears on the screen.
 - Charge & Data Transfer : The product is currently being charged and data is being transferred.
 - Charge & Play : The product is currently being charged and a file is being played.
 - Charge :The product is currently being charged.

- It is recommended to stop all operations before connect the product to your PC for optimum performance.
- Check if the product is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as some types of keyboards and USB hubs without integrated power may not provide enough power to charge.

Disconnecting the E50 from Your PC

1. Click the icon on the taskbar to disconnect the product using the Safely Remove Hardware menu.



2. Click the Stop button to confirm disconnection.




- The icon on the taskbar may be hidden in some operating systems. Click Show hidden icons to display the hidden icon.
- The Safely Remove Hardware function may not be available while using some applications such as Windows Explorer or Windows Media Player. Close all applications first before performing the Safely Remove Hardware.
- If the Safely Remove Hardware is not performed properly, try again after a few minutes. If the product is removed without observing the above process, data in the product might be damaged.

Connecting Products

Copying files / folders to the product

1. Select the desired files / folders in your PC and drag & drop to the drive which appears as the product.

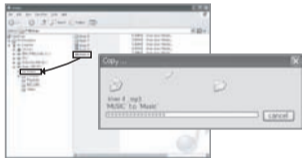

Deleting files / folders from the product

1. After selecting the desired file / folder, right-click with your mouse and select Delete.
2. Click Yes in the Confirm File Delete / Confirm Folder Delete popup window to delete the file / folder.



- Always properly connect the product and PC.
- When you transfer data, never disconnect it or turn off the power to protect your data from damage.
- Transfer speed may vary depending on your computer and/or OS environments.
- It is recommended to save media files using Iriver plus 3 or Windows Media Player 11.

Chapter 03 Using the Product

- 15 Music
 - Selecting Music
 - Playing Music
 - Additional Features
- 17 VIDEO
 - Selecting Video
 - Playing Video
 - Additional Features
- 19 Pictures
 - Selecting Picture
 - Viewing Picture
 - Additional Features
- 21 FM Radio
 - Listening to FM RADIO
 - Listening to Recorded FM Radio
 - Additional Features
- 23 Recordings
 - Recording Voice
 - Additional Features
- 25 File Browser
 - Browsing Device
 - Deleting File

Music

Selecting Music

1. In the main mode, select MUSIC to display the music list.

The list is displayed by Now Playing, All Music, Albums, Artists, Genres or My Rating.

2. Press the [⏪ , ⏩ , ⏴ , ⏵] button to select the music and press the [▶] button to play it.

⏪ : Moves to the upper list / folder

⏩ : Moves to the sub list / Plays selected file.

⏴ / ⏵ : Moves within the list

Playing Music

- While playing, press the [+ / -] button to control the volume.
- While playing, press the [⏸] button to pause / resume.
- While playing, press and hold the [⏪ / ⏩] button to fast reverse or fast forward.
- While playing, press the [⏮ / ⏭] button to play the previous / next music.

- In Dir List, you can browse music by folder.
- In the Music mode, only music files in the Music folder will be displayed.
To play other music files in any other folder, use the File Browser mode.
- Supported file formats: MP3(8~320Kbps), WMA(8~384Kbps), WAV, APE, FLAC
- You can manage your playlist using iriver plus 3 or Windows Media Player 11.

Music

Additional Features










1. While playing file or in standby screen, press and hold the [⏏] button to display the additional features.
2. Press the [⏏ / ⏏] button to select the additional feature and press the [⏏] button to display the window for setting it up.
◀ : Moves to the upper list
3. Press the [⏏ / ⏏] button to set the feature up and press the [⏏] button to save / operate it.

-
- **AB Repeat:** Plays between point A and B repeatedly.
 - Select AB Repeat and press the [⏏] button to select the point A and display the playing screen. Press the [⏏] button again to select the point B. Now the player plays between point A and B repeatedly. Press the [⏏] button again to deactivate the repeat playback.
 - Select the Repeat Times and Repeat Interval to customize your repeat playback.
 - **Play Mode:** Sets the play mode.
 - **Study Mode:** While playing, sets skip interval activated by pressing the [UP] / [DOWN] button.
(The Study Mode is disabled when it is set to OFF.)

- **Add Bookmark:** Bookmarks a specific point of time.
- **Select EQ:** Sets the EQ.
- **Setup Sound:** Determines the sound setting.
 - Custom EQ: Changes levels of each frequency range to create your own equalization.
 - SRS WOW HD: Sets the levels of 3D sound effect.
 - SRS: Customizes the SRS 3D sound effects.
 - TruBass: Customizes the bass sound level
 - Focus: Sets sound clarity.
 - WOW: Sets the proper boost level according to earphone type.
 - Definition: Produces sharper and clearer sound.
 - Fade-In: Volume increases gradually when playback starts.
- **My Rating:** Classifies your favorite music by star ratings.
- **Scan Speed:** Sets the speed of music scanning.
- **Playback Speed:** Sets the playback speed of music.
- **Lyric Display:** Sets lyric display of selected music.
- **Repeat Times:** Set times to repeat A-B.
- **Repeat Interval:** Sets interval for A-B repeat.
- **Delete File :** Deletes the selected file.
- **Information:** Displays information for the selected file.




VIDEO

Selecting Video

1. In the main mode, select Videos to display the video list.
2. In the list, press the [, , , ] button to select a video and press the [] button to play it.
 -  : Moves to the upper list / folder
 -  : Moves to the sub list / Plays selected file.
 -  /  : Moves within the list

- While playing video, the picture orientation and key directions are inverted by screen orientation.
- In Dir List, you can browse video by folder.
- In the Videos mode, only video files in the Video folder will be displayed. To play other video files in any other folder, use the File Browser mode.
- Supported file formats: SMV
- Be sure to use iriver plus 3 when transferring video files. Otherwise, unexpected errors occur during video playback.
- If there is a caption file (.smi), you can encode it together with video file using iriver plus 3. (Be sure to match both names of video and caption files.)

Playing Video

- While playing, press the [+ / -] button to control the volume.
- While playing, press the [] button to pause / resume.
- While playing, press and hold the [ / ] button to fast reverse or fast forward.

VIDEO

Additional Features

1. While playing file or in standby screen, press and hold the [⏮] button to display the additional features.
 2. Press the [⏮ / ⏭] button to select the additional feature and press the [⏮] button to display the window for setting it up.
 - ◀ : Moves to the upper list
 3. Press the [⏮ / ⏭] button to set the feature up and press the [⏮] button to save / operate it.
- Play Mode: Sets the repeat playback mode of video file.
 - Resume: Selects whether video is resumed from the last played point or from the beginning.
 - Sequential Play: Sets whether to play next file sequentially.
 - Information: Displays information for the selected file.

- While playing video, the picture orientation and key directions are inverted by screen orientation.

Pictures

Selecting Picture

1. In the main mode, select PICTURE to display the picture list.
2. In the list, press the [⏪ , ⏩ , ⏴ , ⏵] button to select the picture and press the [▶] button to play it with full screen.

⏴ : Moves to upper folder.

⏵ : Moves to the sub folder. Displays the picture in full screen.

⏪ / ⏩ : Moves within the list

Viewing Picture

- While viewing pictures, press the [▶] button to start / stop slide show.
- While viewing pictures, press the [⏪ / ⏩] button to play the previous / next picture.

- In Dir List, you can browse picture by folder.
- In the Pictures mode, only pictures in the picture folder are displayed. To browse and play picture files in other folders, use the File Browser mode.
- Supported file formats:
JPG, BMP (Some file types may not be fully compatible.)
- Be sure to use iriver plus 3 when you transfer image file. Otherwise, unexpected errors might occur during image playback.

Pictures

Additional Features

1. While viewing pictures, press and hold the [⏏] button to display additional features.
 2. Press the [⏏ / ⏏] button to select the additional feature and press the [⏏] button to display the window for setting it up.
 - ⏏ : Moves to the upper list
 3. Press the [⏏ / ⏏] button to set the feature up and press the [⏏] button to save / operate it.
- Image Delay : Selects the amount of time each picture is displayed on the screen during a slide show.
 - Rotate : Sets the direction of displayed image.
 - Zoom : Sets the ratio to enlarge picture.
 - Information : Displays information for the selected file.










■ Some picture files with low resolution might not support the Zoom function.

FM Radio

Listening to FM RADIO

1. In the main mode, select FM Radio to display recently used Preset channels.
2. Press the [ / ] button to select the FM radio station.

Listening to Recorded FM Radio

- While listening to FM radio, press the [ / ] button to control the volume.
- Press the [] button to activate / deactivate Preset.
- After deactivating Preset, press the [ / ] button to move to the previous / next frequency.
- While deactivating Preset, press and hold the [ / ] button to move to the available previous / next frequency.
- After activating preset, press and hold the [ / ] to move to the saved previous / next preset.

FM Radio

Additional Features

1. While listening, press and hold the [⏸] button to display the additional features.
2. Press the [⏪ / ⏩] button to select the additional feature and press the [⏸] button to display the window for setting it up.
⏪ : Moves to the upper list
3. Press the [⏪ / ⏩] button to set the feature up and press the [⏸] button to save / operate it.

-
- **Record** : Records the FM radio which you are listening to.
Select Record to move to the recording standby screen. Press the [⏸] button to start recording. Press it again to stop recording and return to the recording standby mode. Press the [⏪] button to return to the radio reception mode.
 - **Timer Recording** : Records radio broadcasting at a scheduled time.
You can set several options such as Timer On/OFF, Preset, Start Time, Recording Duration, and Set To.
 - **Saved Recordings** : Displays the list of recorded files.
- Press the [⏪ / ⏩] button to select the file and press the [⏸] button to play it.

- **Save Preset / Delete Preset**: Stores the current frequency to the channel. If the frequency is already stored, the existing channel will be deleted.
- **Auto Preset**: Automatically scans and stores channel frequencies.
* Up to 20 channels can be stored.
- **Preset List**: Displays saved channel list.
- **Tuner Region**: Sets the frequency range based on local standard.
 - Korea / US: 87.5 - 108.0 MHz
 - Japan: 76.0 - 108.0 MHz
 - Europe: 87.50 - 108.0 MHz

- The cord of earphones functions as an antenna during radio reception. (Use the supplied earphones. If you use other earphones, the reception rate might be deteriorated.)
- You cannot control the volume while recording FM radio.
- If the remaining memory space or power is insufficient, recording will be automatically stopped.
- The recorded file will be saved in the FM Recordings in the following format.
TUNERYMMDDXXX.WMA (YY: Year, MM: Month, DD: Day, XXX: Sequential number)

Recordings

Recording Voice

1. In the main mode, select Recordings to display the recording standby screen.
2. Press the [⏸] button to start recording. Press the [⏸] button again to complete recording and save the recorded file.

- You cannot control the volume while recording.
- If the remaining memory space or power is insufficient, recording will be automatically stopped.
- The recorded file will be saved in the Recordings in the following format. : VOICEYYMMDDXXX.WMA (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size per one minute varies by the recording quality.
Low: Approximately 480KB / Middle: Approximately 720KB / High: Approximately 960KB
- In the main mode, press and hold the [⏪] button to start recording.

Recordings










Additional Features

1. In the recording standby screen, press and hold the [⏸] button to display additional features.
 2. Press the [⏸ / ⏪] button to select the additional feature and press the [⏸] button to display the window for setting it up.
⏪ : Moves to the upper list
 3. Press the [⏸ / ⏪] button to set the feature up and press the [⏸] button to save / operate it.
- Recorded File List : Displays the Recorded File List.
- Press the [⏸ / ⏪] button to select the file and press the [⏸] button to play it.
 - Voice Recording Quality: Sets the quality of recorded voice.
 - Voice Detector: Records voice only when sound can be detected.





File Browser

You can manually check and play various file saved in the product.

Browsing Device

1. In the main mode, select File Browser to display the file list.
2. In the list, press the [ ,  ,  , ] button to select the file and press the [] button to play it.
 -  : Moves to upper folder.
 -  : Moves to the sub folder / Plays selected file.
 -  /  : Moves within the list

Deleting File

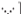1. In the file list screen, select the file and press and hold the [] button to display the confirmation message.
2. Press the [ / ] to select Yes and press the [] button to delete the selected file.

- To browse and play music files in folders other than Music folder, use the File Browser mode.
- To browse and play video files in other folders, use the File Browser mode.
- To browse and play picture files in folders other than the Picture folder, use the File Browser mode.

Chapter 04 Setting up the E50

27 Setting up the E50

- Selecting Setting

- Date & Time

- Display

- Timer











- Advanced

- Language

Setting up the E50

You can configure your own settings in the E50.

Selecting Setting

1. In the main mode, select Settings to display the settings list.
2. Press the [ / ] button to select the setting and press the [] button to display the setup window.
 : Moves to the upper list
3. Press the [ / ] button to select the setting and press the [] button to display the window for setting it up.
4. Press the [ / ] button to set up the feature and press the [] button to save it.

Date & Time

- Sets the current time and date.
 : Moves among fields.  /  : Sets the value of each field.

Display

- Backlight
Sets the amount of time to keep the backlight ON.
- Brightness
Changes LCD display brightness.
- Theme
Selects a display theme.

Setting up the E50

Timer

- Auto Power off
Automatically turns the power off after a pre-determined period without operation.
- Sleep
Automatically turns the power off after a predetermined time.

Advanced

- Rebuild Library
Recreates the library data of a file.
- Connection Type
Selects the type for transferring file from / to PC.
 - MSC (UMS): Using iriver plus 3, transfers file using the MSC connection type.
 - MTP: Using Windows Media Player 11, transfers file with the MTP connection type.

- Format Device
Deletes all data saved in the product.
- System Information
Displays system information of the product.
- Reset All Settings
Resets the product to the factory setting.

- Be careful not to delete valuable data because changing Connection Type will delete all data in the product.
- Mass Storage Class (MSC) is a traditional UMS type.

Language

- Menu Language
Selects language for menu.
- Countries
elects language for tag and text.

Chapter 05 Other Information

- 30 Using iriver plus 3
 - Adding Media to Library
 - Ripping Songs from a CD
 - Transferring Media to the Product
 - Using iriver plus 3
 - Using Windows Explorer
 - Initializing Disk
 - Upgrading Firmware
- 33 Using Windows Media Player 11
 - Adding Media to Library
 - Ripping Songs from a CD
 - Transferring Media to the Product
 - Initializing Disk
 - Upgrading Firmware
- 36 Copyrights/Certification/Trademarks/Limited Liability
- 37 Safety Instructions
 - Product Safety
 - Other
- 40 Troubleshooting
 - Please check out!

Using iriver plus 3

To connect the product to iriver plus 3, select Settings > Advanced > Connection Type and set it to MSC.

Adding Media to Library

1. When you run iriver plus 3 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music, picture, and video to the library.


Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run iriver plus 3.
2. In iriver plus 3, select the checkbox from Music > CD Drive and click CD Ripping in bottom left.
3. After ripping song, select the All Music to check whether the ripped song is added to the library.

Using iriver plus 3

Transferring Media to the Product

- Using iriver plus 3

1. Connect the product to the USB jack of your PC and run iriver plus 3.
2. Select the checkbox beside the file to transfer and click [].
3. The selected file starts to transfer and the progress status is displayed in the Status window on bottom left.
4. Now you can find the selected music in your library.

- Using Windows Explorer

1. Connect the product to the USB jack of your PC.
2. Copy the contents to proper folders as below.
Picture: iriver E50/Pictures
Video: iriver E50/Video
Music: iriver E50/Music

Using iriver plus 3

Initializing Disk

1. Connect the product to the USB jack of your PC and run iriver plus 3.
2. Select Tools > Portable Device > Initialize Disk and click Start when the initialization confirmation message appears.
3. The initialization process is completed and the product is disconnected from your PC.

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format function integrated in the E50.

Upgrading Firmware

1. Connect the product to the USB jack of internet enabled PC and run iriver plus 3.
2. Select Tools > Portable Device > Firmware Upgrade and complete the upgrade process by following the on-screen instructions.

- Do not disconnect the product from PC while downloading firmware upgrade file.
- Once the download is completed, disconnect the product to activate the firmware upgrade.
- If the already installed firmware is the latest version, the message to confirm latest version appears. When connect the product to your PC, if there is latest firmware, the instruction message appears automatically.

Using Windows Media Player 11

To connect the product to Windows Media Player 11, select Settings > Advanced > Connection type and set to MTP.

Adding Media to Library

1. When you run Windows Media Player 11, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and picture to the library.

Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run Windows Media Player 11.
2. Select the Ripping tab on the Windows Media Player 11. Select the checkbox from and click the Start Ripping in the bottom left.
3. The ripped music will be stored in My Documents > My Music and automatically added to library.

Using Windows Media Player 11

Transferring Media to the Product

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting the file in your PC, drag & drop it to the right pane.
3. Click Start Sync in the bottom left to start transferring.
4. Now you can find the selected music in your library.

Using Windows Media Player 11

Initializing Disk

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting iriver E50, click the right mouse button and select Format. Click OK when the message to confirm initialization appears.
3. The initialization process is completed and the product is disconnected from your PC.

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format function integrated in the E50.

Firmware upgrade in Windows Media Player 11

1. Connect the product to the USB jack of your PC.
2. Run iriver Firmware Updater application in the installation CD and complete the upgrade process by following the on-screen instructions.

- Do not disconnect the product from PC while upgrading firmware.

Copyrights/Certification/Trademarks/Limited Liability

Copyrights

Reigncom Limited holds all rights for the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by Reigncom Limited. You may be subject to criminal penalties for illegal use of any part of this manual.

Software, audio and video including intellectual property are protected by copyright and international laws. Reproduction or distribution of contents created with this product is the responsibility of the user.

The companies, institutions, products, people and events used in examples are for demonstration purposes only. Their appearance in this manual does not imply any affiliation between Reigncom and other parties.

Users are responsible for observing all copyrights and intellectual property laws.

©1999~2008 Reigncom Limited. All rights reserved.

Certification

KCC / FCC / CE

Class B Digital Device (Residential Communication Device). This device has been tested and found to comply with the requirements for a Class B digital device and designed to provide reasonable protection against harmful interference in a residential installation.

Trademarks

Windows 2000, Windows XP, Windows Vista and Windows Media Player are the registered trademarks of Microsoft Corp.



is a trademark of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc. Labs, Inc.

Limited Liability

Neither the manufacturer, importers nor dealers are responsible for any accidental damage, including bodily injury or any damages resulting from misuse or inappropriate operation on behalf of the user.

The information on this manual is prepared with the current player specifications. The manufacturer, Reigncom Limited, shall routinely add new features to the product and may continuously apply new technologies hereafter. All standards may be changed at any time without prior notice.

Reigncom is not responsible for any damage or loss of data incurred through use of the product.

Safety Instructions

Product Safety

- Do not display the same image on the screen for an extended amount of time since this may cause a ghosting effect.
- Do not place objects such as coins or hair pins inside the product.
This may cause malfunction.
- Do not place heavy objects on the product.
This may cause damage and malfunction.
- Do not expose the player to sources of moisture such as water, beverages, chemicals, cosmetics, and so on. (Damage caused by submersion may not be covered by warranty regardless of the warranty period.)
This may cause damage and malfunction.
- Keep away from harsh environments including humid, dusty, and smoky areas.
This may cause malfunction.
- Never dismantle, repair, or rebuild your player without authorization.
This may cause damage and malfunction.
- Keep out of direct sunlight and extreme heat and cold (-5° - 40°).
This may cause malfunction.
- Do not keep the product close to magnetic substance such as magnets, TVs, monitors, or speaker.
This may cause malfunction.
- Do not clean with chemicals or detergents.
This may cause malfunction.
- Do not drop or subject the device to impact.
This may cause damage and malfunction.

Safety Instructions

Product Safety

- Do not press more than two buttons simultaneously.
This may cause damage and malfunction.
- Do not disconnect the product from your PC while transferring data.
This may cause malfunction.
- Try when possible to connect the product to the rear USB port in your PC.
In some custom- assembled PCs, improper USB port may cause malfunction.
- Do not connect any device or object other than earphones to the Earphone jack.
This may cause damage and malfunction.

Safety Instructions

Other

- Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.
This is dangerous and might be illegal in some areas.
- Do not use the product while in motion, such as while driving, walking, or mountain climbing.
This may cause injury.
- Use the product in a safe place to avoid accidents.
This may cause injury.
- Always be careful to steer clear of nearby objects if you use the product while in motion.
This may cause injury.
- It is not recommended to use the product during electrical storms.
This may cause injury.
- Reduce volume or stop using the player if you experience ringing in your ears.
This may cause injury.
- Do not listen to music via headphones/earphones at high volume for a long time.
This may cause injury.
- Do not use headphones / earphones at high volume.
This may cause injury.
- Keep headphone /earphone cords under control in order to avoid getting caught on nearby objects.
This may cause injury.
- Do not sleep with headphones / earphones in the ears. Do not use headphones / earphones for excessive periods of time.
This may cause injury.

Troubleshooting

Please check out!

- The product will not power on!
 - Check whether the battery is discharged. Charge the product and turn it on again.
 - Insert a thin and pointed object into the reset pinhole.
- The product cannot be charged after connecting power.
 - Check whether the product and your PC are firmly connected.
- The product cannot be connected properly using the USB cable.
 - Check whether the product and your PC are firmly connected.
- The memory space has changed after formatting.
 - The memory space may be changed depending on the operating system.
- Poor radio reception with heavy interference!
 - Check whether the earphones jack is dirty.
 - Check whether the earphones are connected.
 - Adjust the position of the player and earphones.
 - Turn off any nearby electronic equipment to avoid potential interference.
- The screen turns off frequently.
 - To save power consumption, the screen is designed to be turned off after designated time. Set this amount of time in Settings > Display > Backlight.
- The screen is not clear.
 - Check whether the screen is dirty.
- No sound during playback!
 - Check whether the volume is set to "0".
 - Check whether the earphones plug or connection jack is dirty.
 - Check whether the music file is corrupted
- Windows Media Player 11 cannot be installed.
 - Check whether your PC is running Windows® XP or Windows® Vista Windows Media Player 11 only supports Windows® XP or Windows® Vista. It is recommended to use iriver plus 3 or removable disk function in operating systems other than Windows® XP or Windows® Vista.

Federal Communications Commission

FCC RF

- CAUTION :
Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- CAUTION : Exposure to Radio Frequency Radiation.
Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation.
The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.
- This device complies with part 15 of the FCC Rules.
- Operation is subject to the following two Conditions :
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation. for compliance could void the user's authority to operate the equipment.

SAFETY

- CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.