

FUN WITH FULL METAL BODY P7_ MANUAL



Contents...

Chapter 01 Getting Started

- 4 Components
- 5 Names of Parts
- 6 Installing Application

Chapter 02 Basic Operations

- 8 Turning the Product ON/OFF
- 9 Touch Screen
- 10 Selecting Modes
- 11 Using HOLD and RESET
- 12 Connecting Your Device

Chapter 03 Using P7

- 17 MUSIC
- 20 VIDEO
- 23 PICTURE
- 26 RADIO
- 29 REC
- 32 TEXT
- 35 EXTRA | CLOCK
- 36 EXTRA | CALENDAR
- 36 EXTRA | CALCULATOR
- 37 EXTRA | WORLD CLOCK

Chapter 04 Setting Up P7

- 39 Setting Up P7

Chapter 05 Other Information

- 43 Using iriver plus 3
- 46 Using Windows Media Player 11
- 49 Copyrights/Certification/Trademarks/
Limited Liability
- 50 Safety Instructions
- 53 Troubleshooting

F U N W I T H F U L L M E T A L B O D Y P 7

Chapter 01 Getting Started

4 Components

5 Names of Parts

 
6 Installing Application

 Installing iriver plus 3

 Installing Windows Media Player 11

Components

Components are subject to change without notice for better performance and quality of the product.




P7



Earphones



 
Stylus Pen



Quick Start Guide & Warranty Card



 
Installation CD (with Instruction Guide)



USB Cable

Names of Parts

Appearance, printed or contoured sections of the product may vary depending on the model.

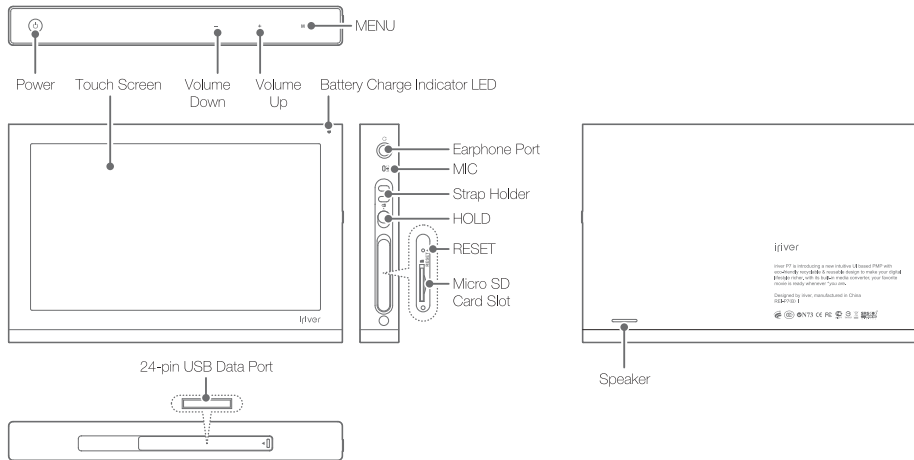

Installing Application

iriver plus 3 and Windows Media Player 11 are integrated software applications that efficiently manage various multimedia files. iriver plus 3 and Windows Media Player 11 give you freedom to transfer music, video and picture files from PC to the product.



Installing iriver plus 3

1. Insert the provided installation CD into your PC to display the application installation screen.
2. Click iriver plus 3 and complete the installation process by following the on-screen instructions

Installing Windows Media Player 11

1. Insert the installation CD into your PC to display the installation process screen.
2. Click Windows Media Player 11 and complete the installation process by following the on-screen instructions.

■ Minimum requirements for software applications:

- For Windows® 2000/XP
 - Intel® Pentium® I 233 MHz or higher processor speed
 - Microsoft Internet Explorer version 6.0 or later
 - 64 MB or greater memory
 - SVGA or higher resolution monitor (1024x768 resolution or greater)
 - 30 MB or greater hard disk space
 - 16-bit enabled speaker and sound card
- For Windows® Vista (Windows® Vista only supports the 32-bit version and does not support the 64-bit version.)
 - Intel® Pentium® I 800 MHz or higher processor speed
 - Microsoft Internet Explorer version 6.0 or later
 - 512 MB or greater memory
 - SVGA or higher resolution monitor (1024x768 resolution or greater)
 - 20 MB or greater hard disk space
 - 16-bit enabled speaker and sound card
- For more information on using iriver plus 3, refer to pages 43-45.
- For more information on using Windows Media Player 11, refer to pages 46-48.
- To connect the product to iriver plus 3, select  > Advanced > Connection Type and set to MSC and to connect the product to Windows Media Player 11, select  > Advanced > Connection Type and set to MTP. (Refer to page 40.)


Chapter 02 Basic Operations

- 8 Turning the Product ON/OFF
 - Turning the Product ON
 - Turning the Product OFF
- 9 Touch Screen
 - Using the Touch Screen
- 10 Selecting Modes
 - Selecting Modes
- 11 Using HOLD and RESET
 - Using HOLD
 - Using RESET
- 12 Connecting Your Device
 - Connecting Earphones
 - Charging the Product
 - Inserting/Removing the Micro SD Card
 - Recommended Micro SD Card
 - Connecting P7 to Your PC
 - Disconnecting P7 from Your PC
 - Copying files/folders to P7
 - Deleting files/folders from P7

Turning the Product ON/OFF

Turning on the Product

1. Press the [⏻] button on the product to turn it on.

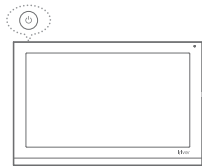

Turning off the Product



1. Press and hold the [⏻] button on the product again to turn it off.

- This product has an automatic power saving function to save battery power. Based on the settings in the Power Save mode, the product will automatically turn off after a pre-determined period without operation. For more information on setting this mode, please refer to [⚙️ > Timer > Auto Power OFF] (Refer to page 40.)

Touch Screen

Using the Touch Screen

1. The P7 has a touch screen system which operates according to the user's direct touch.
Touch one of the icons displayed on the screen to operate.

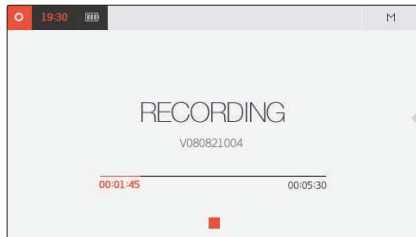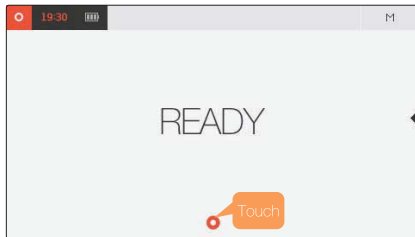


- Do not press the touch screen with a sharp object or with excessive pressure because it may cause permanent damage on the screen.

Selecting Modes

Selection Mode


1. Turn on the power to display the main menu screen.
Touch the [M] icon during any mode to return to the main menu screen.
2. Touch a mode (Extra, Music, Video, Radio, Recording, Setting, Picture or Text) you want to operate.

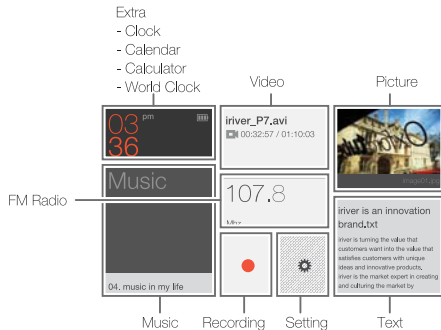

Using HOLD and RESET

Using HOLD


1. Slide the HOLD switch in the direction of the arrow to lock the product.

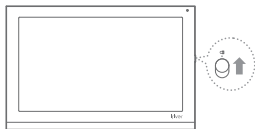

2. Slide the HOLD switch in the opposite direction of the arrow to unlock the product.

Using RESET

1. If your product does not respond, remove the Micro SD card cover and press and release the RESET pinhole.

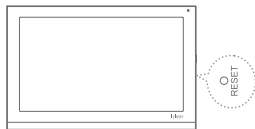


- The RESET function does not remove the date/time setting and data from your product.
- P7 will automatically turn off when you reset. Press the [⏻] button to turn P7 back on.

Connecting Your Device

Connecting Earphones

1. Connect your earphones to the Headphone port.

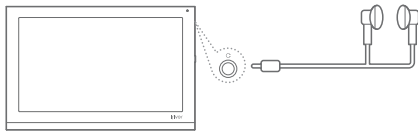

Charging the Product

1. Push and open the USB data port on P7 in the direction of the arrow.
2. Turn on your PC and connect P7 to it using the provided USB cable.
3. The internal battery automatically starts to charge.




- Do not use any USB cable other than the one included with the product. This may cause malfunction.
- Check if the product is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as keyboards and USB hubs without integrated power, may not provide enough power to charge your product.
- The product may not be charged while your PC is in standby mode.
- Charge the product **only** at room temperature. The product may not be charged in extremely hot or cold temperatures.
- The battery takes about 7 hours to be **fully** charged by a USB cable. (Based on when product is **fully** discharged and the power is off.)
- And about 5 hours by a TTA-certified 24-pin mobile charger. (Based on when product is **fully** discharged, power is off, and TTA charger is 750 mA.)
- The available usage time of a charged battery becomes shorter over time.
- It may take longer to **fully** charge your device or may not be **fully** charged if you use it while charging.

Connecting Your Device

Inserting/Removing the Micro SD Card

1. Open the cover of the RESET/Micro SD Card slot while the power of the product is off.
2. Place the Micro SD Card in the direction as shown in the image and slightly press and push the card into the slot.
3. Press again to remove the card.

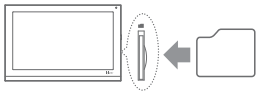

- Insert/remove the Micro SD Card while the power of the product is off.
- Do not insert the Micro SD Card with force. This may cause the product to malfunction or damage to the Micro SD Card.
- Do not remove the Micro SD Card while in use. This may cause data loss, product malfunction or damage to the Micro SD Card.
- Try not to insert and remove the Micro SD card frequently.
- Inserting the Micro SD card in the wrong way may cause product malfunction and the card may be difficult to remove.

Recommended Micro SD Card


Brand	SanDisk, Transcend
-------	--------------------

- Using a Micro SD Card other than the recommended card may cause malfunction.
- The transfer speed of the Micro SD Card may vary depending on your PC specifications.
- The Micro SD Card cannot be formatted through the product. The card can only be formatted with iriver plus 3 or a card reader.
- Formatting the Micro SD Card will delete all data within the card; therefore, it is important to backup data before formatting.
- FAT system is recommended when formatting the Micro SD Card.
- Please try to format the card if the Micro SD Card cannot be recognized or causes malfunction.
- The Micro SD Card is not included with the product. Please purchase one separately.
- A Micro SD Card of 8 GB is recommended for this product.

Connecting Your Device

Connecting P7 to Your PC

1. Push and open the USB data port on P7 in the direction of the arrow
2. Turn on your PC and P7, and then connect P7 to your PC using the provided USB cable.

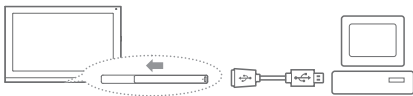


3. The USB Connection message will appear on the screen.
 - Power & Data Transfer: The product starts to charge and data can be transferred.
 - Power & Play: The product starts to charge and you can use the product.
 - Power Only: Charges the battery only.

- It is recommended to stop all operations before connecting the product to your PC for optimum performance.
- Check if the product is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as keyboards and USB hubs without integrated power, may cause the connection with your PC to be unstable.

Disconnecting P7 from Your PC

 1. Click the Safely Remove Hardware icon on the taskbar to disconnect the product using the Safely Remove Hardware menu.

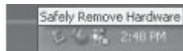

2. Click the OK button to confirm the device to remove.



- The icon on the taskbar may be hidden in some operating systems such as Windows XP. Click the Show Hidden Icons to display the hidden icons.
- The Safely Remove Hardware function may not be available while using some applications such as Windows Explorer or Windows Media Player. Close all applications before performing the Safely Remove Hardware function.
- If the Safely Remove Hardware does not perform properly, try again after a few minutes. Removing the product without the process above, may cause data in the product memory to be damaged.

Connecting Your Device

Copying files/folders to P7

1. Select the files/folders to transfer in your PC and drag and drop to the drive that appears for the P7.



Deleting files/folders from P7

1. Select the files/folders to delete, and then, right-click your mouse and select Delete.
2. Click Yes in the Confirm File Delete/Confirm Folder Delete popup window to delete the files/folders.



- Always properly connect the product to the PC.
- While you transfer data, never disconnect it or turn off the power because it may cause serious damage to the internal memory of the product.
- Transfer speed may vary depending on your computer and/or OS environment.
- It is recommended to save media files using Iriver plus 3 or Windows Media Player 11.

Chapter 03 Using P7

17 MUSIC

- Selecting Music
- Playing Music
- Music Play Screen
- Additional Features

20 VIDEO

- Selecting Video
- Playing Video
- Video Play Screen
- Additional Features

23 PICTURE

- Selecting Pictures
- Viewing Pictures
- Picture View Screen
- Additional Features

26 RADIO

- Using Radio
- Listening to Radio
- Radio Screen
- Additional Features

29 REC

- Recording
- Recording Screen
- Listening to Recorded Files
- Deleting Recorded Files
- Additional Features

32 TEXT

- Selecting Text
- Viewing Text
- Text Screen
- Additional Features

35 EXTRA | CLOCK

- Viewing Current Time
- Setting Current Time

36 EXTRA | CALENDAR

- Viewing Calendar

36 EXTRA | CALCULATOR

- Calculating

37 EXTRA | WORLD CLOCK

- Viewing World Clock
- Additional Features

MUSIC

Selecting Music

1. In the main menu, touch [Music] to display the music playlist.
2. Scroll through the music list and touch a music file to play.

- Touch the [←] icon to move to the upper folder in the playlist.
- The browsed result will change based on the setting in [⚙️ > Advanced > Music] Browse Type. (Refer to page 40.)
 - Database: Browse files by My Playlists, All Music, Albums, Artists, Genres and My Rating.
 - Folder: Browse music files by folder.
- If the [Music Browse Type] is set to [Database], touching [+] from the screen will add the music to your playlist and touching [-] will delete the selected music from your playlist.
- You can manage your playlist using Iriver Plus 3 or Windows Media Player 11.
- Supported file formats :
MP3 (8~320 Kbps), WMA (8~320 Kbps), OGG (Q1~Q10), FLAC, WAV

Playing Music

- While playing, touch the [+/−] icon to control the volume.
- While playing, touch the [|| / ▶] icon to pause or resume playback.
- While playing, touch the [◀ / ▶] icon to rewind or fast forward.
- While playing, touch the [◀ / ▶] icon to play the previous or next file.
- While playing, touch a specific position on the progress bar to play the music from that position.
- While playing, set the repeat loop by touching the [AB] icon to set point A and touch again to set Point B.
- The product will play the loop repeatedly. Touch the [AB] icon once again to deactivate the loop.
- While playing, touch the [▼] icon to save a bookmark.
Press [▼] to display the bookmark list.
 - Touch [◀ / ▶] in the bookmark list screen to play the previous or next bookmark.
 - Touch the [🗑️] icon in the bookmark list screen to delete the selected bookmark.
 - Touch the [🗑️] icon in the bookmark list screen to delete all bookmarks.

MUSIC

Music Play Screen



- 1 Additional Features: Displays additional features.
- 2 Title (filename): Displays the title (filename) of the music.
- 3 Album name: Displays the name of the album.
- 4 Add to My Playlist: Adds the current music playing to your playlist.
- 5 Current playback mode: Displays/sets the playback mode.
- 6 Equalizer Settings: Displays/sets EQ.
- 7 Elapsed Time: Displays the elapsed play time of the music.

- 8 Back to previous screen: Moves to the previous screen or upper folder.
- 9 Progress Bar: Displays the status of the music.
- 10 Play previous track (brief press): Plays the previous track. Rewind (long press): Rewinds the track.
- 11 Pause/Play: Pauses and resumes music.
- 12 Play next track (brief press): Plays the next track. Fast Forward (long press): Fast Forwards the track.
- 13 A-B Repeat: Activates and deactivates loop repeat.
- 14 Bookmark: Saves a bookmark on the current position.
- 15 Bookmark list: Displays the list of bookmarks.
- 16 Main menu: Displays the main menu.
- 17 Album Cover: Displays the album cover image if the music files include it.
* Album cover images can be added with iriver plus 3.
- 18 Playlist: Press [◀] and push to the left to display the playlist.
- 19 Rating: Display/set the rating of music.
- 20 Total length of the track: Displays total playback time of the music.

MUSIC

Additional Features

1. While playing music, touch the [●] icon on the screen to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- SRS WOW HD: Adjusts the sound enhancement settings.
 - SRS (Sound Retrieval System): Adjusts virtual 3D audio effects.
 - TruBass: Adjusts deep bass enrichment effects.
 - FOCUS: Adjusts sound sharpness.
 - WOW: Adjusts the boost value according to the earphones you are using.
 - Definition: Restores sounds to its original state.
 - Custom EQ: Customizes the equalizer settings.
 - Fade-in: Activates and deactivates the audio fade-in features.

VIDEO

Selecting Video

1. In the main menu, touch Video to display the list of video files.
2. Scroll through the video list and touch a video file to play.

- Touch the [←] icon to move to the upper folder in the list.
- Supported file formats

AVI	Video	XviD 640x480@24fps, 1.5Mbps XviD 720x408@24fps, 1.5Mbps ISO-MPEG4 840x480@24fps, 1.5Mbps
	Audio	MP3, PCM
WMV	Video	WMV7/8/9 512x288@30fps, 750kbps
	Audio	WMA v1/2/3
MP4	Video	ISO-MPEG4 720x360@30fps, 1Mbps H.264 BP 352x288@30fps, 350kbps
	Audio	MP3
RM	Video	RealVideo 9/10 512x288@30fps, 500kbps
RMVB	Audio	RealAudio *Not support G2/Cook
DAT	Video	MPEG1/2 640x480@30fps, 1.2Mbps
MPG	Audio	MP3, MP2
3GP	Video	ISO-MPEG4 480x272@30fps, 500kbps
KSG4	Audio	MP3, MP2
	Video	Flash Video 352x288@30fps
FLV	Video	Flash Video 352x288@30fps
	Audio	MP3

* Some video files may have synchronization errors.

- Always use iriver plus 3 to transfer video files to your product. Using other programs may cause unexpected errors during video playback.

Playing Video

- While playing, touch the [+/-] icon to control the volume.
- While playing, touch the [|| / ▶] icon to pause or resume playback.
- While playing, touch the [◀ / ▶] icon to rewind or fast forward.
- While playing, touch the [◀ / ▶] icon to play the previous or next file.
- While playing, touch a specific position on the progress bar to play the music from the position.
- While playing, touch the [▼] icon to save a bookmark.
- Press [▼] on screen to display the bookmark list.
 - Touch [< / >] in the bookmark list screen to play the previous or next bookmark.
 - Touch the [🗑] icon in the bookmark list screen to delete the selected bookmark.
 - Touch the [🗑] icon in the bookmark list screen to delete all bookmarks.

VIDEO

Video Play Screen



- 1 Additional Features: Displays additional features.
- 2 Elapsed Time: Displays the elapsed play time of the video.
- 3 Back to previous screen: Moves to the previous screen or upper folder.
- 4 Progress Bar: Displays the status of the video.
- 5 Play previous video (brief press): Plays the previous video.
Rewind (long press): Rewinds the video.
- 6 Pause/Play: Pauses and resumes the video.
- 7 Play next video (brief press): Plays the next video.
Fast Forward (long press): Fast Forwards the video.
- 8 Bookmark: Saves a bookmark on the current position.
- 9 Bookmark list: Displays the list of bookmarks.
- 10 Main menu: Displays the main menu.
- 11 Total length of the video: Displays total playback time of the video.

VIDEO

Additional Features

1. While playing a video, touch the [●] icon on the screen to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- Video Ratio: Selects the display aspect ratio of the video image.
 - Video Option: Sets the video option.
 - Navigation Speed: Sets the speed of fast forward and rewind.
 - Playback Mode: Sets the playback repeat mode.
 - Subtitle: Turns subtitle on and off, selects font color, font size, position and display language.

PICTURE

Selecting Pictures

1. In the main menu, touch Picture to display the list of picture files.
2. Scroll through the picture list and touch the picture to display and it will display in full screen.

- Touch the [↑] icon to move to the upper folder in the list.
- Supported file formats :
JPG, BMP, and GIF (some file formats might have compatibility problems)
- Always use Iriver plus 3 to transfer picture files to your product. Using other programs may cause unexpected errors during picture slideshow.


Viewing Pictures

- While playing, touch the [▶/||] icon to start or stop the slideshow.
- Touch and push a picture left or right while in picture view to display the next or previous picture.
- While viewing a picture, touch the [↻] icon to rotate the picture.
- While viewing a picture, touch the Zoom icon to start the zoom function. Select a zoom factor to zoom in or out.

- The Zoom function may not be supported with low resolution images.

PICTURE

Picture View Screen

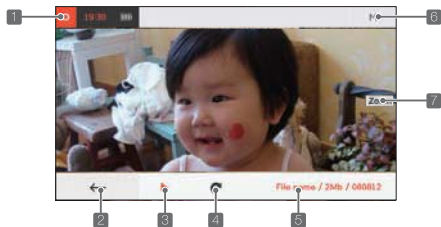

- 1 Additional Features: Displays additional features.
- 2 Back to previous screen: Moves to the previous screen or upper folder.
- 3 Slideshow: Starts and pauses the slideshow.
- 4 Rotate pictures: Rotates pictures.
- 5 Filename: Displays the filename.
- 6 Main menu: Displays the main menu.
- 7 Zoom: Starts and ends the zoom function.

PICTURE

Additional Features

1. While the picture is displayed, touch the [●] icon on the screen to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- Image Delay: Sets the duration to perform slideshows.
 - Slide Transitions: Adds effects to slideshows.
 - Screen Fit: Zooms in on or out of a picture to fit best within the border of display.

RADIO

Using Radio

1. Touch the radio frequency from the main menu screen, then the previous broadcast will appear.
2. Touch the [</>] icon to select preset channels.


Listening to Radio

- While listening, touch the [+ / -] icon to control the volume.
- While listening, touch the Preset on/off icon to activate/deactivate the preset list.
- After deactivating the preset list, touch the [</>] icon to manually select the previous or next frequency.
- After deactivating the preset list, touch and hold the [</>] icon to select the previous frequency quickly.
- After setting Preset, touch the [</>] icon to move through stored channels.
- While listening, touch and push [◀] towards the left to display the CH List/REC List items.
- Touch the CH List to display the channel list.
 - Touch a channel to listen to.
 - Select a frequency to store and press the [+] icon on an empty channel to store the frequency to selected channel.
 - Touch [-] in the channel list to delete the selected channel.
- Touch the REC List to display the recorded list.
 - Touch a file to play.
 - Touch [-] in the file list to delete the selected file.
- While listening, touch the [●] icon to start recording. Touch [■] to stop recording.

- Do not remove the earphones while listening to the radio because the earphones function as an antenna during radio reception. (Use the earphones provided with your product. Using other earphones may cause bad reception.)
- If the remaining memory space or power is insufficient, recording will automatically stop.
- The recorded file will be saved in the recording list in the following file convention | TYMMDDXXX.WMA (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size may vary depending on the quality of the recording. | Low: Approx. 64 Kbps Medium: Approx. 96 Kbp High: Approx. 128 Kbps

RADIO

Radio Screen

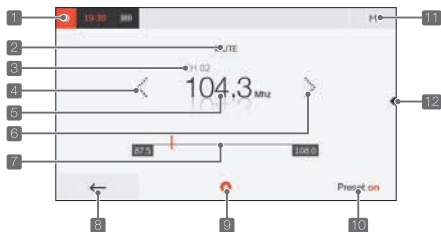

- 1** Additional Features: Displays additional features.
- 2** Mute: Turns the sound on and off.
- 3** Channel number: Displays the channel number of the current frequency.
- 4** Previous frequency/channel: Moves to the previous frequency/channel.
- 5** Current frequency: Displays the current frequency.
- 6** Next frequency/channel: Moves to the next frequency/channel.
- 7** Frequency band: Displays the frequency band of the radio station.
- 8** Back to previous screen: Moves to the previous screen or upper folder.
- 9** REC: Records the current program.
- 10** Preset: Activates and deactivates the preset channel.
- 11** Main menu: Displays the main menu.
- 12** Touch and push the [◀] button to the left to display the preset channel list and the radio recorded file list.

RADIO

Additional Features

1. While listening to the radio, touch the [●] icon to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- Auto Search: Automatically scans and stores the available frequencies as preset channels.
 - * Maximum of 20 channels can be stored at a time.
 - Reception Area: Sets the frequency range based on the local standard.
 - USA/Korea: 87.5~108.0 MHz
 - Japan: 76.0~108.0 MHz
 - Europe: 87.50~108.00 MHz
 - Recording Quality: Sets the quality of the recorded radio program.
 - Low: Approx. 64 Kbps
 - Medium: Approx. 96 Kbp
 - High: Approx. 128 Kbps


Recording

Recording

1. Touch [Recording] in the main menu to show the recording standby screen.
2. Touch the [●] icon to start recording and touch the [■] icon to stop recording.

- You cannot control the volume while recording.
- If the remaining memory space or power is insufficient, recording will automatically stop.
- The recorded file will be saved in the recording list in the following file convention, VVMMDDXX.WMA (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size may vary depending on the quality of the recording.
Low: Approx. 64 Kbps Medium: Approx. 96 Kbp High: Approx. 128 Kbps

Recording Screen

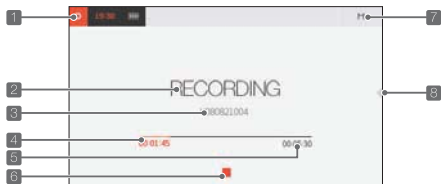

- 1 Additional Features: Displays additional features.
- 2 Current Status: Displays current status.
- 3 Recorded Filename: Displays the name of the recorded file.
- 4 Elapsed recording time: Displays the elapsed time of the recording.
- 5 Available time remaining: Displays the remaining recording time.
- 6 Stop: Stops recording.
- 7 Main menu: Displays the main menu.
- 8 Voice recording list: Touch and push the [◀] icon to the left to display the list of voice recordings.

Recording

Listening to Recorded Files

1. Touch and push the [◀] icon to the left to view the list of recorded files in the recording standby screen.
2. Select a file to play.

Deleting Recorded Files

1. Touch and push the [◀] icon to the left to view the list of recorded files in the recording standby screen.
2. Touch [–] in the file list to delete the selected file.

Recording

Additional Features

1. From the recording standby screen, touch the [●] icon to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments.
Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- Recording Quality: Sets the quality of voice recording.
 - Low: Approx. 64 Kbps
 - Medium: Approx. 96 Kbp
 - High: Approx. 128 Kbps

TEXT

Selecting Text

1. In the main menu, touch Text to display the text file list.
2. Scroll through the text list and touch the position to display.


- Touch the [←] icon to move to the upper folder in the list.
- If texts are not displayed properly, check the language setting in additional features.

Viewing Text

- Touch [▶ /||] while viewing the text to start or stop auto scroll.
- Touch the screen while viewing the text and push up or down to display the next or previous pages.
- While viewing the text, touch the progress bar to view a desired page.
- While viewing the text, touch the [▼] icon to save a bookmark.
- Press [▼] on screen to display the bookmark list.
 - Touch a bookmark from the bookmark list to move to the selected bookmark.
 - Touch [–] in the bookmark list to delete the selected bookmark.
- If you are interrupted or choose to stop viewing the text, the latest displayed page will be saved.
 - * You can store the last positions from up to 10 text files.

TEXT

Text Screen

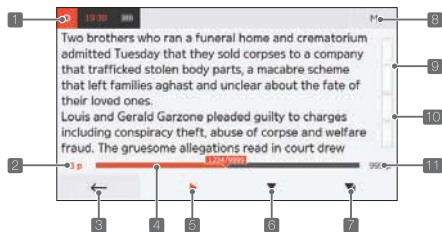

- 1 Additional Features: Displays additional features.
- 2 Current Page: Displays the number of the currently viewed page.
- 3 Back to previous screen: Moves to the previous screen or upper folder.
- 4 Progress Bar: Displays the status of the text.
- 5 Auto Scroll: Starts and pauses automatic scroll.
- 6 Bookmark: Saves a bookmark on the current position.
- 7 Bookmark list: Displays the list of bookmarks.
- 8 Main menu: Displays the main menu.
- 9 Previous Page: Displays the previous page.
- 10 Next Page: Displays the next page.
- 11 Total Page: Displays the total number of pages in the text file.

TEXT


Additional Features

1. While viewing the text, touch the [●] icon to display additional features.
 2. Touch the desired additional feature to display the sub items.
 3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.
 4. Touch the [●] icon again to exit the Additional Features menu.
- Font Size: Selects the size of font.
 - Auto Scroll Speed: Sets the duration for which a text page is displayed.
 - Language: Selects the language of the local coded text to display properly.

EXTRA | CLOCK


Viewing Current Time

1. In the main menu, touch Extra and then the [●] icon to display the list of extra features.
2. Select Clock from the list to display the current time.

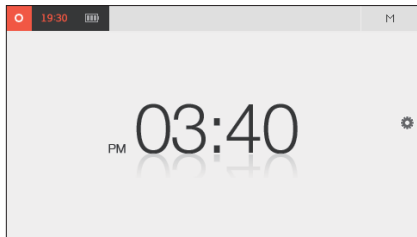

Setting Current Time

1. Touch [⚙] while the current time is displayed to display the setup screen.
2. Touch [^ / ∨] to set up the current time.

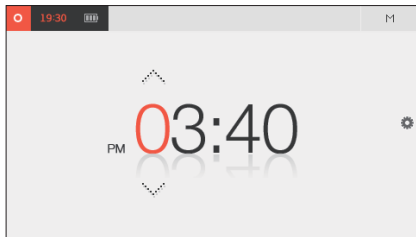

EXTRA | CALENDAR

Viewing Calendar

1. In the main menu, touch Extra and then the [●] icon to display the list of extra features.
2. Select Calendar from the list to display the calendar.
3. Touch [< / >] to display the previous or next calendar.



EXTRA | CALCULATOR

Calculating

1. In the main menu, touch Extra and then the [●] icon to display the list of extra features.
2. Select Calculator from the list to display the calculator.
3. Touch numbers and symbols to calculate.



EXTRA | WORLD CLOCK

Viewing World Clock

1. In the main menu, touch Extra and then the [●] icon to display the list of extra features.
2. Select World Clock from the list to display the world clock.



Additional Features

1. From the world clock screen, touch the [⚙] icon to display additional features.
2. Touch the desired feature to set detailed features.
 - Current City: Sets the current city to display on the screen.
 - Global City: Sets the global city to display on the screen.
 - Summer Time: Displays the summer time.

Chapter 04 **Setting Up P7**

39 Setting Up P7

Setup

Date & Time

Display

Timer

Advanced

Language

System Information

Setup

You can configure your own settings in P7. The menu configurations are subject to change depending on different firmware versions.

Setup

1. In the main menu, touch [⚙️] to display the setting list.
2. Touch the desired setup item from the setting list to display sub items.
3. Touch the sub item to run and make adjustments. Adjustments will automatically be saved and will apply to the next operation.

Date & Time

- Sets the current date and time.

Display

- Brightness
Adjusts the brightness of the screen.
- Touch Sound
Turns the touch sound on and off.
- Touch Calibration
Aligns the touch screen's coordinates for better display.

Setup

Timer

- **Auto Power Off**
Automatically turns off the power after the specified time without operation.
- **Backlight**
Sets a specified time for the backlight to turn off.

Advanced

- **Music Browser**
Select how to browse through music files.
 - Database: Browses through music files transferred by iriver plus 3 or databases created by Rebuild Library using ID3 TAG or Playlist.
 - Folder: Browses through music files transferred by Windows Explorer.

* Music Browser is set to Database by default.
- **Rebuild Database**
Updates the data library of all files.
- **Connection Type**
Selects the type for transferring file from / to PC.
 - MSC (UMS): Using iriver plus 3, transfers file using the MSC connection type.
 - MTP: Using Windows Media Player 11, transfers file with the MTP connection type.

Setup

Language

- **Menu Language**
Selects the language for on-screen display
- **Country**
Select the language for ID3 tag and text by country.

System Information

- **Version**
Displays the version number of the current firmware.
- **Reset All Settings**
Resets the product to the factory setting.
- **Internal Memory**
Displays the used and total memory space.

Chapter 05 Other Information

- 43 Using iriver plus 3
 - Adding Media to Library
 - Ripping Songs from a CD
 - Transferring Media to P7
 - Using iriver plus 3
 - Using Windows Explorer
 - Initializing Disk
 - Upgrading Firmware
- 46 Using Windows Media Player 11
 - Adding Media to Library
 - Ripping Songs from a CD
 - Transferring Media to the Product
 - Initializing Disk
 - Upgrading Firmware
- 49 Copyrights/Certification/Trademarks/Limited Liability
- 50 Safety Instructions
 - Product Safety
 - Other
- 53 Troubleshooting
 - Tips!

Using iriver plus 3

To connect the product to iriver plus 3, select  > Advanced > Connection Type and set it to MSC.

Adding Media to Library

1. When you run iriver plus 3 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music, picture, and video to the library.


Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run iriver plus 3.
2. In iriver plus 3, select the checkbox from Music > CD Drive and click CD Ripping in bottom left.
3. After ripping song, select the All Music to check whether the ripped song is added to the library.

Using iriver plus 3




Transferring Media to P7

- Using iriver plus 3

1. Connect the product to the USB jack of your PC and run iriver plus 3.
2. Select the checkbox beside the file to transfer and click [].
3. The selected file starts to transfer and the progress status is displayed in the Status window on bottom left.
4. Now you can find the selected music in your library.

- Using Windows Explorer

1. Connect the product to the USB jack of your PC.
2. Copy the contents to proper folders as below.
Music: IRIVER P7/Music
Video: IRIVER P7/Video
Picture: IRIVER P7/Pictures
Text: IRIVER P7/Text

- To play music files transferred by Windows Explorer, follow the steps below.
 - : In  > Advanced > Music Browser Type, set the type to Folder Tree and browse the file in the music file list.
 - : In  > Advanced > Music Browser Type, set the type to Database and then rebuild database from  > Advanced > Rebuild Database or use Database Update from iriver plus 3. Now browse the file in the music file list.

Using iriver plus 3

Initializing Disk

1. Connect P7 to the USB port of your PC and run iriver plus 3.
2. Select Tools > Portable Device > Initialize Disk and click Start when the initialization confirmation message appears.
3. When the initialization process is completed, a completion notice will appear, then you can disconnect your P7 from your PC.

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format feature within the product for formatting.

Upgrading Firmware

1. Connect P7 to the USB port of a PC with Internet access and run iriver plus 3.
2. Select Tools > Portable Device > Firmware Upgrade and complete the upgrade process by following the on-screen instructions.

- Do not disconnect the product from PC while downloading firmware upgrade file.
- Once the download is completed, disconnect the product to activate the firmware upgrade.
- If the existing firmware is the latest version, a message to confirm that the installed version is the latest will appear. A message will automatically appear on screen when connecting the product to your PC and the firmware version is the latest.

Using Windows Media Player 11

To connect the product to Windows Media Player 11, select  > Advanced > Connection Type and set it to MTP.

Adding Media to Library

1. When you run Windows Media Player 11, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and picture to the library.

Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run Windows Media Player 11.
2. Select the Ripping tab on the Windows Media Player 11. Select the checkbox from and click the Start Ripping in the bottom left.
3. The ripped music will be stored in My Documents > My Music and automatically added to library.

Using Windows Media Player 11

Transferring Media to the Product

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting the file in your PC, drag & drop it to the right pane.
3. Click Start Sync in the bottom left to start transferring.
4. Now you can find the selected music in your library.

Using Windows Media Player 11

Initializing Disk

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting IRIVER P7, click the right mouse button and select Format. Click OK when the message to confirm initialization appears.
3. The initialization process is completed and the product is disconnected from your PC.

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format function integrated in the P7.

1. Connect the product to the USB jack of your PC.
2. Run Iriver Firmware Updater application in the installation CD and complete the upgrade process by following the on-screen instructions.

- Do not disconnect the product from PC while upgrading firmware.

Copyrights/Certification/Trademarks/Limited Liability

Copyrights

Reigncom Limited holds all rights for the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by Reigncom Limited. You may be subject to criminal penalties for illegal use of any part of this manual.

Software, audio and video including intellectual property are protected by copyright and international laws. Reproduction or distribution of contents created with this product is the responsibility of the user.

The companies, institutions, products, people and events used in examples are for demonstration purposes only. Their appearance in this manual does not imply any affiliation between Reigncom and other parties.

Users are responsible for observing all copyrights and intellectual property laws.

©1999~2009 Reigncom Limited. All rights reserved.

Certification

KCC / FCC / CE / CCC

Class B Digital Device (Residential Communication Device). This device has been tested and found to comply with the requirements for a Class B digital device and designed to provide reasonable protection against harmful interference in a residential installation.

Trademarks

Windows 2000, Windows XP, Windows Vista and Windows Media Player are the registered trademarks of Microsoft Corp.

 is a trademark of SRS Labs, Inc.

WOW HD technology is incorporated under license from SRS Labs, Inc. Labs, Inc.

Limited Liability

Neither the manufacturer, importers nor dealers are responsible for any accidental damage, including bodily injury or any damages resulting from misuse or inappropriate operation on behalf of the user.

The information on this manual is prepared with the current player specifications. The manufacturer, Reigncom Limited, shall routinely add new features to the product and may continuously apply new technologies hereafter. All standards may be changed at any time without prior notice.

Safety Instructions

Product Safety

- Do not display the same image on the screen for an extended amount of time since this may cause a ghosting effect.
- Do not place objects such as coins or hair pins inside the product.
This may cause malfunction.
- Do not place heavy objects on the product.
This may cause damage and malfunction.
- Do not expose the player to sources of moisture such as water, beverages, chemicals, cosmetics, and so on. Wipe with a dry cloth and receive an inspection at the nearest iriver service center at such circumstances. (Damage caused by submersion may not be covered by warranty regardless of the warranty period.)
This may cause damage and malfunction.
- Keep away from harsh environments including humid, dusty, and smoky areas.
This may cause malfunction.
- Never dismantle, repair, or rebuild your player without authorization.
This may cause damage and malfunction.
- Keep out of direct sunlight and extreme heat and cold (-5° - 40°).
This may cause malfunction.
- Do not keep the product close to magnetic substance such as magnets, TVs, monitors, or speaker.
This may cause malfunction.
- Do not clean with chemicals or detergents.
This may cause malfunction.
- Do not drop or subject the device to impact.
This may cause damage and malfunction.

Safety Instructions

Product Safety

- Do not press more than two buttons simultaneously.
This may cause damage and malfunction.
- Do not disconnect the product from your PC while transferring data.
This may cause malfunction.
- Try when possible to connect the product to the rear USB port in your PC.
In some custom- assembled PCs, improper USB port may cause malfunction.
- Do not connect any device or object other than earphones to the Earphone jack.
This may cause damage and malfunction.
- Do not touch the screen with sharp tools.
This may cause damage and malfunction.
- Please be cautious when you attach a protection film on the display.
Improper protection film might diminish the touch sensitivity and screen brightness.

Safety Instructions

Other

- Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.
This is dangerous and might be illegal in some areas.
- Do not use the product while in motion, such as while driving, walking, or mountain climbing.
This may cause injury.
- Use the product in a safe place to avoid accidents.
This may cause injury.
- Always be careful to steer clear of nearby objects if you use the product while in motion.
This may cause injury.
- It is not recommended to use the product during electrical storms.
This may cause injury.
- Reduce volume or stop using the player if you experience ringing in your ears.
This may cause injury.
- Do not listen to music via headphones/earphones at high volume for a long time.
This may cause injury.
- Do not use headphones / earphones at high volume.
This may cause injury.
- Keep headphone /earphone cords under control in order to avoid getting caught on nearby objects.
This may cause injury.
- Do not sleep with headphones / earphones in the ears. Do not use headphones / earphones for excessive periods of time.
This may cause injury.

Troubleshooting

Tips!

- The product will not power on!
 - Check whether the battery is discharged. Charge the product and try to turn the power on again.
 - Reset the device by slightly pressing the reset button.
- The product cannot be charged after connecting power.
 - Check whether the product and your PC are firmly connected.
- The product cannot be connected properly using the USB cable.
 - Check whether the product and your PC are firmly connected.
- The memory space has changed after formatting.
 - The memory space may change depending on the operation system.
- The screen turns off frequently.
 - To save power, the screen is designed to turn off after a preset duration has elapsed during audio playback. Reset the duration in [⚙️] > Timer > Backlight.
- The screen is not clear.
 - Check whether the screen is dirty.
- Poor radio reception with heavy noise.
 - Check whether the headphone port is dirty.
 - Check whether the earphones are connected properly.
 - Adjust the position of the player and earphones.
 - Turn off any nearby electronic equipment to avoid potential interference
- No sound or only noise.
 - Check whether the volume is set to 0.
 - Check whether the earphone plugs or connection port is dirty.
 - Check to see if the music file is corrupted.
- Bootup takes up too much time.
 - Check whether there are too many files stored in the product. It is recommended to store up to 1,000 music files and 2,000 picture files.

Federal Communications Commission

FCC RF

- CAUTION :
Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- CAUTION : Exposure to Radio Frequency Radiation.
Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation.
The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.
- This device complies with part 15 of the FCC Rules.
- Operation is subject to the following two Conditions :
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation. for compliance could void the user's authority to operate the equipment.

SAFETY

- CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.