



**SAMSUNG**

Set your  
Senses free



## **i70** User Manual

Thank you for buying a Samsung camera.

This manual will guide you through using the camera, including capturing images, downloading images and using the application software.

Please read this manual carefully before using your new camera.

**ENGLISH**

## Instructions

- Use this camera in the following order.

### Set up the camera driver

Before connecting the camera to a PC, via the USB cable, you will need to set up the camera driver. Install the camera driver that is contained in Application software CD-ROM. (p.101)

### Take a picture

Take a picture. (p.17)

### Insert the USB cable

Insert the supplied USB cable into the PC's USB port and the camera's USB connection terminal. (p.104)

### Check the camera's power


Check the camera's power. If the power is turned off, press the camera button to turn it on. (p.14, 22)

### Check [Removable Disk]

Open Windows EXPLORER and search for Removable Disk (SAMSUNG). (p.105)

## Getting to know your camera

Thank you for buying a Samsung Digital Camera.

- Prior to using this camera, please read the user manual thoroughly.
- When you require After Sales service, please bring the camera and the cause of the camera malfunction (such as battery, Memory card etc.) to the A/S centre.
- Please check that the camera is operating properly prior to when you intend to use it (e.g. for a trip or an important event) to avoid disappointment. Samsung takes no responsibility for any loss or damage that may result from camera malfunction.
- Keep this manual in a safe place.
- If you use a card reader to copy the images on the memory card to your PC, the images could be damaged. When transferring the images taken with the camera to your PC, be sure to use the supplied USB cable to connect the camera to your PC. Please note that the manufacturer accepts no responsibility for loss or damage of images on the memory card due to the use of a card reader.
- \* Microsoft, Windows and Windows logo are registered trademarks of Microsoft Corporation incorporated in the United States and/or other countries.
- \*  is a trademark of SRS Labs, Inc.  
WOW HD technology is incorporated under license from SRS Labs, Inc.
- \* All brand and product names appearing in this manual are registered trademarks.
- \* The contents and illustrations in this manual are subject to change without prior notice for upgrading the camera functions.

## Danger

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

- Do not attempt to modify this camera in any way. To do so may result in fire, injury, electric shock or severe damage to you or your camera. Internal inspection, maintenance and repairs should only be carried out by your dealer or Samsung Camera Service centre.
- Please do not use this product in close proximity to flammable or explosive gases, as this could increase the risk of explosion.
- Should any form of liquid or a foreign object enter the camera, do not use it. Switch off the camera, and then disconnect the power source. You must contact your dealer or Samsung Camera Service centre. Do not continue to use the camera as this may cause a fire or electric shock.
- Do not insert or drop metallic or inflammable foreign objects into the camera through access points e.g. the memory card slot and battery chamber. This may cause a fire or electric shock.
- Do not operate this camera with wet hands. This could pose a risk of electric shock.

## Warning

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Do not use the flash in close proximity to people or animals. Positioning the flash too close to your subject's eyes may cause eyesight damage.
- For safety reasons keep this product and accessories out of reach of children or animals to prevent accidents e.g.:
  - Swallowing battery or small camera accessories. If an accident should occur, please consult a doctor immediately.
  - There is the possibility of injury from the camera's moving parts.
- Battery and camera may become hot during prolonged use and it may result in camera malfunction. Should this be the case, allow the camera to sit idle for a few minutes to allow it time to cool.
- Do not leave this camera in places subject to extremely high temperatures, such as a sealed vehicle, direct sunlight or other places with extremes of temperature. Exposure to extreme temperatures may adversely affect the camera's internal components and could cause a fire.
- When in use, do not cover the camera or Charger. This may cause heat to build up and distort the camera body or cause a fire. Always use the camera and its accessories in a well-ventilated area.

## Caution

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in a minor or moderate injury.

- Leaking, overheating, or damaged battery could result in fire or injury.
  - Use battery with the correct specification for the camera.
  - Do not short circuit, heat or dispose of battery in fire.
  - Do not insert the battery with the polarities reversed.
- Remove the battery when not planning to use the camera for a long period of time. Otherwise the battery may leak corrosive electrolyte and permanently damage the camera's components.
- Do not fire the flash while it is in contact with hands or objects. Do not touch the flash after using it continuously. It may cause burns.
- Do not move the camera while it is switched on, if you are using the AC Charger. After use, always switch off the camera before unplugging the cable from the wall socket. Then make sure that any connector cords or cables to other devices are disconnected before moving the camera. Failure to do so may damage the cords or cables and cause a fire or electric shock.
- Take care not to touch the lens or lens cover to avoid taking an unclear image and possibly causing camera malfunction.
- Avoid obstructing the lens or the flash when you capture an image.
- When using this camera in low temperatures, the following cases may be found. These are not camera malfunctions and usually recover at normal temperature.
  - It takes more time to turn on the LCD monitor and the colour may be differ from the subject.
  - When changing the composition, there may be an after image on the LCD monitor.
- Credit cards may be demagnetized if left near case. Avoid leaving magnetic strip cards near the case.

## Contents

### READY

- System chart .....5
- Identification of features .....6
  - Self-timer lamp .....8
  - Camera Status Lamp .....8
- Connecting to a Power Source .....9
  - How to charge the rechargeable battery (SLB-0837) .....10
- Inserting the memory card .....11
- Instructions on how to use the memory card .....12
- When Using the Camera for the First Time ...14

### RECORDING

- Starting the recording mode .....15
  - Selecting modes .....16
  - How to use the AUTO mode .....17
    - How to use the PROGRAM mode ...17
    - How to use the MOVIE CLIP mode ...17
  - Pausing while recording a movie clip (Successive Recording) .....18
  - How to use the ASR (Advanced Shake Reduction) mode .....18
  - Wise Shot .....19
  - How to use the SCENE mode ...19
  - Face recognition .....20
- Things to watch out for when taking pictures .....20
- Focus lock .....21
- Using the camera buttons to set the camera ...22

- POWER button .....22
- SHUTTER button .....22
- FR (Face Recognition) / Lock button ...22
- ZOOM W / T button .....23
- Info / Up (▲) button .....24
- Macro / Down (▼) button .....25
- Flash / Left (◀) button .....26
- Self-timer / Right (▶) button .....28
- M (Mode) button .....29
- Fn button .....29
- E (Effect) button .....33
- E (Effect) button : Colour .....34
- E (Effect) button : Special Colour ...35
- E (Effect) button : Image editing ...36
- E (Effect) button : Fun .....37
- Preset focus frames .....37
- Composite shooting .....38
- Photo Frame .....40
- MENU / OK button .....41
- Using the LCD monitor to adjust the camera settings .....41
- Sharpness .....42
- Contrast .....42
- Auto Focus type .....42
- Voice Memo .....43
- Voice Recording .....43
- Recording the movie clip without voice ...44
- SCENE mode .....44

### PLAY

- Starting play mode .....45

## Contents

■ Playing back a still image .....	45
■ Playing back a movie clip .....	45
■ Movie clip capture function .....	46
■ On camera movie trimming .....	46
■ Playing back a recorded voice .....	47
■ Playing back a voice memo .....	47
● LCD monitor Indicator .....	48
● Using the camera buttons to adjust the camera .....	48
■ Play mode button .....	48
■ Thumbnail / Enlargement button / Volume button .....	49
■ Info / Up (▲) button .....	50
■ Play & Pause / Down (▼) button .....	51
■ Left (◀) / Right (▶) / Menu / OK button .....	51
■ Delete button .....	52
■ Printer button .....	52
■ Special Effect (E button) : Resize .....	52
■ Special Effect (E button) : Rotating an image .....	53
■ Special Effect (E button) : Colour .....	54
■ Special Effect (E button) : Special Colour .....	54
■ Special Effect (E button) : Image editing .....	56
■ Special Effect (E button) : FUN .....	57
■ Cartoon .....	57
■ Preset focus frames .....	59
■ Composite image .....	60
■ Photo Frame .....	61
■ Sticker .....	62
■ Text Typing .....	63
● Text Typing .....	64
● Setting up the play back function using the LCD monitor .....	65
● Slide Show .....	66
● Album .....	68
■ View .....	68
■ Password setup .....	69
■ Voice memo .....	70
● Deleting images .....	70
● Protecting images .....	71
● DPOF .....	71
● DPOF : STANDARD .....	72
● DPOF : Index .....	72
● DPOF : Print size .....	73
● Copy To Card .....	73
● PictBridge .....	74
● PictBridge : Picture Selection .....	75
● PictBridge : Print Setting .....	75
● PictBridge : Reset .....	76
● Sound menu .....	76
● Sound .....	77

## SETUP

● Setup menu .....	78
● Setup menu 1 .....	79
■ File name .....	79
■ LANGUAGE .....	79
■ Setting up the Date / Time / Date type .....	79
■ Imprinting the recording date .....	80

■ LCD brightness .....	80
■ Auto Focus lamp .....	80
■ Start up image .....	80
● Setup menu 2 .....	81
■ Quick view .....	81
■ Auto power off .....	81
■ LCD save .....	81
■ Selecting Video out type .....	82
■ Password setup .....	83
■ Formatting a memory .....	83
■ Initialisation .....	83

## MP3 / PMP / TEXT VIEWER Mode

● MP3 / PMP / TEXT VIEWER Mode .....	84
● Starting the MP3 / PMP / TEXT VIEWER mode .....	85
● LCD monitor indicator for MP3 / PMP / TEXT VIEWER mode .....	87
● Using the camera buttons to adjust the camera .....	88
■ Volume button .....	88
■ Play & Pause / Seeking button .....	88
■ Delete button .....	88
■ Hold / Equalizer button .....	89
■ Playlist button .....	89
● Setting up the playback function using the LCD monitor .....	90
■ Resume .....	91
■ Play mode .....	91
■ Skin of MP3 player .....	91
■ Playing back the slide show .....	92


■ Setting slide show interval .....	92
■ Delete all .....	92
■ Frame search .....	92
■ Display setting .....	93
■ Setting up the recording function in the MP3 mode .....	93
■ Auto Scroll .....	93
■ MP3 BGM Setting .....	94
■ Language setting .....	94
● Important notes .....	94
● Warning indicator .....	96
● Before contacting a service centre .....	96
● Specification .....	98

## SOFTWARE

● Software Notes .....	101
● About the software .....	101
● Setting up the application software .....	102
● Starting PC mode .....	104
● Removable Disk .....	105
● Removing the removable disk .....	106
● Setting up the USB Driver for MAC .....	107
● Using the USB Driver for MAC .....	107
● Removing the USB Driver for Windows 98SE .....	107
● Digimax Converter .....	108
● Digimax Master .....	109
● FAQ .....	112


## System chart

Please check that you have the correct contents before using this product. The contents can vary depending on the sales region. To buy the optional equipment, contact your nearest Samsung dealer or Samsung service centre.

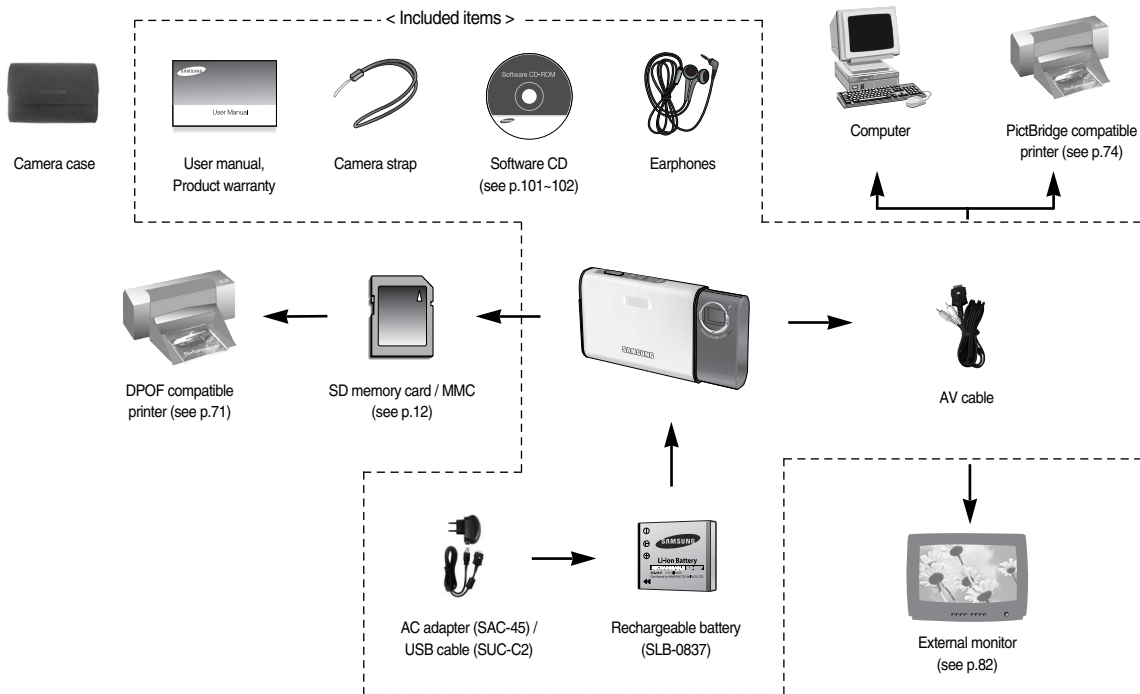


## • Identification of features

Front & Top

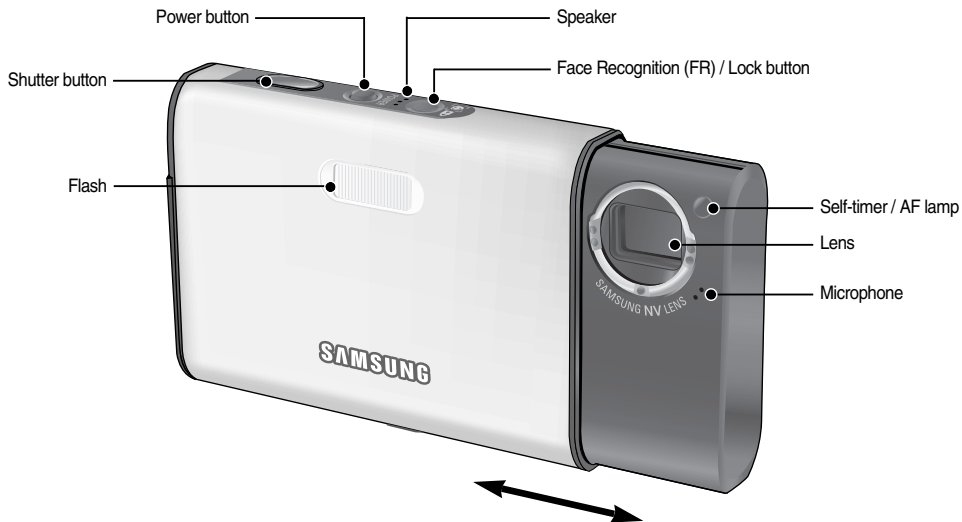

## • Identification of features



Back

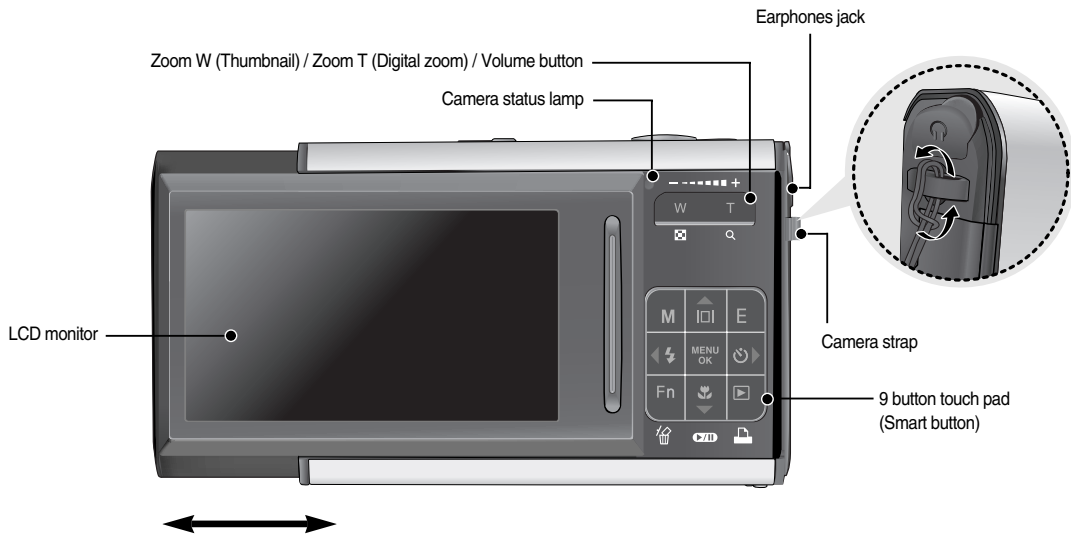



## • Identification of features

Side / Bottom

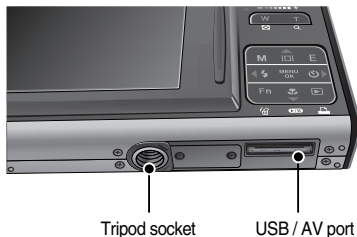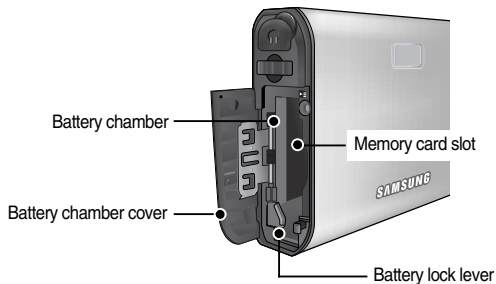

### ■ Self-timer lamp

Icon	Status	Description
	Blinking	For the first 8 seconds, the lamp blinks at 1 second intervals. For the final 2 seconds, the lamp blinks quickly at 0.25-second intervals.
	Blinking	For the 2 seconds, the lamp blinks quickly at 0.25-second intervals before taking a picture.
	Blinking	A picture will be taken after about 10 seconds and 2 seconds later a second picture will be taken.

### ■ Camera Status Lamp

Status	Description
Power on	The lamp turns on and off when the camera is ready to take a picture
After taking a picture	The lamp blinks while saving the image data and turns off when the camera is ready to take a picture
When the USB cable is attached to a computer	The lamp is on (The lamp will be turned off after recognising the camera)
Transmitting Data with a PC	The lamp is off (LCD monitor turns off)
When the USB cable is attached to a printer	The lamp turns on
When the printer is printing	The lamp blinks
When the AF activates	The lamp turns on (The camera focus on the subject)
	The lamp blinks (The camera doesn't focus on the subject)

## Connecting to a Power Source

- You should use the rechargeable battery (SLB-0837) supplied with the camera. Be sure to charge the battery before using the camera.
- SLB-0837 rechargeable battery Specification

Model	SLB-0837
Type	Lithium Ion
Capacity	860mAh
Voltage	3.7V
Charging time (When the camera is turned off)	Approx. 150 MIN

- Number of images and battery life : Using the SLB-0837

	Battery life / Number of images	Conditions
Still image	Approx. 90 MIN / Approx. 180 shots	Using the fully charged battery, Auto mode, 7M image size, Fine image quality, Shot to shot interval: 30Sec. Changing the zoom position between Wide and Tele after every shot. Using the flash on every second shot. Using the camera for 5 minutes and then Powering it off for 1 minute.
Movie	Approx. 80 MIN	Using the fully charged battery 640x480 image size 30fps frame rate

- ※ These figures are measured under Samsung's standard conditions and shooting conditions and may vary depending on the user's methods.

		Battery life / Number of images	Conditions
Multi Media	MP3	Approx. 210 MIN	Using the fully charged battery Turning off the LCD monitor
	PMP	Approx. 135 MIN	Using the fully charged battery

- ※ These figures are measured under Samsung's standard conditions and shooting conditions and may vary depending on the user's methods.

### INFORMATION

Important information about battery usage.


- When the camera is not used, turn off the camera power.
- Please remove the battery if the camera will not be used for long periods. Batteries can lose power over time and are prone to leaking if kept inside the camera.
- Low temperatures (below 0°C) can affect the performance of the battery and you may experience reduced battery life.
- Batteries will usually recover at normal temperatures.
- During extended use of the camera, the camera body may become warm. This is perfectly normal.
- When you use earphones, do not remove the battery while the camera is turning on. It may generate a loud noise.

## • Connecting to a Power Source

- You can charge the rechargeable battery (SLB-0837) by using the SAC-45 KIT which consists of the AC adapter (SAC-45) and the USB cable (SUC-C2). When the SAC-45 and SUC-C2 are combined, they can be used as an AC cable.


- Using an AC cable

: Connect the AC adapter to the USB cable.  
It can be used as a power cable.

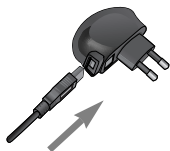

- Using a USB cable

: Remove the AC adapter (SAC-45).  
You can download stored images to your PC (p.104) or supply the power to your camera through the USB cable.

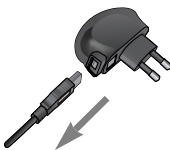


### CAUTION

Important information about USB cable usage.

- Use a USB cable (SUC-C2) with the correct specification.
- If the camera is connected to the PC through a USB hub : connect the camera directly to the PC.
- If the camera and other devices are connected to the PC at the same time : remove other device.
- If the USB cable is connected to a port located on the front of the PC : remove the cable and connect it to a port located on the back of the PC.
- If the USB port of the PC doesn't meet the Power output standard (5V, 500mA), the camera may not be charged.

- How to charge the rechargeable battery (SLB-0837)

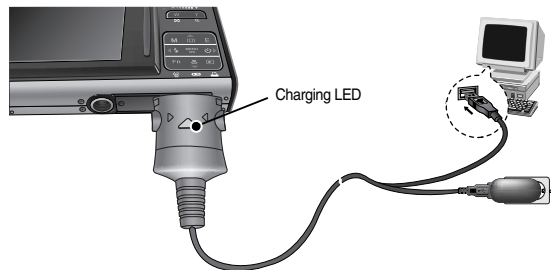

## Connecting to a Power Source

### CAUTION

- Before inserting any cables or AC adapter, check the directions and do not insert by force. It may cause breakage of cable or camera.
- If the charging LED of the AC Charger does not turn on or blink after inserting the rechargeable battery, please check whether the battery is inserted correctly.
- If you charge the battery with the camera power on, the battery can't charge fully. Turn the camera off while charging the battery.

### ■ Charging LED of the AC Adapter

	Charging LED
Being Charged	Red LED is on
Charging is complete	Green LED is on
Charging error	Red LED is off or blinking
Being discharged (Using the AC adapter)	Orange coloured LED is on

- If you insert the fully discharged battery to charge it, do not turn on the camera at the same time. The camera may not be turned on because of the low battery capacity. Charge the battery for more than 10 minutes before using the camera.
- Do not use the flash frequently or take a movie clip with the fully discharged battery charged for a short time. Even if the charger is inserted, the camera power may be turned off because the rechargeable battery is discharged again.

- Insert the battery as shown
  - If the camera does not turn on after you have inserted battery, please check whether the battery is inserted with the correct polarity (+ / -).
  - When the battery chamber cover is opened, do not force the battery chamber cover. This may damage it.




- There are 4 indicators for battery condition that are displayed on the LCD monitor.

Battery indicator				
Battery status	The battery is fully charged	Low battery capacity (Prepare to recharge or use spare battery)	Low battery capacity (Prepare to recharge or use spare battery)	Flat battery. Recharge or use spare battery.

## Inserting the memory card

- Insert the memory card as shown.
  - Turn off the camera's power before inserting the memory card.
  - Have the front of the memory card facing toward the back of the camera (LCD monitor) and the card pins toward the front of the camera (Lens).
  - Do not insert the memory card the wrong way round. Doing so may damage the memory card slot.

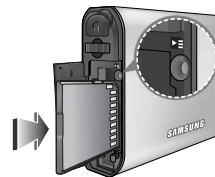

## ● Instructions on how to use the memory card


- Be sure to format the memory card (see p.83) if you are using a newly purchased memory card for the first time, if it contains data that the camera cannot recognise, or if it contains images captured with a different camera.
- Turn off the camera power whenever the memory card is being inserted or removed.
- Repeated use of the memory card will eventually reduce the memory card's performance. Should this be the case, you will need to purchase a new memory card. Wear and tear on the memory card is not covered by the Samsung warranty.
- The memory card is an electronic precision device.  
Do not bend, drop or subject the memory card to any heavy impact.
- Do not store the memory card in an environment with strong electronic or magnetic fields, e.g. near loud speakers or TV receivers.
- Please do not use or store in an environment where there are extremes in temperature.
- Do not allow the memory card to become dirty or to come into contact with any liquid. Should this happen, clean the memory card with a soft cloth.
- Please keep the memory card in its case when not in use.
- During and after periods of extended use, you may notice that the memory card is warm. This is perfectly normal.
- Do not use a memory card that is used in another digital camera.  
To use the memory card in this camera, format the memory card using this camera.
- Do not use a memory card formatted by another digital camera or memory card reader.
- If the memory card is subjected to any of the following, the recorded data may become corrupted :
  - When the memory card is used incorrectly.
  - If the power is switched off or the memory card is removed while recording, deleting (formatting) or reading.
- Samsung cannot be held responsible for lost data.
- It is advisable to copy important data onto other media as back-up e.g. floppy disks, hard disks, CD etc.
- If there is insufficient memory available  
: A [Memory Full!] message will appear and the camera will not operate.  
To optimise the amount of memory in the camera, replace the memory card or delete unnecessary images stored on the memory card.

## • Instructions on how to use the memory card

### INFORMATION

- Don't remove the memory card when the camera status lamp is blinking as this may cause damage to data in the memory card.

- The camera can use SD Memory Cards and MMC (Multi Media Cards).

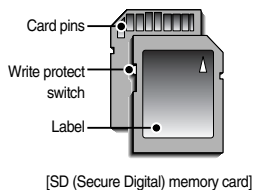

[SD (Secure Digital) memory card]

The SD memory card has a write protect switch that prevents image files from being deleted or formatted.

By sliding the switch to the bottom of the SD memory card, the data will be protected. By sliding the switch to the top of the SD memory card, the data protection will be cancelled. Slide the switch to the top of the SD memory card before taking a picture.


- When using a 512MB MMC (Multi Media Card), the specified shooting capacity will be as follows. These figures are approximate as image capacities can be affected by variables such as subject matter and memory card type.

Recorded image size		Super Fine	Fine	Normal	30FPS	15FPS
Still Image	7 <sup>m</sup>	137	263	380		
	5 <sup>m</sup>	189	359	511		
	3 <sup>m</sup>	293	540	750		
	1 <sup>m</sup>	930	1456	1793		
Print	6 <sup>m</sup>	154	295	425		
Wide	5 <sup>m</sup>	176	338	485		
	3 <sup>m</sup>	256	481	680		
	1 <sup>m</sup>	856	1402	1780		
Movie clip	640				About 20'	About 40'
	320				About 40'	About 60'

- ※ The recording times can be changed by the zoom operation.  
The zoom button doesn't use during the movie recording.

## ● When Using the Camera for the First Time

- When the camera is turned on for the first time, a menu will be displayed to set date, time and language in the LCD monitor. This menu will not be displayed again after setting up the date, time and language. Set up the date, time and language before using this camera.
- Turning on the camera  
To turn on the camera, press the Power button (①) or Open the camera (②) as shown.

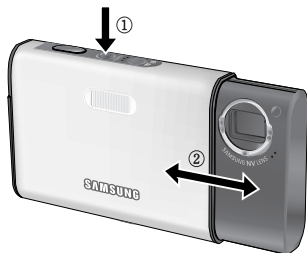

- Setting up the language
  1. Select the [LANGUAGE] menu by pressing the ▲▼ button and press the ► button.
  2. Select the desired sub menu by pressing the ▲▼ button and press the OK button.



## INFORMATION

- You can select one of the following 22 languages.
  - English, Korean, French, German, Spanish, Italian, S.Chinese, T.Chinese, Japanese, Russian, Portuguese, Dutch, Danish, Swedish, Finnish, Thai, Bahasa (Malay / Indonesian), Arabic, Polish, Hungarian, Czech and Turkish.
- Even if the camera is restarted, the language setting will be maintained.


- Setting up the date, time and date type

1. Select the [Date&Time] menu by pressing the ▲▼ button and press the ► button.
2. Select the desired sub menu by pressing the ▲▼◀▶ button and press the OK button.







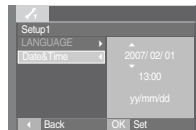




▶ button : selects YEAR / MONTH / DAY / HOUR / MINUTE / DATE TYPE

◀ button : Moves the cursor to the [Date&Time] main menu if the cursor is at the first item of the date and time setup. In all other instances, the cursor will be shifted to the left of its current position.











▲▼ button : changes the value of each item.



## Starting the recording mode

- ①  x5.0 : Optical / Digital Zoom bar / Digital Zoom rate (p.23)
- ② **10** : Number of available shots remaining (p.13)
- 00:00:00** : Available recording time  
(Movie clip / Voice recording) (p.13)
- ③  : Card inserted indicator (p.12)
- ④  : Recording mode (p.16)
- ⑤  : Colour Effect (p.34)
- ⑥  : Face Recognition (p.20)
- ⑦  : Flash (p.26)
- ⑧  : Self-timer (p.28)
- ⑨  : Macro (p.25)
- ⑩  : Contrast (p.42)
-  : Mic. off (p.44)
- ⑪  : Sharpness (p.42)



- ⑫  : Battery (p.11)
- ⑬ **7M 6M 5M 3M 3M**  
**7M 1M 640 320** : Image size (p.29)
- ⑭  : Image quality /  
Frame rate (p.30)
- ⑮  : Continuous shot  
(p.30)
- ⑯  : Metering (p.31)
- ⑰  : ISO (p.31)
- ⑱  : White Balance  
(p.32)
- ⑲  : Exposure  
compensation (p.33)
- ⑳ **2007/02/01 01:00 PM** : Date/ Time (p.79)
- ㉑  : Camera shake  
warning (p.21)
- ㉒  : Auto Focus Frame  
(p.42)
- ㉓  : Voice memo (p.43)



## Starting the recording mode

### Selecting modes

- You can select the desired working mode using the M (Mode) button located on the back of the camera.



Press the M button and a menu show aside will display. Select a desired mode by using the Smart button.



### Mode icons

	Mode						
SHOOTING	AUTO	PROGRAM	MOVIE	ASR			
SCENE	NIGHT	PORTRAIT	CHILDREN	LANDSCAPE	CLOSE-UP	TEXT	SUNSET
	DAWN	BACK LIGHT	FIRE WORKS	BEACH & SNOW	SELF SHOT	FOOD	CAFE
MULTIMEDIA	PMP	MP3	TEXT VIEWER		-		
					-		

## Starting the recording mode

### How to use the AUTO mode ( )

Please select this mode for quick and easy picture taking with minimal user interaction.

1. Insert the battery (p.11) taking note of the correct polarity (+ / -).
2. Insert the memory card (p.11). As this camera has a 10MB internal memory, it is not essential to insert the memory card.

If the memory card is not inserted, an image will be stored in the internal memory.

If the memory card is inserted, an image will be stored on the memory card.

3. Close the battery chamber cover.
4. Press the power button to turn on the camera.  
(If the date / time that is displayed on the LCD monitor is incorrect, reset the date / time before taking a picture.)
5. Select the Auto mode by pressing the Mode button (p.16, 29).
6. Point the camera towards the subject and compose the image.
7. Press the shutter button to capture an image.




[AUTO mode]

### How to use the PROGRAM mode ( )

Selecting the program mode will configure the camera with optimal settings.

You can still manually configure all functions except the aperture value and shutter speed.

1. Select the Program mode by pressing the Mode button.
2. Press the menu button to configure advanced functions such as image size, quality, effects, sharpness, metering and etc. (p.29~44)

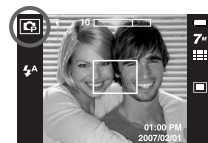

[PROGRAM mode]

### How to use the MOVIE CLIP mode ( )

A movie clip can be recorded for as long as the available recording time of the memory capacity allows. (Min. 2 sec - Max. 1 hour)

1. Select the MOVIE CLIP mode by pressing the mode button. (Available recording time will display on the LCD monitor)
2. Point the camera towards the subject and compose the image by using the LCD monitor. Press the shutter button and movie clips are recorded for as long as the available recording time allows. Movie clips will still be recorded if the shutter button is released. If you wish to stop recording, press the shutter button again.

\* Image size and type are listed below.

- Image size : 640x480, 320x240 (Selectable)
- File type : \*.avi (MPEG-4)

※ You can record the movie without voice. (p.44)



[MOVIE CLIP mode]

## INFORMATION

- If the auto focus frame turns to red when you press the shutter button down half way, it means that the camera cannot focus on the subject. Should this be the case, the camera is unable to capture an image clearly.


## Starting the recording mode

- Pausing while recording a movie clip (Successive Recording)  
This camera allows you to temporarily stop during unwanted scenes, while recording a movie clip. Using this function, you can record your favourite scenes into a movie clip without having to create multiple movie clips.



- Using Successive Recording


1. Press the shutter button and movie clips are recorded for as long as the available recording time. Movie clips will still be recorded if the shutter button is released.
2. Press the Pause button to pause recording. Press the Pause button again to resume the recording.
3. If you wish to stop recording, press the shutter button again.



- How to use the ASR (Advanced Shake Reduction) mode (  )  
This mode will reduce the effect of camera shake and help you get a well-exposed image in dim conditions. Press the ASR button.

- Things to watch out for using the ASR mode

1. The digital zoom will not operate in the ASR mode.
2. If the lighting conditions are brighter than fluorescent lighting condition, the ASR doesn't activate.
3. If the lighting condition is darker than in fluorescent lighting condition, camera shake warning indicator (  ) will display. For best results only take pictures in situations where the camera shake warning indicator (  ) is not displayed.
4. If the subject is moving the final image captured may be blurred.
5. Avoid moving the camera while the [Capturing!] message is displayed to achieve a better result.
6. As the ASR uses the camera's digital processor, images taken using the ASR may take a little longer for the camera to process.

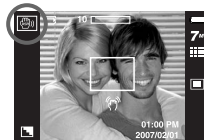


[ASR mode]

## Starting the recording mode

### ■ Wise Shot

Two images are taken at a time. One is taken in the Fill-In Flash mode and the other is taken in the ASR mode. You can select and save only one of the images.

### ■ How to use the Wise Shot

1. Select the ASR mode by pressing the mode button.
2. Press the Fn button. (p.30)
3. Select the (  ) menu.
4. Press the Shutter button to capture images  
- Two images are captured in succession.



## INFORMATION

- In the Wise shot mode, the shutter speed value shown on the LCD monitor may be different with the real shutter speed.

### ■ How to use the SCENE mode ( **SCENE** )















Use the menu to easily configure optimal settings for a variety of shooting situations.

- Select the Scene mode by pressing the Mode button.
- Press the Menu button to select a desired scene menu. (p.44)



[SCENE mode]


※ The scene modes are listed below.


- |              |   |  |
|--------------|---|--|
| [Nightscape] | (  ) | : Use this for shooting still images at night or in other dark conditions. |
| [Portrait]   | (  ) | : To take a picture of a person.   |
| [Children]   | (  ) | : To take a picture of fast moving objects, for example, children.         |
| [Landscape]  | (  ) | : To take pictures of distant scenery.                                     |
| [Close up]   | (  ) | : Close-up shooting for small objects such as plants and insects.          |
| [Text]       | (  ) | : Use this mode to shoot a document.                                       |
| [Sunset]     | (  ) | : For taking pictures of sunsets.  |
| [Dawn]       | (  ) | : Daybreak scenes.   |
| [Backlight]  | (  ) | : For portraits without shadows caused by backlighting.                    |
| [Firework]   | (  ) | : Firework scenes.   |
| [Beach&Snow] | (  ) | : For ocean, lake, beach and snowscape scenes.                             |
| [Self Shot]  | (  ) | : Use when the photographer would also like to be in the image.            |
| [Food]       | (  ) | : For taking delicious looking food.                                       |
| [Café]       | (  ) | : For taking pictures of cafe and restaurant.                              |

## Starting the recording mode


### ■ Face recognition

This mode detects the face position of the subject automatically and then sets the focus and exposure. Select this mode for quick and easy pictures of people.  
Selectable modes : Auto, Program, ASR, Portrait, Children, Beach&Snow, Self shot, Cafe mode.

1. Press the FR (Face Recognition) button (  ) in the selectable modes. The FR icon will be displayed on the screen left top corner.

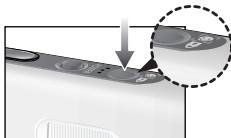

2. The size and position of the auto focus frame is set on the face of the subject automatically.

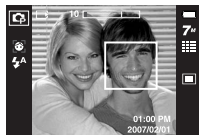


3. Press the shutter button halfway. The focus frame turns to green when the focus is activated.
4. Press the shutter button fully to take a picture.

## INFORMATION


- This function can detect up to 9 persons.
- When the camera recognises many people at the same time, it will focus on the nearest person.
- When Face detection begins, the Digital Zoom cannot operate.
- When Face detection begins, the Effect mode cannot operate.
- When the face is recognised, the focus frame will be white. And the face in focus will be highlighted in green when the Shutter button is pressed halfway down. Other faces (up to 8) in the picture will be shown in grey. (Total 9)
- Return to previous AF mode if face recognition was failure.
- In some conditions this function cannot work properly
  - When a person wears dark glasses or when some part of the face is hidden
  - When the person being taken does not look at the camera
- The maximum available Face Recognition range is 2.7m (Wide).
- The nearer the subject, the faster the camera can recognize the subject.

## Things to watch out for when taking pictures

- Pressing the shutter button down half way.  
Lightly press the shutter button to confirm focus and flash battery charge.  
Press the shutter button all way down to take the picture.

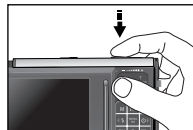


[Lightly press the shutter button]

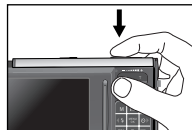


[Press the shutter button]

## Things to watch out for when taking pictures

- The available recording time may vary depending on shooting conditions and camera settings.
- When the Flash Off or Slow synchro mode is selected in a low lighting condition, the camera shake warning indicator (  ) may appear on the LCD monitor. In this case, use a tripod, support the camera on a solid surface or change to flash shot mode.
- Shooting against the light :  
Do not take pictures into the sun. Taking a picture against the sun may make the picture dark. To take a picture against the sun, please use the [Backlight] in the scene shooting mode (see page 19), fill-in flash (see page 26), spot metering (see page 31), or exposure compensation (see page 33).
- Under certain conditions the auto focus system may not perform as expected.
  - When photographing a subject that has little contrast.
  - If the subject is highly reflective or shiny.
  - If the subject is moving at high speed.
  - When there is strong reflected light, or when the background is very bright.
  - When the subject matter has only horizontal lines or the subject is very narrow (such as a stick or flagpole).
  - When the surroundings are dark.

## Focus lock

- To focus on a subject not positioned in the centre of the picture, use the focus lock function.
- Using the Focus Lock
  1. Ensure the subject is in the centre of the autofocus frame.
  2. Press the SHUTTER button halfway. When the green auto focus frame lights up, it means the camera is focused on the subject. Be careful not to press the SHUTTER button all the way down to avoid taking an unwanted picture.
  3. With the SHUTTER button still pressed down only halfway, move the camera to recompose your picture as desired, and then press the SHUTTER button completely to take the picture. If you release your finger from the SHUTTER button, the focus lock function will be cancelled.

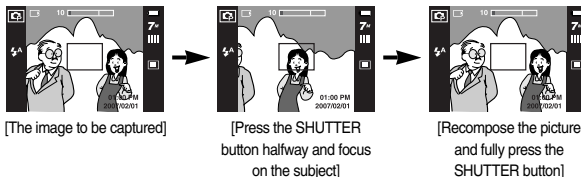


## Using the camera buttons to set the camera

- The recording mode function can be set up by using the camera buttons.

### POWER button

- Used for turning the camera's power on / off.
- If there is no operation during the specified time, the camera's power will be turned off automatically to save battery life.  
Refer to page 81 for more information about the auto power off function.

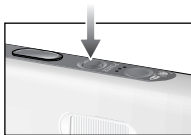


### FR (Face Recognition) / Lock button

- This button is for quick and easy pictures of people.
- In MP3 and PMP mode, this button will lock the camera buttons.




### SHUTTER button

- Used for taking an image or recording voice in the RECORDING mode.
- In MOVIE CLIP mode :  
Pressing the shutter button down fully starts the process for recording a movie clip.  
Press the shutter button once and the movie clip is recorded for as long as the available recording time in the memory allows.  
If you wish to stop recording, press the shutter button again.
- In STILL IMAGE mode :  
Pressing the shutter button down halfway activates the autofocus and checks the condition of the flash. Pressing the shutter button down fully takes and stores the image. If you select voice memo recording, the recording will start after the camera has finished storing the image data.

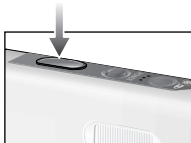

## ZOOM W / T button


- This camera has a 3X optical zoom and a 5X digital zoom function. Using both will offer a total zoom ratio of 15X.



### TELE Zoom

**Optical zoom TELE** : Pressing the ZOOM T button. This will zoom into the subject i.e. the subject will appear nearer.

**Digital zoom TELE** : When the maximum (3X) optical zoom is selected, pressing the ZOOM T button activates the digital zooming at the required setting. Releasing ZOOM T button stops the digital zooming at the required setting. Once the maximum digital zoom (5X) is achieved, pressing the ZOOM T button will have no effect.

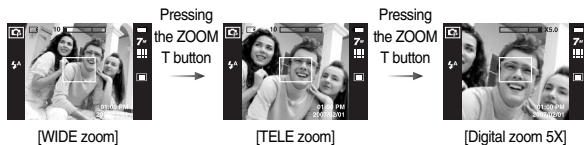

### WIDE Zoom


**Optical zoom WIDE** :

Pressing the ZOOM W button. This will zoom out from the subject i.e. the subject will appear farther away. Pressing the ZOOM W button continuously will set the camera to its minimum zoom setting i.e. the subject appears at its farthest from the camera.



**Digital zoom WIDE** :

Optical zoom



Digital zoom

When the digital zoom is in operation, pressing the ZOOM W button will reduce the digital zooming in steps. Releasing ZOOM W button stops digital zooming. Pressing the ZOOM W button will reduce the digital zoom and then it will continue to reduce the optical zoom until the minimum setting is reached.






## • ZOOM W / T button

### INFORMATION

- Images taken using the digital zoom may take a little longer for the camera to process. Allow time for this to take place.
- You may notice a decrease in image quality when using the digital zoom.
- To view a clearer digital zoom image, press the shutter button halfway at the maximum optical zoom position and press the zoom T button again.
- The digital zoom can't be activated in the [Nightscene], [Children], [Text], [Close up], [Fireworks], [Self Shot], [Food], [Café] scene modes, the Movie clip mode, the ASR (Wise shot) mode and the [High light], [Photo Frame], [Composite] effect.
- Take care not to touch the lens as this may cause a camera malfunction.

## • Info ( ) / Up ( ) button

- While the menu is showing, the Up button operates as a direction button. In the recording modes or playback mode, pressing this button will display the image information.

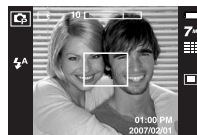


Info (  ) button




## Macro (🌸) / Down (▼) button

- While the menu is showing, the DOWN button operates as a direction button. When the menu is not showing, you can use the MACRO / DOWN button to take macro pictures. The distance ranges are shown below. Press the Macro button until the desired macro mode indicator displays on the LCD monitor.

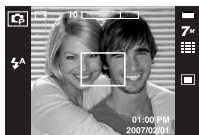


[Auto focus - No icon]



[Auto macro (🌸)]



[Super Macro (🔍)]



[Macro (🌸)]

- Types of focus modes and focus ranges (W : Wide, T : Tele) (Unit : cm)

Mode	Auto (📷)		
Focus Type	Super macro (🔍)	Auto macro (🌸)	Normal
Focus range	W : 1 ~ 5 (Wide only)	W : 5 ~ Infinity T : 40 ~ Infinity	W : 80 ~ Infinity T : 80 ~ Infinity
Mode	Program (📷)		
Focus Type	Super macro (🔍)	Macro (🌸)	Normal
Focus range	W : 1 ~ 5 (Wide only)	W : 5 ~ 80 T : 40 ~ 80	W : 80 ~ Infinity T : 80 ~ Infinity
Mode	ASR mode (📷)		
Focus Type	Super macro (🔍)	Auto macro (🌸)	Normal
Focus range	-	W : 5 ~ Infinity T : 40 ~ Infinity	W : 80 ~ Infinity T : 80 ~ Infinity

### INFORMATION

- When the macro mode is selected, be particularly careful to avoid camera shake.
- When you take a picture within 30cm (Wide zoom) or 40cm (Tele zoom) in the Macro mode, select the FLASH OFF mode.
- When you take a picture within the 5cm Super macro range, the auto-focus on the camera will take longer to set the correct focus distance.

## ● Macro (🌸) / Down (▼) button

- Available focusing method, by recording mode

(●: Selectable, ∞: Infinity focus range)

Mode	Auto macro	Super macro	Macro	Normal
			●	●
	●	●		●
		●	●	●
	●			●
Mode	SCENE			
	Auto macro	Super macro	Macro	Normal
				●
				●
				●
				●
			●	
	●			
				∞
			●	
				∞
				●
				∞
				●
			●	
			●	
				●


## ● Flash (⚡) / Left (◀) button

- When the menu is displayed on the LCD monitor, pressing the LEFT button makes the cursor shift to the left tab.
- When the menu is not displayed on the LCD monitor, the LEFT button operates as the FLASH button.



- Selecting the flash mode

- Press the Mode button to select a RECORDING mode with the exception of Movie clip mode.
- Press the Flash button until the desired flash mode indicator displays on the LCD monitor.
- A flash mode indicator will be displayed on the LCD monitor.  
Use the correct flash to suit the environment.

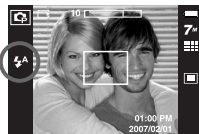

[Selecting the Auto flash]

- Flash range

(Unit : m)

ISO	Normal		Macro		Auto macro	
	WIDE	TELE	WIDE	TELE	WIDE	TELE
AUTO	0.8 ~ 3.3	0.8 ~ 2.5	0.3 ~ 0.8	0.4 ~ 0.8	0.3 ~ 3.3	0.4 ~ 2.5









- ※ When the Super Macro is selected, flash is fixed as the Flash Off mode.

## Flash ( ) / Left ( ) button

### INFORMATION

- If you press the shutter button after selecting the Auto, Fill-in, Slow synchro flash, the first flash fires to check the shooting condition (Flash range and Power ratio of flash).  
Do not move the camera until the second flash fires.
- Using the flash frequently will reduce the life of the battery.
- Under normal operating conditions the re-charging time for the flash is usually within 5 seconds. If the battery is weak, the charging time will be longer.
- In the ASR mode, [Landscape], [Close up], [Text], [Sunset], [Dawn], [Firework], [Self Shot], [Food], [Café] scene modes and the Movie clip mode, the flash function will not operate.
- The image quality is not guaranteed if the subject is too close or highly reflective.
- When taking an image in poorly lit conditions with the flash, there may be a white speck in the captured image. The speck is caused by the the flash light reflecting off atmospheric dust.
























### ● Flash mode indicator

Icon	Flash mode	Description
	Auto flash	If the subject or background is dark, the camera flash will operate automatically.
	Auto & Red eye reduction	If a subject or background is dark, the camera flash will work automatically and will reduce the red-eye effect by using the red-eye reduction function.
	Fill in flash	The flash fires regardless of the available light. The intensity of the flash will be automatically controlled to suit the prevailing conditions.
	Slow synchro	The flash operates with a slow shutter speed to obtain a balanced correct exposure. In poor lighting conditions the camera shake warning indicator (  ) will display on the LCD monitor.
	Flash off	The flash does not fire. Select this mode when capturing images in a place or situation where flash photography is prohibited. When you capture an image in a poorly lit condition, the camera shake warning indicator (  ) will display on the LCD monitor.
	Red-eye reduction	When a shot with "red eye" is detected, this mode will reduce the red-eye effect automatically.

## Flash ( ) / Left ( ) button


- Available flash mode, by recording mode

( ● : Selectable )

						
	●	●			●	●
	●	●	●	●	●	●
					●	
					●	
				●	●	●
		●			●	●
		●			●	●
					●	
					●	
					●	
					●	
			●			
					●	
	●					
					●	
					●	
					●	

## Self-timer ( ) / Right ( ) button

- When the menu is displayed on the LCD monitor, pressing the Right button makes the cursor shift to the right tab. The right button can also be used to move to a sub menu to select a different setting. When the menu is not displayed on the LCD monitor, the RIGHT button operates as the Self-timer. This function is used when the photographer would also like to be in the image.

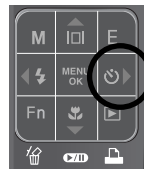

- Selecting the self-timer

- Press the SELF-TIMER button until the desired mode indicator displays on the LCD monitor. (p.8)
- When you press the SHUTTER button, the picture will be taken after the specified time has elapsed.



[Selecting the 2 SEC self-timer]

### INFORMATION

- In Movie Clip mode, only the 10SEC self-timer will work.
- When you select 2SEC self-timer with flash, the delay (2 seconds) can be extended according to the flash charging status.
- If you operate the Power button and Self-timer button during the self-timer operation, the self-timer function is cancelled.
- Use a tripod to prevent camera shake.


## M (Mode) button

- You can select the desired working mode using the M (Mode) button located on the back of the camera. Refer to page 16 for selecting camera modes.



### Fn button

- You can select Image size, Quality, Metering, Drive modes, ISO, White Balance and Exposure Compensation. In Night scene mode, you can select the shutter speed and aperture value with this button.

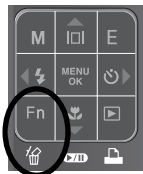


Main menu	Sub menu	Available mode
Image size	7" 6" 5" 5" 3" 3" 1" 1" 640 320	
Quality		
Drive mode		
Metering		
ISO	ISO 1280 ISO 1280 ISO 1280 ISO 1280 ISO 1280 ISO 1280	
White Balance	AWB	
Exposure Value		
LT	LT	

- ※ In ASR mode, ISO is fixed to AUTO and EV is fixed to 0.0EV.
- ※ Depending on the recording mode, the selectable sub menus can be varied.

## Fn button

- Image Size : You can select the image size appropriate for your application.

	Image Size	
Still Image	7"	3072x2304
	5"	2592x1944
	3"	2048x1536
	1"	1024x768
Print	6"	3072x2048
Wide	5"	3072x1782
	3"	2560x1440
	1"	1280x720
Movie Clip	640	640x480
	320	320x240

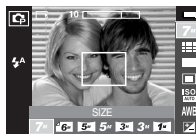

[STILL IMAGE mode]



[MOVIE CLIP mode]


### INFORMATION

- The higher the resolution, the lower the number of shots available because high resolution images require more memory.

## • Fn button

- Quality / Frame rate : You can select the compression ratio appropriate for your application of the captured images. The higher the compression ratio, the lower the picture quality.

Mode	STILL IMAGE mode			MOVIE CLIP mode	
Icon					
Sub menu	Super Fine	Fine	Normal	30FPS	15FPS
File Format	jpeg	jpeg	jpeg	avi	avi

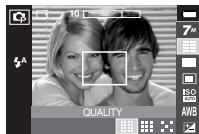

[STILL IMAGE mode]




[MOVIE CLIP mode]

### INFORMATION

- This file format complies with the DCF (Design rule for Camera File system).

- Continuous shot : You can select continuous shot, and AEB (Auto Exposure Bracketing).

- Single : Take one picture only
- Continuous : Images will be taken continuously until the shutter button is released. The shooting capacity depends on the memory.
- AEB : Take three pictures in a series in different exposures: standard exposure (0.0EV), over exposure (+0.5EV) and short exposure (-0.5EV). Use the mode if it is hard to decide exposure of the object.
- Wise shot : Two images are taken at a time. One is taken in the Fill-In Flash mode and the other is taken in the ASR mode. (p.19)

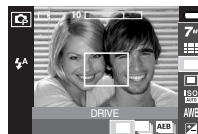

- ※ High resolution and picture quality increases file saving time, which increases stand-by time.
- ※ If the [Continuous] or [AEB] sub menu is selected, the flash will be off automatically.
- ※ If less than 3 pictures are available in the memory, the AEB shooting is not available.
- ※ It is best to use a tripod for the AEB shooting as the time to save each image file is longer and blurring caused by camera shake may occur.
- ※ The voice memo can't be added on the images taken with the [Continuous], [AEB] and [Wise Shot] menu.

## Fn button

- Metering : If you cannot obtain suitable exposure conditions, you can change the metering method to take brighter pictures.

- Multi : Exposure will be calculated based on an average of the available light in the image area. However, the calculation will be biased towards the centre of the image area. This is suitable for general use.



- Spot : Only the rectangular area in the centre of the LCD monitor will be metered for light. This is suitable when the subject in the centre is exposed correctly, regardless of the back lighting.

- Center : Exposure will be calculated based on an average of the available light in the image area. However, the calculation will be biased towards the centre of the image area. This is suitable for taking a picture of small object like a flower or insects.


- ※ If the subject is not the centre of the focus area, do not use the spot metering as this may result in an exposure error. In this circumstance, it is better to use exposure compensation.

- ISO : You can select the ISO sensitivity when taking pictures.  
The speed or specific light-sensitivity of a camera is rated by ISO numbers.

- Auto : The camera's sensitivity is automatically changed by variables such as lighting value or subject brightness.

- 80, 100, 200, 400, 800, 1000

: The higher the ISO value, the higher the camera's sensitivity to light and therefore the greater its capacity to take pictures in darker conditions. However, the noise level in the image will increase as the ISO value increases, making the image appear coarser.

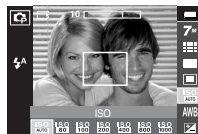



## Fn button

- White balance : The white balance control allows you to adjust the colours to appear more natural.

Auto WB      AWB : The camera automatically selects the appropriate white balance settings, depending on the prevailing lighting conditions.

Daylight      ☀ : For taking images outside.  
Cloudy      ☁ : For taking images under a cloudy and overcast sky.

Fluorescent\_H      📺 : For shooting under daylight fluorescent types of three-way fluorescent lighting.

Fluorescent\_L      📺 : Shooting under white fluorescent lighting.

Tungsten      🔦 : For shooting under tungsten (standard light bulb) lighting.

Custom Set      📺 : Allows the user to set the white balance according to the shooting condition.




Different lighting conditions may cause a colour cast on your images.

- Using the Custom White Balance  
White balance settings may vary slightly depending on the shooting environment. You can select the most appropriate white balance setting for a given shooting environment by setting up the custom white balance.

1. Select the CUSTOM ( 📺 ) menu of the White Balance.
2. Place a sheet of white paper in front of the camera so that the LCD monitor shows only white, and then press the SHUTTER button.
3. Your custom white balance value is stored.


- The custom white balance value will be applied, starting with the next picture you take.

- The user configured white balance will be remain effective until it is overwritten.

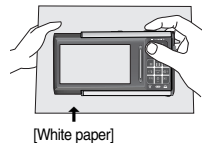

## Fn button


- Exposure compensation : This camera automatically adjusts the exposure according to the ambient lighting conditions.

If you change the exposure value, the exposure indicator (  ) will be displayed on the bottom of the LCD monitor. A negative exposure compensation value reduces the exposure.

Note that a positive exposure compensation value increases the exposure and the LCD monitor will appear white or you may not get good pictures.



- Long Time shutter : This camera automatically adjusts the shutter speed and aperture values to the shooting environment. However, in NIGHT SCENE mode, you can set the shutter speed and aperture values to your preference.

1. Select the [Nightscape] scene mode. (p.19, 44)
2. Press the Fn button and Long Time shutter menu will be displayed.
3. Configure the Long Time shutter value with the  button.
4. Press the Fn button again. The value you set will be saved and the mode will switch to NIGHT SCENE mode.



WIDE : AUTO, F3.5 - F6.3  
TELE : AUTO, F4.5 - F8.0

Aperture Value

Shutter Speed

















AUTO, 1-16S

## E (Effect) button

- It is possible to add special effects to your images by using this button.
- Still image mode : You can select the colour, special colour, image editing and Fun menu.
- Movie clip mode : You can select the colour menu.

- Available Effects, by recording mode

(● : Selectable)


						
						
	●					
	●					
	●	●	●	●	●	●
	●	●	●	●	●	●
	●	●	●	●	●	●
	●	●	●	●	●	●
	●	●	●	●	●	●
	●	●	●	●	●	●
	●	●	●	●	●	●

### INFORMATION

- This button will not operate in ASR, Voice recording mode and some scene modes (Night, Text, Sunset, Dawn, Backlight, Fireworks, Beach&Snow).
- Even if the camera is turned off, the effect setting will be preserved. To cancel the special effect, select **NOR** sub menu in the Colour menu and select the **OFF** sub menu in the rest effect menus.
- The voice memo can't be added on the still image that has the FUN effect.

## ● E (Effect) button : Colour

- By using the camera's digital processor, it is possible to add special effects to your images
- Press the E button in an available recording mode. (p.33)

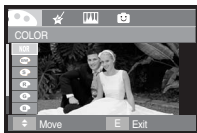



[Still image mode]



[Movie clip mode]

- Custom colour : You can change the R (Red), G (Green) and B (Blue) values of the image.

- ▲▼ button : Selects R, G, B
- ◀▶ button : Changes the values

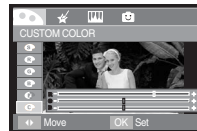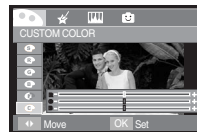

Select a desired sub menu by pressing the ▲▼ button and press the OK button.


- NOR** : No effect is added to the image.
- BW** : Captured images will be stored in black and white.
- S** : Captured images will be stored in a sepia tone (a gradient of yellowish brown colours).
- R** : Captured images will be stored in a red tone.
- G** : Captured images will be stored in a green tone.
- B** : Captured images will be stored in a blue tone.
- N** : Save the image in negative mode.
- C** : Captured image will be saved in set RGB tone.

Press the shutter button to capture an image.

## • E (Effect) button : Special Colour

### Colour mask

- With this menu, you can select a part you want to highlight. The rest of the image will be black and white.
- Press the E button in an available recording mode. (p.33)

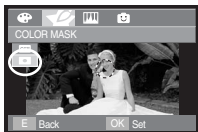

Press the OK button and the Mask mark will be displayed on the LCD monitor.




Press the Fn button. You can change the size and location of the mask.



Zoom W / T button :  
Changing the Mask size



▲▼◀▶ button :  
Moving the mask

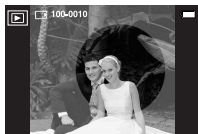

[Final image]

Press the Shutter button and the mask added image is taken.



[Mask added image]


Pressing the Fn button.

## • E (Effect) button : Image editing

### Saturation

- You can change the saturation of the image.
- Press the E button in an available recording mode. (p.33)



Select Saturation menu (  ) and a bar for changing the saturation will be displayed.



Bar for changing the saturation

Change the saturation by pressing the ◀▶ button.



- + direction : High saturation  
(The colour will be deep)
- direction : Low saturation  
(The colour will be tender)



[Final Image]

Press the Shutter button to take a picture.



Press the OK button and the saturation of image will be changed.

## ● E (Effect) button : Fun

### Preset focus frames

- You can make the subject stand out from its surroundings. The subject will be sharp and in focus while making the rest out of focus.
- Press the E button in an available recording mode. (p.33)



Select a proper menu by pressing ◀▶ button and press the OK button.



The preset focus frame will appear.  
Press the shutter button to capture an image.



- Moving and changing the focus frame  
You can change the focus frame after selecting a Range menu.



Pressing the Fn button

[Point the camera towards the subject and compose the image by using the LCD monitor.]



[The range is activated : The colour of focus frame turns white.]

Pressing the ▲▼▶◀ button



Pressing the Fn button



[After changing the range]

Pressing the shutter button



[Final image]

## ● E (Effect) button : Fun

### Composite shooting

- You can combine 2 - 4 different shots in a still image.
- Press the E button in an available recording mode. (p.33)




Select a desired menu by pressing ◀▶ button and press the OK button.

- : 2 different shots are combined in a still image.
- : 3 different shots are combined in a still image.
- : 4 different shots are combined in a still image.
- : 2 different panorama shots are combined in a still image.

After selecting a desired menu, press the shutter button to take a picture.

### ※ Selecting 2 composite shots

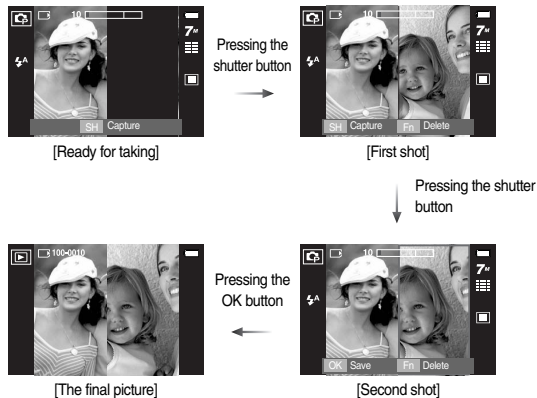

After taking the last image, press the OK button to save the image.


### INFORMATION

- You can use the flash, self-timer, macro focus and the Zoom W / T button during the composite shooting.
- If you press the Play mode, Menu, E button or Mode button during the composite shots, each camera working mode is executed. The images captured before will be deleted.

## • E (Effect) button : Fun




- Changing a part of composite shot before taking the last shot  
Before taking the last composite shot, you can change a part of composite shot.

1. During the composite shots, press the Fn button.
2. A previous image will be deleted and new frame will display. If there is an image taken before, press the Fn button again and a previous image will be deleted again.

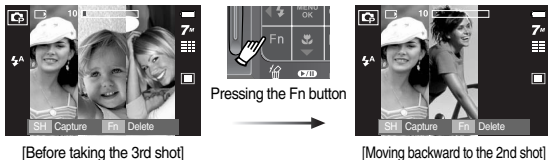

3. Press the shutter button to capture a new image.

- Changing a part of composite shot after taking the last shot
1. After taking the last shot, a cursor to select a frame will display. Press the ▲▼ ◀▶ button to select the frame.
  2. Press the Fn button and an image will be deleted. Composite frame will be activated.
  3. Press the Shutter button. You can take other images again by using the ▲▼ ◀▶ button and Fn button.
  4. Press the OK button again to save the captured image.

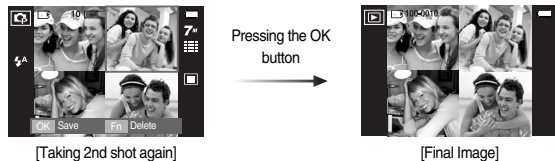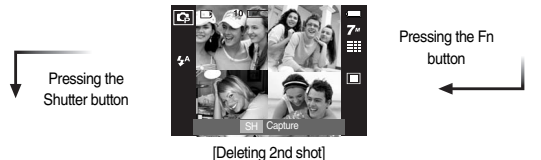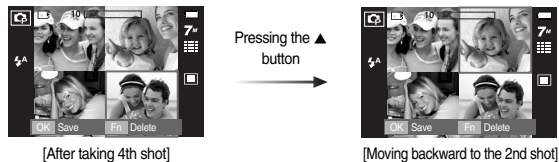




## • E (Effect) button : Fun

### Photo Frame

- You can add 8 types of frame-like borders to a still image you want to capture.
- Date & Time information will not be printed on the stored image taken with Photo Frame menu.
- Press the E button in an available recording mode. (p.33)

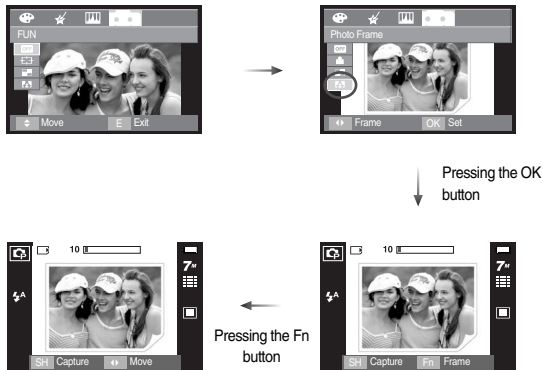

The selected photo frame will display. Press the shutter button to take a picture.


※ When the Photo Frame image is displayed on the LCD monitor, some part of the image may not be visible but this will be corrected when displayed on the computer.

Select a desired sub menu by pressing the ◀▶ button and press the OK button.

## MENU / OK button

### MENU button

- When you press the MENU button, a menu related to each camera mode will be displayed on the LCD monitor. Pressing it again will return the LCD to the initial display.
  - A menu option can be displayed when the following are selected :  
MOVIE CLIP and STILL IMAGE mode.
- There is no menu available when the VOICE RECORDING mode is selected.

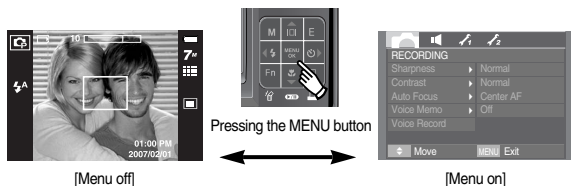

### OK button

- When the menu is displayed on the LCD monitor, this button is used for shifting the cursor to the sub menu or for confirming data.

## Using the LCD monitor to adjust the camera settings


- You can use the menu on the LCD monitor to set up recording functions.
- The items indicated by  are default settings.

Menu	Sub menu		Available mode	Page
	Soft+	Soft		
Sharpness	Soft+	Soft		p.42
	Normal	Vivid		
	Vivid+	-		
Contrast	High	Normal		p.42
	Low	-		
Auto Focus	Center AF	Multi AF		p.42
Voice Memo	Off	On		p.43 ~ 44
Voice Record	-			
Voice Mute	Off	On		p.44
Scene mode				p.44

※ Menus are subject to change without prior notice.

## Sharpness

- You can adjust the sharpness of the picture you are about to take. You cannot check the sharpness effect on the LCD monitor before you take a picture, because this function is applied only when the captured image is stored on the memory.

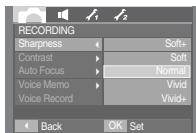


Icon	Menu	Description
	Soft+	The edges of the image are softened. This effect is suitable for editing images on your PC.
	Soft	
	Normal	The edges of the image are sharp. This is suitable for printing.
	Vivid	The edges of the image are emphasized.
	Vivid+	The edges will appear sharp, but noise may occur in the recorded image.

## Contrast

- You can set the difference between bright part of the image and dark part of the image.


- High : The difference between bright part of the image is high.
- Normal : The difference between bright part of the image is normal.
- Low : The difference between bright part of the image is low.

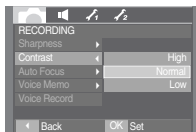

## Auto Focus type

- You can select your preferred Auto Focus type according to the shooting condition.


- Center AF : The rectangular area in the center of the LCD monitor will be focused
- Multi AF : This camera selects a AF point from the 5 AF points.

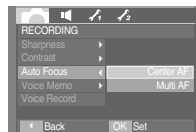

[PROGRAM mode]



[Center AF]




[Multi AF]

- ※ When the camera focuses on the subject, the auto focus frame turns to green. When the camera doesn't focus on the subject, the auto focus frame turns to red.

## Voice Memo

- You can add your voice-over to a stored still image. (Min. 2 sec. - Max. 10 sec.)

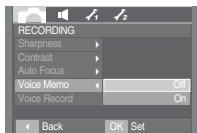

- If the voice memo indicator is displayed on the LCD monitor, the setting is completed.

- Press the shutter button and take a picture. The picture is stored on the memory card.



- Voice memo will be recorded for ten seconds from the moment the picture is stored. In the middle of the sound recording, pressing the shutter button will stop the voice memo.



## Voice Recording


- A voice can be recorded for as long as the available recording time (Min. 2 sec. - Max. 10 hour) allows.

Press the shutter button to record a voice.

- Press the shutter button once and voice is recorded for as long as the available recording time (max:10 hour) allows. The recording time will be displayed on the LCD monitor. Voice will still be recorded if the shutter button is released.

- If you wish to stop recording, press the shutter button again.

- File type : \*.wav

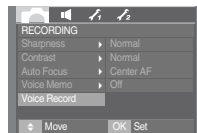

[Voice recording menu]





[Voice recording mode]

## Voice Recording

### ● Pausing while recording a voice

Using this function, you can record your favourite voice clips into a voice recording file without having to create multiple voice recording files.

1. Press the Pause button (  ) to pause recording.
2. Press the Pause button (  ) again to resume the recording.
3. If you wish to stop recording, press the shutter button again.




[Pausing the voice recording]


## INFORMATION

- A distance of 40cm between you and the camera (microphone) is the best distance to record sound.
- If the camera power is turned off while the voice recording is paused, the voice recording is cancelled.

## Recording the movie clip without voice

- You can record the movie without voice.

Select [Voice Mute] menu in the Movie clip mode. (  ) icon will display on the LCD monitor. Press the Shutter button and a movie will record for as long as the memory capacity allows without voice.

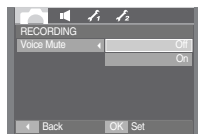

[Mic. Off menu]



[Movie clip mode]

## SCENE mode

- Use the menu to easily configure optimal settings for a variety of shooting situations.


Press the Menu button and select a desired sub menu.


- ※ Refer to page 19 for more information.



[Scene menu]

## Starting play mode

- Turn the camera on and select Play mode by pressing the play mode button (  ). The camera can now play back the images stored in the memory.
  - If the memory card is inserted in the camera, all the camera functions apply only to the memory card.
  - If the memory card is not inserted in the camera, all the camera functions apply only to the internal memory.
- Playing back a still image



1. Select the PLAY mode by pressing the play mode button (  ).



2. The last image stored on the memory is displayed on the LCD monitor.










3. Select an image that you want to view by pressing the   button.

※ Press and hold the  or  button to play back the images quickly.



## Playing back a movie clip

1. Select the recorded movie clip that you want to play back by using the   button.
2. Press the play & pause button (  ) to play back a movie clip file.

- To pause a movie clip file while playing it back, press the play & pause button again.
- Pressing the play & pause button again will cause the movie clip file will restart.
- To rewind the movie clip while it is playing, press the  button. To fast forward the movie clip, press the  button.
- To stop playback of the movie clip, press the play & pause button, and then press the  or  button.



[Movie clip mode]



## Starting play mode

- Movie clip capture function : capture still images from the movie clip.

### How to capture the movie clip


- Press the Play / Pause button while playing the movie clip. Then press the E button.
- The paused movie clip is saved in a new file name.

※ The captured movie clip file is the same size as the original movie clip (640x480, 320x240).

※ When you press the E button at the beginning of the movie clip, the first frame of the movie clip will be save as a still image.



[Paused]

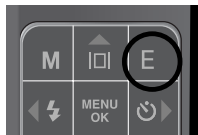

[Press the E button]

- On camera movie trimming : You can extract desired frames of movie clip during the movie clip play back.

### If the running time is under 10 seconds, the movie clip can't be trimmed.

- Press the Pause button at the point of the movie clip that you want to start extracting.
- Press the T button.
- Press the Play & Pause button and the extracted range will be displayed on the status bar.
- Press the Play & Pause button once more at the point where you wish the extracted file to stop.
- Press the T button and a confirmation window will display.
- Select a desired sub menu by pressing the ▲▼ button and press the OK button.  
[No] : The movie trimming will cancel.  
[Yes] : The extracted frames are saved as a new file name.



## INFORMATION

- When a voice is playing back, you can use the earphones.
- If you don't specify the ending point of the movie clip, the trimming confirmation window will display at the point of the last frame.

## Starting play mode

### ● Playing back a recorded voice

1. Select the recorded voice that you want to play back by using the ◀ button.
2. Press the play & pause button (▶||) to play back a recorded voice file.
  - To pause a recorded voice file, while playing it back, press the play & pause button again.
  - To resume playback of the voice file, press the play & pause button
  - To rewind the voice file while it is playing, press the ◀ button.
  - To fast forward the voice file, press the ▶ button.
  - To stop playback of the voice memo, press the Menu / OK button.
  - When a voice is playing back, you can use the earphones.



### ● Playing back a voice memo

1. Select a still image that has the voice memo.
2. Press the play & pause button (▶||) to play back the voice memo.
  - To pause the voice memo, while playing it back, press the play & pause button (▶||) again.
  - To resume playback of the voice memo, press the ▶ button.
  - To stop playback of the voice memo, press the Menu / OK button.





## • LCD monitor Indicator

- The LCD monitor displays shooting information about the displayed image.



No.	Description	Icon	Page
1	Battery		p.11
2	Folder name & File name	100-0010	p.79
3	Memory card indicator		p.12
4	Playback mode		p.45
5	Voice Memo		p.43
6	Protect		p.71
7	DPOF		p.71
8	Recording date	2007/02/01	-
9	Image size	3072x2304 ~ 256x192	p.29
10	Flash	On / Off	p.26
11	Shutter speed	16 ~ 1/2000	p.33
12	Aperture value	F3.5 ~ F8.0	p.33
13	ISO	80 ~ 1000	p.31

## • Using the camera buttons to adjust the camera

- In Play mode, you can use the buttons on the camera to conveniently set up the Play mode functions.

### Play mode button

- If you have turned on the camera by pressing the POWER button, you can press the PLAY MODE button once to switch to Play mode and press it again to switch to Recording mode.





- In the PMP, MP3, Text viewer mode, pressing the playback mode button will display the play list of each mode.

## Thumbnail ( ) / Enlargement ( ) button / Volume button ( )


- You can view multiple pictures, enlarge a selected picture, and crop and save a selected area of an image.
- In the MP3, PMP and Text Viewer mode, you can control the volume of multimedia files.

### Thumbnail display


- While an image is displayed full screen, press the thumbnail button.
- The thumbnail display will highlight the image that had been showing at the time the thumbnail mode was selected.
- Press the  button to move to a desired image.
- To view an image separately, press the enlargement button.



[Normal display mode]

Pressing the Thumbnail button (  )




Pressing the enlargement button (  )



[Thumbnail display mode]

### Image enlargement

- Select an image that you want to enlarge and press the enlargement button.
- Different parts of the image can be viewed by pressing the  button.
- Pressing the thumbnail button will zoom back to the original full sized image.



- You can tell whether the image displayed is an enlarged view by checking the image enlargement indicator shown at the bottom left of the LCD monitor.

(If the image is not an enlarged view, the indicator will not be displayed.)

You can also check the area of enlargement.

- Movie clips and WAV files can't be enlarged.
- If an image is enlarged, a loss of quality may occur.





### The maximum enlargement in proportion to the image size.

Image size	7 <sup>M</sup>	6 <sup>M</sup>	5 <sup>M</sup>	5 <sup>M</sup>	3 <sup>M</sup>	3 <sup>M</sup>	1 <sup>M</sup>	1 <sup>M</sup>
Maximum enlargement	x12.0	x10.66	x12.0	x10.12	x10.0	x8.0	x5.0	x4.0

## Thumbnail ( ) / Enlargement ( ) button / Volume button ( )

- Trimming : You can extract part of the image and save it separately.

1. Select an image that you want to enlarge and press the enlargement button.
2. Different parts of the image can be viewed by pressing the  button.
3. Press the MENU button and a message will be displayed as shown alongside.
4. Select a desired sub menu by pressing the  button and press the OK button.




- [No] : The trimming menu will disappear.
- [Yes] : The trimmed image will save as a new file name, and display on the LCD monitor.

- ※ If there is insufficient memory space to save the trimmed image, the image can't be trimmed.

## Info ( ) / Up ( ) button

- When the menu is displayed on the LCD monitor, the UP button operates as a direction button.
- Pressing the Info button for over 1 sec., information of displayed image will display on the LCD monitor.

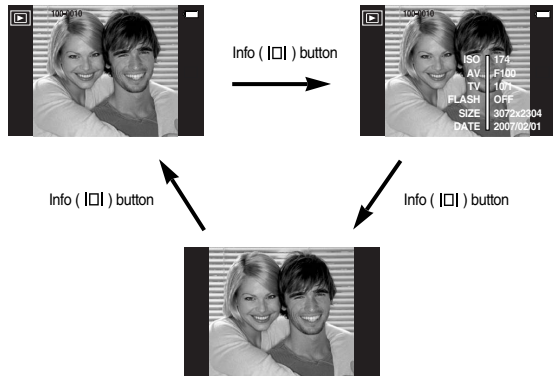

## • Play & Pause (▶/⏸) / Down (▼) button

- In Play mode, the play & pause / down (▼) button works as follows :
  - If the menu is displayed  
Press the DOWN button to move from the main menu to a sub menu, or to move down the sub menu cursor.
  - If a still image with a voice memo, a voice file, or a movie clip is playing  
In Stop mode : Plays a still image with a voice memo, a voice file, or a movie clip.  
During playback : Temporarily stops playback.  
In Pause mode : Resumes playback.



[Voice recording is stopped]



[Voice recording is playing]




[Voice recording is paused]

## • Left (◀) / Right (▶) / Menu / OK button

- LEFT (◀) / RIGHT (▶) / MENU / OK buttons activate the following.
  - ◀ button : While the menu is showing, the LEFT button operates as a direction button. While the menu is not showing, press the LEFT button to select the previous image.
  - ▶ button : While the menu is showing, the RIGHT button operates as a direction button. While the menu is not showing, press the RIGHT button to select the next image.
  - MENU button : When you press the MENU button, the play mode menu will be displayed on the LCD monitor. Pressing it again will return the LCD to the initial display.
  - OK button : When the menu is displayed on the LCD monitor, the OK button is used for confirming data that is changed by using the ▲▼◀▶ button.

## • Delete ( ) button

- This deletes images stored on the memory card.
1. Select an image that you want to delete by pressing the ◀▶ button and press the DELETE (  ) button.



[Single Image]




[Thumbnail Image]

2. Select the sub menu values by pressing the ▲▼ button and then press the OK button.
  - If [No] is selected : cancels "Delete Image".
  - If [Yes] is selected : deletes the selected images.


## • Printer ( ) button

- When the camera is connected to a PictBridge printer, you can print images by pressing the Printer button.

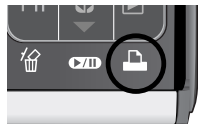

## • Special Effect ( E button ) : Resize

- Change the resolution (size) of pictures taken. Select [Start image], [MP3 Skin] to save an image to be the start-up image, MP3 Skin.

1. Press the play mode button and press the E button.
2. Press the ◀▶ button and select the [RESIZE] (  ) menu tab.
3. Select a desired sub menu by pressing the ▲▼ button and press the OK button.



### • Image Resize Types

( ● : User Selectable )


	2592x1944	2048x1536	1024x768	User Image	MP3 Skin
7M	●	●	●	●	●
5M		●	●	●	●
3M			●	●	●
1M				●	●
	2160x1440	1200x800	User Image	MP3 Skin	
6MP	●	●	●	●	
	1920x1080	1280x720	User Image	MP3 Skin	
5MW	●	●	●	●	
3MW	●	●	●	●	
1MW			●	●	

## • Special Effect (E button) : Resize


- A large sized image can be resized to a smaller sized image, but not vice versa.
- Only JPEG images can be resized. Movie clip (AVI), Voice recording (WAV) files can't be resized.
- You can change the resolution of only those files compressed in the JPEG 4:2:2 format.
- The resized image will have a new file name. The [User Image] image is stored not on the memory card but on the internal memory.
- If a new user image is saved, one of the two user images will be deleted in order.
- If the memory capacity is insufficient to store the resized image, a [Memory Full!] message will display on the LCD monitor and the resized image will not be stored.


## • Special Effect (E button) : Rotating an image


- You can rotate the stored images by various degrees. Once the playback of the rotated picture is finished, it will switch back to the original state.

1. Press the play mode button and press the E button.
2. Press the ◀▶ button and select the [ROTATE] (  ) menu tab.
3. Select a desired sub menu by pressing the ▲▼ button.



[  : Right 90° ]  
: Rotate picture in a  
clock-wise direction

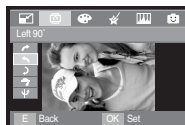


[  : Left 90° ]  
: Rotate picture in a counter-  
clock-wise direction




[  : 180° ]  
: Rotate picture 180 degrees



[  : Horizontal ]  
: Rotate picture horizontally






[  : Vertical ]  
: Rotate picture vertically

- ※ If you display the rotated image on the LCD monitor, empty spaces may appear to the left and right of the image.


## Special Effect (E button) : Colour





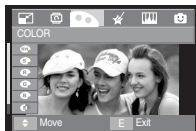


- It is possible to add special effects to your images by using this button.

- Press the play mode button and press the E button.
- Select  menu tab by pressing the  button.



[Still image]



- Select a desired sub menu by pressing the  button and press the OK button.

-  : Captured images will be stored in black and white.
-  : Captured images will be stored in a sepia tone (a gradient of yellowish brown colours).
-  : Captured images will be stored in a red tone.
-  : Captured images will be stored in a green tone.
-  : Captured images will be stored in a blue tone.
-  : Save the image in negative mode.
-  : Captured images will be stored in set RGB tone.

- The image is saved as a new file name.

- Custom colour : You can change the R (Red), G (Green) and B (Blue) values of the image.



-  button : Selects R, G, B
-  button : Change the values




## Special Effect (E button) : Special Colour

### Colour Filter

- With this menu, you can change the colour information of the image (excluding Red, Blue, Green and Yellow) to Black and White colour.

- Select  by pressing the  button.

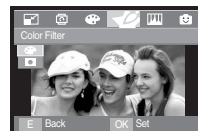


- Press the OK button and the image is saved as a new file name.

## • Special Effect (E button) : Special Colour

### Colour mask

- With this menu, you can select a part you want to highlight. The rest of the image will be in black and white.



Select  and a mark for selecting part will display.



Press the OK button and you can set the size and location of the part.



W / T button :  
Changing size of part



▲▼▶◀ button :  
Changing the location





[Final image]


Press the OK button twice and the colour mask image will be saved as a new file name.




## ● Special Effect (E button) : Image editing

1. Press the play back button and press the E button.
  2. Select  menu tab by pressing the ◀▶ button.
- Red eye Removal : Red eye effect can be removed from the captured image.

1. Select (  ) by pressing the ▲▼ button and [Processing!] message will be displayed.
2. The red eye will be removed.  
Press the OK button and the image will be saved as a new file name.

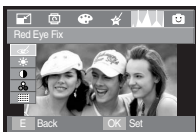


- Brightness control : You can change the brightness of the image.

1. Select (  ) by pressing the ▲▼ button and a bar for selecting the brightness will be displayed.
2. Change the brightness by pressing the ◀▶ button.
3. Press the OK button and the image will be saved as a new file name.




- Contrast control : You can change the contrast of the image.

1. Select (  ) by pressing the ▲▼ button and a bar for selecting the contrast will be displayed.
2. Change the contrast by pressing the ◀▶ button.
3. Press the OK button and the image will be saved as a new file name.




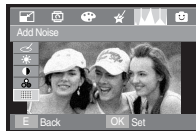
- Saturation control : You can change the saturation of the image.

1. Select (  ) by pressing the ▲▼ button and a bar for selecting the saturation will be displayed.
2. Change the saturation by pressing the ◀▶ button.
3. Press the OK button and the image will be saved as a new file name.



- Noise Effect : You can add noise to an image to add a more classic feel to your photo.

1. Select (  ) by pressing the ▲▼ button.
2. Press the OK button and the image will be saved as a new file name.




## • Special Effect (E button) : FUN

### Cartoon

- You can add a text box on the image to make the image as a cartoon
- ※ You can select the size of Cartoon image. 1M, 1MP, 1MW are available.





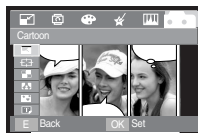

Select Cartoon (  )




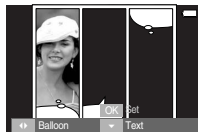
Pressing the OK button





Select a desired position by pressing the     button and press the OK button.







You can input texts by pressing the  button (p.64). Press the OK button twice.








Change the location of the text box by pressing the   button.




Select an image by pressing the     button and press the OK button.  
Select the third image with the same procedure.



Select a location of text box by pressing the     button and press the OK button. Press the  button to select type of text box.




Press the OK button and the file is saved as a new file name.

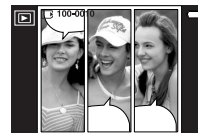


## ● Special Effect (E button) : FUN

- Before saving the cartoon image, you can change the selected image.
  1. Pressing the Fn button deletes the images in order.
  2. Press the OK button and you can select images.

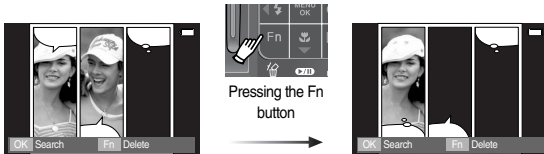

3. After selecting desired images, press the OK button to save the image as a new file name.


- Inserting texts on the text box  
You can insert texts on the text box.

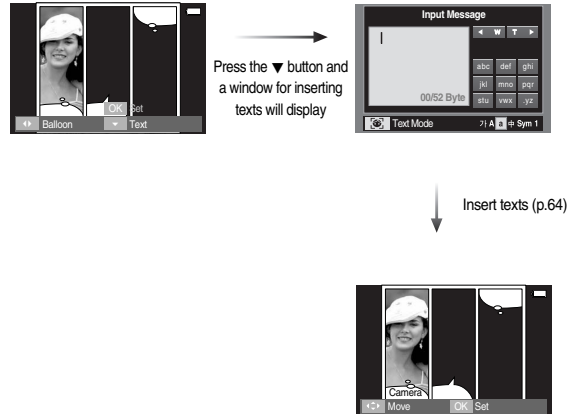

## • Special Effect (E button) : FUN

### Preset focus frames

- You can make the subject stand out from its surroundings. The subject will be sharp and in focus while making the rest out of focus.

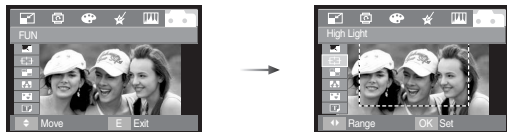


Select a desired frame by pressing the ◀▶ button and press the OK button.



- Moving and changing the focus frame

You can change the focus frame after selecting a Range menu.

- Select a focus frame by pressing the ◀▶ button and press the OK button.
- Move the location of the frame by pressing the ▲▼◀▶ button.
- Press the OK button and the file is saved as a new file name.

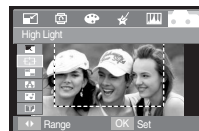

Pressing the  
OK button



[The frame is activated]

Pressing ▲▼◀▶  
button



Pressing the  
OK button




[After changing the frame  
position]


## • Special Effect (E button) : FUN

### Composite image


- You can combine 2 - 4 different shots in a still image.

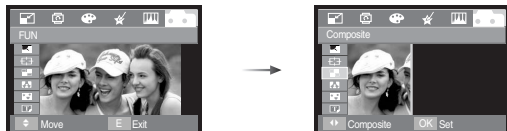


Press the OK button.  
(You can select 2-4 composite images)

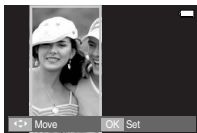

### ※ Selecting 2 composite shots

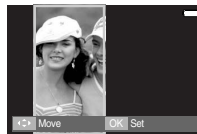


Pressing the  
▲▼◀▶ button  
→

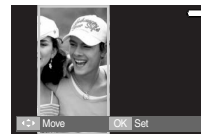

[Changing the position]

↓  
Pressing the  
OK button

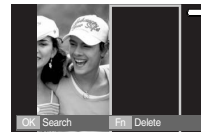

←  
Pressing the  
OK button



[Selecting the second image]



Change the location of second image by  
pressing the ▲▼◀▶ button and press  
the OK button to save the image.


### INFORMATION

- If you press the Shutter and Play mode button, a capture mode is executed.

## • Special Effect (E button) : FUN

- Before selecting the last composite image, you can change a part of composite image.


1. During the composite image editing, press the Fn button.
2. A previous image will be deleted. Press the OK button and you can select a new image. After selecting an image, press the Fn button again and the image will be deleted again.

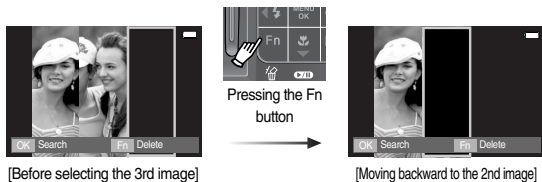

3. Press the OK button and you can select an image again.

## Photo Frame

- You can add 8 types of frame-like borders to a still image you want to capture.
- Date & Time information will not be printed on the stored image taken with Photo Frame menu.

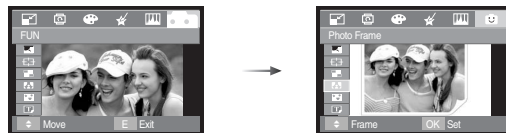

Select a desired sub menu by pressing the OK button and press the ▲▼◀▶ button.

- Press the E button and the frame will be canceled.



- ※ When the Photo Frame image is displayed on the LCD monitor, part of the image may not be visible but this will be corrected when viewing the image on the computer.

## • Special Effect (E button) : FUN



Press the OK button and the image is saved.




### Sticker

- You can add various stickers to the image.



Select ( )

Select a desired sticker by pressing the ◀▶ button and press the OK button

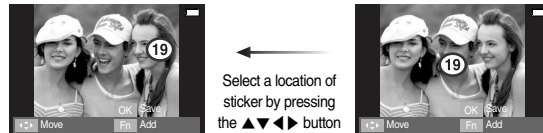

Select a location of sticker by pressing the ▲▼◀▶ button

- You can add additional stickers by pressing the Fn button. Press the OK button to store the image.




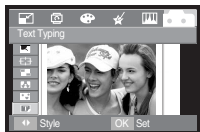
## • Special Effect (E button) : FUN

### Text Typing

- You can input text on to a saved image.



Select (  )




Select a desired frame by pressing the ◀▶ button and press the OK button.



Press the OK button and a window for inserting texts will be displayed.



Press the the FR button (  ) and ▼ (OK) button. Texts inserted before will be displayed.



Input texts (p.64)



You can change the texts by using the Fn button. You can change the colour of texts by using the OK button.




Press the OK button to save the changed image.





## Text Typing

- You can input texts in Cartoon of Fun menu.

After selecting the Text typing menu, a window for inputting text will be displayed. You can select Korean, English, Capital letter / Small letter, Number and symbols by pressing the FR (  ) button.




- Though the character selection menu is displayed, some characters can't be selected in accordance with the sales region.

- Available characters



- How to input the texts

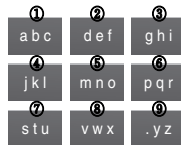

e.g.) Typing "camera"



Press ① three times  
Press ⑪ once  
Press ① once



Press ⑤ once  
Press ② twice







Press ⑥ three times  
Press ① once




## ● Setting up the play back function using the LCD monitor

- PLAY mode functions can be changed by using the LCD monitor. In the PLAY mode, pressing the MENU button displays the menu on the LCD monitor. The menus you can set up in Play mode are as follows. To capture an image after setting up the play menu, press the PLAY mode button or shutter button.


Menu tab	Main menu	Sub menu	Secondary menu	Page
	Show Start	Play / Repeat Play	-	p.66
	Select Album	All, My Self, Family, Friend, Event, Secret		p.67
	Interval	1, 3, 5, 10sec	-	p.67
	Effect	Off, Effect 1, 2, 3, Mix	-	p.67
	Music	Off, Music1, 2, 3, My Music	-	p.67
	View	All, My Self, Family, Friend, Event, Secret		p.68
	Edit	-	-	p.68
	Voice Memo	Off	-	p.70
		On		
	Delete	Select	-	p.70
		All		
Protect	Select	Unlock / Lock	p.71	
	All			

Menu tab	Main menu	Sub menu	Secondary menu	Page
	DPOF	Standard	Select / All / Cancel	p.71
		Index	No / Yes	
		Size	Select / All / Cancel	
	Copy To Card	No	-	p.73
Yes		-		

- This menu is available while the camera is connected to a PictBridge supporting printer (direct connection to the camera, sold separately) with a USB cable.

Menu tab	Main menu	Sub menu	Secondary menu	Page
	Images	One Pic	-	p.75
		All Pics	-	
	Size	Auto	-	p.75
		Postcard	-	
		Card	-	
		4X6	-	
		L	-	
		2L	-	
		Letter	-	
		A4	-	
A3	-			

## Setting up the play back function using the LCD monitor

Menu tab	Main menu	Sub menu	Secondary menu	Page
	Layout	Auto	-	p.75
		Full	-	
		1	-	
		2	-	
		4	-	
		8	-	
		9	-	
		16	-	
	Type	Auto	-	p.75
		Plain	-	
		Photo	-	
		FastPhoto	-	
	Quality	Auto	-	p.75
		Draft	-	
		Normal	-	
		Fine	-	
	Date	Auto	-	p.75
		Off	-	
		On	-	
	File Name	Auto	-	p.75
		Off	-	
		On	-	
	Reset	No	-	p.76
		Yes	-	

※ Menus are subject to change without prior notice.

## Slide Show ( )


- Images can be displayed continuously at pre-set intervals.  
You can view the slide show by connecting the camera to an external monitor.

- Press the Play mode button and press the Menu button.
- Select a desired menu tab by pressing the ◀▶ button.
- Select a desired sub menu by pressing the ▲▼ button.


- Start the slide show : The slide show can start only in the [Show] menu.

[Play] : The slide show is closed after one cycle.

[Repeat Play] : The slide show is repeated until cancelled.

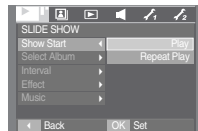


Press the OK button and the slideshow will be started.

- To pause the slide shown while playing it back, press the Pause button (  ) again.
- Pressing the Pause button again will cause the slide show restart.
- To stop playback of the slide show, press the ◀▶ button.

## Slide Show ( )

- Selecting Album : You can playback a selected album.

- [All, Myself, Family, Friend, Event, Secret]  
: The selected album is played back.

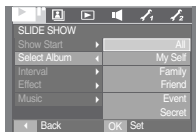


- Setting play interval : Set the slide show play interval.

- [1, 3, 5, 10sec] : the image is displayed during  
the set interval.



- Effect : Unique screen effects can be used for the slide show.


- [Off] : Normal display.  
- [Effect1] : Image moves from the top left.  
- [Effect2] : Image is displayed slowly from the  
centre outwards.  
- [Effect3] : Image is displayed slowly.  
- [Mix] : The image slides irregularly.

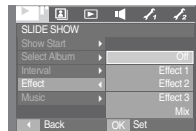

Press the OK button and the setting will be saved.

- B.G.M : Set the slide show music.

- [Off] : The B.G.M is not played back.  
- [Music 1, 2, 3] : A selected music is played back.  
- [My Music] : User selected music is played  
back.

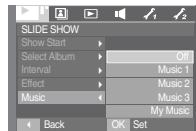







### INFORMATION

- The loading time depends on the image size and quality.
- While the slide show is playing, the voice recording, movie file will not be displayed.


## Album ( )

### View

- Album mode : Images play back by album.

-  [All] : All images saved in the memory play back.
-  [Myself] : Images saved in the Personal album play back.
-  [Family] : Images saved in the Family album play back.
-  [Friend] : Images saved in the Friends album play back.
-  [Event] : Images saved in the Events album play back.
-  [Secret] : Images saved in the Secret album play back.  
The default password is 0000.

※ The secret album can be set with only this camera.

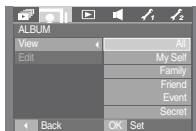

- Adding images in an album

Press the Album menu button.

- Press the OK button

- Moving folder : ▲▼ button


- Changing image : ◀▶ button

- Selecting images : T button


Images you want can be selected one at a time.

- Moving Folder : E button

- Selecting Album : MENU button

-  : Adding images in the Personal album.

-  : Adding images in the Family album.

-  : Adding images in the Friends album.



-  : Adding images in the Events album.

-  : Adding images in the Secret album.

Press the OK button and the selected images are

added in the selected album.

An icon as shown will be displayed.

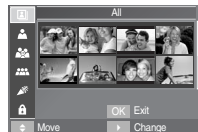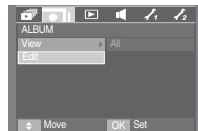

## Album ( )

### Password setup

- Inserting the password : when the secret album is selected, password must be inserted.


- Select the secret album and press the OK button. A window for inserting password will be displayed.

- Insert the password and images on the secret album will be played back. The default password is "0000".



- Changing password : You can change the password.

1. Select [SETUP2] > [Set Password] menu and press the OK button.

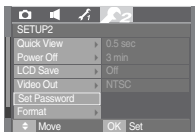

2. A window for inserting password set before will display. Insert the password by using the touch pad.

※ When a wrong password is inserted, [Wrong Password] message will be displayed.



3. Press the OK button and a window for inserting new password will be displayed.



4. Insert a new password and press the OK button.

- W (Wide) button : Cancel the inserting numbers.

- T (Tele) button : Cancel the password setup and [Password] menu on the [Setup2] will be displayed.



5. Insert the new password again.



6. Press the OK button and the password setup is complete with displayed [Saved] message.





### INFORMATION

- If you forget the password, visit the A/S centre.
- Exposing your password may cause damage. The manufacturer accepts no responsibility.

## Voice memo ( )

- You can add your voice to a stored still image. (Min. 2 sec. - Max. 10 sec.)

1. Press the  button to select an image that you want to insert the voice memo.

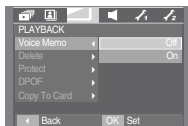

[Voice memo menu]

2. Select the voice memo menu and the voice memo indicator will display. The camera is now ready to record a voice memo.



[Ready for recording]

3. Press the shutter button to start recording and voice will be recorded to the still image for 10 seconds. While the voice is recording, the recording status window will be displayed as shown alongside.




[Voice is recording]

4. The recording can be stopped by pressing the shutter button again.


## Deleting images

- Of all the files stored in the memory card, the unprotected files in the DCIM subfolder will be deleted. Remember that this will permanently delete unprotected images. Important shots should be stored on a computer before deletion takes place. The startup image and SKIN image are stored in the camera's internal memory (i.e., not on the memory card) and it will not be deleted even if you delete all files on the memory card.

### Deleting images

1. Select a desired sub menu by pressing the  button and press the OK button.

[Select] : Selection window for an image to delete is displayed.

-  button : Select an image




- Zoom T Button : Select the image for deletion.  
(V mark)

- OK Button : Press the OK Button to display the confirmation message.  
Select the [Yes] menu and press the OK button to delete marked images.

[All] : Displays confirmation window.

Select the [Yes] menu and press the OK button to delete all unprotected images. If there aren't protected images, all the images are deleted and a [No Image!] message will display.

2. After deletion, the screen will be changed to the play mode screen.

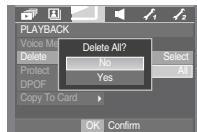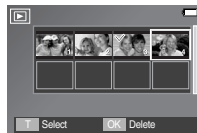
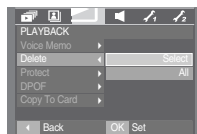


## Protecting images


- This is used to protect specific shots from being accidentally erased (Lock). It also unprotects images that have been previously protected (Unlock).

### Protecting Images

1. Select a desired sub menu by pressing the ▲▼ button and press the OK button.  
[Select] : Selection window for an image to be protected / released is displayed.
  - ▲▼◀▶ button : Select an image
  - Zoom W / T Button: Protect / release the image
  - OK Button : Your changes will be saved and the menu will disappear.

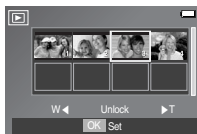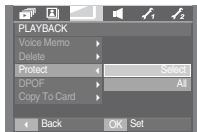


- [All] : Protect / release all saved images
- OK Button : Your changes will be saved.
  - If you protect an image, the protect icon (🔒) will be displayed on the LCD monitor. (An unprotected image has no indicator)
  - An image in LOCK mode will be protected from the delete function, but will NOT be protected from the format function.

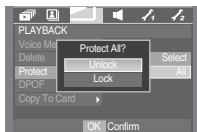

## DPOF

- DPOF (Digital Print Order Format) allows you to embed printing information on your memory card's MISC folder. Select the pictures to be printed and how many prints to make.
- The DPOF indicator will display on the LCD monitor when an image that has DPOF information plays back. Images can then be printed on DPOF printers, or at an increasing number of photo labs.
- This function is not available for Movie clips and Voice recording files.
- If a memory card is not inserted, the menus are still displayed in the LCD, but are not selectable.

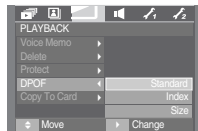



## DPOF : STANDARD

- This function allows you to embed print quantity information on a stored image.

1. Select the [Standard] menu by pressing the ▲▼ button and press the ► button.
2. Select a desired sub menu by pressing the ▲▼ button.

[Select] : Selection window for an image to print is displayed.

- ▲▼◀▶ button : Select an image to print.
- Zoom W / T button : Select the number of prints.



[All] : Configure number of prints for all pictures except movie and voice files.

- W / T button : Select a number of prints

[Cancel] : Cancel the print setup.

3. Press the OK button to confirm the setting.

If an image carries DPOF instructions, the DPOF indicator (  ) will show.

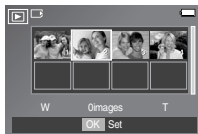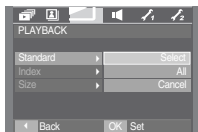

## DPOF : Index


- Images (except for movie clips and voice file) are printed as index type.

1. Select the [Index] menu by pressing the ▲▼ button and press the ► button.
2. Select a desired sub menu by pressing the ▲▼ button.

If [No] is selected : Cancel the index print setting.

If [Yes] is selected : The image will be printed in index format.

3. Press the OK button to confirm the setting.

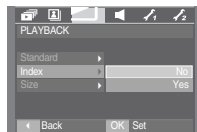

## DPOF : Print size

- You can specify the print size when printing images stored on the memory card. The [Size] menu is available only for DPOF 1.1 compatible printers.

### ● Setting the Print Size

1. Select the [Size] menu by pressing the ▲▼ button and press the ► button.

2. Select a desired sub menu by pressing the ▲▼ button and press the OK button.

[Select] : Selection window to change the print size of an image is displayed.

- ▲▼◀▶ button : Select an image.

- Zoom W / T button : Change the print size.

- OK button : Your changes will be saved and the menu will disappear.

[All] : Change print size of all saved images.

- W / T button : Select a print size




- OK button : Confirm the changed setting.

[Cancel] : Cancel all of the print size settings.

※ DPOF [Size] secondary menu :

Cancel, 3x5, 4x6, 5x7, 8x10

※ Depending on the manufacturer and printer model, cancelling the printing may take a little longer for the printer to process.

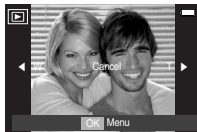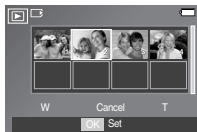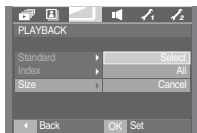

## ● Copy To Card


- This enables you to copy image files, movie clips and voice recording files on the camera's built-in internal memory to the camera's removable SD memory card.

### ● Copying to the Memory Card

1. Select a desired sub menu by pressing the ▲▼ button and press the OK button.

- [No] : Cancels "Copy to Card".

- [Yes] : All images, movie clips and voice recording files saved in the internal memory are copied to the memory card after the [Processing!] message is displayed. After copying has been completed, the screen will return to play mode.

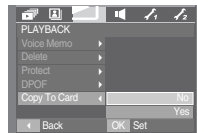

## INFORMATION


- When this menu is selected without inserting a memory card, you can select the [Copy To Card] menu but the menu can't be run.
- If there is not enough space available in the memory card to copy saved images in the internal memory (10MB), the [Copy To Card] command will copy only some of the images and display [Memory Full!] message. Then the system will return to the playback mode. Please be sure to delete any unnecessary files to free up space before inserting the memory card into the camera.
- When you move images from the internal memory to the removable SD card, they will be automatically renumbered to avoid duplication of the file name. If the last file in the memory card is S73F0010.jpg, the copied file names start from S73F0011.jpg. After completing [Copy To Card], the last stored image of the last copied folder is displayed on the LCD monitor.

## ● PictBridge


- You can use the USB cable to connect this camera to a printer that supports PictBridge (sold separately) and print the stored images directly. Movie clips and voice files cannot be printed.

- Setting up the camera for connection to the printer

1. Connect the camera and printer with USB cable.
2. Select the [Printer] menu by pressing ▲▼ button and press the OK button.

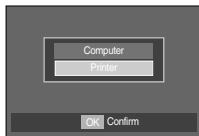


- Connecting the Camera to a Printer

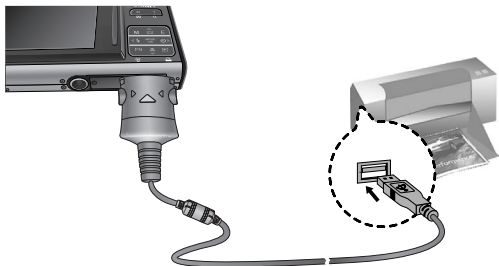

- ※ If the [USB] menu is set to the [Computer], you cannot connect a PictBridge compatible printer to the camera through USB cable with [Connecting Computer] message. In this case, remove the cable and do the step 1, 2 again.

- Easy printing

When you connect the camera to printer in the Play back mode, you can print a picture easily.

- Pressing the printer (  ) button :  
Currently displayed image will be printed with the printer's default setting.
- Pressing the ◀▶ button :  
Selects a previous / next image.




## ● PictBridge : Picture Selection

- You can select images you want to print

### ● Setting the Number of Copies to Print

1. Press the Menu button and the PictBridge menu will display.
2. Use the ▲▼ buttons to select the [Images] menu and press the ► button.
3. Use the ▲▼ buttons to select a desired sub menu and press the OK button.

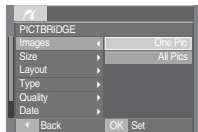


- Select [One Pic] or [All Pics]. A screen where you can set the number of copies to print will appear as shown below.



[When [One Pic] is selected]




[When [All Pics] is selected]

- Press the ▲▼ button to select the number of prints.
  - When [One Pic] is selected : Use the ◀▶ button to select another picture. After selecting another picture, select the number of prints for another picture.
  - After setting the number of prints, press the OK button to save.
  - Press the Shutter button to return to the menu without setting the number of prints.
4. Press the Print button (  ) and images will be printed.

## ● PictBridge : Print Setting

- You can select the Paper Size, Print Format, Paper Type, Print Quality, Date Print, and File Name Print menus for printed pictures.

1. Press the Menu button and the PictBridge menu will display.
2. Use the ▲▼ buttons to select the desired menu, and then press the ► button.
3. Use the ▲▼ buttons to select the desired submenu value, and then press the OK button.

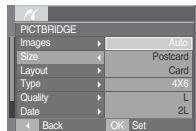

[Paper Size]

Menu	Function	Sub menu
Size	Set the size of the printing paper	Auto, PostCard, Card, 4X6, L, 2L, Letter, A4, A3
Layout	Set the number of pictures to be printed on a sheet of paper	Auto, Full, 1, 2, 4, 8, 9, 16, Index
Type	Set the quality of the printing paper	Auto, Plain, Photo, FastPhoto
Quality	Set the quality of the picture to be printed	Auto, Draft, Normal, Fine
Date	Set whether to print the date	Auto, Off, On
File Name	Set whether to print the file name	Auto, Off, On

- ※ Some menu options are not supported on all printers. If not supported, the menus are still displayed in the LCD, but are not selectable.

## • PictBridge : Reset


- Initialises user-changed configurations.










































- Use the ▲▼ buttons to select the [Reset] menu tab. And then press the ► button.
- Use the ▲▼ buttons to select the desired sub menu value, and then press the OK button.
  - If [No] is selected : Settings will not be reset.
  - If [Yes] is selected : All print and image settings will be reset.



- ※ Default print setting varies depending on the printer manufacturer.  
For your printer's default setting, refer to the user's guide that came with your printer.

## • Sound menu

- In this mode, you can set up sound settings. You can use the setup menu in all camera modes, except Voice Recording mode. The items indicated by  are default settings.

Mode	Menu	Sub Menu	Available Mode	Page
 (SOUND)	Volume	Off	       	p.77
		Low		
		Medium		
		High		
	Start Sound	Off	       	p.77
		Sound 1		
		Sound 2		
	Shutter Sound	Off	       	p.77
		Sound 1		
		Sound 2		
	Beep Sound	Off	       	p.77
		Sound 1		
		Sound 2		
	AF Sound	Off	       	p.77
		On		

## • Sound ( )


### [ Volume ]

- You can set select a volume of sound, start up sound, shutter sound, warning sound and AF sound.
- [Volume] sub menu : [Off], [Low], [Medium], [High]




### [ Start up sound ]

- You can select the sound that is activated whenever the camera is turned on.
- Start up sound : [Off], [Sound 1], [Sound 2], [Sound 3]  
- If the start up image is set to [Off], the start up sound will not activate, even though you may have set these to on.

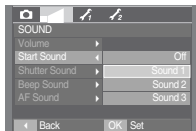


### [ Shutter sound ]

- You can select the shutter sound.
- Shutter sound : [Off], [Sound 1], [Sound 2], [Sound 3]

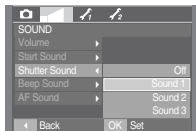


### [ Beep Sound ]

- If you set sound to ON, various sounds will be activated for camera startup, when buttons are pressed, so that you can be aware of the camera operation status.
- [Sound] sub menu : [Off], [Sound 1, 2, 3]

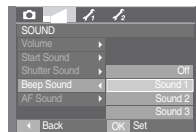



### [ AF sound ]

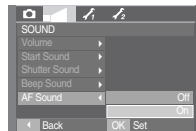
- If you set AF sound to ON, AF SOUND will be activated when a subject is focused so that you can be aware of the camera operation status.
- [AF sound] sub menu : [Off], [On]



## Setup menu

- In this mode, you can set up basic settings. You can use the setup menu in all camera modes, except Voice Recording mode.  
The items indicated by  are default settings.

Menu tab	Main menu	Sub menu		Page	
	File	Reset		p.79	
	LANGUAGE	Series		Reset	p.79
		ENGLISH	한국어	FRANÇAIS	
		DEUTSCH	ESPAÑOL	ITALIANO	
		简体中文	繁體中文	日本語	
		РУССКИЙ	PORTUGUÊS	DUTCH	
		DANSK	SVENSKA	SUOMI	
		ไทย	BAHASA	عربي	
		POLSKI	Magyar	Čeština	
	Türkçe	-	-		
	Date&Time	yy/mm/dd		mm/dd/yy	p.79
		dd/mm/yy		Off	
	Imprint	Off		Date	p.80
		Date&Time		-	
	LCD	Auto		Dark	p.80
Normal		Bright			
AF Lamp	Off	On		p.80	
Start Image	Off		Logo	p.80	
	User Image		-		

Menu tab	Main menu	Sub menu		Page
	Quick View	Off	0.5, 1, 3 sec	p.81
	Power Off	1, 3, 5, 10 min	-	p.81
	LCD Save	Off	On	p.81
	Video Out	NTSC	PAL	p.82
	Set Password	-		p.83
	Format	No	Yes	p.83
	Reset	No	Yes	p.83

※ Menus are subject to change without prior notice.

## • Setup menu 1 ( )

### [ File name ]

- This function allows the user to select the file naming format.

[Series] : New files are named using numbers that follow the previous sequence, even when a new memory card is used, or after formatting, or after deleting all pictures.

[Reset] : After using the reset function, the next file name will be set from 0001 even after formatting, deleting all or inserting a new memory card.



- The first stored folder name is 100SSCAM, and the first file name is S73F0001.
- File names are assigned sequentially from S73F0001 → S73F0002 → ~ → S73F9999.
- The folder number is assigned sequentially from 100 to 999 as follows: 100SSCAM → 101SSCAM → ~ → 999SSCAM.
- Maximum numbers of files in a folder are 9999.
- The files used with the memory card conform to the DCF (Design rule for Camera File systems) format. If you change the image file name, the image may not play back.

### [ LANGUAGE ]

- There is a choice of languages that can be displayed on the LCD monitor. Even if the battery is removed and inserted again, the language setting will be preserved.

- LANGUAGE sub menu

: English, Korean, French, German, Spanish, Italian, S.Chinese, T.Chinese, Japanese, Russian, Portuguese, Dutch, Danish, Swedish, Finnish, Thai, Bahasa (Malay / Indonesian), Arabic, Polish, Hungarian, Czech and Turkish.



### [ Setting up the Date / Time / Date type ]

- You can change the date and time that will be displayed on the captured images and set up the date type.

- Date type : [yy/mm/dd], [mm/dd/yy], [dd/mm/yy], [Off]





## • Setup menu 1 ( )

### [ Imprinting the recording date ]


- There is an option to include DATE / TIME on still images.

#### ● Sub menus

[Off] : The DATE & TIME will not be imprinted on the image file.

[Date] : Only the DATE will be imprinted on the image file.

[Date&Time] : The DATE & TIME will be imprinted on the image file.

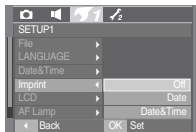


- ※ The Date & Time are imprinted at the bottom right side of the still image.
- ※ The imprint function is applied only to still images except for the images taken in photo frame effect mode.
- ※ Depending on the manufacturer and print mode, the date printed on an image may not be printed correctly.

### [ LCD brightness ]

- You can adjust the LCD brightness.

#### ● [LCD] sub menu : Auto, Dark, Normal, Bright

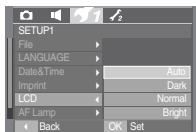


### [ Auto Focus lamp ]

- You can turn on and off the Auto Focus lamp.

#### ● Sub menus

[Off] : The AF lamp will not light up in a low light condition.

[On] : The AF lamp will light up in a low light condition.

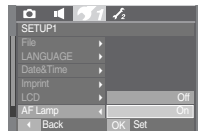


### [ Start up image ]

- You can select the image that is first displayed on the LCD monitor whenever the camera is turned on.

#### ● Start up image : [Off], [LOGO], [User Image]

- Use a saved image for the start-up image with the [User Image] in the [RESIZE] menu in the play mode.
- The start-up image will not be deleted by [DELETE] or [Format] menu.
- The User images will be deleted by [Reset] menu.

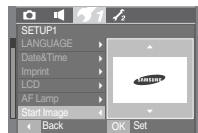


## • Setup menu 2 ( 2 )

### [ Quick view ]

- If you enable Quick View before capturing an image, you can view the image you just captured on the LCD monitor for the duration set in the [Quick View] setup. Quick view is possible only with still images.

### ● Sub menus

- [Off] : The quick view function can't be activated.
- [0.5, 1, 3 sec] : The captured image is briefly displayed during the selected time.

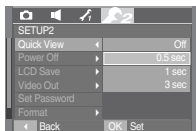

### [ Auto power off ]


- This function switches the camera off after a set amount of time in order to prevent unnecessary battery drainage.

### ● Sub menus

- [1, 3, 5, 10 min] : The power will turn off automatically if not used for the period of time specified.

- After replacing the battery, the power off setting will be preserved.

- Note that the automatic power off function will not operate if the camera is in the PMP, MP3, Text Viewer mode, PC / Printer mode, slide show, playing back a voice recording and playing back a movie clip.

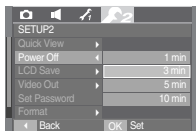


### [ LCD save ]

- If you set the [LCD save] to On and the camera isn't operated during the specified time, the LCD monitor will be turned off automatically.

### ● [LCD save] sub menu

[Off] : The LCD monitor will not be turned off.

[On] : If you select the [LCD Save] and the camera isn't operated during the specified time (about 30 SEC.), the camera power will be idle (LCD monitor : OFF, Camera status lamp : Blinking) automatically.


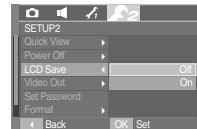


## • Setup menu 2 ( 2 )

[ Selecting Video out type ]

- The Movie output signal from the camera can be NTSC or PAL.  
Your choice of output will be governed by the type of device (monitor or TV, etc.) to which the camera is connected. PAL mode can support only BDGHI.
- Connecting to an external monitor

When the camera is connected to an external monitor in the play back mode, the image (movie or still image) will be visible on the external monitor and the LCD monitor of the camera turns off.

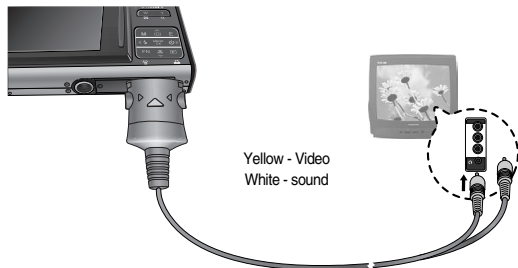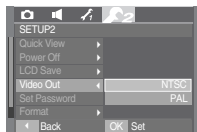


- NTSC : U.S.A, Canada, Japan, South Korea, Taiwan, Mexico.
- PAL : Australia, Austria, Belgium, China, Denmark, Finland, Germany, U.K., Holland, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway.
- When using a TV as an external monitor, you will need to select the external or AV channel of the TV.
- There will be a digital noise on the external monitor, but it is not a malfunction.
- If the image is not in the centre of the screen, use the TV controls to centre it.
- When the camera is connected to an external monitor, some parts of the image may not be displayed.
- When the camera is connected to an external monitor, the menu will be visible on the external monitor and the menu functions are the same as those indicated on the LCD monitor.
- When the camera is connected to an external monitor, the button sound may not sound.
- When you connect the A/V cable in a recording mode, the camera mode is changed to the Playback mode automatically and an image will be displayed.

## • Setup menu 2 ( )

### [ Password setup ]

- You can set the password on the secret album.  
(p.69)

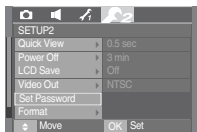


### [ Formatting a memory ]

- This is used for formatting the memory. If you run [Format] on the memory, all images, including the protected images, will be deleted. Be sure to download important images to your PC before formatting the memory.

#### ● Sub menus

[No] : The memory will not be formatted.

[Yes] : A [Processing!] message appears and the memory will be formatted. If you run FORMAT in Play mode, a [No Image!] message will appear.

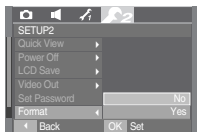

Be sure to run [Format] on the following types of memory card.

- A new memory card, or an unformatted memory card
- A memory card that has a file this camera can't recognise or one that has been taken from another camera.
- Always format the memory card using this camera. If you insert a memory card that has been formatted using other cameras, memory card readers, or PCs, you will get a [Card Error!] message.


### [ Initialisation ]

- All camera menu and function settings will be restored to their default values. However, values for DATE / TIME, LANGUAGE, and VIDEO OUT will not be changed.

#### ● Sub menus

[No] : Settings will not be restored to their defaults.

[Yes] : All settings will be restored to their defaults.

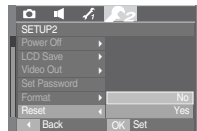

## • MP3 / PMP / TEXT VIEWER Mode

- This camera has an embedded MP3, TEXT VIEWER & Portable Media Player program. You can take a picture, listen to the MP3 files and watch the movie clip (Movie and Video clip) whenever you want. To use the PMP mode, you must convert the multimedia file with the Digimax Converter. In the TEXT VIEWER mode you can see the text on the LCD monitor with listening MP3 music.
- If the file name is over 255 (Including 2 Byte language like Korean, Chinese, etc.) characters, the file name doesn't appear on the play list.

### Downloading files

- To use MP3, PMP and TEXT VIEWER functions, MP3, PMP(multimedia files) and TEXT files must be saved in the internal memory or memory card of this camera.
  1. Save the desired files on your PC.
  2. Connect the camera to your PC with the USB cable and turn on the camera.
  3. Open Window's EXPLORER and search for Removable Disk (SAMSUNG).
  4. Make a folder under the Removable Disk.

- MP3 Mode : [MP3]



- PMP Mode : [PMP]



- TEXT VIEWER mode :  
[TEXT]



5. Select desired files that you want to save and copy them to the desired folder.

## MP3 / PMP / TEXT VIEWER Mode

### INFORMATION

- Take care of the illegal duplication of MP3 & multimedia files. It violates various copyright laws.
- This camera can only play back MP3 files in the MP3 mode and SDC files (modified XviD MPEG4 video / MPEG Layer2 audio type) in the PMP mode.
- If a file can not be played back on this camera, convert it into the supported file format by using the Digimax Converter. (p.108)
- Up to 900 files and 100 sub folder can be saved in a folder.

## Starting the MP3 / PMP / TEXT VIEWER mode

- Insert the memory card that holds MP3, PMP and TEXT files. As this camera has a 10MB internal memory, you can save the files on the internal memory too.

1. Select a desired Multi media mode. (p.16, 86)

2. A menu will display as shown.

[Resume] : memorizes the latest stopped frame.

MP3 mode : plays back from the beginning of the file.

PMP mode : plays back from the latest stopped frame.


TEXT VIEWER mode : plays back from the latest stopped frame.

[Open] : The browsing menu will be displayed to select a desired file.

3. Select a desired file and press the OK button.  
And then the file will play back.





[MP3 mode]

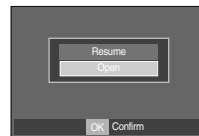


## Starting the MP3 / PMP / TEXT VIEWER mode


[MP3 mode]

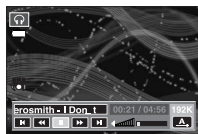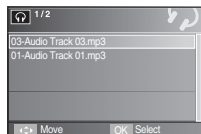

[PMP mode]

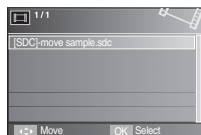

[TEXT VIEWER mode]

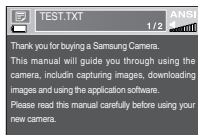


## INFORMATION


- When the [Resume] menu (p.91) of each mode are set as [Off], the browsing menu doesn't open. If the last played file was deleted, the browsing menu opens though the setting is the same as above.
- The order of play lists on the browsing menu and the order of files saved in the memory are the same.
- A title coded with unsupported language is displayed as "-----".
- The automatic power off function will not operate if the a file is playing back.
- If there are over 100 files in the memory, it takes a little longer for the camera to process to the MP3 / PMP mode.
- If there is no operation during the specified time (About 30 sec.) in the MP3 / TEXT VIEWER mode (B.G.M : Off, Auto scroll : Off), the LCD monitor is turned off automatically and the camera status lamp blinks. To use the camera, press any of the camera buttons except the Power button.
- Playing back the VBR (Variable Bit Rate) file. A VBR file varies the amount of output data in each time segment based on the complexity of the input data in that segment. When the VBR encoded files are played back, the LCD will display as shown.
  - The VBR icon will display instead of the Bit rate icon.
- For about 2 seconds of the start and end frames of the PMP file, no camera button except the Power button can be operated.
- When an MP3 file doesn't play back correctly, download a free MP3 conversion program and convert it before using the MP3 file on the camera.
- Depending on the file type, the movie may be paused during playing back in the PMP mode. The movie restarts automatically and it is not a camera malfunction.

## • LCD monitor indicator for MP3 / PMP / TEXT VIEWER mode


- The LCD monitor displays information about the MP3, multimedia and Text file.

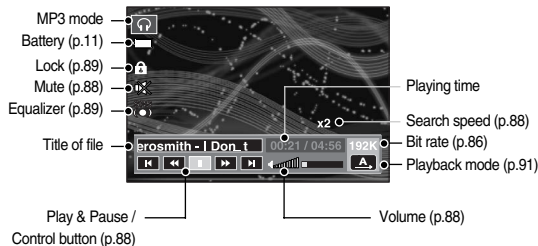

[MP3 mode]

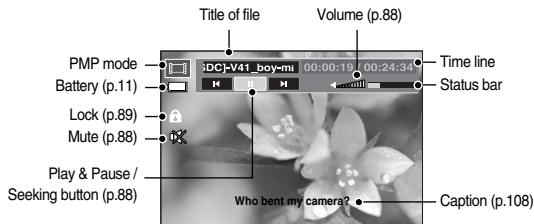

[PMP mode]

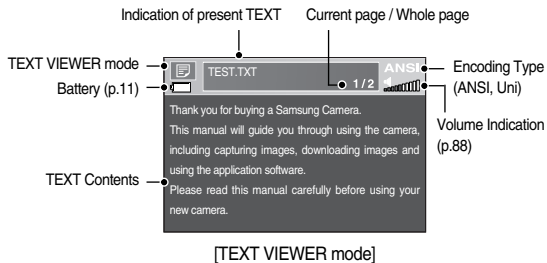

- ※ Encoding Type : ANSI (American National Standards Institute) Type, Uni (Unicode) Type


- When the ANSI encoding type is displayed : You should set the Language of the TEXT VIEWER menu to view the text. Set the Language menu to one that is the same as the Operating System language that the text was created.
- When the UNI encoding type is displayed : The text file will be displayed with any language menu.

- ※ If the text file size is over 10MB, it may take long time to view the text file. Divide the text file and the loading time will be shortened.



## Using the camera buttons to adjust the camera

### Volume button

- You can control the volume with this button. There are 0 ~ 30 steps.
  - Mute (  ) : You can mute the MP3 sound with the Up button.





### Play & Pause / Seeking button

- When a file is playing back, press the ▼ button to pause the file. Pressing it again will resume playback.
- MP3 mode
  - When an MP3 file is not played back, you can search the MP3 files by pressing the ◀▶ button.
  - When an MP3 file is played back, you can search the desired part of the MP3 file by pressing the ◀▶ button. (2-16X)
- PMP mode
  - You can search the Multimedia files by pressing the ◀▶ button.
  - You can search a desired frame of the file during play back by pressing the ◀▶ button.
- TEXT VIEWER mode
  - When the text list menu is displayed : select a text file by pressing the ▲▼ button.
  - When the text is displayed : press the ▲▼ button and previous / next page of the file will be displayed.

### Delete button

- This deletes files stored on the memory.
  1. Select a desired file to delete on the browsing menu and press the Delete button.
  2. A message will appear as shown  
[No] : cancels "Delete files" and the browsing menu will display.  
[Yes] : deletes the selected file.

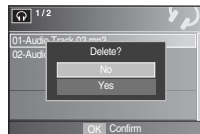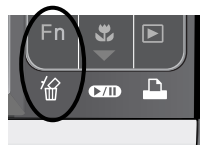

### INFORMATION

- Before deleting files from the camera, take care to download files you want to keep to your computer.

## Using the camera buttons to adjust the camera

### Hold / Equalizer button

- If you press the Hold button for over 1 second, the camera buttons are locked.
  - If the camera buttons are locked, the buttons can't be operated while playing back. But Power off, Video out, USB connection and LCD on functions can be operated.




- If you press the Lock button again or turn off the camera, the camera is unlocked.


- The user can select appropriate sound with this setting.

- Press the E button and select either <SRS>, <Normal>, <Live>, <Classic>, <Jazz>, <Rock> or <Dance>.




### Playlist button


- While a multimedia file is playing back, you can select a desired file by using the browsing menu.
  1. While a multimedia file is playing back, press the Playlist button (  ).
  2. A playlist that is currently playing will be highlighted.
  3. Move the cursor to a desired list by pressing the Control button.
    - Pressing the OK button : the selected file is played back.
    - Pressing the Playlist button : the selection will be cancelled.

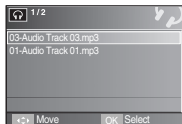

[MP3 Mode]

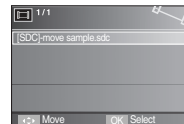

[PMP Mode]

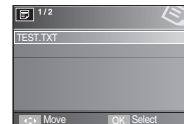

[TEXT VIEWER Mode]

## • Setting up the playback function using the LCD monitor

- MP3 / PMP / Text Viewer mode functions can be changed by using the LCD monitor. Press the MENU button and the menu will display on the LCD monitor.

	Menu tab	Main menu	Sub menu		Page
MP3	→	Resume	Off	On	p.91
	▶ MODE	Play Mode	Play All	Repeat One	p.91
			Repeat All	Random	
			Random Repeat	-	
	📁	MP3 Skin	Default 1	Default 2	p.91
			User Skin 1	User Skin 2	
	🎧	Show Play	Play	Repeat Play	p.92
	🕒	Show Interval	2 sec	3 sec	p.92
			5 sec	-	
	🗑️	Delete All	No	Yes	p.92
PMP	→	Resume	Off	On	p.91
	▶▶ TIME	Seeking	30 sec	1 min	p.92
			3 min	5 min	
			10 min	-	
	□□	Player Display	5 sec	On	p.93
			Off	-	
🗑️	Delete All	No	Yes	p.92	


	Menu tab	Main menu	Sub menu			Page
TEXT VIEWER	→	Resume	Off	On	p.91	
	⏮	Auto Scroll	Off	0.8 sec	p.93	
			1.1 sec	1.4 sec		
			1.7 sec	2.0 sec		
	🎧	MP3 BGM	Off	On	p.94	
	🗨️	Language	ENGLISH	한국어	FRANÇAIS	p.94
			DEUTSCH	ESPAÑOL	ITALIANO	
			简体中文	繁體中文	日本語	
			РУССКИЙ	PORTUGUÊS	DUTCH	
			DANSK	SVENSKA	SUOMI	
BAHASA			POLSKI	Magyar		
Čeština			Türkçe	-		
🗑️	Delete All	No	Yes	p.92		

\* Menus are subject to change without prior notice.

## • Setting up the playback function using the LCD monitor

Resume   

- You can set the playback type.
  1. Press the Menu button in each mode.
  2. Select a desired playing type in the [Resume] menu by pressing the ▲▼ button and pressing the OK button.

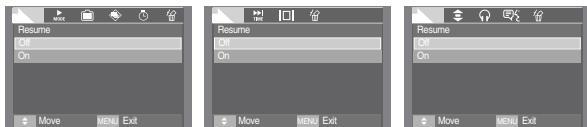

[MP3 mode]

[PMP Mode]

[TEXT VIEWER mode]

[Off] : The browsing menu will be displayed to select a desired file.

[On] : When the camera is turned on / off or camera mode is changed, this camera will memorize the latest stopped frame.


MP3 mode : plays back from the beginning of the file.

PMP mode : plays back from the latest stopped frame.

TEXT VIEWER mode : plays back from the latest stopped frame.

Play mode 


- You can set various repeat and shuffle options.  
This function is adopted only in the selected folder.
- |                 |   |
|-----------------|---|
| [Play All]      | : plays a single track once.                          |
| [Repeat One]    | : plays a single track repeatedly.                    |
| [Repeat All]    | : plays all tracks in the folder repeatedly.          |
| [Random]        | : randomly plays all tracks in the folder once.       |
| [Random Repeat] | : randomly plays all tracks in the folder repeatedly. |

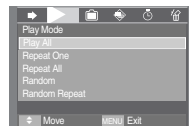

Skin of MP3 player 

- You can set the skin of MP3 player.
 

[Default 1, 2]	: Default skin will be set.
[User Skin 1, 2]	: An image created by the [MP3 Skin] menu (p.52) will be set.

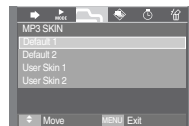


## • Setting up the playback function using the LCD monitor

### Playing back the slide show

- While the MP3 file is playing back, captured images are displayed on the LCD monitor continuously.

[Play] : Display the images once.

[Repeat Play] : Display the images continuously.

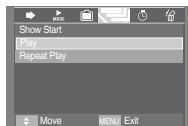

- ※ When the playing back is complete, the slide show will stop.
- ※ To stop the slide show, press the Pause button and then press the E button.


### Setting slide show interval

- You can set the slide show play interval of MP3 mode.
  - Select an interval from 2, 3 or 5 seconds.




### Delete all


- All files stored on the memory card will be deleted. In the MP3 mode, only MP3 files are deleted. In the PMP mode, only multimedia files are deleted. In the TEXT VIEWER mode, TEXT files are deleted.

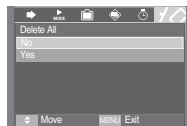

[MP3 mode]

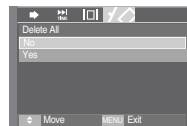


[PMP mode]

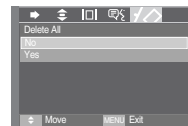

[TEXT VIEWER mode]

[No] : cancels "Delete files"


[Yes] : A confirmation window will display.  
Select [Yes] and press the OK button.  
All files will be deleted.

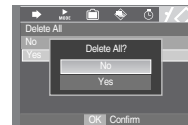

[MP3 mode]

### Frame search

- You can set the time of skip range when you search the movie by pressing the ◀▶ button. You can search a frame you want easily.  
[30 sec, 1, 3, 5, 10 min]  
: This will skip a set frame whenever you press the Left / Right button.

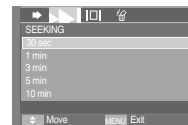

## Setting up the playback function using the LCD monitor

### Display setting

- You can set the play back function display on the LCD.

[5 sec] : If there is no operation during 5 seconds,  
Menu bar will disappear.

[On] : Menu bar will appear on the LCD monitor.

[Off] : Menu bar will not appear on the LCD  
monitor.



- ※ To see the caption, insert the caption file (.smi) by using the Digimax Converter. (p.108)
- ※ If a multimedia file has a caption, the caption will appear regardless of display setting.






### Setting up the recording function in the MP3 mode

- You can take a picture and listen to the MP3 files at the same time

- Press the Shutter button and the MP3 stand-by icon will appear.
- Press the Shutter button and an image will be taken.





### INFORMATION

- The camera settings are fixed to default setting of Auto mode (  ,  ,  ,  ,  ). The settings can't be changed.
- If the memory card is not inserted, this function will not operate. Occasionally the next file will be played back when you press the Shutter button, even though a memory card is inserted.
- To cancel the recording mode of the MP3 mode, press the E button or do not operate any buttons for about 10 seconds.

### Auto Scroll

- The playing text is scrolled automatically and displays on the LCD monitor.


[Off] : The text will not be scrolled automatically.

- ※ Press the   button and you can use the Auto Scroll function.

[0.8, 1.1, 1.4, 1.7, 2.0 sec]

: The text will be scrolled automatically.

The interval is marked on each menu icon.

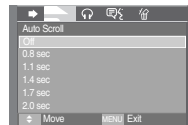

## Setting up the playback function using the LCD monitor


### MP3 BGM Setting

- You can play MP3 files when you are playing the text.

[Off] : You cannot play the MP3 files.

[On] : When you are playing the text, you can play the MP3 files.

※ The last played MP3 files will be executed.

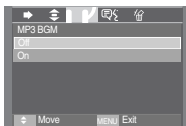


### Language setting

- You can setup the language of OS (Operating System) that the text file was made.

- If the characters of the text file don't display correctly, open the file on Windows 2000 or later and save it again. We recommend using 'Notepad' and it has to be saved as ANSI encoding type.

- Some unique characters may not be displayed correctly on the camera.
- Encode the text files as the standard type or some characters may not be displayed correctly.

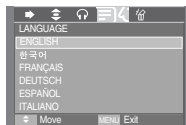

## Important notes

Be sure to observe the following precautions!

- This unit contains precision electronic components. Do not use or store this unit in the following locations.
  - Areas exposed to severe changes in temperature and humidity.
  - Areas exposed to dust and dirt.
  - Areas exposed to direct sunlight or the inside of a vehicle in hot weather.
  - Environments where there is high magnetism or excessive vibration.
  - Areas with high explosives or highly flammable materials.
- Do not leave this camera in places subject to dust, chemicals (like naphthalene and mothball), high temperature and high humidity. Keep this camera in a hermetically sealed box with silica gel when not planning to use it for a long period.
- Sand can be particularly troublesome to cameras.
  - Do not let sand get inside the unit when using it on beaches, coastal dunes, or other areas where there is lots of sand.
  - Doing so may result in failure or may permanently render the unit unusable.
- Handling the camera
  - Never drop the camera or subject it to severe shocks or vibrations.
  - Protect the large size LCD monitor from impact. When this camera is not used, keep this camera in the camera case.
  - Avoid obstructing the lens or the flash when you capture an image.
  - This camera is not waterproof. To avoid dangerous electrical shocks, never hold or operate the camera with wet hands.
  - If you use this camera in wet places, such as beach or pool, do not let water or sand get inside the camera. Doing so may result in failure or may permanently damage the unit.

## • Important notes

- Extremes in temperature may cause problems.
  - If the camera is transferred from a cold to a warm and humid environment, condensation can form on the delicate electronic circuitry. If this occurs, turn the camera off and wait for at least 1 hour until all moisture is dispersed. Moisture build up can also occur in the memory card. If this happens, turn off the camera and remove the memory card. Wait until the moisture has dispersed.
- Caution on Using the Lens
  - If the lens is subjected to direct sunlight, it could result in discoloration and deterioration of the image sensor.
  - Don't get fingerprints or foreign substances on the surface of the lens.
- If the digital camera is not used for a long period, an electric discharge can occur. It is a good idea to remove the batteries and the memory card if you do not intend using the camera for an extended period of time.
- If the camera is exposed to an electronic interference, it will turn itself off to protect the memory card.
- Camera Maintenance
  - Use a soft brush (available from photo stores) to gently clean the lens and LCD assemblies. If this does not work, lens-cleaning paper with lens cleaning fluid can be used. Clean the camera body with a soft cloth. Do not allow this camera to come into contact with solvent materials such as benzol, insecticide, thinners etc. This may damage the body shell of the camera and also affect its performance. Rough handling can damage the LCD monitor. Take care to avoid damage and keep the camera in its protective carry case at all times when not in use.
- Do not attempt to disassemble or modify the camera.
- Under certain conditions, static electricity can cause the flash unit to fire. This is not harmful to the camera and is not a malfunction.
- When images are uploaded or downloaded, the data transfer may be affected by static electricity. In this case, disconnect and re-connect the USB cable before trying the transfer again.
- Before an important event or going on a trip, you should check the camera condition.
  - Take a picture to test the camera and always carry a spare fully charged battery.
  - Samsung cannot be held responsible for camera malfunctions.
- Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and can be illegal in some areas.
- Avoid using headphones/earphones at high volume. Hearing experts advise against continuously loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.



## Warning indicator

- There are several warnings that may appear on the LCD display

### Card Error!

- Memory card error
  - Turn off the camera power and turn it on again
  - Insert the memory card again
  - Insert the memory card and format the memory card (p.83)

### Card Locked!

- The memory card is locked
  - SD memory card : Slide the write protect switch towards the top of the memory card

### Memory Full!

- There is insufficient memory capacity to take an image
  - Insert a new memory card
  - Delete unnecessary image files to free up some memory

### No Image!

- There are no images stored on the memory
  - Take images
  - Insert a memory card that is holding some images

### File Error!

- File error
  - Delete the file
- Memory card error
  - Contact a camera service centre

### Low Battery!

- There is low battery capacity
  - Insert charged battery

### Low Light!

- When taking pictures in dark places
  - Take pictures in Flash Photography mode

### Out Of Number

- When selecting too many printing pages in the PictBridge menu
  - Select printing page within the limitation

### DCF Full Error

- Violation of DCF format
  - Copy the images to a PC and format the memory

## Before contacting a service centre

- Please check the following

### The camera doesn't switch on

- There is low battery capacity
  - Insert charged battery
- Battery is inserted incorrectly with the polarities reversed.
  - Insert the battery according to the polarity marks (+, -)
- The rechargeable battery is not inserted
  - Insert the battery and turn on the camera

### The camera power ceases while in use

- The battery is exhausted
  - Insert charged battery
- The Camera is turned off automatically
  - Turn on the camera power again

## • Before contacting a service centre

### Battery power quickly drains

- The Camera is being used in low temperatures
  - Keep the camera in warm conditions (i.e. inside a coat or jacket) and only remove it in order to take images

### Camera does not take images when the Shutter button is pressed

- There is insufficient memory capacity
  - Delete unnecessary image files
- The memory card has not been formatted
  - Format the memory card (p.83)
- The memory card is exhausted
  - Insert a new memory card
- The memory card is locked
  - Refer to [Card Locked!] error message
- The camera's power is off
  - Turn the camera power on
- The battery is exhausted
  - Insert charged battery
- Battery is inserted incorrectly with the polarities reversed
  - Insert the battery according to the polarity marks (+, -)

### The camera suddenly stops working while in use

- The camera stopped due to a malfunction
  - Remove / re-insert battery and switch the camera on

### The images are unclear

- A picture was taken of the subject without setting an appropriate macro mode
  - Select an appropriate macro mode to take a clear image
- Taking a picture beyond the flash range
  - Take a picture within the flash range
- The lens is smudged or dirty
  - Clean the lens

### The flash does not fire

- Flash off mode has been selected
  - Dis-engage flash off mode
- The camera mode can't use the flash
  - Refer to the FLASH instruction (p.26)

### Incorrect date and time is displayed

- The date and time have been set incorrectly or the camera has adopted the default settings
  - Reset the date and time correctly

### The camera buttons do not operate

- Camera malfunction
  - Remove / re-insert battery and switch the camera on

### A card error has occurred while the memory card is in the camera

- Incorrect memory card format
  - Re-format the memory card

### The images don't play back

- Incorrect file name (Violation of DCF format)
  - Do not change the image file name

### Colour of image is different to the original scene

- White balance or effect setting is incorrect
  - Select appropriate White balance and effect

### Images are too bright

- Exposure is excessive
  - Reset exposure compensation

## • Before contacting a service centre

### No image on external monitor

- The external monitor has not been connected properly with the camera
  - Check the connection cables
- There are incorrect files in the memory card
  - Insert a memory card that has correct files

### When using the PC's explorer, the Removable Disk (SAMSUNG) file does not show

- Cable connection is incorrect
  - Check the connection
- The camera is off
  - Turn the camera on
- The operating system is not Windows 98SE, 2000, ME, XP, Vista / Mac OS 10.1 ~ 10.4. Alternatively the PC does not support USB
  - Install Windows 98SE, 2000, ME, XP, Vista / Mac OS 10.1 ~ 10.4 to PC that supports USB
- The camera driver is not installed
  - Install a [USB Storage Driver]

## • Specification

- Image Sensor** - Type : 1/2.5" CCD  
- Effective Pixel : Approx. 7.2 Mega Pixels  
- Total Pixel : Approx. 7.4 Mega Pixels

- Lens** - Focal Length :  $f = 6.3 \sim 18.9\text{mm}$   
(35mm equivalent : 38 ~ 114mm) : NV lens  
- F No. : F 3.5 ~ F 4.5  
- Digital Zoom : · Still Image mode : 1.0X ~ 5.0X  
· Play mode : 1.0X ~ 12.0X (depends on image size)

- LCD Monitor** 3.0" wide color TFT LCD (230,000 dots)

- Focusing** - Type : TTL auto focus, Multi-AF, Center AF, Face Recognition AF  
- Range

	Normal	Macro	Super Macro	Auto Macro
Wide	80cm ~ infinity	5cm ~ 80cm	1cm ~ 5cm	5cm ~ Infinity
Tele		40cm ~ 80cm	-	40cm ~ Infinity

- Shutter** - Speed : 1 ~ 1/2,000 sec. (Night : 16 ~ 1/2,000 sec.)

- Exposure** - Control : Program AE, Metering : Multi, Spot, Center, Face Recognition  
- Compensation :  $\pm 2\text{EV}$  (1/2EV steps)  
- ISO Equivalent : Auto, 80, 100, 200, 400, 800, 1000

- Flash** - Modes : Auto, Auto & Red-eye reduction, Fill-in flash, Slow sync,  
Flash off, Red eye fix  
- Range : Wide : 3.3m, Tele : 2.5m (ISO Auto)  
- Recharging Time : Approx. 5 sec.

- Sharpness** Soft+, Soft, Normal, Vivid, Vivid+

- E (Effect) button** Effect - Colour : B & W, Sepia, Red, Green, Blue, Negative, Custom colour  
Special Colour : Colour Mask  
Image Adjustment : Saturation  
FUN : Preset focus frame, Composite, Photo Frame

## Specification

- Image Editing** - Resize, Rotate  
 Colour : B&W, Sepia, Red, Green, Blue, Negative, Custom Colour  
 Special Colour : Colour Filter, Colour Mask  
 Image Adjustment : Red eye reduction, Brightness, Contrast, Saturation, Noise Effect  
 FUN : Cartoon, Preset Focus Frame, Composite, Photo Frame, Sticker, Text typing

**White Balance** Auto, Daylight, Cloudy, Fluorescent\_H, Fluorescent\_L, Tungsten, Custom

**Voice Recording** Voice Recording (Min. 2 sec - Max. 10 hour), Voice Memo in Still Image (Min. 2 sec - Max. 10 sec.)

**Date Imprinting** Date, Date&Time, Off (user selectable)

- Shooting**
- Still Image :
    - Auto, Program, ASR, Scene, Multimedia (MP3, PMP, TextViewer)
    - ※ Scene : Night, Portrait, Children, Landscape, Close-up, Text, Sunset, Dawn, Backlight, Fireworks, Beach & Snow, Self shot, Food, Cafe
    - Continuous : Single, Continuous, AEB (0.3 step, Max. 3 shots), Wise Shot
    - Self-timer : 10 sec., 2 sec., Double (10 sec. & 2 sec.)
  - Movie Clip :
    - With Audio (recording time : (Min. 2 sec - Max. 1 hour)
    - Size : 640x480, 320x240 (Optical 3X zoom with sound recording)
    - Frame rate : 30fps, 15fps
    - Color Effect & WB selectable
    - Movie Editing (Embedded) : Pause during recording, Still Image Capture, Time Trimming
    - ※ To record the movie, a memory card must be inserted.

- Storage**
- Media :
    - Internal memory : About 10MB
    - External memory : SD / MMC / MMC + / HSMC (Min. 32MB - Max. 2GB guaranteed)
    - \* Internal memory capacity is subject to change without prior notice.
  - File Format : Still Image : JPEG (DCF), EXIF 2.2, DPOF 1.1, PictBridge 1.0  
 Movie Clip : AVI (MPEG-4)      Audio : WAV
  - Capacity (MMC 512MB)

	7 <sup>M</sup>	5 <sup>M</sup>	3 <sup>M</sup>	1 <sup>M</sup>	5 <sup>M</sup>	3 <sup>M</sup>	1 <sup>M</sup>	6 <sup>M</sup>
Super Fine	3072x2304	2592x1944	2048x1536	1024x768	3072x1728	2560x1440	1280x720	3072x2048
Fine	263	359	540	1456	338	481	1402	295
Normal	380	511	750	1793	485	680	1780	425

※ These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.

**Image Play** - Type : Single image, Thumbnail, Slide show (Effect, B.G.M), Album, Movie

**Interface**

- Digital output connector : USB 2.0
- Audio : Mono
- Video output : NTSC, PAL (user selectable, Only in the playback mode)
- DC power input connector : 24-pin connector

**Power Source**

- Rechargeable battery : Lithium Ion (SLB-0837, 860mAh)
- Charger : SAC-45 KIT
- ※ Included battery type may vary depending on sales region.

**Dimensions (WxHxD)**  
 89.7x61x21.5mm

## • Specification

<b>Weight</b>	161.7g (without battery & card) - Operating Temperature : 0 ~ 40° C - Operating Humidity : 5 ~ 85%
<b>Software</b>	- Digimax Converter, Digimax Master, Adobe Reader

### ※ MP3 Specification

<b>Audio</b>	- Frequency : 20Hz ~ 20KHz - Earphone Port : 2.5mm Port (Stereo Type) - Output : Maximum Volume Left 40mW + Right 40mW (16 Ω) - Noise Ratio : 88 dB with 20 KHz LPF
<b>File</b>	- File Format : MP3 (MPEG-1/2/2.5 Layer 3) - Bit Rate : 48 ~ 320kbps (Including VBR)
<b>Sound Effect</b>	- SRS WOW HD, Normal, Classic, Dance, Jazz, Live, Rock
<b>Play Mode</b>	- All, Repeat One, Repeat All, Random, Random Repeat - Fast Forward / Rewind (Search function) - Slide Show selectable - Skipping in Play, Auto Skipping - MP3&Capturing (Capturing Mode is Auto Default, 5MW) - Auto reload function (Remember both the last played file and frame) - Background skin of MP3 playback using user images

### ※ PMP Specification

<b>PMP Decoder</b>	- Movie : Xvid MPEG4 (Digimax Convert S/W) - Audio : MPEG Layer 2 (Digimax Convert S/W)
<b>Play Mode</b>	- Seeking in Play, Skipping in Play - Auto skipping after one file played - Auto reload function (Remember last played frame) - Support Full Screen in Converting S/W
<b>Subtitle</b>	- Support SMI file (Using Digimax Converter S/W)

### ※ Text Specification

<b>File</b>	- TXT extension name, up to 99999 pages
<b>File format</b>	- Window : ANSI (Windows 98 or later), Unicode / Unicode (Big-Endian) / UTF-8 (Windows 2000/XP) - Mac : ANSI, Unicode (UTF-16)
<b>Function</b>	- Auto Scroll (0.8 sec ~ 2.0 sec) - Skipping by 1 page / 10 pages - Auto reload function (Remember last page) - Support MP3 BGM during displaying text file
<b>Language</b>	- English, Korean, French, German, Spanish, Italian, Chinese, Taiwanese, Japanese, Russian, Portuguese, Dutch, Danish, Swedish, Finnish, Bahasa, Polish, Hungarian, Czech, Turkish. * Supportable language is subject to change without prior notice.

※ Specifications are subject to change without prior notice.

※ All trademarks are the property of their respective owners.

## Software Notes

Please ensure that you read the software instructions carefully before use.

- The attached software is a camera driver and image editing software tool for Windows.
- Under no circumstances should all or part of either the software or the user manual be reproduced.
- Copyrights for software are licensed only for use with a camera.
- In the unlikely event of a manufacturing fault, we will repair or exchange your camera. We cannot, however, be held responsible in any way for damage caused by inappropriate use.
- Using a Hand-made PC or a PC and OS that has not been guaranteed by the manufacturer is not covered by the Samsung warranty.
- Before reading these instructions, you should have a basic knowledge of computers and O/S (Operating Systems).

## System Requirements

For Windows	For Macintosh
PC with processor better than Pentium II 450MHz (Pentium 800MHz recommended) Windows 98SE/2000/ME/XP/Vista Minimum 128MB RAM (Over 512MB recommended) 200MB of available hard disk space 1024x768 pixels, 16-bit colour display compatible monitor (24-bit colour display recommended) Microsoft DirectX 9.0	Power Mac G3 or later / Intel Processor Mac OS 10.1 ~ 10.4 Minimum 256MB RAM 110MB of available hard-disk space
<b>■ Digimax Converter</b> PC with processor better than Pentium III 500MHz (Pentium IV recommended) Windows 2000/XP/Vista	<b>■ For playing back a movie clip</b> 3ivx and QuickTime Player for QuickTime MPlayer for Intel Processor

## About the software

After inserting the CD-ROM provided with this camera into the CD-ROM drive, the following window should automatically run.



Before connecting the camera to the PC, you should first install the camera driver.

※ Screen Captures illustrated on this manual is based on English Edition of Windows.

### ■ Camera driver : This enables images to transfer between the camera and PC.

This camera uses the USB Storage Driver as the camera driver. You can use the camera as a USB card reader. After installing the driver and connecting this camera to the PC, you can find Removable Disk (SAMSUNG) in [Windows Explorer] or [My Computer]. A USB Storage Driver is provided only for Windows. A USB Driver for MAC is not included with the Application CD. You can use the camera with Mac OS 10.1 ~ 10.4.

### ■ XviD codec : This makes movie clips (MPEG-4) recorded with this camera play back on a PC.

To play back a movie clip recorded with this camera, you must install the XviD codec. If a movie clip recorded with this camera does not play well, install this codec. This software is only compatible with Windows.

### ■ Digimax Converter : Multimedia converting program

Multimedia (Movie, Video clip, etc) files can be converted into movie clips that can be played back on this camera. This software is only compatible with Windows.

## About the software

- **Digimax Master** : This is the all-in-one multi media software solution. You can download, view, edit and save your digital images and movie clips with this software. This software is only compatible with Windows.

### INFORMATION

- Be sure to check the system requirements before installing the driver.
- You should allow 5 ~ 10 seconds for running the automatic setup program. If the frame does not show, run the [Windows Explorer] and select [Installer.exe] in the CD-ROM Drive root directory.
- PDF documents of user manual are included in the Software CD-ROM supplied with this camera. Search the PDF files with Window's explorer. Before opening the PDF files, you must install the Adobe Reader included in the Software CD-ROM.
- To install the Adobe Reader 6.0.1 correctly, Internet Explorer 5.01 or later had to be installed. Visit "www.microsoft.com" and upgrade the Internet Explorer.

## Setting up the application software


- To use this camera with a PC, install the application software first. After this has been done, the stored images in the camera can be moved to the PC and can be edited by an image editing program.
- You can visit the Samsung web-site through the internet.

<http://www.samsungcamera.com> : English  
<http://www.samsungcamera.co.kr> : Korean

1. The auto run frame will be displayed.  
Click the [Install] menu in the Auto run frame.




2. Install the camera driver and DirectX by selecting a button shown on the monitor.

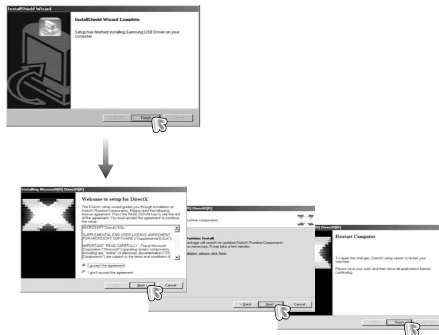


## • Setting up the application software

3. Install the software by instructions on the monitor.

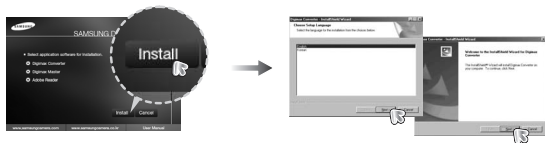

4. To play back the movie clip recorded with this camera on the computer, install the XviD codec.

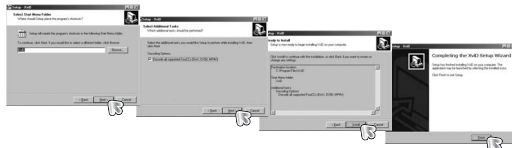



## Setting up the application software

- ※ The XviD codec is distributed according to and under the terms and conditions of the GNU General Public License and everyone can copy, modify and distribute this codec freely, but WITHOUT ANY WARRANTY, IMPLIED OR EXPRESSED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; provided, however, that you have to follow the GNU General Public License whenever you are distributing this codec or modification thereof. For more information see the GNU General Public License documents (<http://www.gnu.org/copyleft/gpl.html>).


5. After restarting the computer, connect the PC to the camera with the USB cable.

6. Turn the camera power on.

The [Found New Hardware Wizard] will open and the computer will recognize the camera.

- ※ If your OS is Windows XP, an image viewer program will open.

If the download window of Digimax Master opens after starting Digimax Master, the camera driver was setup successfully.

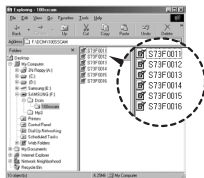

### INFORMATION



- If you have installed the camera driver, the [Found New Hardware Wizard] may not open.
- On a Windows 98 SE system, the Found New Hardware Wizard dialog box opens and a window asking you to select a driver file may appear. In this case, specify "USB Driver" in the CD supplied.

## Starting PC mode

- In this mode, you can download stored images to your PC through the USB cable.
- The LCD monitor is always turned off in PC mode.

### ■ Connecting the camera to a PC

1. Connect the PC to the camera with the USB cable.
2. Select the [Computer] menu by using the Smart button.

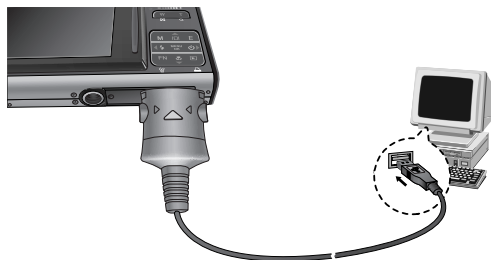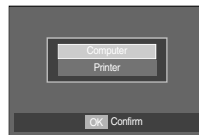

- ※ If you selected [Printer] in Step 2, when you connect the camera to your printer, the [Connecting Printer] message will display and the connection will not be established. In this case, disconnect the USB cable, and then follow the procedure from Step 1 and onward.

## Starting PC mode

- Disconnecting the camera and PC : Refer to "Removable Disk" (p.106)

### INFORMATION

- Before inserting any cables or AC adapter, check the directions and do not insert by force. It may cause breakage of cable or camera.

## Removable Disk

- Downloading stored images


You can download the still images stored on the camera to your PC's hard disk and print them or use a photo editing software to edit them.

1. Connect the camera to your PC with the USB cable.

2. On your computer's desktop display, select [My Computer] and double click [Removable Disk (SAMSUNG)] → DCIM → 100SSCAM).




3. Select an image and press the right mouse button.

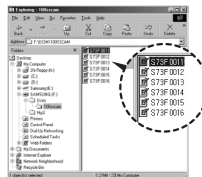

4. A pop-up menu will open.

Click the [Cut] or [Copy] menu.

- [Cut] : cuts a selected file.
- [Copy] : copies files.

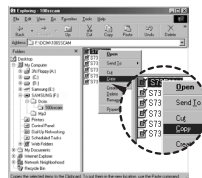


5. Click a folder where you want to paste the file.



6. Press the right mouse button and a pop-up menu will open. Click [Paste].

7. An image file is transferred from the camera to your PC.

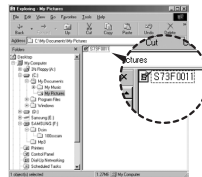

## Removable Disk

### CAUTION

- We recommend that you should copy the images to the PC to view them. Opening images directly from the removable disk may be subject to unexpected disconnection.
- When you upload a file that is not taken by this camera to the Removable Disk, the [File Error!] message will be displayed on the LCD monitor in the PLAY mode, and nothing is displayed in THUMBNAIL mode.

## Removing the removable disk

### ■ Windows 98SE

1. Check whether the camera and PC are transferring a file. If the camera status lamp blinks, please wait until the lamp has finished blinking and is constantly on.
2. Unplug the USB cable.

### ■ Windows 2000 / ME / XP / Vista

(The illustrations may differ from those shown depending on the Windows O/S.)


1. Check whether the camera and PC are transferring a file.  
If the camera status lamp blinks, please wait until the lamp has finished blinking and is constantly on.

2. Double-click the [Unplug or Eject Hardware] icon on the task bar.



[Double Click]

3. The [Unplug or Eject Hardware] window will open. Select the [USB Mass Storage Device] and click the [Stop] button.

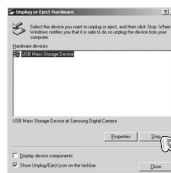

4. The [Stop a Hardware device] window will open. Select the [USB Mass Storage Device] and click the [OK] button.



5. A [Safe to Remove Hardware] window will open. Click the [OK] button.



6. A [Unplug or Eject Hardware] window will open. Click the [Close] button and the removable disk may be removed safely.



7. Unplug the USB cable.

## • Setting up the USB Driver for MAC

1. A USB Driver for MAC is not included with the software CD as MAC OS supports the camera driver.
2. Check the MAC OS version during start-up.  
This camera is compatible with MAC OS 10.1 ~ 10.4.
3. Connect the camera to the Macintosh and turn the camera power on.
4. A new icon will be displayed on the desktop after connecting the camera to the MAC.

## • Using the USB Driver for MAC

1. Double click a new icon on the desktop and the folder in the memory will be displayed.
2. Select an image file and copy or move it to MAC.

### INFORMATION

- For Mac OS 10.1 or later : First complete uploading from computer to camera and then remove the removable disk with the Extract command.
- If a movie clip can't play back on the Mac OS, refer to the following table.

	Power Pc	Intel Processor
Player	Download and install the 3ivx codec and run the movie with the QuickTime Player	Run the movie with the MPlayer
Reference URL	<a href="http://www.3ivx.com/download/mac-os.html">http://www.3ivx.com/download/mac-os.html</a>	<a href="http://mplayerosx.sourceforge.net/">http://mplayerosx.sourceforge.net/</a>
	<a href="http://www.versiontracker.com/mac-os/">http://www.versiontracker.com/mac-os/</a>	

## • Removing the USB Driver for Windows 98SE

- To uninstall the USB driver, refer to the process shown below.
  1. Connect the camera to your PC and turn them on.
  2. Check whether the Removable Disk is on the [My Computer].
  3. Remove the [Samsung Digital Camera] on the Device manager.



4. Disconnect the USB cable.
5. Remove the [Samsung USB Driver] on the Add / Remove Programs Properties.






6. Uninstallation is complete.

## Digimax Converter

- Multimedia (Movie, Video clip, etc) files can be converted into movie clips that can be played back on this camera. This software is only compatible with Windows.

### ■ How to use the Digimax Converter

1. Double click the Digimax Converter icon (  ) on the desktop.
2. Click the Add icon (  ) and select a file that you want to add.
3. If you want to add a caption, check "Use subtitles from file (\*.smi)".

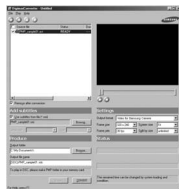

4. Select settings that you want and click the Convert button.
  - Output Format : You can set the output format (16:9, 4:3)
  - Frame size : You can set the width and height of output movie clip.
  - Frame rate : You can set fps (Frame Per Second).
  - Screen size : You can set type of display.
  - Split by size : You can set the file size of output movie clip.

5. Connect the camera to the computer with the supplied USB cable.

6. Copy the converted movie clip in the destination folder and paste the file in the [PMP] folder.



7. You can play back the converted movie clip in the Play mode of the camera.

- ※ Refer to the [Help] menu in Digimax Converter for further information.



## INFORMATION

- Before converting a multimedia file, check whether it plays back correctly on the Windows Media Player.
- The converted files are saved as \*.sdc file type that can be played back on the Windows Media Player.
- The Digimax Converter doesn't cover every kind of codecs. If a multimedia file can't play back on the Windows Media Player, install a multicodec (We recommend Full version of latest K-Lite Codec). Install the Digimax Converter again after installing the multi-codec.
- You can select destination folder of each converted file. When the folder is not selected, the converted files are saved on a folder where the source file is.
- If you convert several files at the same time, the computer may be running slow because of the CPU capacity. In this case, add the files in the program one by one.
- Computer specification, installed code and programs are the main causes of converting error. When a converting error happens, please check the following.
  - Any codecs compatible with the files were not installed or installed incorrectly. In this case, find a compatible codec and install it. If you do not find any compatible codecs, install a multi-codec.

## • Digimax Converter

### INFORMATION

- If you installed various multi-codecs on your computer, it may cause converting problems. In this case, remove all codecs and install a proper multi-codec.
- Install a latest Windows Media Player.
- Visit device (PC, Graphic card, Sound card) manufacturer web-site and upgrade them with the latest version.
- Some kinds of multimedia files are not converted.  
If the converted media files are damaged, they may not play back on the camera. Unusual type of files may not be converted. The sound and scenes may not synchronise.
- The expected file sizes after converting a media file may vary. It depends on the computer system you use.
- If there is no font that is compatible with the script file on your PC, the script is shown as '□□□□'.
- Transferring the converted file to a removable disk is time consuming. It may take a long time. The duration depends on the file size.
- Do not use the PMP mode while driving. It may create a traffic hazard.
- A file that does not support fast search on the Windows Media Player can't select converting range and divide file size.

## • Digimax Master


- You can download, view, edit and save your images and movies with this software. This software is only compatible with Windows.
- To run the Digimax Master, double click the Digimax Master icon on the desktop.

### ● Downloading images

1. Connect the camera to your PC.

2. A window for downloading images will display after connecting the camera to your PC.

- To download the captured images, select the [Select All] button.
- Select desired folder in the window and click the [Select All] button. You can save captured images and selected folder.
- If you click the [Cancel] button, downloading will be cancelled.

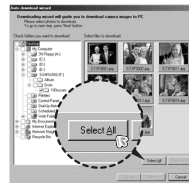

3. Click [Next >] button.



## ● Digimax Master

4. Select a destination and make a new folder in which to save downloaded images and folders.

- Folder names can be made in order of date and images will be downloaded.
- Folder name will be made as you want and images will be downloaded.
- After selecting a folder that was made before, images will be downloaded.



5. Click [Next >] button.

6. A window will open as shown alongside.


- The destination of the selected folder will be displayed on the upper side of the window.
- Click the [Start] button to download the images.



7. Downloaded images will be displayed.



● Image viewer : You can view the stored images.

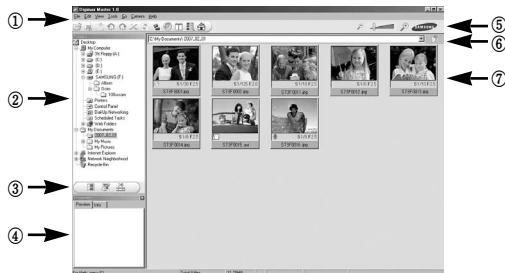

- Image viewer functions are listed below.

① Menu bar : You can select menus.

File, Edit, View, Tools, Change functions, Auto download, help, etc.

② Image selection window : You can select the desired images in this window.

③ Media type selection menu : You can select image viewer, image edit and movie edit functions in this menu.

④ Preview window : You can preview an image or a movie clip and check the multi media information.

⑤ Zoom bar : You can change preview size.


⑥ Folder display window : You can see the folder location of the selected image.

⑦ Image display window : Images in the selected folder are displayed.

※ Refer to the [Help] menu in Digimax Master for further information.

## • Digimax Master

- Image edit : You can edit the still image.

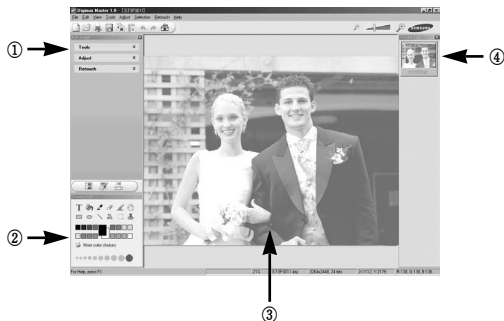


- Image edit functions are listed below.

- ① Edit menu : You can select the following menus.
  - [Tools] : You can resize or crop the selected image. See the [Help] menu.
  - [Adjust] : You can modify image quality. See the [Help] menu.
  - [Retouch] : You can change the image or add effects to the image. See the [Help] menu.
- ② Drawing tools : Tools for editing an image.
- ③ Image display window : A selected image appears in this window.
- ④ Preview window : You can preview the changed image.

- ※ A still image edited with Digimax Master can't be played back on the camera.
- ※ Refer to the [Help] menu in Digimax Master for further information.

- Movie edit : You can get the still image, movie clip, narration, music files together in a movie clip.

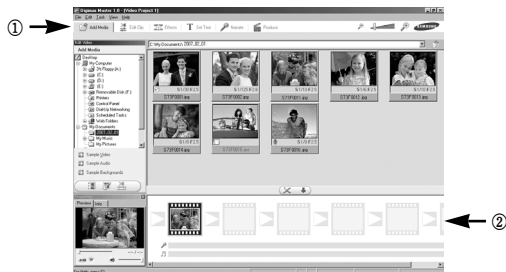

- Movie clip edit functions are listed below.

- ① Edit menu : You can select the following menus.
  - [Add Media] : You can add other media elements to a movie.
  - [Edit Clip] : You can change the brightness, contrast, colour and saturation.
  - [Effects] : You can insert an effect.
  - [Set Text] : You can insert texts.
  - [Narrate] : You can insert a narration.
  - [Produce] : You can save the edited multi media as a new file name.
    - \* You can select AVI, Windows media (wmv) and Windows media (asf) file types.
- ② Frame display window : You can insert multi media in this window.

- ※ Some movie clips that were compressed with a codec that is not compatible with the Digimax Master can't play back in the Digimax Master.
- ※ Refer to the [Help] menu in Digimax Master for further information.



## FAQ

- Please check the following if the USB connection malfunctions.

- Case 1** The USB cable is not connected or you are using a cable with an incorrect specification.  
→ Use a USB cable with the correct specification.
- Case 2** The camera is not recognized by your PC. Sometimes, the camera may appear under [Unknown Devices] in Device Manager.  
→ Install the camera driver correctly. Turn off the camera, remove the USB cable, plug in the USB cable again, and then turn on the camera.
- Case 3** There is an unexpected error during file transfer  
→ Turn the camera power off and on again. Transfer the file again.
- Case 4** When using the USB hub.  
→ There may be a problem in connecting the camera to the PC through a USB hub if the PC and the hub are not compatible. Wherever possible, connect the camera directly to the PC.
- Case 5** Are other USB cables connected to the PC?  
→ The camera may malfunction when it is connected to the PC at the same time as another USB cable. In this instance, disconnect the other USB cable so that only the camera's USB cable is connected to the computer.

- Case 6** When I open the Device Manager (by clicking Start → (Settings) → Control Panel → (Performance and Maintenance) → System → (Hardware) → Device Manager), there are 「Unknown Devices」 「Other Devices」 entries with a yellow question mark (?) beside them or devices with an exclamation mark (!) beside them.  
→ Double-click on the entry with the question (?) or exclamation (!) mark, and remove them (Click the right mouse button and 'Remove' menu will display). Re-boot your computer and connect the computer and the camera. In Windows 98SE, remove the camera driver and re-boot the computer. And then connect the computer and the camera.
- Case 7** In some security programs (Norton Anti Virus, V3, etc.), the computer may not recognise the camera as a removable disk.  
→ Stop the security programs and connect the camera to the computer. Refer to the security program instructions about how to stop the program.
- Case 8** The camera is connected to the USB port located on the front of the computer.  
→ When the camera is connected to the USB port located on the front of the computer, the computer may not recognise the camera. Connect the camera to the USB port located on the back of the computer.

## FAQ

### ■ When the movie clip doesn't play back on the PC

- ※ When the movie clip recorded by the camera doesn't play back on the PC, the causes are mostly due to the codec installed on the PC.

### ● When codec for play back the movie clip isn't installed

→ Install the codec as listed below.

[Installing codec for Windows]

#### 1. Installing the XviD codec

- 1) Insert the CD provided with the camera.
  - 2) Run the windows explorer and select [CD-ROM drive:\XviD] folder and click the XviD-1.1.2-01112006.exe file.
- ※ The XviD codec is distributed according to the GNU General Public License and everyone can copy, distribute and change this codec. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License.  
For more information, see the License documents  
(<http://www.gnu.org/copyleft/gpl.html>).

#### 2. Install the Multi codec

If the movie doesn't play back after installing the XviD codec, install a multi codec that supports MP4V.

<Note>

The caption may not be displayed after installing the multi codec in the Windows 98SE / ME. In this case, install the DivxG400 caption filter.

[Installing codec for Mac OS]

- 1) Visit the following site for downloading the codec.  
(<http://www.3ivx.com/download/macOS.html>)
- 2) Check the version of Mac OS and click the [Download] button to download the 3ivx codec.

3) Run the downloaded file and the codec for playing back the movie clip will be installed.

- ※ When the CPU is Intel Processor, run the movie with the MPlayer.

### ● When the DirectX 9.0 or later is not installed

→ Install the DirectX 9.0 or later

- 1) Insert the CD provided with the camera
- 2) Run the windows explorer and select the [CD-ROM drive:\ USB Driver\DirectX 9.0] folder and click the DXESSETUP.exe file.  
The DirectX will be installed. Visit the following site for downloading the DirectX.  
<http://www.microsoft.com/directx>

### ● If a PC (Windows 98SE) stops responding while the camera and PC are connected repeatedly

→ If a PC (Windows 98SE) is turned on for a long time and the camera is onnected repeatedly, the PC may not recognise the camera. In this case, re-start the PC.

### ● If a PC connected with the camera stops responding while Windows is starting.

→ In this case, disconnect the PC and the camera and Windows will start.  
If the problem happens continuously, set the Legacy USB Support to disable and re-start the PC. The Legacy USB Support is in the BIOS setup menu. (The BIOS setup menu differs from the PC manufacturers and some BIOS menus don't have Legacy USB Support) If you can't change the menu by yourself, contact to the PC manufacturer or BIOS manufacturer.

### ● If the movie clip can't be deleted, or the removable disk can't be extracted or an error message displays during the file transfer.

- If you install only the Digimax Master, the problems mentioned above occasionally happen.
- Close the Digimax Master program by clicking the Digimax Master icon on the Taskbar.
  - Install all the application programs included in the software CD.

## Correct Disposal of This Product



### Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household

wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.



Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

## FCC notice

### ■ NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

### ■ CAUTION :

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### ■ Declaration of Conformity

Trade Name : SAMSUNG TECHWIN  
Model No. : Samsung i70  
Responsible Party : Samsung Opto-Electronics America, INC.  
Address : 40 Seaview Dr. Secaucus, NJ 07094  
Telephone No. : 201-902-0347

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• **MEMO**

A large, empty, rounded rectangular box with a thin gray border, intended for writing notes.

• **MEMO**

A large, empty, rounded rectangular box with a thin gray border, intended for writing notes.

• **MEMO**

A large, empty, rounded rectangular box with a thin gray border, intended for writing notes.

• **MEMO**

A large, empty, rounded rectangular box with a thin gray border, intended for writing notes.

The Samsung logo, consisting of the word "SAMSUNG" in a bold, sans-serif font, is centered within a dark, horizontally-oriented oval.

SAMSUNG TECHWIN CO., LTD.

OPTICS & DIGITAL IMAGING DIVISION

145-3, SANGDAEWON 1-DONG, JUNGWONGU,  
SUNGNAM-CITY, KYUNGKI-DO, KOREA  
462-121

TEL : (82) 31-740-8086, 8088, 8090, 8092, 8099

FAX : (82) 31-740-8398

[www.samsungcamera.com](http://www.samsungcamera.com)

SAMSUNG FRANCE S.A.S.

BP 51 TOUR MAINE MONTPARNASSE 33,  
AV. DU MAINE 75755, PARIS CEDEX 15, FRANCE  
HOTLINE PHOTO NUMÉRIQUE :

00 800 22 26 37 27 (Numéro Vert-Appel Gratuit)

TEL : (33) 1-4279-2200

FAX : (33) 1-4320-4510

[www.samsungphoto.fr](http://www.samsungphoto.fr)

SAMSUNG OPTO-ELECTRONICS UK LIMITED

SAMSUNG HOUSE 1000 HILLSWOOD DRIVE  
HILLSWOOD BUSINESS PARK  
CHERTSEY KT16 OPS U.K.

TEL : 00800 12263727

(free for calls from UK only)

UK Service Hotline : 01932455320

[www.samsungcamera.co.uk](http://www.samsungcamera.co.uk)

SAMSUNG OPTO-ELECTRONICS AMERICA, INC.

HEADQUARTERS

40 SEAVIEW DRIVE, SECAUCUS,  
NJ07094, U.S.A.

TEL : (1) 201-902-0347

FAX : (1) 201-902-9342

WESTERN REGIONAL OFFICE

18600 BROADWICK ST.,  
RANCHO DOMINGUEZ, CA 90220, U.S.A.

TEL : (1) 310-900-5284/5285

FAX : (1) 310-537-1566

[www.samsungcamerausa.com](http://www.samsungcamerausa.com)

SAMSUNG OPTO-ELECTRONICS GMBH

AM KRONBERGER HANG 6  
D-65824 SCHWALBACH/TS., GERMANY

TEL : 49 (0) 6196 66 53 03

FAX : 49 (0) 6196 66 53 66

[www.samsungcamera.de](http://www.samsungcamera.de)

TIANJIN SAMSUNG OPTO-ELECTRONICS CO., LTD

No.9 zhangheng Street. Micro-Electronic  
Industrial Park Jingang Road Tianjin China.

POST CODE : 300385

TEL : (86) 22-2761-4599

FAX : (86) 22-2769-7558

[www.samsungcamera.com.cn](http://www.samsungcamera.com.cn)

RUSSIA INFORMATION CENTER

SAMSUNG ELECTRONICS

117545 ST. DOROZHNYAYA BUILDING 3,  
KORPUS 6, ENTRANCE 2, MOSCOW, RUSSIA  
TEL : (7) 495-363-1700

CALL FREE : (8) 800 200 0 400 (from Russia only)

[www.samsungcamera.ru](http://www.samsungcamera.ru)

Internet address - <http://www.samsungcamera.com>



The CE Mark is a Directive conformity  
mark of the European Community (EC)

6806-3715