

SAMSUNG

Catch
unexpected detail



NV20 User Manual

Thank you for buying a Samsung camera.


This manual will guide you through using the camera, including capturing images, downloading images and using the application software.

Please read this manual carefully before using your new camera.

ENGLISH

Instructions

Use this camera in the following order.

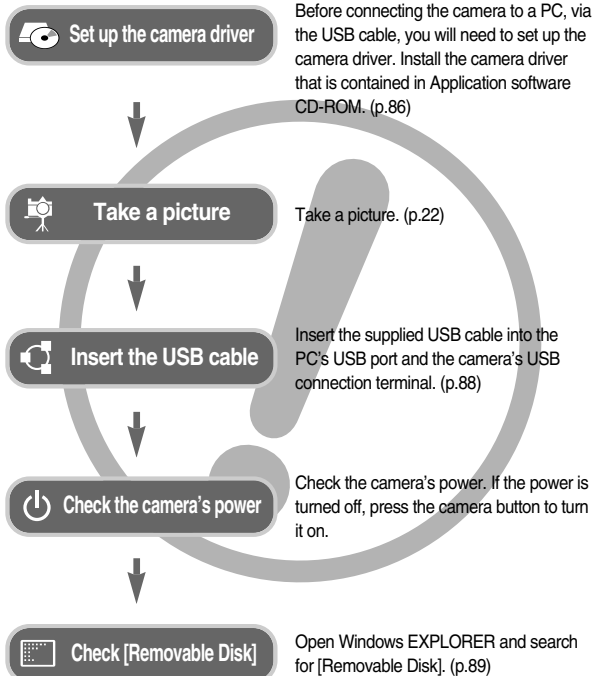

Getting to know your camera

Thank you for buying a Samsung Digital Camera.

- Prior to using this camera, please read the user manual thoroughly.
- When you require After Sales service, please bring the camera and the cause of the camera malfunction (such as battery, Memory card etc.) to the A/S centre.
- Please check that the camera is operating properly before you intend to use it (e.g. for a trip or an important event) to avoid disappointment. Samsung takes no responsibility for any loss or damages that may result from camera malfunction.
- Keep this manual in a safe place.
- If you use a card reader to copy the images on the memory card to your PC, the images could be damaged. When transferring the images taken with the camera to your PC, be sure to use the supplied USB cable to connect the camera to your PC. Please note that the manufacturer accepts no responsibility for loss or damage of images on the memory card due to the use of a card reader.
- The contents and illustrations of this manual are subject to change without prior notice for upgrading the camera functions.

- * Microsoft, Windows and Windows logo are registered trademarks of Microsoft Corporation incorporated in the United States and/or other countries.
- * All brand and product names appearing in this manual are registered trademarks of their respective companies.

Danger

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

- Do not attempt to modify this camera in any way. To do so may result in fire, injury, electric shock or severe damage to you or your camera. Internal inspection, maintenance and repairs should only be carried out by your dealer or Samsung Camera Service centre.
- Please do not use this product in close proximity to flammable or explosive gases, as this could increase the risk of explosion.
- Should any form of liquid or a foreign object enter the camera, do not use it. Switch off the camera, and then disconnect the power source. You must contact your dealer or Samsung Camera Service centre. Do not continue to use the camera as this may cause a fire or electric shock.
- Do not insert or drop metallic or inflammable foreign objects into the camera through access points e.g. the memory card slot and battery chamber. This may cause a fire or electric shock.
- Do not operate this camera with wet hands. This could pose a risk of electric shock.

Warning

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Do not use the flash in close proximity to people or animals. Positioning the flash too close to your subject's eyes may cause eyesight damage.
- For safety reasons keep this product and accessories out of reach of children or animals to prevent accidents e.g.:
 - Swallowing battery or small camera accessories. If an accident should occur, please consult a doctor immediately.
 - There is the possibility of injury from the camera's moving parts.
- Battery and camera may become hot during prolonged use and it may result in camera malfunction. Should this be the case, let the camera sit idle for a few minutes to allow it time to cool.
- Do not leave this camera in places subject to extremely high temperatures, such as a sealed vehicle, direct sunlight or other places of extreme variances in temperature. Exposure to extreme temperatures may adversely affect the camera's internal components and could cause a fire.
- When in use, do not cover the camera or Charger. This may cause heat to build up and distort the camera body or cause a fire. Always use the camera and its accessories in a well-ventilated area.

Caution

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in a minor or moderate injury.

- Leaking, overheating, or damaged battery could result in fire or injury.
 - Use battery with the correct specification for the camera.
 - Do not short circuit, heat or dispose of battery in fire.
 - Do not insert the battery with the polarities reversed.
- Remove the battery when not planning to use the camera for a long period of time. Otherwise the battery may leak corrosive electrolyte and permanently damage the camera's components.
- Do not fire the flash while it is in contact with hands or objects. Do not touch the flash after using it continuously. It may cause burns.
- Do not move the camera while it is switched on when you are using the AC Charger. After use, always switch off the camera before unplugging the cable from the wall socket. Then make sure that any connector cords or cables to other devices are disconnected before moving the camera. Failure to do so may damage the cords or cables and cause a fire or electric shock.
- Take care not to touch the lens or lens cover to avoid taking an unclear image and possibly causing camera malfunction.
- Avoid obstructing the lens or the flash when you capture an image.
- Before inserting any cables or AC adapter, check the directions and do not insert by force. It may cause breakage of cable or camera.
- Credit cards may be demagnetized if left near a camera case. Avoid leaving magnetic strip cards near the case.

Contents

READY	007	System chart
	008	Identification of features
	008	Front & Top
	009	Back
	010	Bottom
	011	Mode dial
	013	Connecting to a Power Source
	016	Inserting the Battery
	016	Inserting the memory card
	017	Instructions on using the memory card
RECORDING	019	When Using the Camera for the First Time : Smart button
	020	When Using the Camera for the First Time : Setting up the Date / Time and Language
	021	LCD monitor indicator
	022	Starting the recording mode
	022	How to use the AUTO mode
	022	How to use the PROGRAM mode
	023	How to use the MANUAL mode
	023	How to use the ASR (Advanced Shake Reduction) mode
	024	How to use the EFFECT mode

Contents

- 024 How to use the SCENE mode
- 025 How to use the MOVIE mode
- 025 Recording the movie clip without sound
- 025 Pausing while recording a movie clip
(Successive Recording)
- 026 Things to Watch Out for When Taking
Pictures**
- 027 Using the camera buttons to set the camera**
- 027 POWER button
- 027 SHUTTER button
- 028 ZOOM W / T button
- 029 Face recognition (FR) button
- 030 Using the LCD monitor to set the camera**
- 032 Colour tone
- 033 Brightness
- 033 Selecting focus type
- 034 Flash
- 036 Size
- 036 Continuous shot
- 037 Metering
- 037 Sharpness
- 038 Effect
- 038 Focus Area
- 039 Quality / Frame rate
- 039 Self-timer / Remote control
- 040 Voice recording / Voice memo
- 041 Movie Clip frame stabiliser
- 042 Exposure compensation
- 042 ISO
- 043 White balance
- 044 Scene menu
- 044 Effect : Photo Frame
- 045 Effect : Motion GIF
- 046 Effect : Composite shooting
- 047 Shutter Speed
- 048 Aperture Value
- 048 Photo Gallery mode
- 049 Album mode
- 050 Date mode
- 051 Select images mode

Contents

PLAY

- 052 Starting play mode**
- 052 Playing back a still image
- 052 Playing back a movie clip
- 053 Movie clip capture function
- 053 On camera movie trimming
- 053 Playing back a recorded voice
- 054 Playing back a recorded voice memo
- 054 LCD monitor indicator**
- 055 Using the camera buttons to adjust the camera**
- 055 Play mode button
- 055 BACK button
- 055 Using the remote control in play mode
- 056 Thumbnail / Enlargement button
- 057 Starting the slide show
- 058 Protecting images
- 058 Deleting images
- 059 DPOF
- 059 DPOF : Standard
- 060 DPOF : Print size
- 060 DPOF : Index
- 061 Rotating an image
- 061 Resize
- 062 Trimming

- 063 Effect
- 063 Motion GIF
- 064 Red eye fix
- 065 PictBridge

SETUP

- 067 Setup menu**
- 069 Setup menu 1**
- 069 OSD set
- 070 File name
- 070 Language
- 070 Setting up the Date / Time / Date type
- 071 Setup menu 2**
- 071 Imprinting the recording date
- 072 LCD brightness
- 072 Auto Focus lamp
- 072 Auto power off
- 073 Quick view
- 073 Setup menu 3**
- 073 Start up image
- 074 Sound Volume
- 074 Operation Sound
- 074 Start up sound
- 074 Shutter sound


Contents

075	Setup menu 4
075	Formatting a memory
075	Delete All
076	Copy To Card
076	Selecting Video out type
077	Initialisation
078	Important notes
079	Warning indicator
080	Before contacting a service centre
082	Specifications

SOFTWARE	084	Software Notes
	085	System Requirements
	085	About the software
	086	Setting up the application software
	088	Starting PC mode
	091	Removing the removable disk
	092	Setting up the USB Driver for MAC
	092	Using the USB Driver for MAC
	092	Removing the USB Driver for Windows 98SE
	093	Samsung Master
	095	Samsung Biz Reader
	098	FAQ


System chart

Please check that you have the correct contents before using this product. The contents can vary depending on the sales region. To buy the optional equipment, contact your nearest Samsung dealer or Samsung service centre.

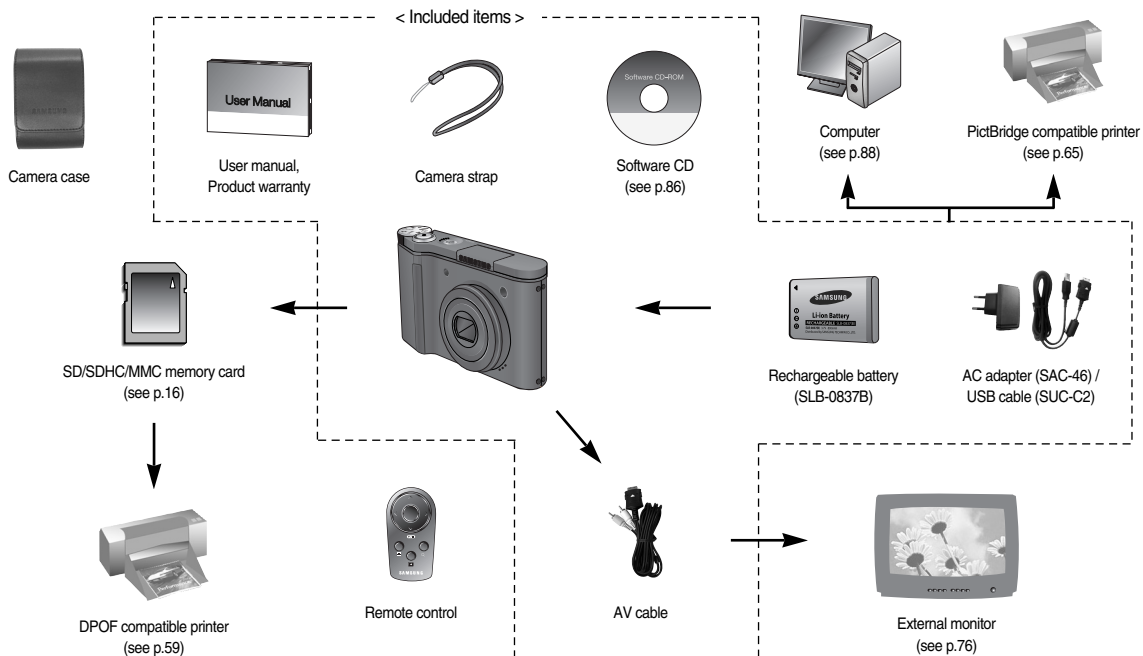

Identification of features

Front & Top

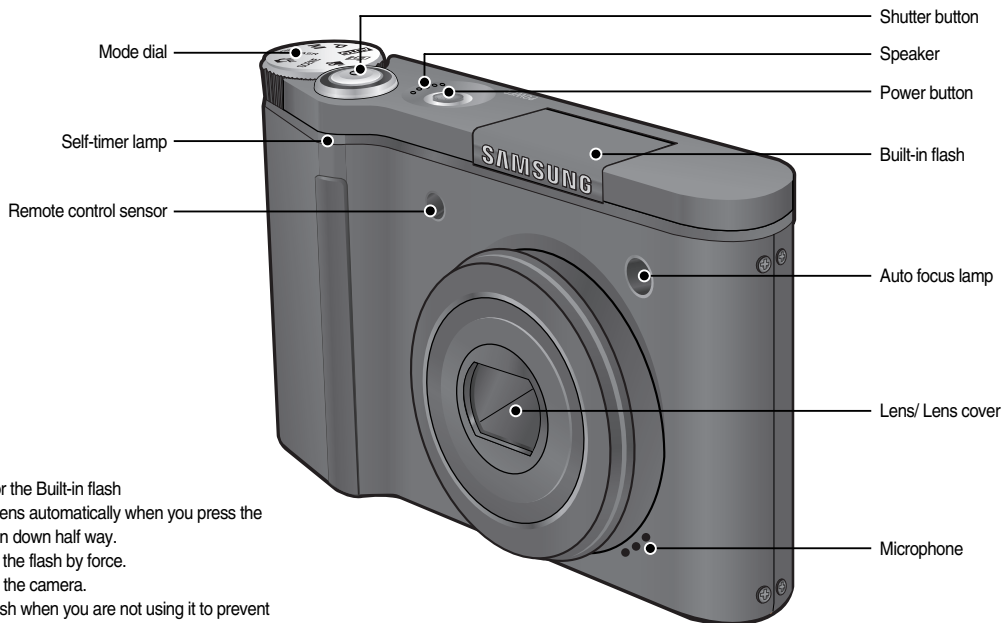


※ Instructions for the Built-in flash

- The flash opens automatically when you press the shutter button down half way.
- Do not open the flash by force.
It may break the camera.
- Close the flash when you are not using it to prevent breakage.



Identification of features

Back

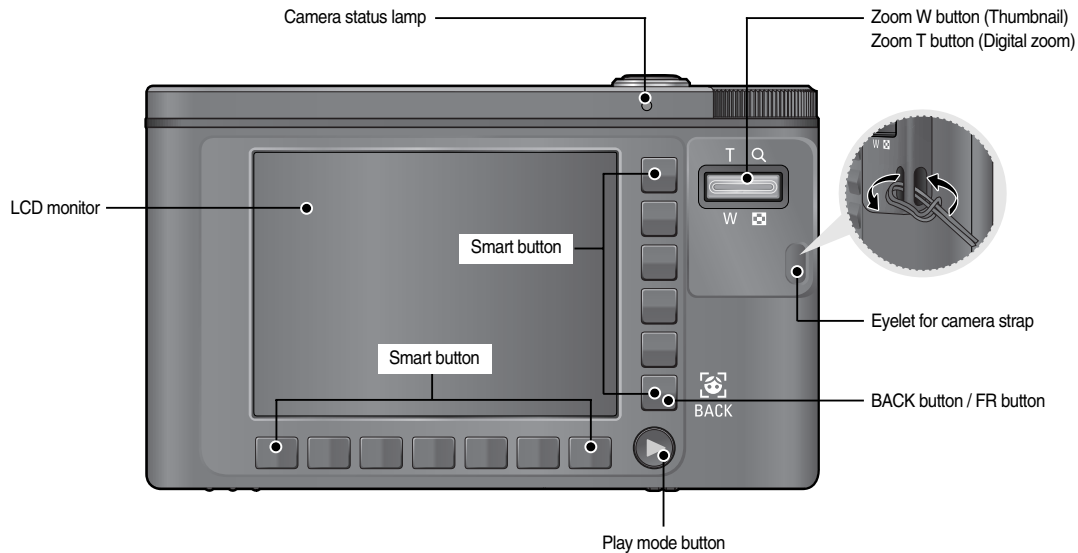

Identification of features

Bottom

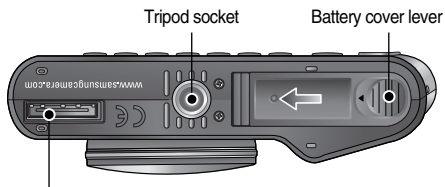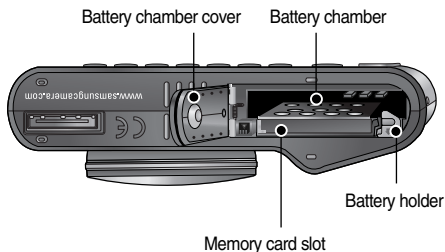

※ To open the battery chamber cover, slide it in the direction shown above.

■ Self-timer lamp

Icon	Status	Description
	Blinking	- For the first 7 seconds, the lamp blinks at 1 second intervals. - For the final 3 seconds, the lamp blinks quickly at 0.25-second intervals.
	Blinking	For 2 seconds, the lamp blinks quickly at 0.25-second intervals before taking a picture.
	Blinking	A picture will be taken after about 10 seconds and 2 seconds later a second picture will be taken.
	Blinking	Pressing the remote control shutter button will allow an interval of 2 seconds before the image is taken.

■ Camera Status Lamp


Status	Description
Power on	The lamp turns on and off when the camera is ready to take a picture.
After taking a picture	The lamp blinks while saving the image and then turns off when ready to take another picture.
While voice memo recording	The lamp blinks.
When the USB cable is inserted to a PC	The lamp lights up (LCD monitor turns off after initializing the device)
Transmitting Data with a PC	The lamp turns on (LCD monitor turns off)
When the USB cable is connected to a printer	The lamp is off.
When the printer is printing	The lamp blinks.
When the AF activates	The lamp lights (The subject is in focus) The lamp blinks (The subject is not in focus)

Identification of features

Mode dial

You can select the desired working mode by using the mode dial located on the top of the camera.

■ AUTO mode



Selects this mode for quick and easy picture taking with minimal user interaction.

In this mode, you can select the basic menus. To select an advanced menu, select the other camera mode.

■ PROGRAM mode



Selecting the program mode will configure the camera with optimal settings. You can still manually configure all functions except the aperture value and shutter speed.

■ MANUAL mode




You can manually configure all functions including the aperture value and shutter speed.

■ ASR mode




Advanced Shake Reduction (ASR) mode. This mode will reduce camera shake and help you get a clearer image.

■ EFFECT mode



It is possible to add special effects to your images by using this mode.

■ SCENE mode



Use the menu to easily configure optimal settings for a variety of shooting situations.

Identification of features

■ MOVIE mode



A movie clip can be recorded for as long as the available recording time of the memory capacity allows.

■ PHOTO GALLERY mode



The saved images can be reviewed with music or various effects in this mode.

■ Mode icon

MODE	AUTO	PROGRAM	MANUAL
Icon			
MODE	ASR	EFFECT	MOVIE
Icon			
MODE	PHOTO GALLERY	PLAY	-
Icon			
SCENE			
MODE	NIGHT	PORTRAIT	CHILDREN
Icon			
MODE	LANDSCAPE	BIZ	CLOSE UP
Icon			
MODE	TEXT	SUNSET	DAWN
Icon			
MODE	BACKLIGHT	FIREWORKS	BEACH&SNOW
Icon			
MODE	SELF SHOT	FOOD	CAFÉ
Icon			

Connecting to a Power Source

You should use the rechargeable battery (SLB-0837(B)) supplied with the camera. Be sure to charge the battery before using the camera.

■ SLB-0837(B) rechargeable battery specification

Model	SLB-0837(B)
Type	Lithium Ion
Capacity	800mAh
Voltage	3.7V
Charging time (When the camera is turned off)	About 150 Min.

■ Number of images and battery life : Using the SLB-0837(B)

	Battery life / Number of images	Based on the following shooting conditions
Still image	Approx. 100 MIN / Approx. 200	Using the fully charged battery, Auto mode, 12M image size, Fine image quality, Shot to shot interval : 30Sec. Changing the zoom position between the Wide and the Tele after every shot. Using the flash on every second shot. Using the camera for 5 minutes and then Powering it off for 1 minute.

	Recording time	Based on the following shooting conditions
Movie	Approx. 95 MIN	Using the fully charged battery 640X480 image size 30fps frame rate

※ These figures are measured under Samsung's standard conditions and shooting conditions and may vary depending on the user's methods.




Important information about battery usage.

- When the camera is not used, turn off the camera power.
- Please remove the battery if the camera will not be used for long periods. Batteries can lose power over time and are prone to leaking if kept inside the camera.
- Low temperatures (below 0°C) can affect the performance of the battery and you may experience reduced battery life.
- Battery will usually recover at normal temperatures.
- During extended use of the camera, the camera body may become warm. This is perfectly normal.


Connecting to a Power Source

You can charge the rechargeable battery (SLB-0837(B)) by using an SAC-46 KIT. The SAC-46 KIT consists of the AC adapter (SAC-46) and the USB cable (SUC-C2). When the AC adapter and the USB cable are assembled, it can be used as an AC cable.

- Using the SAC-46 as an AC charger
: Insert the AC adapter into the USB connector.
When the AC adapter is inserted, it can be used as an AC charger.

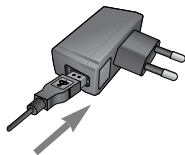

- Using the SAC-46 as an USB cable
: Remove the AC adapter from the USB connector. You can transmit data with a PC (p.88) or charge the battery.

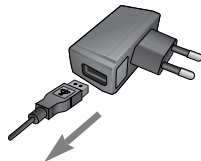


In the following cases, the battery may not be charged.

- When using the USB cable that was not supplied with this camera. Use the supplied USB cable.
- When using a USB hub. Connect the camera to the PC directly.
- When other USB devices are connected to the PC. Disconnect the other USB devices.
- When the USB is connected to the USB port located on the front of the computer. Use the USB located on the back of the computer.
- If the USB port of the PC doesn't meet the Power output standard (5V, 500mA), the camera may not be charged.

Connecting to a Power Source

- How to charge the rechargeable battery (SLB-0837(B))

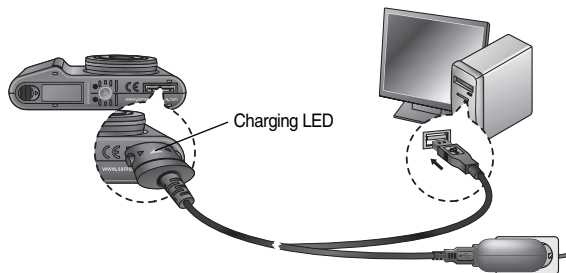

- Charging LED of the AC Adapter

	Charging LED
Being Charged	Red LED is on
Charging is complete	Green LED is on
Charging error	Red LED is off or blinking
Being discharged (Using the AC adapter)	Orange coloured LED is on




- Before inserting any cables or AC adapter, check the directions and do not insert by force. It may cause damage to the cable or camera.
- If the charging LED of the AC Charger does not turn on or blink after inserting the rechargeable battery, please check whether the battery is inserted correctly.
- If you charge the battery with the camera power on, the battery can't charge fully. Turn the camera off while charging the battery.
- If you insert the fully discharged battery to charge it, do not turn on the camera at the same time. The camera may not be turned on because of the low battery capacity. Charge the battery for more than 10 minutes before using the camera.
- Do not use the flash frequently or take a movie clip with a fully discharged battery that has only been charged for a short time.

Inserting the Battery

Insert the battery as shown


- If the camera does not turn on after you have inserted battery, please check whether the battery is inserted with the correct polarity (+ / -).
- Do not use force to open the battery chamber. This may damage the battery chamber cover.

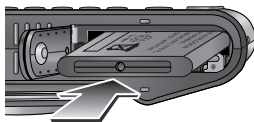





Inserting the memory card

Turn off the camera's power before inserting the memory card.


- Insert the memory card as shown.
- Have the front of the memory card facing toward the back of the camera (LCD monitor) and the card pins toward the front of the camera (Lens).
- Do not insert the memory card the wrong way round. Doing so may damage the memory card slot.



- There are 4 indicators for battery condition that are displayed on the LCD monitor.


Battery indicator				
Battery status	The battery is fully charged	Low battery capacity (Prepare to recharge or use spare battery)	Low battery capacity (Prepare to recharge or use spare battery)	Battery empty. (Recharge or use spare battery)

Instructions on using the memory card

- Be sure to format the memory card (see p.75) if you are using a newly purchased memory card for the first time, if it contains data that the camera cannot recognise, or if it contains images captured with a different camera.
 - Turn off the camera power whenever the memory card is being inserted or removed.
 - Repeated use of the memory card will eventually reduce its performance. Should this be the case, you will need to purchase a new memory card. Wear and tear on the memory card is not covered by the Samsung warranty.
 - The memory card is an electronic precision device. Do not bend, drop or subject it to any heavy impact.
 - Do not store the memory card in an environment with strong electronic or magnetic fields, e.g. near loudspeakers or TV receivers.
 - Please do not use or store in an environment where there are extremes in temperature.
 - Do not allow the memory card to become dirty or to come into contact with any liquid. Should this happen, clean the memory card with a soft cloth.
 - Please keep the memory card in its case when not in use.
 - During and after periods of extended use, you may notice that the memory card is warm. This is perfectly normal.
 - Do not use a memory card that is used in another digital camera. To use the memory card in this camera, format the memory card using this camera.
 - Do not use a memory card formatted by another digital camera or memory card reader.
 - If the memory card is subjected to any of the following, the recorded data may become corrupted :
 - When the memory card is used incorrectly.
 - If the power is switched off or the memory card is removed while recording, deleting (formatting) or reading.
 - Samsung cannot be held responsible for lost data.
 - It is advisable to copy important data onto other media as back-up e.g. floppy disks, hard disks, CD etc.
 - If there is insufficient memory available
 - : A [Memory Full!] message will appear and the camera will not operate.
 - To optimise the amount of memory in the camera, replace the memory card or delete unnecessary images stored on the memory card.
-  ● Don't remove the memory card when the camera status lamp is blinking as this may cause damage to data in the memory card.

Instructions on using the memory card

The camera can use SD/SDHC Memory Cards and MMC (Multi Media Cards).

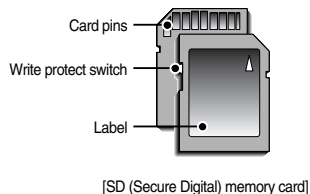

The SD/SDHC memory card has a write protect switch that prevents image files from being deleted or formatted. By sliding the switch towards the bottom of the SD/SDHC memory card, the data will be protected. By sliding the switch towards the top of the SD/SDHC memory card, the data protection will be cancelled. Slide the switch to the top of the SD/SDHC memory card before taking a picture.


When using a 256MB MMC memory, the specified shooting capacity will be as follows. These figures are approximate as image capacities can be affected by variables such as subject matter and memory card type.

Recorded image size		SUPER FINE	FINE	NORMAL	30FPS	15FPS
Still image	12"	41	79	115		
	10"	46	88	128		
	10"	49	94	136		
	9"	54	103	149		
	7"	68	128	183		
	5"	93	173	241		
	3"	143	254	344		
* Movie	640				About 12'42"	About 20'51"
	320				About 30'34"	About 57'49"

* The recording times can be affected by the zoom operation.
The zoom button doesn't operate while recording movies.

When Using the Camera for the First Time : Smart button

This button is used for shifting the menu cursor to select or for confirming the selected menu.

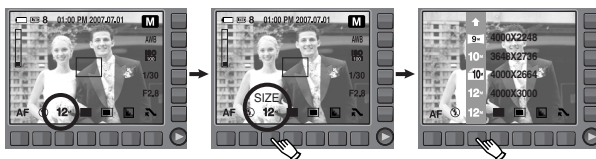

[Selecting the main menu :
Touching the button]


[Confirming the main menu :
Pressing the button]



[Confirming the sub menu :
Pressing the button]

[Selecting the sub menu :
Touching the button]

To select a sub menu, in some menus, touch the button and slide your finger to the left / right.

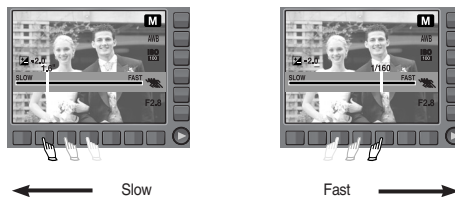


Slow

Fast

[e.g. : Selecting the shutter speed]

Extending the menus : Press the extension menu button and more available menus will be displayed.

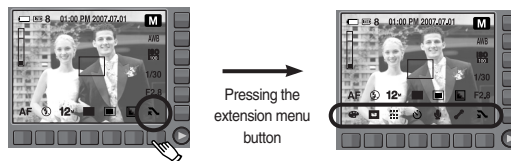

Pressing the
extension menu
button


※ The LCD monitor will be dark when some menus are selected. After selecting the menu, the LCD monitor returns to the brightness set as before.

When Using the Camera for the First Time : Setting up the Date / Time and Language

When the camera is turned on for the first time, a menu will be displayed in the LCD monitor to set date, time and language. This menu will not be displayed again after setting up the date, time and language. Set up the date, time and language before using this camera.

■ Setting up the language

1. Press the [Language] menu button.
2. Select a desired language by pressing the vertical smart button.

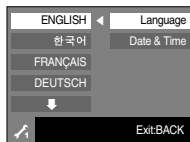


- You can select any one of 22 languages. These are listed below :
 - English, Korean, French, German, Spanish, Italian, S.Chinese, T.Chinese, Japanese, Russian, Portuguese, Dutch, Danish, Swedish, Finnish, Thai, Bahasa (Malay / Indonesian), Arabic, Polish, Hungarian, Czech and Turkish.
- Even if the camera is restarted, the language setting will be maintained.

■ Setting up the date, time and date type

1. Press the [Date & Time] menu button.
2. Select a desired date type by pressing the vertical smart button.



3. To change the date, select the [2007/07/01] menu and press the vertical smart button.
4. To select Year / Month / Day and Hour : Minute, press the horizontal smart button. To change the numbers, press the vertical smart button.

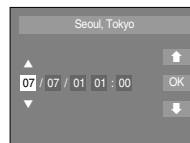

※ For more information about the World Time, refer to the page 71.

LCD monitor indicator

The LCD monitor displays information about the shooting functions and selections.



[Image & Full Status]

No.	Description	Icons	Page
1	Recording mode		p.11~12
2	Date / Time	01:00 PM 2007.07.01	p.70
3	Number of available shots remaining	8	p.18
	Remaining time (Movie clip / Voice recording)	00:01:00/01:00:00	
4	Memory card icon / Internal memory icon	/	p.16


No.	Description	Icons	Page
5	Battery		p.16
6	Optical / Digital Zoom bar / Digital Zoom rate	x5.0	p.28~29
7	Focus mode	AF	p.33~34
8	Flash		p.34~35
9	Image size	12M	p.36
10	Shooting mode		p.36
11	Metering		p.37
12	Sharpness		p.37
13	Effect	NOR	p.38
14	Focus Area		p.38
15	Image quality / Frame rate		p.39
16	Self-timer	OFF	p.39~40
17	Voice recording / Voice memo / Without Sound	OFF	p.40~41/ p.25
18	Setup menu		p.67~69
19	Extension menu		p.19
20	Stabilizer		p.41
21	Exposure compensation		p.42
22	ISO	ISO AUTO	p.42
23	White Balance	AWB	p.43
24	Auto focus area		-
25	Face Recognition		p.29~30

Starting the recording mode

How to use the AUTO mode

Please select this mode for quick and easy picture taking with minimal user interaction.

1. Insert the battery (p.16) taking note of the correct polarity (+ / -).
2. Insert the memory card (p.16). As this camera has a 20MB internal memory, it is not essential to insert the memory card. If the memory card is not inserted, an image will be stored in the internal memory. If the memory card is inserted, an image will be stored on the memory card.
3. Close the battery chamber cover.
4. Press the power button to turn on the camera.
(If the date / time that is displayed on the LCD monitor is incorrect, reset the date / time before taking a picture.)
5. Select the AUTO mode by rotating the mode dial.
6. Point the camera towards the subject and compose the image by using the LCD monitor.
7. Press the shutter button to capture an image.




- If the Auto focus area turns to red when you press the shutter button down half way, it means that the camera cannot focus on the subject. Should this be the case, the camera is unable to capture an image clearly.
- Avoid obstructing the lens or the flash when you capture an image.

How to use the PROGRAM mode

Selecting the program mode will configure the camera with optimal settings. You can still manually configure all functions except the aperture value and shutter speed.

1. Select the PROGRAM mode by rotating the mode dial.
2. Press the horizontal smart button to configure advanced functions such as image size (p.36), quality (p.39), metering (p.37) and continuous shooting (p.36).

※ Refer to page 32-48 for more information about the menus.




Starting the recording mode

How to use the MANUAL mode

The user can manually set both the aperture value and the shutter speed.

1. Select the MANUAL mode by rotating the mode dial.
2. Select the desired shutter speed and aperture value by using the smart button.

※ Refer to page 47-48 for more information about the menus.

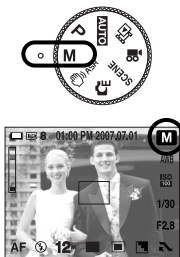

How to use the ASR (Advanced Shake Reduction) mode

This mode will reduce the effect of camera shake and help you get a well-exposed image in dim conditions.

1. Select the ASR mode by rotating the mode dial.
2. Point the camera towards the subject and compose the image by using the LCD monitor.
3. Press the shutter button to capture an image.



■ Things to watch out for using the ASR mode

- The digital zoom will not operate in the ASR mode.
- If the lighting conditions are brighter than fluorescent lighting condition, the ASR doesn't activate.
- If the subject is moving the final image captured may be blurred.
- Avoid moving the camera while the [Capturing!] message is displayed to achieve a better result.
- As the ASR uses the camera's digital processor, images taken using the ASR may take a little longer for the camera to process.

Starting the recording mode

How to use the EFFECT mode

It is possible to add special effects to your images by using this mode. Select the EFFECT mode by rotating the mode dial.

- ※ Refer to page 44-47 for more information about the effect menus.



How to use the SCENE mode

Use the menu to easily configure optimal settings for a variety of shooting situations. Select the SCENE mode by rotating the mode dial.

- ※ Refer to page 44 for more information about the menus.



Starting the recording mode

How to use the MOVIE mode

A movie clip can be recorded for as long as the available recording time of the memory capacity allows.

1. Select the MOVIE mode by rotating the mode dial.
(Available recording time will display on the LCD monitor)
2. Point the camera towards the subject and compose the image by using the LCD monitor. Press the shutter button and movie clips are recorded for as long as the available recording time allows. Movie clips will still be recorded if the shutter button is released.

If you wish to stop recording, press the shutter button again.

* Image size and type are listed below.

- Image size : 640X480, 320X240 (Selectable)
- File type : *.avi (MPEG-4)

- ※ The maximum file size of continuous movie clip is 4GB.
- ※ If the recording time is over 6 hours, though the file size is not 4GB, the movie is stopped and saved automatically.
- ※ Before the file size is 4GB or the recording time is 6 hours, the movie can be stopped and saved depending on the movie quality.



Recording the movie clip without sound

You can record the movie clip without sound.


1. Press the extension menu button.
2. Select the [VOICE] → [OFF] menu.
3. Press the shutter button and movie clip is recorded for as long as the available recording time without sound.



Pausing while recording a movie clip (Successive Recording)

This camera allows you to temporarily stop during unwanted scenes, while recording a movie clip. Using this function, you can record your favourite scenes into a movie clip without having to create multiple movie clips.


■ Using Successive Recording

1. Press the shutter button and movie clips are recorded for as long as the available recording time allows. Movie clips will still be recorded if the shutter button is released.
2. Press the II button to pause recording.
Press the  button again to resume the recording.
3. If you wish to stop recording, press the shutter button again.




Things to Watch Out for When Taking Pictures


- Pressing the shutter button down half way.
Lightly press the shutter button to confirm focus and flash battery charge.
Press the shutter button all the way down to take the picture.



[Lightly press the shutter button]



[Press the shutter button]

- The available recording time may vary depending on shooting conditions and camera settings.
- When either the Flash Off or Slow synchro mode is selected in a low lighting condition, the camera shake warning indicator () may appear on the LCD monitor. In this case, use a tripod, support the camera on a solid surface or change to flash shot mode.
- Shooting against the light :
Please do not take pictures into the sun. Taking a picture against the sun may make the picture dark. To take a picture against the light, please use the [Backlight] in the scene shooting mode (see page 44), fill-in flash (see page 35), spot metering (see page 37), or exposure compensation (see page 42).

- Avoid obstructing the lens or the flash when you capture an image.
- Compose the image by using the LCD monitor.
- In some of the following conditions the Auto focus area system may not perform as expected.
 - When photographing a subject that has little contrast.
 - If the subject is highly reflective or shiny.
 - If the subject is moving at high speed.
 - When there is strong reflected light, or when the background is very bright.
 - When the subject matter has only horizontal lines or the subject is very narrow (such as a stick or flagpole).
 - When the surroundings are dark.

Using the camera buttons to set the camera

The recording mode function can be set up by using the camera buttons.

POWER button

Used for turning the camera's power on / off.

If there is no operation during the specified time, the camera's power will be turned off automatically to save battery life.

Refer to page 72 for more information about the auto power off function.



SHUTTER button

Used for taking an image or recording voice in the RECORDING mode.

- In MOVIE CLIP mode :
Pressing the shutter button down fully starts the process for recording a movie clip.
Press the shutter button once and the movie clip is recorded for as long as the available recording time in the memory allows. If you wish to stop recording, press the shutter button again.
- In STILL IMAGE mode :
Pressing the shutter button down halfway activates the autofocus and checks the condition of the flash. Pressing the shutter button down fully takes and stores the image. If you select voice memo recording, the recording will start after the camera has finished storing the image data.



ZOOM W / T button

If the menu is not displayed, this button works as the OPTICAL ZOOM or DIGITAL ZOOM button. This camera has a 3X optical zoom and a 5X digital zoom function. Using both will offer a total zoom ratio of 15X.



■ TELE Zoom


Optical zoom TELE : Pressing the ZOOM T button will zoom into the subject i.e. the subject will appear nearer.

Digital zoom TELE : When the maximum (3X) optical zoom is selected, pressing the ZOOM T button activates the digital zoom software. Releasing ZOOM T button stops the digital zooming at the required setting. Once the maximum digital zoom (5X) is achieved, pressing the ZOOM T button will have no effect.




■ WIDE Zoom

Optical zoom WIDE : Pressing the ZOOM W button. This will zoom out from the subject i.e. the subject will appear farther away. Pressing the ZOOM W button continuously will set the camera to its minimum zoom setting i.e. the subject appears at its farthest from the camera.



Digital zoom WIDE : When the digital zoom is in operation, pressing the ZOOM W button will reduce the digital zooming in steps. Releasing ZOOM W button stops digital zooming. Pressing the ZOOM W button will reduce the digital zoom and then it will continue to reduce the optical zoom until the minimum setting is reached.

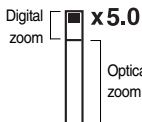

ZOOM W / T button




- Images taken using the digital zoom may take a little longer for the camera to process. Allow time for this to take place.
- If the Zoom buttons are being pressed during the Movie clip shots, the voice will not be recorded.
- You may notice a decrease in image quality when using the digital zoom.
- To view a clearer digital zoom image, press the shutter button halfway at the maximum optical zoom position and press the zoom T button again.
- The digital zoom can't be activated in the [ASR], [MOVIE], [HIGH SPEED], [M.CAPTURE], [NIGHT], [CHILDREN], [BIZ], [CLOSE UP], [TEXT], [FIREWORKS], [SELF SHOT], [FOOD], [CAFÉ] modes.
- Take care not to touch the lens to avoid taking an unclear image and possibly causing camera malfunction. If the image is dim, turn the camera power off and on again to modify the lens position.
- Take care not to press the lens as this may cause a camera malfunction.
- When the camera is turned on, take care not to touch the camera's moving lens parts as this may cause the resulting image to be dim and unclear.
- You can operate the Wide and Tele zoom by using the remote control.

Face recognition (FR) button

This mode detects the face position of the subject automatically and then sets the focus and exposure. Select this mode for quick and easy portraits.

※ Selectable modes : AUTO, PROGRAM, MANUAL, ASR, EFFECT(M.GIF), SCENE(PORTRAIT, CHILDREN, BEACH & SNOW, SELF SHOT, CAFÉ)

1. Press the FR (Face Recognition) button () in the selectable modes.
The FR icon will be displayed on the screen left side.



2. The size and position of the Auto focus area is set at the face of the subject automatically.



3. Press the shutter button halfway. The focus frame turns to green when the focus is activated.
4. Press the shutter button fully to take a picture.

Face recognition (FR) button



- This function can detect up to 9 persons.
- When the camera recognises many people at the same time, it will focus on the nearest person.
- When the camera detects a target face, the white colour focus frame will be displayed over the target face and the gray colour focus frame will be displayed over the remaining faces(up to 8). Press the shutter button halfway down to focus the face and the white focus frame turns green.(Total 9)
- Return to previous AF mode if face detection was failure.
- In some conditions this function cannot work properly.
 - When a person wears dark glasses or some part of the face is hidden.
 - When the person being taken does not look at the camera.
 - When the camera doesn't detect a face because of too much or too little light.
 - There is too great a distance between the camera and the subject.
- The maximum available Face Recognition range is 2.5m (Wide).
- The nearer the subject, the faster the camera can recognize the subject.
- The digital zoom cannot be used in the Face Recognition mode.

Using the LCD monitor to set the camera

You can use the menu on the LCD monitor to set up recording functions.

(● : Selectable, - : Partly selectable)

MENU							SCENE		Page
FOCUS	NORMAL	●	●	●	●	●	-	●	p.33-34
	AUTO MACRO	●			●		-		
	MACRO		●	●		●	-	●	
FLASH	OFF	●	●	●	●	●	-		p.34-35
	AUTO	●	●			●	-		
	RED EYE	●	●			●	-		
	FILL IN		●	●		●	-		
	SLOW SYNC		●			●	-		
	RED EYE FIX	●	●				-	-	
SIZE		●	●	●	●	●	●	●	p.36
SHOOTING	SINGLE	●	●	●	●	●	●		p.36
	CONTINUOUS		●	●			-		
	HIGH SPEED		●	●					
	MOTION CAPTURE		●	●					
	AEB		●						

Using the LCD monitor to set the camera

MENU							SCENE		Page
METERING	MULTI	●	●	●	●	●		●	p.37
	SPOT		●	●	●	●		●	
	CENTER		●	●	●	●		●	
SHARPNESS	SOFT		●	●		-			p.37
	NORMAL	●	●	●	●	-		●	
	VIVID		●	●		-			
EFFECT	NORMAL	●	●	●	●	●	-	●	p.38
	B&W		●	●		●	-	●	
	SEPIA		●	●		●	-	●	
	B		●	●		●	-	●	
	R		●	●		●	-	●	
	G		●	●		●	-	●	
	NEGATIVE		●	●		●	-	●	
	CUSTOM					●			

MENU							SCENE		Page
FOCUS AREA	CENTER AF	●	●	●	●	●	●	●	p.38
	MULTI AF	●	●	●	●	-	●		
QUALITY/FRAME RATE		●	●	●	●	●	●	●	p.39
TIMER	OFF	●	●	●	●	●	●	●	p.39-40
	10SEC	●	●	●	●	●	●	●	
	2SEC	●	●	●	●	●	●		
	DOUBLE	●	●	●	●		●		
	REMOTE	●	●	●	●	●	●	●	
VOICE	OFF	●	●	●	●	●	●		p.40-41
	MEMO	●	●	●	●	●	●		
	RECORD	●	●	●	●	●	●		
COLOR		●							p.32
BRIGHT		●							p.33

Using the LCD monitor to set the camera

MENU						SCENE		Page
EV		●		●			●	p.42
ISO		●	●					p.42
WB		●	●	●			●	p.43
SHUTTER SPEED			●					p.47
APERTURE VALUE			●					p.48
PHOTO FRAME					●			p.44
M.GIF					●			p.45
COMPOSITE					●			p.46~47
STABILIZER						●		p.41

※ Menus are subject to change without prior notice.

※ The selectable menus may vary in each scene modes.

Colour tone

You can add colour tone on the captured image.
Warm menu will increase red colour of the image.
Cool menu will increase blue colour of the image.



■ Selecting the colour tone

To select the colour tone, touch the button and slide your finger to the left or right.



[Emphasizing the Cool-colour]



[Emphasizing the Warm-colour]

Brightness

You can change the brightness of the image.



■ Changing the brightness

To select the brightness, touch the button and slide your finger to the left or right.



Selecting focus type

You can select the focus type in accordance with the subject distance.

The distance ranges are show below.



[Normal]



[Macro]



[Auto Macro]

■ Types of focus modes and focus ranges

Focus Type	Wide (W)	Tele (T)
Normal	80cm~Infinity	80cm~Infinity
Macro	4cm~80cm	50cm~80cm
Auto Macro	4cm~Infinity	50cm~Infinity

Selecting focus type



- When the macro mode is selected, it is possible that camera shake will occur. Take care not to shake the camera while taking a picture.
- When you take a picture within 30cm in the Macro mode, select the FLASH OFF mode.

Flash

You can select the flash type in accordance with the subject distance.

The distance ranges are show below.

- When using the [ASR], [CONTINUOUS], [HIGH SPEED], [M.CAPTURE], [AEB], [MOVIE], [LANDSCAPE], [BIZ], [CLOSE UP], [TEXT], [SUNSET], [DAWN], [FIREWORK], [SELF SHOT], [FOOD], [CAFÉ] mode, the flash will not operate.



- Flash range (W : Wide, T : Tele)

(Unit : m)

ISO	Normal	Macro	Auto macro
AUTO	W: 0.8 - 4.5	W: 0.3 - 0.8	W: 0.3 - 4.5
	T: 1.5 - 2.4	T: 0.5 - 1.5	T: 0.5 - 2.4

Flash



- If you press the shutter button after selecting the Auto, Fill-in, Slow synchro flash, the first flash fires to check the shooting condition (Flash range and Power ratio of flash).
Do not move the camera until the second flash fires.
- Using the flash frequently will reduce the life of the battery.
- Under normal operating conditions the charging time for the flash is usually less than 4 seconds. If the battery is weak, the charging time will be longer.
- Take photographs within the flash range.
- The image quality is not guaranteed if the subject is too close or highly reflective.
- When taking an image in poorly lit conditions with the flash, there may be a white speck in the captured image. The speck is caused by the reflection of the flash light from the atmospheric dust. It is not camera malfunction.
- Do not open the Built-in flash by force. It may cause damage to the flash.

■ Flash mode indicator

Icon	Flash mode	Description
	Flash off	The flash does not fire. Select this mode when capturing images in a place or situation where flash photography is prohibited. When you capture an image in a poorly lit condition, the camera shake warning indicator () will display on the LCD monitor.
	Auto flash	If the subject or background is dark, the camera flash will operate automatically.
	Auto & Red eye reduction	If a subject or background is dark, the camera flash will work automatically and will reduce the red-eye effect by using the red-eye reduction function.
	Fill in flash	The flash fires regardless of the available light. The intensity of the flash will be automatically controlled to suit the prevailing conditions.
	Slow synchro	The flash operates with a slow shutter speed to obtain a balanced correct exposure. In poor lighting conditions the camera shake warning indicator () will display on the LCD monitor.
	Red-eye fix	When a shot with "red eye" is detected, this mode will reduce the red-eye effect automatically.

Size

You can select the image size appropriate for your application.

Mode	Still image mode							
Icon								
Size	4000X3000	4000X2664	3648X2736	4000X2248	3072X2304	2592X1944	2048X1536	1024X768
Mode	Movie clip mode							
Icon								
Size	640X480				320X240			



[Still image mode]



[Movie clip mode]



- The higher the resolution, the lower the number of shots available because high resolution images require more memory.

Continuous shot

You can select the type of shooting and the number of continuous shots.

[SINGLE] : Take one picture only

[CONTINUOUS] : Images will be taken continuously until the shutter button is released. The shooting capacity depends on the memory.

[HIGH SPEED] : This takes 3 shots continuously (about 2.5 shots per second) when the shutter is pressed down and held.

[M. CAPTURE] : This takes 7 shots per second, when the shutter is pressed and held down. After completing the continuous shooting, images are saved and the images play back on the Rear LCD. The maximum number of shots is 20 and the image size is fixed as 1024X768.

[AEB] : Take three pictures in a series using different exposures : standard exposure(0.0EV), Short exposure (-1/2EV) and over exposure (+1/2EV).



[Still image mode]

- ※ High resolution and picture quality increases file saving time, which increases stand-by time.
- ※ If the [CONTINUOUS], [HIGH SPEED], [M. CAPTURE] or [AEB] sub menu is selected, the flash is switched off automatically.
- ※ It is best to use a tripod for the AEB shooting as the time to save each image file is longer and blurring caused by camera shake may occur.
- ※ When the [M.CAPTURE] menu is selected, you only can select ISO AUTO, 800, 1600, 3200

Metering

If you cannot obtain suitable exposure conditions, you can change the metering method to take brighter pictures.

[MULTI] : Exposure will be calculated based on an average of the available light in the image area. However, the calculation will be biased towards the centre of the image area. This is suitable for general use.


[SPOT] : Only the rectangular area in the centre of the LCD monitor will be metered for light. This is suitable when you want the subject in the centre correctly exposed, regardless of the back lighting.

[CENTER] : Exposure will be calculated based on an average of the available light in the image area. However, the calculation will be biased towards the centre of the image area. This is suitable for taking a picture of small object like a flower or insects.

※ If the subject is not the centre of the focus area, do not use the spot metering as this may result in an exposure error. In this circumstance, it is better to use exposure compensation.



[PROGRAM mode]

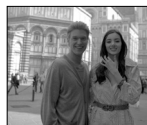

- ※ When using the AUTO, PROGRAM mode, the ACB function will operate.
- ※ When using the [HIGH SPEED], [M.CAPTURE], [AEB] menu, the ACB function will not operate.
- ※ When the ACB function is selected, you only can select ISO AUTO, 100.

Sharpness

You can adjust the sharpness of the picture you want to take. You cannot check the sharpness effect on the LCD monitor before you take a picture, because this function is applied only when the captured image is stored on the memory.

[SOFT] : The edges of the image are softened. This effect is suitable for editing images on your PC.

[NORMAL] : The edges of the image are sharp. This is suitable for printing.

[VIVID] : The edges of the image are emphasized. The edges will appear sharp, but noise may occur in the recorded image.




[PROGRAM mode]

ACB (Auto Contrast Balance) function

This function is to adjust the contrast automatically. when taking photos in an environment with big exposure difference i.e. backlight or contrast. This function adjusts the brightness automatically and allows the subject to be photographed clearly.

Effect

By using the camera's digital processor, it is possible to add special effects to your images.

- NOR** : No effect is added to the image.
 - BW** : Captured images will be stored in black and white.
 - S** : Captured images will be stored in a sepia tone (a range of yellowish brown colours).
 - B** : Captured images will be stored in a blue tone.
 - R** : Captured images will be stored in a red tone.
 - G** : Captured images will be stored in a green tone.
 - N** : Save the image in negative mode.
 - C** : User can set the tone of the R (Red), G (Green) and B (Blue) value. These menus can be selected in the Special Effect mode only.
- 
- [PROGRAM mode]

Focus Area

You can select your preferred Focus Area according to the shooting condition.

- [Center AF]** : The rectangular area in the center of the LCD monitor will be focused
- [Multi AF]** : This camera selects all of available AF point from the 9 AF points.



[PROGRAM mode]



[Center AF]




[Multi AF]

- ※ When the camera focuses on the subject, the Auto focus area turns to green.
When the camera doesn't focus on the subject, the Auto focus area turns to red.

Quality / Frame rate

You can select the compression ratio appropriate for your application of the captured images. The higher the compression ratio, the lower the picture quality.

Mode	Still image mode			Movie clip mode	
Icon					
Sub menu	SUPER FINE	FINE	NORMAL	30FPS	15FPS
File Type	jpeg	jpeg	jpeg	avi	avi

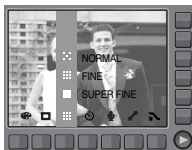

[Still image mode]



[Movie clip mode]



- This file format complies with the DCF (Design rule for Camera File system).
- JPEG (Joint Photographic Experts Group) : JPEG is the image compression standard developed by the Joint Photographic Experts Group. This type of compression is most commonly used for compressing photos and graphics because it can compress the files efficiently.

Self-timer / Remote control

This function is used when the photographer would also like to be in the picture.

- Selecting a self-timer :

When you press the Shutter button, the picture will be taken after the specified time has elapsed and the self-timer function will be cancelled.

- Selecting a remote mode :

Pressing the shutter button of a separate remote control will allow an interval of 2 seconds before the image is taken. After taking a picture, the remote mode will be maintained. But, pressing the Power button will cancel the remote mode.



■ Description of Self-timer / Remote mode


Icon	Mode	Description
OFF	OFF	You can not use the self-timer function.
	10 sec	Pressing the shutter button will allow an interval of 10 seconds before the image is taken.
	2 sec	Pressing the shutter button will allow an interval of 2 seconds before the image is taken.
	DOUBLE	A picture will be taken after about 10 seconds and 2 seconds later a second picture will be taken.
	REMOTE	You can take a picture by remote control instead of using the shutter button of the camera.

Self-timer / Remote control

■ Remote control range


When you take a picture by using the remote control, refer to the illustrations shown alongside about the remote control range.

[Shutter button on the remote control]

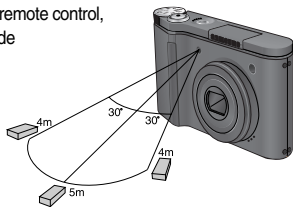

■ Replacing battery for the remote control

Make sure the + (positive) polarity is toward the top and the - (negative) polarity is toward the bottom while installing battery for the remote control. Replace battery for the remote control in the local service centre. Use the CR 2025 3V battery.

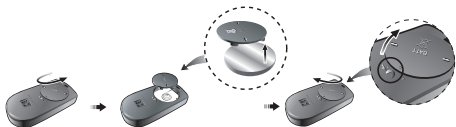

- When taking a picture using the self-timer, the self-timer lamp works as follows :
 - 2 second self-timer setting : The self-timer lamp blinks at 0.25 second interval for 2 seconds.
 - 10 second self-timer setting : The self-timer lamp blinks at 1 second interval for the first 7 seconds. It blinks at 0.25 second interval for the remaining 3 seconds.
- If you operate the Back button during the self-timer operation, the self-timer function is canceled.
- Use a tripod to prevent camera shake.

Voice recording / Voice memo

A voice can be recorded for as long as the available recording time(Max 10 hours) of the memory capacity allows. And you can add your voice-over to a stored still image.

■ Voice recording

1. Select a recording mode with the exception of the Movie clip mode by rotating the mode dial.
2. Select the Voice recording menu by using the smart button.
3. Press the shutter button to record a voice.
 - Press the shutter button once and voice is recorded for as long as the available recording time allows (Max 10 hours). The recording time will be displayed on the LCD monitor. Voice will still be recorded if the shutter button is released.
 - If you wish to stop recording, press the shutter button again.
 - File type : *.wav



Voice recording / Voice memo

■ Voice memo


1. Select a recording mode with the exception of the Movie clip mode by rotating the mode dial.
2. Select the Voice memo menu by using the smart button. If the voice memo indicator is displayed on the LCD monitor, the setting is completed.
3. Press the shutter button and take a picture. The picture is stored on the memory card.
4. Voice memo will be recorded for ten seconds from the moment the picture is stored. In the middle of the sound recording, pressing the shutter button will stop the voice memo.



- A distance of 40cm between you and the camera (microphone) is the best distance to record sound.

Movie Clip frame stabiliser

This function helps stabilize images captured during movie recording. You can select this menu only in the MOVIE mode.

1. Select () icon by pressing the smart button to help stabilize images captured during movie recording. Pressing the icon again will cancel the function.
2. The recording frame range become narrow when you select this menu.



Exposure compensation

This camera automatically adjusts the exposure according to the ambient lighting conditions. You can also select the exposure value in the compensating exposure menu. Exposure compensation menu is available in the Program and ASR, Movie mode.

■ Compensating Exposure

1. Press the exposure compensation menu button and the exposure compensation menu bar will appear as shown.
2. Touch the button and slide your finger to select the exposure value.
3. Press the exposure compensation menu button again. The value you set will be saved and the Exposure Compensation setup mode will close.



- ※ A negative exposure compensation value reduces the exposure.
Note that a positive exposure compensation value increases the exposure and the LCD monitor will appear white or you may not get good pictures.

ISO

You can select the ISO sensitivity when taking pictures. The speed or specific light-sensitivity of a camera is rated in ISO numbers. ISO menu is available in the Program and Manual mode.

- AUTO :

The camera's sensitivity is automatically changed by variables such as lighting value or subject brightness.

- 80, 100, 200, 400, 800, 1600, 3200 :

You can increase the shutter speed while the same amount of light is present, by increasing the ISO sensitivity. However, the image may be saturated in high luminance. The higher the ISO value, the greater is the camera's sensitivity to light; therefore it has a greater capacity for taking pictures in darker conditions. However, the noise level in the image will increase as the ISO value increases, making the image appear coarse.









- ※ When the [M.CAPTURE] menu is selected, you only can select ISO AUTO, 800, 1600, 3200.
- ※ When the ISO 3200 menu is selected, the image size is fixed as 3M.



White balance

The white balance control allows you to adjust the colours to appear more natural. When a menu except the AWB (Auto White Balance) is selected, you can only select the negative color effect.


White Balance menu is available in the Program, Manual and ASR, Movie clip mode.


AUTO		AWB : The camera automatically selects the appropriate white balance settings, depending on the prevailing lighting conditions.	
DAYLIGHT		: For taking images outside.	
CLOUDY		: For taking images under a cloudy and overcast sky.	
Fluorescent H		: For shooting under daylight fluorescent types of three way fluorescent lighting.	
Fluorescent L		: Shooting under white fluorescent lighting.	
TUNGSTEN		: For shooting under tungsten (standard light bulb) lighting.	
CUSTOM		: Allows the user to set the white balance according to the shooting condition.	

Different lighting conditions may cause a colour cast on your images.

■ Using the Custom White Balance

White balance settings may vary slightly depending on the shooting environment. You can select the most appropriate white balance setting for a given shooting environment by setting up the custom white balance.

1. Select the CUSTOM () menu of the White Balance and place a sheet of white paper in front of the camera so that the LCD monitor shows only white.

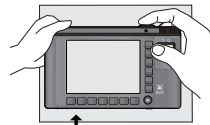


[White paper]

2. OK menu button : selects pre-saved custom white balance.

BACK button : cancels the custom white balance.

Shutter button : stored the new custom white balance.

- The custom white balance value will be applied, starting with the next picture you take.
- The user configured white balance will be remain effective until it is overwritten.

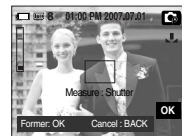

Scene menu

Use the menu to easily configure optimal settings for a variety of shooting situations.

- [NIGHT] (🌙) : Use this for shooting still images at night or in other dark conditions.
- [PORTRAIT] (👤) : To take a picture of a person.
- [CHILDREN] (👶) : To take a picture of fast moving objects, for example, children.
- [LANDSCAPE] (🏞️) : To take pictures of distant scenery.
- [BIZ] (📄) : To take pictures of a visiting card.
- [CLOSE UP] (🔍) : Close-up shooting for small objects such as plants and insects.
- [TEXT] (📄) : Use this mode to shoot a document.
- [SUNSET] (🌅) : For taking pictures of sunsets.
- [DAWN] (🌅) : Daybreak scenes.
- [BACKLIGHT] (👤) : For portraits without shadows caused by backlighting.
- [FIREWORK] (🎆) : Firework scenes.
- [BEACH&SNOW] (🏖️) : For ocean, lake, beach and snow scape scenes.
- [SELF SHOT] (👤) : Use when the photographer would also like to be in the image.
- [FOOD] (🍴) : For taking delicious looking food.
- [CAFÉ] (☕) : For taking pictures of cafe and restaurant.



Effect : Photo Frame

You can add any one of 9 types of frame-like borders to a still image you want to capture.

- Date & Time information will not be printed on the stored image taken with Photo Frame menu.


OFF : The photo frame is not inserted.




F1



F2



F3



F4



F5



F6



F7



F8



F9

Effect : Motion GIF

You can make Motion GIF with captured images.

- Motion GIF : Taking images continuously and save them in a file. This file supports animation.

- How to make the Motion GIF


1. Select the Effect mode by rotating the mode dial.
2. Press the Motion GIF menu button.
3. Select the image size and FPS (Frame Per Second).
4. Press the Shutter button to take pictures. (Max. 50 images)
5. Press the OK menu button to save the image. The images will be saved as a motion GIF file.



[Selecting image size]



[Selecting FPS]

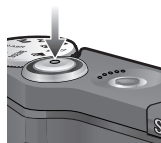

[Taking pictures]



[Pressing the OK menu button]



- As the GIF file format has limitation of shades, image quality can be decreased.

Effect : Composite shooting

You can combine 2, 3, or 4 different shots in a still image




[Composite1]

[Composite2]

[Composite3]

[Composite4]

■ Selecting 2 composite shooting



- If you press the Play mode button or rotate the mode dial during the composite shots, each camera working mode is executed. The images captured before will be deleted.
- After taking the last composite shooting, press the OK button. And then the voice memo will start.

- Changing a part of composite shot before taking the last shot
Before taking the last composite shot, you can change a part of composite shot.

1. During the composite shots, press the BACK button.
2. A previous image will be deleted and new frame will be displayed. If there is a previously taken image, press the BACK button again and a previous image will be deleted again.



[Before taking the 3rd shot]



Pressing the BACK button




[Moving backward to the 2nd shot]

3. Press the shutter button to capture a new image.

Effect : Composite shooting

- Changing a part of composite shot after taking the last shot
Before saving the composite shot, you can change a part of composite shot.

1. After taking the last shot, a menu will display as shown.
2. Select an image to delete by using the Smart button.
3. Press the BACK button and the selected image is deleted.
4. Press the Shutter button to take an image again.
5. Press the OK button and the image is saved.

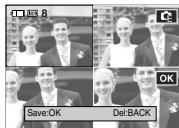

Shutter Speed

This mode will set the shutter speed for automatic exposure. High Shutter speeds can capture a moving object in a still image as if the object is not moving. Low Shutter speeds can capture a moving object with an active effect.



- Setting up the shutter speed

To select the shutter speed, touch the button and slide your finger to the left or right.



Aperture Value

This mode will set the aperture value for automatic exposure. Smaller Aperture values make the object sharp but blur the background. Larger Aperture values make both the object and background sharp.



Photo Gallery mode

When the images play back, you can add play back effect and listen to a B.G.M. Only still images can be played back. Movie and Voice files are not played back.

■ Selecting a play back mode


1. Select the Photo Gallery mode by rotating the mode dial.



2. Press the Play type button and menus as shown will display.

 : Play back by album

 : Play back by date

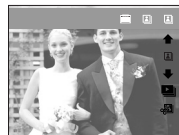

3. Press the Smart button to select a desired play back mode.

Photo Gallery mode






Album mode

Images play back by album.

If a memory card is not inserted, Personal / Family / Friend / Event albums can be selected. All images saved in the internal memory play back.

■ Selecting an album





You can select an album by using the smart button. Before selecting an album, insert images into albums.

-  : All images save in the memory play back.
-  : Images saved in the Personal album play back.
-  : Images saved in the Family album play back.
-  : Images saved in the Friends album play back.
-  : Images saved in the Events album play back.



■ Adding images in an album

Press the [ALBUM EDIT] button and the menus shown below will display.

- Moving cursor / Selecting an image
: Smart button (Horizontal)
- Selecting images
: Pressing the smart button (Horizontal)
Images you want can be selected one at a time.
- Selecting / Cancelling an album
: Each album button
 -  : Adding images in the Personal album.
 -  : Adding images in the Family album.
 -  : Adding images in the Friends album.
 -  : Adding images in the Events album.
- Moving to previous menu : BACK button

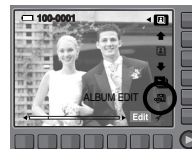


Photo Gallery mode

■ Playing back an album

Press the slide show menu button.



 : Starting the slide show

 : Selecting an effect of the slide show

 : Setting play interval

 : Selecting a B.G.M

A B.G.M can be played back with images.
Only saved music can be selected.

You can't add any music on the B.G.M list.

 : Selecting play back time

[One Play] : The slide show is closed after one cycle.

[Repeat Play] : The slide show is repeated until cancelled.

※ Each effect has different background music.

※ Refer to page 57 for more information about the slide show.

■ Rotating an image

- Press the Edit button and the menus shown below will display.


- You can rotate an image to a direction you want. Press the horizontal smart button.

- Touch the smart button and the selected image is rotated. Press the smart button and the rotated image information will be saved.



 : rotates the image clockwise.

 : rotates the image anticlockwise.

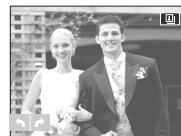

Date mode

When an image is taken, date information is also recorded.

In date mode, images play back by the date.

■ Selecting a date

You can select a date by using the smart button.

※ Usage of the menu of the date mode is same as album mode.

Refer to page 49 for more information.



Photo Gallery mode

Select images mode

Select the preferable images and proceed with slideshow. If a memory card is not inserted, "Select images mode" function will not operate.

1. Use the smart button to select the slideshow.



2. Use the smart button and press the play mode.



3. Use the lower smart button to select the image option icon.



4. Use the lower smart button to select preferable images.



5. When an image is selected, an option icon will be indicated at the upper right corner and on the lower corner the number of images selected.




6. Use the smart button to press the OK button.

7. Use the smart button to press the PLAY button and the slideshow will begin.




Starting play mode

Turn the camera on and select Play mode by pressing the play mode button (). The camera can now play back the images stored in the memory.

If the memory card is inserted in the camera, all the camera functions apply only to the memory card.

If the memory card is not inserted in the camera, all the camera functions apply only to the internal memory.

Playing back a still image

1. Select the PLAY mode by pressing the play mode button ().



2. The last image stored on the memory is displayed on the LCD monitor.



3. Touch the button and slide your finger to the left or right to select an image.



※ If you press the ① or ② button, the image will be played back continuously





- Manner mode : To select the Manner mode, press the Play mode button for more than 3 seconds. In the Manner mode, Operating sound, Effect sound, Start-up sound and Shutter sound will not be generated. To cancel the Manner mode, turn on the camera by pressing the Power button.





Playing back a movie clip


1. Select the recorded movie clip that you want to play back by using the smart button.

2. Press the Play button and then to play back a movie clip file.

- To pause a movie file while playing it back, press the  button again.

- Pressing the  button again will cause the movie clip file to restart.

- To rewind the movie clip while it is playing, press the  button. To fast forward the movie clip, press the  button. Whenever the  /  button is pressed, the search speed will be increased to 2X, 4X, 8X or 16X.

- To stop playback of the movie clip, press the  button.

3. Press the BACK button and the menu moves to Play mode.



Starting play mode

Movie clip capture function

capture still images from the movie clip.

1. Press the II menu button while playing back a movie file.
2. Press the Capture menu button. The captured image is saved under a new file name.

※ The captured movie clip file is the same size as the original movie clip (640x480, 320x240)



Playing back a recorded voice

1. Select the recorded voice that you want to play back by using the smart button.
2. Press the Play button; menus for voice will be displayed.
3. Press the ► button to play back a voice clip file.
 - To pause a voice file while playing it back, press the II button again.
 - Pressing the ► button again will cause the voice file to restart.
 - To rewind the voice recording while it is playing, press the ◀◀ button. To fast forward, press the ►► button.
 - To stop playback of the voice, press the ■ button.



On camera movie trimming

You can extract desired frames of movie clip during the movie clip play back.

1. Press the extract menu button at the point of the movie clip that you want to start extracting.
2. Press the extract menu button at the point of the movie clip that you want to stop extracting.
3. A confirmation window will display.
4. Press the smart button to select a desired sub menu.



[Yes] : The extracted frames are saved as a new file name.

[No] : The movie trimming will cancel.

※ If the running time is under 5 seconds, the movie clip can't be trimmed.

Starting play mode

Playing back a recorded voice memo

1. Select the still image that includes the voice memo by using the smart button.
2. Press the Edit button and menus will display.
3. Press the MEMO PLAY menu button to play back a voice memo.
 - To pause a voice file while playing it back, press the II button.
 - Pressing the ► button again will cause the voice file to restart.
 - To stop playback of the voice, press the ■ button.



LCD monitor indicator

The LCD monitor displays shooting information about the displayed image.



LCD monitor indicator

No.	Description	Icon	Page
1	Battery		p.16
2	ISO	80 ~ 3200	p.42
3	Aperture value	F2.8 ~ F7.0	p.48
4	Shutter speed	15 ~ 1/1500	p.47
5	Flash	ON/OFF	p.34~35
6	Image size	4000X3000 ~ 352X264	p.36
7	Recording date	2007.07.01	-
8	Slide Bar		-
9	Fn menu : Press the smart button		-
10	Setup menu		p.67~69
11	DPOF menu		p.59
12	Delete menu		p.58
13	Protect menu		p.58
14	Slide show menu		p.57
15	Play back mode icon		-
16	Folder name and Stored image number	100-0001	p.70

Using the camera buttons to adjust the camera

In Play mode, you can use the buttons on the camera to conveniently set up the Play mode functions.

Play mode button

- If you have turned on the camera by pressing the POWER button, you can press the PLAY MODE button once to switch to Play mode and press it again to switch to Recording mode.
- You can turn the power on with the play mode button. The camera is turned on in play mode. Press the play mode button again to turn off the camera.


BACK button

- When the menus are displayed the BACK button allows you to return to the previous screen, and will eventually bring you out of the menu system.



Using the remote control in play mode

You can play the movie clip and images by remote control.

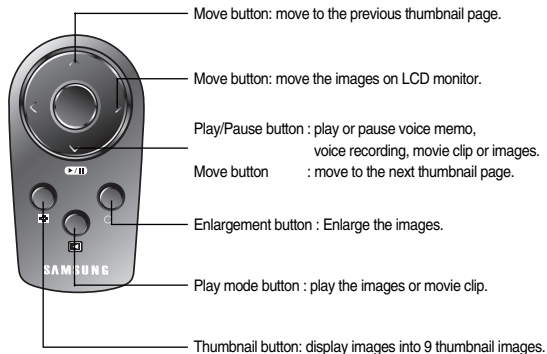


※ See page 40 about using the remote control in recording mode.

Thumbnail () / Enlargement () button


You can view multiple pictures, enlarge a selected picture, and crop and save a selected area of an image.


■ Thumbnail display

1. While an image is displayed on full screen, press the thumbnail button.
2. The thumbnail display will highlight the image that had been showing at the time the thumbnail mode was selected.
3. Use the smart button to move to a desired image.
4. To view an image separately, press the enlargement button.

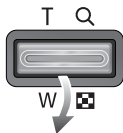

[Normal display mode]

Pressing the thumbnail button ()


Pressing the enlargement button ()



[Thumbnail display mode]

■ Image enlargement

1. Select an image that you want to enlarge and press the enlargement button.
2. Different parts of the image can be viewed by using the smart button.
3. Pressing the thumbnail button will zoom back to the original full sized image.
 - You can tell whether the image displayed is an enlarged view by checking the image enlargement indicator shown at the top left of the LCD monitor. (If the image is not an enlarged view, the indicator will not be displayed.) You can also check the area of enlargement.
 - Movie clips and WAV files can't be enlarged.
 - If an image is enlarged, a loss of quality may occur.

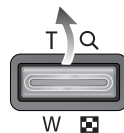

■ The maximum enlargement rate in proportion to the image size.

Image size	12"	10"	10"	9"	7"	5"	3"	1"
Maximum enlargement rate	X11.36	X8.53	X11.40	X7.20	X9.60	X7.36	X6.40	X3.20

Starting the slide show

Images can be displayed continuously at pre-set intervals.

You can view the slide show by connecting the camera to an external monitor.

To start the slide show, press the Start menu button.

While the slide show is playing, only the first frame of a MOVIE file and GIF file is displayed.

While the slide show is playing, the voice recording file will not display.



■ Configure slide show effects

Unique screen effects can be used for the slide show.

[Off] : No effect is added.

[Basic] : Fade In/Out effect is added and the images are displayed as set interval.

[Classic] : You can add noise to an image to add a more classic feel to your photo.

[Memories] : The film is aged to make it seem like an old movie.

[Rhythmic] : Images are displayed with various effects.

[Delight] : Images are displayed with various effects.



■ Setting play interval

Set the slide show play interval to the number of seconds preferred.

[1 sec] : Playback interval is 1 sec.

[3 sec] : Playback interval is 3 sec.

[5 sec] : Playback interval is 5 sec.

[10 sec] : Playback interval is 10 sec.




※ The interval menu functions in the [Off], [Basic] menu only.

■ Repeat Option

Selecting the repeat option for the slide show.

[ONE PLAY] : The slide show is closed after one cycle.

[REPEAT PLAY] : The slide show is repeated until cancelled.

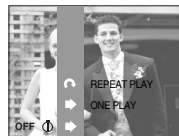



Protecting images

This is used to protect (Lock) specific shots from being accidentally erased. It also unprotects (Unlocks) images that have been previously protected.

[ONE] : Protect / release displayed image.

[ALL] : Protect / release all saved images

- If you protect an image, the protect icon will be displayed on the LCD monitor. (An unprotected image has no indicator)
- An image in LOCK mode will be protected from the delete function, but will NOT be protected from the format function.

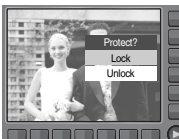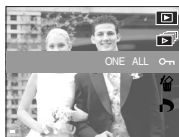


Deleting images

This is used to delete the displayed image.

[YES] : deletes displayed or checked (✓) image.

[NO] : cancels deleting displayed image or checked (✓) image.

- The protected images can't be deleted.
- If you wish to delete multi-image, check to delete the image by using the (✓) button and the smart button (horizontal) and then press the [Yes] menu.
- The number of images will be displayed at the bottom right of the LCD monitor.

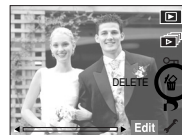


DPOF

- DPOF (Digital Print Order Format) allows you to embed printing information on your memory card's MISC folder. Select the pictures to be printed and how many prints to make.
- The DPOF indicator will appear on the LCD monitor when an image that has DPOF information plays back. Images can then be printed on DPOF printers, or at an increasing number of photo labs.
- This function is not available for Movie clips and Voice recording files and M.GIF files
- If a memory card is not inserted, the menus are still displayed in the LCD, but are not selectable.
- When the wide angle image is printed as a wide angle print, 8% of the left and right side of the image may not be printed. Check that your printer can support the wide angle image when you print the image. When you print the image at a photo lab, request that the image is printed as a wide angle image. (Some photo labs may not support the wide angle size print.)

DPOF : Standard

This function allows you to embed print quantity information on a stored image.

1. Select the DPOF menu by pressing the smart button.
2. Select a desired sub menu by pressing the smart button.
 - [ONE PIC] : Select a number of prints of displayed image.
 - [ALL PICS] : Configure number of prints for all pictures except movie and voice files.
 - [CANCEL] : Cancel the print setup.
3. Press the OK button to confirm the setting. If an image carries DPOF instructions, the DPOF indicator () will show.



DPOF : Print size

You can specify the print size when printing images stored on the memory card. The [SIZE] menu is available only for DPOF 1.1 compatible printers.

■ Setting the Print Size

1. Select the [SIZE] menu by pressing the smart button.
2. Select a desired sub menu by pressing the smart button.

[ONE PIC] : Select a print size of displayed image.

[ALL PICS] : Change print size of all saved images.

[CANCEL] : Cancel all of the print size settings.

3. Press the OK button to confirm the setting.

If an image carries DPOF instructions, the DPOF indicator will show.



※ DPOF [SIZE] secondary menu : [Cancel], [3X5], [4X6], [5X7], [8X10]



- Depending on the manufacturer and printer model, cancelling the printing may take a little longer for the printer to process.


DPOF : Index

Images (except for movie clips and voice file) are printed as index type.

1. Select the [INDEX] menu by pressing the smart button.
2. Select a desired sub menu by pressing the smart button.

If [NO] is selected : Cancel the index print setting.



If [YES] is selected : The image will be printed in index format.

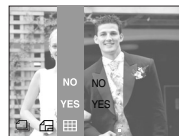

Rotating an image

You can rotate the stored images by various degrees. Once the playback of the rotated picture is finished, it will be saved in its rotated state.

1. Press the Edit button.
2. Press the [ROTATE] menu button.
3. Select a desired sub menu by pressing the smart button.

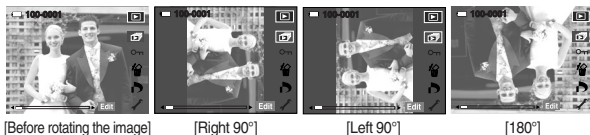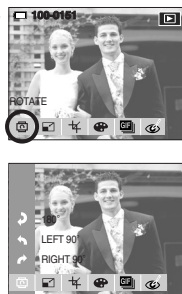


4. If you display the rotated image on the LCD monitor, empty spaces may appear to the left and right of the image.

Resize

Change the resolution (size) of pictures taken. Select [START IMAGE] to save an image to be the start-up image. The resized image will have a new file name.

1. Press the Edit button.
2. Press the [RESIZE] menu button.
3. Select a desired sub menu by pressing the smart button.

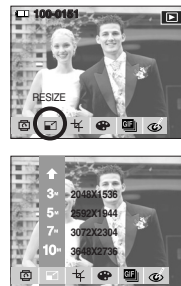

■ Image Resize Types

Size	3648X2736	3072X2304	2592X1944	2048X1536	1024X768	START IMAGE
12-	●	●	●	●	●	●
10-		●	●	●	●	●
7-			●	●	●	●
5-				●	●	●
3-					●	●
1-						●

Size	3264X2176	2784X1856	2208X1472	1248X832
10-	●	●	●	●

Size	3360X1890	2784X1566	2208X1242	1344X756
9-	●	●	●	●

Resize



- You can change the resolution of only those files compressed in the JPEG 4:2:2 format.
- The resized image will have a new file name. The [START IMAGE] image is stored not on the memory card but on the internal memory.
- Only one [START IMAGE] image can be saved. If you save a new [START IMAGE], the existing startup image will be deleted.
- If the memory capacity is insufficient to store the resized image, a [Memory Full!] message will appear on the LCD monitor and the resized image will not be stored.

Trimming

You can extract part of the image that you want and save it separately.


1. Select an image that you want to enlarge.
 2. Press the Edit button.
 3. Press the [TRIM] menu button.
 4. Enlarge the image by using the Zoom button.
To move the image, use the Smart button.
 5. Press the smart button to display a confirmation window.
 6. Press the [Yes] button. The trimmed image will be saved as a new file name, and appear on the LCD monitor.
- ※ If there is not enough memory space to save the trimmed image, the image can't be trimmed.




Effect

By using the camera's digital processor, it is possible to add special effects to your images.


1. Press the Edit button.
2. Press the [EFFECT] menu button.
3. Select a desired sub menu by using the smart button.

 : Captured images will be stored in black and white.

 : Captured images will be stored in a sepia tone (a range of yellowish brown colours).

 : Captured images will be stored in a blue tone.

 : Captured images will be stored in a red tone.

 : Captured images will be stored in a green tone.

 : Save the image in negative mode.



Motion GIF

You can make Motion GIF with captured images.

Motion GIF : Taking images continuously and save them in a file. This file supports animation.

■ How to make the Motion GIF

1. Press the Edit button.



2. Press the [M.GIF] menu button.



3. Select the image size and FPS (Frame Per Second).

4. Select desired images by using the smart button.



5. Press the OK button and a Motion GIF file is saved.

Motion GIF

■ How to play back the Motion GIF file

1. Select a Motion GIF file by using the smart button.
2. Press the Play button and menus display.
3. Press the start menu (▶) button.



Red eye fix

When a shot with "red eye" is played back, pressing this button can correct the red eye.

1. Select a picture that has red eye.
2. Press the Edit button.
3. Press the [RED EYE FIX] menu button.
To remove the red-eye effect automatically.
4. When you press the OK button the red-eye fixed image will be saved as a new file name.




PictBridge

You can use the USB cable to connect this camera to a printer that supports PictBridge (sold separately) and print the stored images directly. Movie clips and voice files cannot be printed.

■ Setting up the camera for connection to a printer

1. Connect the camera to a printer's USB port with the supplied USB cable.
2. Select the [Printer] menu by using the smart button.

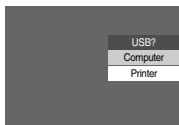


■ Connecting the Camera to a Printer



※ If you selected [Computer], when you connected the camera to your printer, the [Connecting Computer] message be displayed and the connection will not be established. Select [Printer] menu, when you connect the camera to your printer. Depending on the make and model of the printer it may not be possible to connect your camera to the printer.

■ Easy printing

When you connect the camera to printer in the Play back mode, you can print a picture easily with the default print settings.

1. In the play back mode, connect the camera and the printer. The menu icons will appear as shown.
2. Press the  button.
3. Select the [Yes] menu and the image will print.



■ Print mode

You can select the Easy printing mode or Custom printing mode.

 : Custom Printing mode


 : Easy Printing mode



PictBridge

■ Custom Set

You can select the Paper Size, Print Format, Paper Type, Print Quality, Date Print, and File Name Print menus for printed pictures.

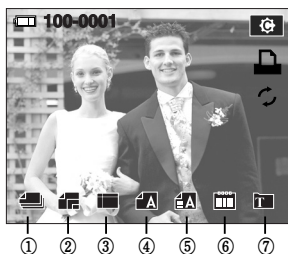

No.	Icon	Description	Menu
1		Selecting images for printing	ONE PIC, ALL PICS
2		Setting the size of the printing paper	AUTO, POSTCARD, CARD, 4 X 6, L, 2L, LETTER, A4, A3
3		Setting the number of pictures to be printed on a sheet of paper	AUTO, FULL, 1, 2, 4, 8, 9, 16, INDEX
4		Setting the quality of the printing paper	AUTO, PLAIN, PHOTO, FAST PHOTO
5		Setting the quality of the picture to be printed	AUTO, DRAFT, NORMAL, FINE
6		Setting whether to print the date	AUTO, OFF, ON
7		Setting whether to print the file name	AUTO, OFF, ON

※ Some menu options are not supported on all printers.

If not supported, the menus are not displayed in the LCD.

※ If the setting values are not changed in the automatic / manual setting, the setting values are automatically kept.

■ Printing images (Custom mode)


Images will be printed with changed printer setting.

1. In custom printing mode, press the Print menu button.

※ You can use Print menu button after select picture.

2. Select the [Yes] menu.

3. The screen shown on the right will appear and the picture will be printed. If no picture is selected, the [No Image!] message will be displayed. Press the BACK button while printing to cancel the printing.

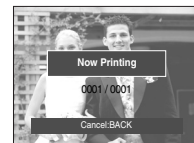

PictBridge


- **Reset**
Initialises user-changed configurations.
- In custom printing mode,
press the Reset menu button.





Setup menu



In this mode, you can set up basic settings. You can use the setup menu in all camera modes, except Voice Recording mode.

- The items indicated by are default settings.

Menu tab	Main menu	Sub menu			Page	
 Setup menu 1	OSD set (Recording mode)	Full	Basic		p.69	
		Hide	LCD Save			
	OSD set (Playback mode)	Full	Basic		p.69	
		Hide	-			
	File	Series	Reset		p.70	
	Language	ENGLISH	한국어	FRANÇAIS		p.70
		DEUTSCH	ESPAÑOL	ITALIANO		
		简体中文	繁體中文	日本語		
		РУССКИЙ	PORTUGUÊS	DUTCH		
		DANSK	SVENSKA	SUOMI		
ไทย		BAHASA	عربي			
POLSKI		Magyar	Čeština			
Türkçe		-	-			
Date&Time	2007/07/01	yy/mm/dd	mm/dd/yy		p.70-71	
	dd/mm/yy	Off	-			

Setup menu



Menu tab	Main menu	Sub menu		Page
 Setup menu 1	Date&Time	World time available cities		p.70~71
		London	Cape Verde	
		Mid-Atlantic	Buenos Aires	
		Newfoundland	Caracas, La Paz	
		New York, Miami	Chicago, Dallas	
		Denver, Phoenix	LA, San Francisco	
		Alaska	Honolulu, Hawaii	
		Samoa, Midway	Wellington, Auckland	
		Okhotsk	Guam, Sydney	
		Darwin, Adelaide	Seoul, Tokyo	
		Beijing, Hong Kong	Bangkok, Jakarta	
		Yangon	Almaty	
		Kathmandu	Mumbai, New Delhi	
		Tashkent	Kabul	
		Abu Dhabi	Teheran	
Moscow	Athens, Helsinki			
Rome, Paris, Berlin	-			
 Setup menu 2	Imprint	Off	Date	p.71
		Date & Time	-	
	LCD	Auto	Dark	p.72
		Normal	Bright	
	AF Lamp	Off	On	p.72
	Power Off	1, 3, 5, 10 min	-	p.72
	Quick View	Off	0.5, 1, 3 sec	p.73

Menu tab	Main menu	Sub menu		Page
 Setup menu 3	Start Image	Off	LOGO	p.73
		User image	-	
	Sound Volume	Off	Low	p.74
		Medium	High	
	Beep Sound	Off	Sound1	p.74
		Sound2	Sound3	
	Start Sound	Off	Sound1	p.74
		Sound2	Sound3	
	Shutter Sound	Off	Sound1	p.74
		Sound2	Sound3	
 Setup menu 4	Format	No	Yes	p.75
	Delete All	No	Yes	p.75
	Copy to Card	No	Yes	p.76
	Video Out	NTSC	PAL	p.76
	Reset	No	Yes	p.77





※ Menus are subject to change without prior notice.


Setup menu

■ How to select the setup menu

1. In any mode with the exception of Photo Gallery mode, press the extension menu button () and press the setup menu button ().




2. Each button has different setup menus. Press the F1-4 (   ) menu button.

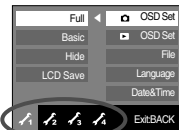


Setup menu 1 ()

OSD set

You can check shooting (Recording mode) and displayed image (Play back mode) information.

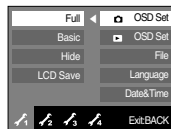

[Recording mode menu]

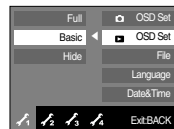

[Play back mode menu]

- [Full] : When the smart button is touched, the icons will be enlarged and OSD will be displayed.
- [Basic] : When the smart button is touched, the icons will be enlarged and OSD will not be enlarged.
- [Hide] : If the camera doesn't operate for about 3 seconds, all OSD will disappear. When the shutter is pressed down or half way down, the available number of shots, shutter speed, Aperture value and Auto focus area will display. OSD may be displayed by using the camera buttons except for the shutter button.
- [LCD save] : If the camera is not used for about 30 seconds, the power and camera status lamps blink and the LCD monitor turns off. (LCD save is only applied to the Recording mode menu.)

Setup menu 1 ()

File name

This function allows the user to select the file naming format.

[Series] : New files are named using numbers that follow the previous sequence, even when a new memory card is used, or after formatting, or after deleting all pictures.

[Reset] : After using the reset function, the next file name will be set from 0001 even after formatting, deleting all or inserting a new memory card.



- The first stored folder name is 100SSCAM, and the first file name is SN200001.
- File names are assigned sequentially from SN200001 → SN200002 → ~ → SN209999.
- The folder number is assigned sequentially from 100 to 999 as follows: 100SSCAM → 101SSCAM → ~ → 999SSCAM.
- Maximum numbers of files in a folder are 9999.
- The files used with the memory card conform to the DCF (Design rule for Camera File systems) format.
- File names assigned in the Biz mode, will be set SB1ZXXXX.

Language

There is a choice of languages that can be displayed on the LCD monitor. Even if the battery and AC charger are removed and inserted again, the language setting will be preserved.

- LANGUAGE sub menu :
English, Korean, French, German, Spanish, Italian, S.Chinese, T.Chinese, Japanese, Russian, Portuguese, Dutch, Danish, Swedish, Finnish, Thai, Bahasa (Malay / Indonesian), Arabic, Polish, Hungarian, Czech and Turkish.



Setting up the Date / Time / Date type

You can change the date and time that will be displayed on the captured images and set up the date type.

- Date type : [yy/mm/dd], [mm/dd/yy], [dd/mm/yy], [Off]



Setup menu 1 ()

Setting up the Date / Time / Date type


■ World Time


The date and time selected in the [Date&Time] serve as the date and time of your present location. Setting World Time enables you to display the local date and time on the LCD monitor when travelling overseas.

1. Select the [2007/07/01] menu in the [Date/Time] by using the smart button.



2. If you select [Seoul, Tokyo] menu by using the smart button, move to a world time setting.

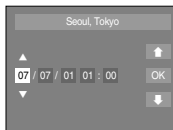

3. To set the changed summer time, select the () icon on the right side.

4. To select a city, select a desired city by using the horizontal smart button.



※ For more information about the available cities, refer to the page 68.


Setup menu 2 ()

Imprinting the recording date

There is an option to include DATE / TIME on still images.

- Sub menus

- [Off] : The DATE & TIME will not be imprinted on the image file.
- [Date] : Only the DATE will be imprinted on the image file.
- [Date&Time] : The DATE & TIME will be imprinted on the image file.

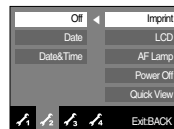

- ※ The Date & Time are imprinted at the bottom right side of the still image.
- ※ The imprint function is applied only to still images except for the images taken in the [Text] scene mode and photo frame effect mode.
- ※ Depending on the manufacturer and print mode, the date printed on an image may not be printed correctly.

Setup menu 2 (2)

LCD brightness

You can adjust the LCD brightness.

- Sub menus : [Auto], [Dark], [Normal], [Bright]
- If the [Auto] menu is selected, the LCD brightness will be set automatically according to the shooting conditions.
- If the [Auto] menu is selected in the Playback mode, the LCD brightness is fixed as the [Normal] menu.



Auto power off

This function switches the camera off after a set amount of time in order to prevent unnecessary battery drainage.

- Sub menus
[1, 3, 5, 10 min] : The power will turn off automatically if not used for the period of time specified.
- After replacing the battery, the power off setting will be preserved.
- Note that the automatic power off function will not operate if the camera is in PC / Printer mode, slide show, playing back a voice recording, playing back a movie file, playing back a GIF file, recording a movie clip or taking a composite shot.



Auto Focus lamp

You can turn the Auto Focus lamp on and off.

- Sub menus
[Off] : The AF lamp will not light up in a low light condition.
[On] : The AF lamp will light up in a low light condition.



Setup menu 2 ()

Quick view

If you enable Quick View before capturing an image, you can view the image you just captured on the LCD monitor for the duration set in the [Quick View] setup. Quick view is possible only with still images.

- Sub menus

[Off] : The quick view function can't be activated.

[0.5, 1, 3 sec] : The captured image is briefly displayed during the selected time.

- If the shutter button is pressed during the quick view, it is cancelled.




Setup menu 3 ()

Start up image

You can select the image that is first displayed on the LCD monitor whenever the camera is turned on.

- Start up image : [Off], [LOGO], [User Image]
- Use a saved image for the start-up image with the [Start Image] in the [RESIZE] menu in the play mode.
- The start-up image will not be deleted by [Delete All] or [Format] menu.
- The User images will be deleted by [Reset] menu.

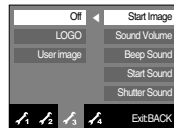

Setup menu 3 (3)

Sound Volume

You can select the sound volume levels of start sound, operation sound and shutter sound.


- Sub menus : [Off], [Low], [Medium], [High]



Operation Sound

If you set sound to [On], various sounds will be activated for camera startup, when buttons are pressed, so that you can be aware of the camera operation status.

- Sub menus : [Off], [Sound 1], [Sound 2], [Sound 3]
- If you set sound to [Off], sounds will not be activated.

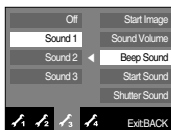

Start up sound

You can select the sound that is activated whenever the camera is turned on.

- Sub menus : [Off], [Sound 1], [Sound 2], [Sound 3]



Shutter sound

You can select the shutter sound.

- Sub menus : [Off], [Sound 1], [Sound 2], [Sound 3]



Setup menu 4 (4)

Formatting a memory

This is used for formatting the memory. If you run [Format] on the memory, all images, including the protected images, will be deleted. Be sure to download important images to your PC before formatting the memory.


- Sub menus

[No] : The memory will not be formatted.

[Yes] : A confirmation window will be displayed.

Select the [Yes] menu by pressing the smart button.

A [Processing!] message appears and the memory will be formatted. If you run FORMAT in Play mode, a [No Image!] message will appear.

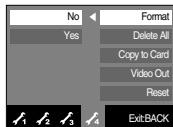

- Be sure to run [Format] on the following types of memory card.
 - A new memory card, or an unformatted memory card
 - A memory card that has a file this camera can't recognise or one that has been taken from another camera.




- Always format the memory card using this camera. If you insert a memory card that has been formatted using other cameras, memory card readers, or PCs, you will get a [Card Error!] message.

Delete All

Of all the files stored in the memory card, the unprotected files in the DCIM subfolder will be deleted.

[No] : Cancel the "Delete All".

[Yes] : A confirmation window will display. Select the [Yes] menu by pressing the smart button. A [Processing!] message appears and the unprotected files in the DCIM subfolder will be deleted.

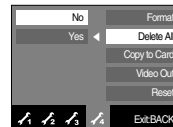

- The protected images can't be deleted.
- If there aren't any protected images, all images are deleted and a [No Image!] message will display in the Play mode.


Setup menu 4 ()

Copy To Card

This enables you to copy image files, movie clips and voice recording files to the memory card.

[No] : Cancels "Copy to Card".

[Yes] : All images, movie clips and voice recording files saved in the internal memory are copied to the memory card after the [Processing!] message is displayed.

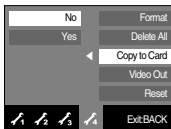

- When this menu is selected without inserting a memory card, you can select the [Copy To Card] menu but the menu can't be run.
- If there is not enough space available in the memory card to copy saved images in the internal memory (20MB), the [Copy To Card] command will copy only some of the images and display [Memory Full!] message. Then the system will return to the playback mode. Please be sure to delete any unnecessary files in the internal memory to free up space before inserting the memory card into the camera.
- When you move the images that are stored in the internal memory to the memory card, the next number of file names will be created in the card to avoid duplication of the file name.
 - When the [Reset] of the [File] setup menu is set : The copied file names start from after the last stored file name.
 - When the [Series] of the [File] setup menu is set : The copied file names start from after the last captured file name. After completing [Copy To Card], the last stored image of the last copied folder is displayed on the LCD monitor.

Selecting Video out type


The Movie output signal from the camera can be NTSC or PAL.

Your choice of output will be governed by the type of device (monitor or TV, etc.) to which the camera is connected. PAL mode can support only BDGHI.

■ Connecting to an external monitor

In RECORDING/ PLAY mode, you can view the stored still images or movie clips by connecting the camera to an external monitor via the AV cable.

When the camera is connected to an external monitor, the LCD monitor will be turned off automatically.

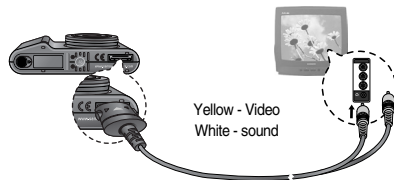

Setup menu 4 ()

- NTSC : U.S.A, Canada, Japan, South Korea, Taiwan, Mexico etc.
- PAL : Australia, Austria, Belgium, China, Denmark, Finland, Germany, U.K., Holland, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway etc.
- When using a TV as an external monitor, you will need to select the external or AV channel of the TV.
- There will be a digital noise on the external monitor, but it is not a malfunction.
- If the image is not in the centre of the screen, use the TV controls to centre it.
- When the camera is connected to an external monitor, some parts of the image may not be displayed.
- When the camera is connected to an external monitor, the menu will be visible on the external monitor and the menu functions are the same as those indicated on the LCD monitor.
- When the camera is connected to an external monitor, the button sound may not function.


Initialisation

All camera menu and function settings will be restored to their default values. However, values for DATE / TIME, LANGUAGE, and VIDEO OUT will not be changed.

- Sub menus

[No] : Settings will not be restored to their defaults.

[Yes] : A confirmation window will display. Select the [Yes] menu by pressing the smart button. All settings will be restored to their defaults.

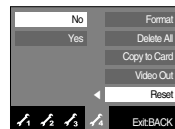

Important notes

Be sure to observe the following precautions!

- This unit contains precision electronic components. Do not use or store this unit in the following locations.
 - Areas exposed to severe changes in temperature and humidity.
 - Areas exposed to dust and dirt.
 - Areas exposed to direct sunlight or the inside of a vehicle in hot weather.
 - Environments where there is high magnetism or excessive vibration.
 - Areas with high explosives or highly flammable materials.
- Do not leave this camera in places subject to dust, chemicals (like naphthalene and mothball), high temperatures or high humidity. Keep this camera with silica gel in a hermetically sealed box when not planning to use the camera for a long period of time.
- Sand can be particularly troublesome to cameras.
 - Do not let sand get inside the camera when using it on beaches, coastal dunes, or other areas where there is lots of sand.
 - Doing so may result in failure or may render the camera permanently unusable.
- Handling the camera.
 - Never drop the camera or subject it to severe shocks or vibrations.
 - Protect the large size LCD monitor from an impact. When this camera is not used, keep it in the camera case.
 - Avoid obstructing the lens or the flash when you capture an image.
 - This camera is not waterproof.
To avoid dangerous electrical shocks, never hold or operate the camera with wet hands.
 - If you use this camera in wet places, such as beach or pool, do not let water or sand get inside the camera. Doing so may result in failure or may permanently damage the unit.
- Extremes in temperature may cause problems.
 - If the camera is transferred from a cold to a warm and humid environment, condensation can form on the delicate electronic circuitry. If this seems likely, wait for at least 1 hour until all moisture is dispersed before attempting to use the camera.
Moisture built up can also occur on the memory card. If this happens, turn off the camera and remove the memory card. Wait until the moisture has dispersed.
- Caution on Using the Lens.
 - If the lens is subjected to direct sunlight, it could result in the discoloration and deterioration of the image sensor.
 - Avoid getting fingerprints or foreign substances on the surface of the lens.
- If the digital camera is not used for a long period, an electric discharge can occur.
It is a good idea to remove the battery and the memory card if you do not intend using the camera for an extended period of time.
- If the camera is exposed to an electronic interference, it will turn itself off to protect the memory card.

Important notes

- Camera Maintenance.
 - Use a soft brush (available from photo stores) to gently clean the lens and LCD assemblies. If this does not work, lens-cleaning paper with lens cleaning fluid can be used.
Clean the camera body with a soft cloth. Do not allow this camera to come into contact with solvent materials such as benzol, insecticide, thinners etc. This may damage the body shell of the camera and also affect its performance. Rough handling can damage the LCD monitor. Take care to avoid damage and keep the camera in a protective carrying case when not in use.
- Do not attempt to disassemble or modify the camera.
- Under certain conditions, static electricity can cause the flash unit to fire. This is not harmful to the camera and is not a malfunction.
- When images are uploaded or downloaded, the data transfer may be affected by static electricity.
In this case, disconnect and re-connect the USB cable before trying the transfer again.
- Always check the condition of the camera before an important event or going on a trip.
 - Take a picture to check that the camera is working correctly and ensure you have a fully charged spare battery.
 - Samsung cannot be held responsible for camera malfunctions.

Warning indicator

There are several warnings that may appear on the LCD display

[Memory Error!]

- Memory card error
 - Turn off the camera power and turn it on again.
 - Insert the memory card again.
 - Insert and format the memory card. (p.75)

[Card Locked!]

- The memory card is locked
 - SD/SDHC/MMC memory card : Slide the write protect switch towards the top of the memory card.

[No Card!]

- A memory card is not inserted
 - Turn off the camera power and insert the memory card again.
 - Turn off the camera power and turn it on again.

[No Image!]

- There are no images stored on the memory
 - Take images.
 - Insert a memory card that is holding some images.

[File Error!]

- File error
 - Delete the erroneous files.
- Memory card error
 - Contact a camera service centre.

Warning indicator

[Low Battery!]

- There is low battery capacity
→ Insert a fully charged battery.

[Low Light!]

- When taking pictures in dark places
→ Take pictures in Flash Photography mode.

[DCF Full Error]

- Violation of DCF format
→ Copy the images to a PC and format the memory.

Before contacting a service centre

Please check the following

The camera doesn't switch on

- There is low battery capacity
→ Insert a fully charged battery. (p.16)
- Battery is inserted incorrectly with the polarities reversed.
→ Insert the battery according to the polarity marks (+, -).
- The rechargeable battery is not inserted
→ Insert the battery and turn on the camera.

The camera power ceases while in use

- The battery is exhausted
→ Insert a fully charged battery.
- The Camera is turned off automatically
→ Turn on the camera power again.

Battery power quickly drains

- The Camera is being used in low temperatures
→ Keep the camera in warm conditions (i.e. inside a coat or jacket) and only remove it in order to take images.

Before contacting a service centre

Camera does not take images when pressing the Shutter button

- There is insufficient memory capacity
 - Delete unnecessary image files.
- The memory card has not been formatted
 - Format the memory card. (p.75)
- The memory card is exhausted
 - Insert a new memory card.
- The memory card is locked
 - Refer to [Card Locked!] error message. (p.79)
- The camera's power is off
 - Turn the camera power on.
- The battery is exhausted
 - Insert a fully charged battery. (p.16)
- Battery is inserted incorrectly with the polarities reversed.
 - Insert the battery according to the polarity marks (+, -).

The camera suddenly stops working while in use

- The camera stopped due to a malfunction
 - Remove /re-insert battery and switch the camera on.

The images are unclear

- A picture was taken the subject without setting an appropriate macro mode
 - Select an appropriate macro mode to take a clear image.
- Taking a picture beyond the flash range
 - Take a picture within the flash range.
- The lens is smudged or dirty
 - Clean the lens.

The flash does not fire

- Flash off mode has been selected
 - Dis-engage flash off mode.
- The camera mode can't use flash
 - Refer to the FLASH instruction. (p.34~35)

Incorrect date and time is displayed

- The date and time have been set incorrectly or the camera has adopted the default settings
 - Reset the date and time correctly.

The camera buttons do not operate

- Camera malfunction
 - Remove/re-insert battery and switch the camera on.

A card error has occurred while the memory card is in the camera.

- Incorrect memory card format
 - Re-format the memory card.

The images don't play back

- Incorrect file name (Violation of DCF format)
 - Do not change the image file name.

Colour of image is different to the original scene

- White balance or effect setting is incorrect
 - Select appropriate White balance and effect.

Before contacting a service centre

Images are too bright

- Exposure is excessive
→ Reset exposure compensation.

No image on external monitor

- The external monitor has not been connected properly with the camera
→ Check the connection cables.
- There are incorrect files in the memory card
→ Insert a memory card that has correct files.

When using the PC's explorer, the [Removable Disk] file does not show

- Cable connection is incorrect
→ Check the connection.
- The camera is off
→ Turn the camera on.
- The operating system is not Windows 98SE, 2000, ME, XP, Vista/ Mac OS Mac OS 9.0 ~ 10.4. Alternatively the PC does not support USB
→ Install Windows 98SE, 2000, ME, XP, Vista/ Mac OS 9.0 ~ 10.4 to PC that supports USB.
- The camera driver is not installed
→ Install a [USB Storage Driver].

Specifications

- Image Sensor**
- Type : 1/1.72" CCD
 - Effective Pixel : Approx. 12.1 Mega-pixel
 - Total Pixel : Approx. 12.4 Mega-pixel

- Lens**
- Focal Length : Schneider Lens f = 7.3 ~ 21.9mm
(35mm film equivalent : 34 ~ 102mm)
 - F No. : F2.8 ~ F5.2
 - Digital Zoom : · Still Image mode : 1.0X ~ 5.0X
· Play mode : 1.0X ~ 11.36X
(depends on image size)

- LCD Monitor**
- 2.5" color TFT LCD (230,000 pixel)

- Focusing**
- Type : TTL auto focus
(Multi-AF, Center AF, Face Recognition AF)
 - Range

Focus Type	Wide (W)	Tele (T)
Normal	80cm~Infinity	80cm~Infinity
Macro	4cm~80cm	50cm~80cm
Auto Macro	4cm~Infinity	50cm~Infinity

- Shutter**
- Speed : Auto, Program, ASR, Effect : 1 ~ 1/1,500 sec.
Manual : 15 ~ 1/1,500 sec.
Night : 4 ~ 1/1,500 sec.
Fireworks : 4 sec.

- Exposure**
- Control : Program AE
 - Metering : Multi, Spot, Center-weighted, Face Recognition AE
 - Compensation : ±2EV (1/3EV steps)
 - ISO Equivalent : Auto, 80, 100, 200, 400, 800, 1600,
3200 (image size of 3200 is fixed as 3M)

Specifications

- Flash**
- Modes : Auto, Auto & Red-eye reduction, Fill-in flash, Slow sync, Flash off, Red-eye Fix
 - Range : 30cm ~ 4.5m (Wide), 50cm ~ 2.4m (Tele)
 - Recharging Time : Approx. 4 sec.

- Sharpness**
- Soft, Normal, Vivid

- Effect**
- Normal, B&W, Sepia, Red, Green, Blue, Negative, Custom, Composite, Photo Frame, GIF Animation

- White Balance**
- Auto, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom

- Voice Recording**
- Voice Recording (Max 10 hour)
 - Voice Memo in Still Image (Max. 10 sec.)

- Date Imprinting**
- Date, Date&Time, Off (user selectable)

- Shooting**
- Still Image :
 - Modes : Auto, Program, Manual, ASR, Effect, Scene
 - Scene : Night, Portrait, Children, Landscape, Biz, Close-up, Text, Sunset, Dawn, Backlight, Fireworks, Beach & Snow, Self-Shot, Food, Café
 - Continuous : Single, Continuous, High Speed, AEB
 - Motion Capture : 7fps up to 20 shots
 - Self-timer : 2 sec., 10 sec., Double (10 sec., 2 sec.), Remocon (optional)
 - Movie Clip :
 - With Audio or without Audio (recording time: max. 4GB or 6 hours)
 - Size : 640x480, 320x240
 - Frame rate : 30 fps, 15 fps
 - 3X Optical Zoom and Mute in Zooming
 - Movie Stabilizer (User Selectable)
 - Movie Editing (Embedded) : Pause during recording, Still Image Capture, Time Trimming

- Storage**
- Media :
 - Internal Memory : About 20MB
 - External Memory (Optional) :
 - SD (up to 2GB guaranteed)
 - SDHC Card (up to 4GB guaranteed)
 - MMC Plus (Up to 1GB, 4bit 20MHz)
 - * Internal Memory capacity is subject to change without prior notice.
 - File Format :
 - Still Image : JPEG (DCF), EXIF 2.21, DPOF 1.1, PictBridge 1.0
 - Movie : AVI (MPEG-4)
 - Audio : WAV
 - Image Size

12"	10"	10"	9"	7"	5"	3"	1"
4000X 3000	4000X 2664	3648X 2736	4000X 2248	3072X 2304	2592X 1944	2048X 1536	1024X 768

- Capacity (256MB MMC)

	12"	10"	10"	9"	7"	5"	3"	1"
SUPER FINE	41	46	49	54	68	93	142	418
FINE	79	88	94	103	128	173	252	616
NORMAL	115	128	136	149	183	241	344	731

- * These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.

Specifications

- Image Play**
- Type : Single image, Thumbnails, Slide show, Movie Clip, Photo Gallery
 - Editing : Trimming, Resizing, Rotate, Effect, M.GIF, Red-eye Fix, Movie clip capture

- Interface**
- Digital output connector : USB 2.0
 - Audio : Mono
 - Video output : NTSC, PAL (user selectable)
 - DC power input connector : 24pin Connector

- Power Source**
- Rechargeable battery : 3.7V Li-ion battery (SLB-0837(B))
 - Adaptor : SAC-46
 - * Included battery may depending on sales region.

Dimensions (WxHxD)
96.5 x 60 x 18.6 mm

Weight 151.7g (without batteries and card)

Operating Temperature
0 ~ 40° C

Operating Humidity
5 ~ 85%

Software Samsung Master, Samsung Biz Reader, Adobe Reader

- ※ Specifications are subject to change without prior notice.
- ※ All trademarks are the property of their respective owners.

Software Notes

Please ensure that you read this instruction manual carefully before use.

- The attached software is a camera driver and image editing software tool for Windows.
- Under no circumstances should all or part of either the software or the user manual be reproduced.
- Copyrights for software are licensed only for use with a camera.
- In the unlikely event of a manufacturing fault, we will repair or exchange your camera.
We cannot, however, be held responsible in any way for damage caused by inappropriate use.
- Using a Hand-made (self assembled) PC or a PC and OS that has not been guaranteed by the manufacturer is not covered by the Samsung warranty.
- Before using this manual, you should have a basic knowledge of computers and O/S (Operating Systems).

System Requirements

For Windows	For Macintosh
PC with processor better than Pentium 450MHz (Pentium 800MHz recommended)	Power Mac G3 or later
Windows 98SE/2000/ME/XP/Vista	Mac OS 9.0 ~ 10.4
Minimum 128MB RAM (512MB recommended) 200MB of available hard disk space (1GB recommended)	Minimum 64MB RAM (256MB recommended) 110MB of available hard-disk space
USB port	USB port
CD-ROM drive	CD-ROM drive
1024x768 pixels, 16-bit color display compatible monitor (24-bit color display recommended), Microsoft DirectX 9.0 or later	

About the software

After inserting the CD-ROM provided with this camera into the CD-ROM drive, the following window should automatically run.



Before connecting the camera to the PC, you should first install the camera driver.

※ Screen Captures illustrated on this manual is based on English Edition of Windows.

- Camera driver : This enables images to transfer between the camera and PC.

This camera uses the USB Storage Driver as the camera driver. You can use the camera as a USB card reader. After installing the driver and connecting this camera to the PC, you can find [Removable Disk] in [Windows Explorer] or [My Computer]. A USB Storage Driver is provided only for Windows. A USB Driver for MAC is not included with the Application CD. You can use the camera with Mac OS 9.0 ~ 10.4.

- XviD codec : This allows movie clips (MPEG-4) recorded with this camera to be played back on a PC.

To play back a movie clip recorded with this camera, you must install the XviD codec. If a movie clip recorded with this camera does not play well, install this codec. This software is only compatible with Windows.

About the software

- **Samsung Master** : This is the all-in-one multi media software solution. You can download, view, edit and save your digital images and movie files with this software. This software is only compatible with Windows.
- **Samsung Biz Reader** : This is the Visiting Card Recognition software solution. You can recognize visiting card and edit namecards database easily with this software. This software is only compatible with Windows.



- Be sure to check the system requirements before installing the driver.
- To play back the movie taken with this camera on the computer, DirectX 9.0 must be installed.
- You should allow 5 - 10 seconds for running the automatic setup program according to the capability of your computer. If the frame does not show, run the [Windows Explorer] and select [Installer.exe] in the CD-ROM Drive.
- PDF documents of user manual are included in the Software CD-ROM supplied with this camera. Search the PDF files with Window's explorer. Before opening the PDF files, you must install the Adobe Reader included in the Software CD-ROM.
- To install the Adobe Reader 6.0.1 correctly, Internet Explorer 5.01 or later had to be installed. Visit "www.microsoft.com" and upgrade the Internet Explorer.

Setting up the application software

To use this camera with a PC, install the application software first. After this has been done, the stored images in the camera can be moved to the PC and can be edited by an image editing program.

- You can visit the Samsung web-site through the internet.


<http://www.samsungcamera.com> : English

<http://www.samsungcamera.co.kr> : Korean

1. The auto run frame will display.
Click the [Install] menu in the Auto run frame.



2. Install the camera driver and DirectX by selecting a button shown on the monitor. If a latest version of DirectX was installed on your computer, DirectX may not be installed.

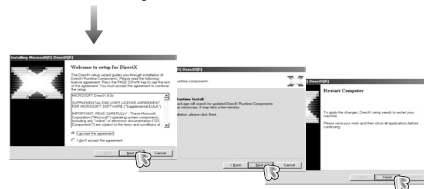


Setting up the application software

3. To play back a movie clip recorded with this camera on the computer, install the XviD codec.



※ The XviD codec is distributed according to and under the terms and conditions of the GNU General Public License and anyone can copy, modify and distribute this codec freely, but WITHOUT ANY WARRANTY, IMPLIED OR EXPRESSED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; provided, however, that you have to follow the GNU General Public License whenever you are distributing this codec or modification thereof. For more information see the GNU General Public License documents (<http://www.gnu.org/copyleft/gpl.html>).

4. Install the Samsung Master in the order shown.

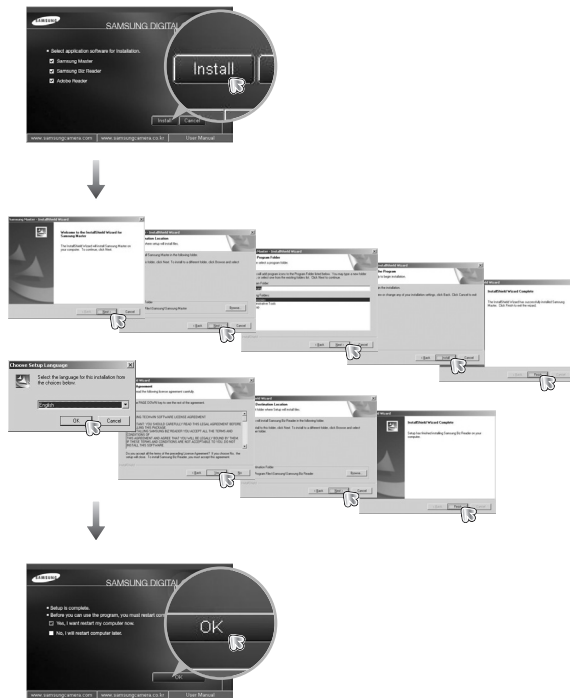


Setting up the application software

5. After restarting the computer, connect the PC to the camera with the USB cable.

6. Turn on the camera power.

The [Found New Hardware Wizard] will open and the computer will recognise the camera.

※ If your OS is Windows XP/ Vista, an image viewer program will open. If the download window of Samsung Master opens after starting Samsung Master, the camera driver was set up successfully.

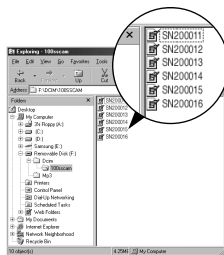


- If you have installed the camera driver, The [Found New Hardware Wizard] may not open.
- On a Windows 98SE system, the Found New Hardware Wizard dialog box opens and a window asking you to select a driver file may appear. In this case, specify "USB Driver" in the CD supplied.

Starting PC mode

- In this mode, you can download stored images to your PC through the USB cable.
- The LCD monitor is always turned off in PC mode.


■ Connecting the camera to a PC

1. Connect the PC to the camera with the USB cable.
2. Select the [USB]-[Computer] menu by using the smart button.

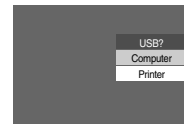

Starting PC mode

- Connecting the camera to a PC

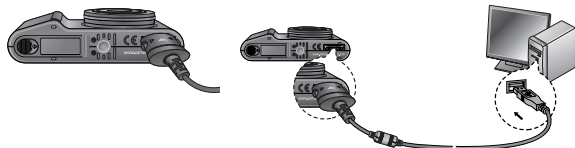

※ If you selected [Printer] in Step 2, when you connect the camera to your printer, the [Connecting Printer] message will display and the connection will not be established.
In this case, disconnect the USB cable, and then follow the procedure from Step 1 and onward.

- Disconnecting the camera and PC : Refer to page 91
(Removing the removable disk).




- Before inserting any cables or AC adapter, check the directions and do not insert by force. It may damage the cable or camera.

- Downloading stored images

You can download the still images stored on the camera to your PC's hard disk and print them or use a photo editing software to edit them.

1. Connect the camera to your PC with the USB cable.
2. On your computer's desktop display, select [My computer] and double click [Removable Disk] → DCIM → 100SSCAM].
The image files will then be displayed.

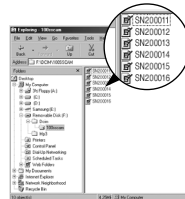

3. Select an image and press the right mouse button.




4. A pop-up menu will open.
Click the [Cut] or [Copy] menu.
 - [Cut] : cuts selected files.
 - [Copy] : copies selected files.



Starting PC mode

5. Click a folder where you want to paste the file.

6. Press the right mouse button and a pop-up menu will open. Click [Paste].

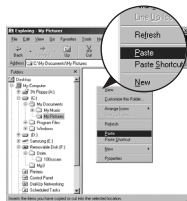

7. An image file is transferred from the camera to your PC.



- We recommend that you should copy the images to the PC to view them. Opening images directly from the removable disk may be subject to unexpected disconnection.
- When you upload a file that is not taken by this camera to the Removable Disk, the [File Error!] message will be displayed on the LCD monitor in the PLAY mode, and nothing is displayed in THUMBNAIL mode.

- By using [Samsung Master], you can see the stored images in the memory directly on the PC monitor and you can copy or move the image files.

Removing the removable disk

■ Windows 98SE

1. Check whether the camera and PC are transferring a file.
If the camera status lamp blinks, please wait until the lamp has finished blinking and is constantly on.
2. Unplug the USB cable.

■ Windows 2000/ME/XP/Vista

(The illustrations may differ from those shown depending on the Windows O/S.)


1. Check whether the camera and PC are transferring a file.
If the camera status lamp blinks, please wait until the lamp has finished blinking and is constantly on.

2. Double-click the [Unplug or Eject Hardware] icon on the task bar.




[Double-click!]

3. The [Unplug or Eject Hardware] window will open. Select the [USB Mass Storage Device] and click the [Stop] button.

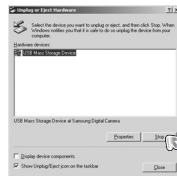

4. The [Stop a Hardware device] window will open. Select the [USB Mass Storage Device] and click the [OK] button.



5. A [Safe to Remove Hardware] window will open. Click the [OK] button.



6. A [Unplug or Eject Hardware] window will open. Click the [Close] button and the removable disk may be safely removed.



7. Unplug the USB cable.

Setting up the USB Driver for MAC

1. A USB Driver for MAC is not included with the software CD as MAC OS supports the camera driver.
This camera is compatible with MAC OS 9.0 ~ 10.4.
2. Check the MAC OS version during start-up.
3. Connect the camera to the Macintosh and turn the camera power on.
4. A new icon will be displayed on the desktop after connecting the camera to the MAC.

Using the USB Driver for MAC

1. Double click a new icon on the desktop and the folder in the memory will be displayed.
2. Select an image file and copy or move it to MAC.



- For Mac OS 10.0 or later : First complete uploading from computer to camera and then remove the removable disk with the Extract command.


Removing the USB Driver for Windows 98SE

To remove the USB driver, refer to the process shown below.

1. Connect the camera to your PC and turn them on.
2. Check whether the Removable Disk is on the [My Computer].
3. Remove the [Samsung Digital Camera] on the Device manager.



4. Disconnect the USB cable.
5. Remove the [Samsung USB Driver] on the Add / Remove Programs Properties.

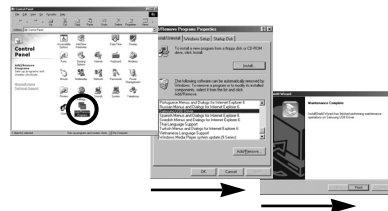

6. Uninstallation is complete.

Samsung Master

You can download, view, edit and save your images and movies with this software. This software is only compatible with Windows.

To start the program, click [Start → Programs → Samsung → Samsung Master → Samsung Master].

■ Downloading images

1. Connect the camera to your PC.

2. A window for downloading images will display after connecting the camera to your PC.

- To download the captured images, select the [Select All] button.

- Select desired folder in the window and click the [Select All] button. You can save captured images and selected folders.

- If you click the [Cancel] button, downloading will be cancelled.



3. Click [Next >] button.



4. Select a destination and make a folder to save downloaded images and folders.

- Folder names can be made in order of date and images will be downloaded.
- Folder name will be made as you want and images will be downloaded.
- After selecting a folder that was made before, images will be downloaded.



5. Click [Next >] button.

6. A window will open as shown alongside. The destination of the selected folder will be displayed on the upper side of the window. Click the [Start] button to download the images.




7. Downloaded images will be displayed.



Samsung Master

Image viewer : You can view the stored images.

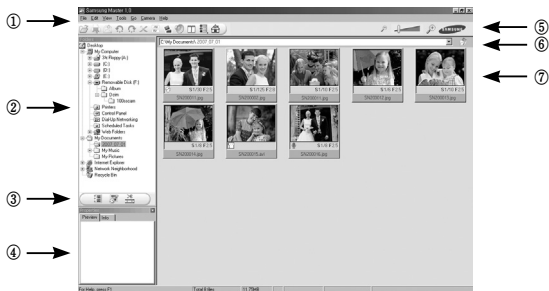


- Image viewer functions are listed below.

- ① Menu bar : You can select menus.
File, Edit, View, Tools, Change functions, Auto download, help, etc.
- ② Image selection window : You can select the desired images in this window.
- ③ Media type selection menu : You can select image viewer, image edit and movie edit functions in this menu.
- ④ Preview window : You can preview an image or a movie clip and check the multi media information.
- ⑤ Zoom bar : You can change preview size.
- ⑥ Folder display window : You can see the folder location of the selected image.
- ⑦ Image display window : Images in the selected folder are displayed.

※ Refer to the [Help] menu in Samsung Master for further information.

Image edit : You can edit the still image.

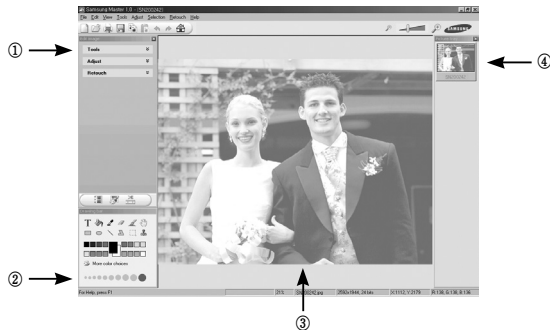

- Image edit functions are listed below.

- ① Edit menu : You can select the following menus.
[Tools] : You can resize or crop the selected image. See the [Help] menu.
[Adjust] : You can modify image quality. See the [Help] menu.
[Retouch] : You can change image or insert effects on the image. See the [Help] menu.
- ② Drawing tools : Tools for editing an image.
- ③ Image display window : A selected image displays in this window.
- ④ Preview window : You can preview the changed image.

- ※ A still image edited with Samsung Master can't be played back on the camera.
- ※ Refer to the [Help] menu in Samsung Master for further information.

Samsung Master

Movie edit : You can get the still image, movie clip, narration, music files together in a movie clip.



- Movie clip edit functions are listed below.

① Edit menu : You can select the following menus.

[Add Media] : You can add other media elements to a movie.

[Edit Clip] : You can change the brightness, contrast, colour and saturation.

[Effects] : You can insert an effect.

[Set Text] : You can insert texts.

[Narrate] : You can insert a narration.

[Produce] : You can save the edited multi media as a new file name.
You can select AVI, Windows media (wmv) and Windows media (asf) file types.

② Frame display window : You can insert multi media in this window.

※ Some movie clips that were compressed with a codec that is not compatible with the Samsung Master can't play back in the Samsung Master.

※ Refer to the [Help] menu in Samsung Master for further information.

Samsung Biz Reader

■ Samsung Biz Reader is digital business card management software which recognize the information on business card like name, company, telephone number, e-mail and so on. It offers the more effective business information management solution with digital camera.

This software is only compatible with Windows. Samsung Biz Reader recognizes English and Korean business namecard only.

■ Auto recognizing when camera connected with computer (BizChecker)
After installing <Biz Reader>, if you connect the SAMSUNG digital camera with your computer, namecard images are recognized automatically.
<BizChecker> is auto-installing program when <BizReader> installing.


1. Check the <BizChecker> program is running at Windows tray.

If it is not exist, run the <BizReader> program on background or Windows start menu, and <BizChecker> will run at the same time.



2. Connect the camera to your PC with the USB cable.

3. After a few moment, if new namecard image exist, next dialog box will be appeared. (Camera auto-detection function will be worked when <BizReader> is running.) If you check <Delete Original Image>, the namecard image in digital camera will be deleted.

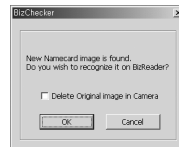

4. If you click <OK> button, new namecard images are recognized automatically.

Samsung Biz Reader

■ Recognizing the namecard image file

● Downloading camera's namecard images to computer

1. Connect the camera to your PC with the USB cable.
2. On your computer's desktop display, select [My computer] and double click [Removable Disk → DCIM → 100SSCAM]. The image files will then be displayed.

* File names assigned in the Biz mode, will be set SB1ZXXXX


3. Downloading camera's namecard images : Refer to page 89 (Downloading stored images).

2. Click the [Open] button.



3. Select the namecard image files and click the [Open] button.

(To select several image files, use <Shift> key or <Ctrl> key with your mouse.)

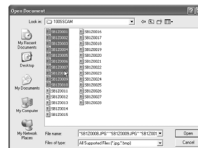

4. Namecard images are recognized automatically.

● Recognizing namecard image file

1. Run the Samsung Biz Reader by double click on the icon.




Samsung Biz Reader

- Partial recognizing : Partial recognition function can be used when mis-recognition.
 1. Select the namecard to partial editing.
 2. Drag the area to partial editing in namecard image window, choose the proper field in pop-up window, and then the recognized result is entered to the field automatically.

※ Drag only the character area without margin.
※ Refer to the [Help] menu in Samsung Biz Reader for further information.



- When you picturing the namecard in Biz mode, avoid the palce where too bright or too dark.
- Take a namecard image with full size shot in guide line without any margin.
- Adjust the focus by half-pressing camera shutter before taking a picture.
- If you use the tripod, it is easier to take clear shot.

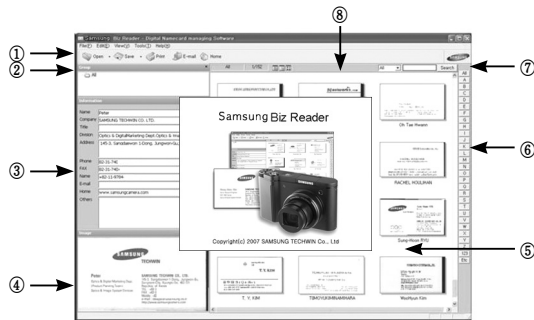

- Samsung Biz Reader functions are listed below.

- ① Menu and Buttons : You can select menus.
(Open, Save, Print, E-mail, Home)
- ② View mode : List View, Thumbnail+List View, Thumbnail View.
- ③ Group window : You can manage the group.
- ④ Image window : Name card Images in the selected folder are displayed.
- ⑤ List Window : You can preview an image and a contents.
- ⑥ Index : You can Search index.
- ⑦ Search : You can Search by keyword input quickly.
- ⑧ Array Button : You can array the following menus in List View,
Thumbnail+List View mode.
(Name, Title, Company, Mobile, Phone, Address, Homepage)

※ Refer to the [Help] menu in Samsung Biz Reader for further information.

FAQ

- Please check the following if the USB connection malfunctions.

Case 1 USB cable is not connected or it is not the supplied USB cable.
→ Connect the supplied USB cable.

Case 2 The camera is not recognised by your PC.
Sometimes, the camera may appear under [Unknown Devices] in Device Manager.
→ Install the camera driver correctly.
Turn off the camera, remove the USB cable, plug in the USB cable again, and then turn on the camera.

Case 3 There is an unexpected error during file transfer.
→ Turn the camera power off and on again. Transfer the file again.

Case 4 When using a USB hub.
→ There may be a problem in connecting the camera to the PC through a USB hub if the PC and the hub are not compatible.
Wherever possible, connect the camera directly to the PC.

Case 5 Are other USB cables connected to the PC?
→ The camera may malfunction when it is connected to the PC at the same time as another USB cable. In this case, disconnect the other USB cable, and only connect the camera USB cable to the PC.

Case 6 When I open the Device Manager (by clicking Start → (Settings) → Control Panel → (Performance and Maintenance) → System → (Hardware) → Device Manager), there are Unknown Devices or Other Devices entries with a yellow question mark (?) beside them or devices with an exclamation mark (!) beside them.
→ Right-click on the entry with the question (?) or exclamation (!) mark and select "Remove". Restart the PC and connect the camera again. For Windows 98SE PC, remove the camera driver, restart the PC, and then reinstall the camera driver.

Case 7 In some security programs (Norton Anti Virus, V3, etc.), the computer may not recognise the camera as a removable disk.
→ Stop the security programs and connect the camera to the computer. Refer to the security program instructions about how to temporarily disable the program.

Case 8 The camera is connected to the USB port located on the front of the computer.
→ When the camera is connected to the USB port located on the front of the computer, the computer may not recognise the camera. Connect the camera to the USB port located on the back of the computer.

- When the movie clip doesn't play back on the PC
- ※ When the movie clip recorded by the camera doesn't play back on the PC, the causes are most likely due to the codec installed on the PC.

FAQ

- When a codec for playing back the movie clip isn't installed, or isn't compatible
→ Install the codec as listed below.

[Installing codec for Windows]

- 1) Insert the CD provided with the camera.
- 2) Run the Windows Explorer and select [CD-ROM drive:\XviD] folder and click the XviD-1.1.2-01112006.exe file.
 - ※ The XviD codec is distributed according to the GNU General Public License and anyone can copy, distribute and change this codec. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License.
For more information, see the License documents (<http://www.gnu.org/copyleft/gpl.html>).

[Installing codec for Mac OS]

- 1) Visit the following site for downloading the codec.
(<http://www.divx.com/divx/mac>)
- 2) Click the [Free Download] menu on the top right side of the window then download windows appears.
- 3) Check the version of Mac OS and click the [Download] button to download the file and save it on a desired folder.
- 4) Run the downloaded file and the codec for playing back the movie clip will be installed.
 - ※ If the movie file is not played back on the Macintosh OS, use a media player that supports Xvid codec (e.g. Mplayer).

- When the DirectX 9.0 or later is not installed
→ Install the DirectX 9.0 or later
 - 1) Insert the CD provided with the camera
 - 2) Run the windows explorer and select the [CD-ROM drive:\ USB Driver\ DirectX 9.0] folder and click the DXSETUP.exe file.
The DirectX will be installed. Visit the following site for downloading the DirectX. <http://www.microsoft.com/directx>
- If a PC (Windows 98SE) repeatedly stops responding while the camera and PC are connected
→ If a PC (Windows 98SE) is turned on for a long time and the camera has to be repeatedly re-connected, the PC may not recognise the camera.
In this case, restart the PC.
- If a PC connected with the camera stops responding while Windows is starting.
→ In this case, disconnect the PC and the camera and Windows will start.
If the problem happens repeatedly, set the Legacy USB Support to disable and re-start the PC. The Legacy USB Support is in the BIOS setup menu. (The BIOS setup menu differs from the PC manufacturers and some BIOS menus don't have Legacy USB Support) If you can't change the menu by yourself, contact to the PC manufacturer or BIOS manufacturer.
- If the movie clip can't be deleted, or if a removable disk can't be extracted or if an error message displays during the file transfer.
→ If you install only the Samsung Master, the problems mentioned above occasionally happen.
 - Close the Samsung Master program by clicking the Samsung Master icon on the Taskbar.
 - Install all the application programs included in the software CD.

Correct Disposal of This Product



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household

wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.



Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

FCC notice

■ NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate, or relocate, the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

■ CAUTION :

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

■ Declaration of Conformity

Trade Name : SAMSUNG TECHWIN
Model No. : Samsung NV20
Responsible Party : Samsung Opto-Electronics America, INC.
Address : 40 Seaview Dr. Secaucus, NJ 07094
Telephone No. : 201-902-0347

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Samsung logo, consisting of the word "SAMSUNG" in a bold, white, sans-serif font, centered within a dark, horizontally-oriented oval.

SAMSUNG TECHWIN CO., LTD.

OPTICS & DIGITAL IMAGING DIVISION

145-3, SANGDAEWON 1-DONG, JUNGWONGU,
SUNGNAM-CITY, KYUNGKI-DO, KOREA
462-121

TEL : (82) 31-740-8222, 8488, 8490

FAX : (82) 31-740-8398

www.samsungcamera.com

SAMSUNG OPTO-ELECTRONICS AMERICA, INC.

1-800-SAMSUNG (726-7864)

www.samsungcamerausa.com

If you have any questions or comments relating to
Samsung cameras, Please contact
the SAMSUNG customer care center

SAMSUNG FRANCE S.A.S.

HOTLINE PHOTO NUMÉRIQUE :

00 800 22 26 37 27 (Numéro Vert-Appel Gratuit)

www.samsungphoto.fr

SAMSUNG OPTO-ELECTRONICS GmbH

ZENTRALE, KEINE REPARATUR

AM KRONBERGER HANG 6

D-65824 SCHWALBACH/TS, GERMANY

TEL : 49 (0) 6196 66 5303

FAX : 49 (0) 6196 66 5366

TECHNISCHE SERVICE HOTLINE :

00800 4526 3727

(nur kostenfrei für Anrufe aus Deutschland)

Die Adressen Ihrer Kundendienste sowie die
Garantiebestimmungen entnehmen Sie bitte aus dem
beliebigen Falblatt (SAMSUNG INTERNATIONAL
WARRANTY CERTIFICATE)

INTERNET : www.samsungcameras.de

TIANJIN SAMSUNG OPTO-ELECTRONICS CO., LTD

NO.9 ZHANGHENG STREET. MICRO-ELECTRONIC
INDUSTRIAL PARK JINGANG ROAD TIANJIN CHINA.

POST CODE : 300385

TEL : 800-810-5858

www.samsungcamera.com.cn

SAMSUNG OPTO-ELECTRONICS UK LIMITED

SAMSUNG HOUSE 1000 HILLSWOOD DRIVE
HILLSWOOD BUSINESS PARK

CHELTSEY KT16 OPS U.K.

TEL : 00800 12263727

(free for calls from UK only)

UK Service Hotline : 01932455320

www.samsungcamera.co.uk

RUSSIA INFORMATION CENTER

SAMSUNG ELECTRONICS

117545 ST. DOROZHNYA BUILDING 3,

KORPUS 6, ENTRANCE 2, MOSCOW, RUSSIA

TEL : (7) 495-363-1700

CALL FREE : (8) 800 555 55 55 (from Russia only)

www.samsungcamera.ru

Internet address - [http : //www.samsungcamera.com](http://www.samsungcamera.com)



The CE Mark is a Directive conformity
mark of the European Community (EC)