

E150

ALL IN ONE PRAGMATIC PLAYER

MANUAL

Contents



Getting Started

- Components 4
- Locating the Controls 5
- LCD Display 6
- Installing iriver plus 3 8



Basic Operations

- Turning the Product on/off 10
- Menu selection 11
- Using HOLD and RESET 12
- Connecting Products 13



Using the Product

- Music 20
- Videos 23
- Pictures 25
- FM Radio 27
- Texts 29
- Recordings 31
- File Manager 32
- Settings 33



Other Information

- iriver plus 3 Using the Product 36
- Copyrights/Certification/Trademarks/Limited Liability 40
- Safety Instructions 41
- Troubleshooting 44



01 Getting Started

Components 4

Locating the Controls 5

LCD Display 6

Installing iriver plus 3 8

Getting Started

Components

Components are subject to change without notice and may vary from images shown.



E150



Earphones



Quick Start Guide & Warranty Card




Installation CD & Manual



USB cable

Getting Started


Locating the Controls

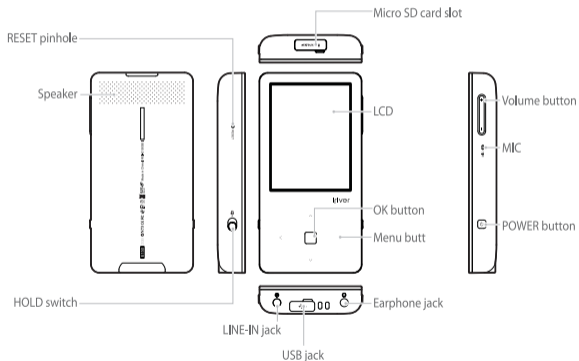

Getting Started

LCD Display

While playing music

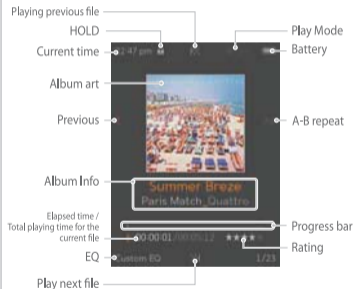

While playing video



Getting Started

LCD Display

| FM Radio |



| While recording voice |



Getting Started

Installing iriver plus 3

iriver plus 3 is an integrated software application that efficiently manages music, video, and picture files. iriver plus 3 gives you freedom to transfer music, video and picture files from PC to the device.

1. Insert the installation CD into your PC to display the installation process screen.
2. Select iriver plus 3 and click the **Install** button.
Complete the installation process by following the on-screen instructions.

Notice.....

■ Minimum requirements for using iriver plus 3

Windows® 2000/XP

- Intel® Pentium® II 233 MHz or higher processor speed
- 64 MB or greater memory
- 30 MB or greater hard disk space
- 16-bit enabled speaker and sound card
- Microsoft Internet Explorer version 6.0 or later
- SVGA or high resolution monitor (1024x768 resolution or greater)

Windows® Vista (Windows® Vista only supports the 32-bit version and does not support the 64-bit version.)

- Intel® Pentium® II 800MHz or higher processor speed
- 512 MB or greater memory
- 20 GB or greater hard disk space
- 16-bit enabled speaker and sound card
- Microsoft Internet Explorer version 6.0 or later
- SVGA or high resolution monitor (1024x768 resolution or greater)

- For more information on using iriver plus 3, refer to pages 36 - 39.



02 Basic Operations

Turning the Product on/off 10

Menu selection 11

Using HOLD and RESET 12

Connecting Products


- Connecting Earphones to the E150 13
- Charging the product 13
- Inserting / Removing the micro SD card 14
- Recommended micro SD card types 15
- Connecting the E150 to your PC 16
- Copying files / folders to the product 17
- Deleting files / folders from the product 17
- Disconnecting the E150 from your PC 18

Basic Operations

Turning the Product on/off

|Turning on the product|

1. Press and hold the  button on the product to turn it on.

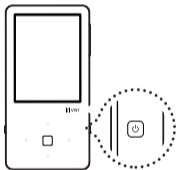

|Turning off the product|



1. Press and hold the  button on the product to turn it off.


Notice.....

- This product has an automatic power saving function to save battery power. Based on the settings in power save mode, the product will be automatically turned off after a pre-determined period without operation. For more information on setting this mode, refer to **Settings > Timer > Auto Power off**. (Refer to page 33.)

Basic Operations

Menu selection

1. In the main menu, press the  button to select the menu.
2. Press and hold the  button to display the main menu from any operation screen.

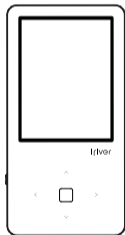


Basic Operations

Using HOLD and RESET

Using HOLD


1. Slide the **HOLD** switch to the direction of arrow as shown below to lock the product.

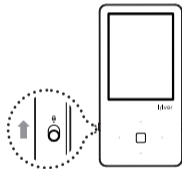

2. Slide the **HOLD** switch the opposite direction to unlock the product.

Using RESET

1. If the player stops and does not respond to any commands, press the **RESET** pinhole.

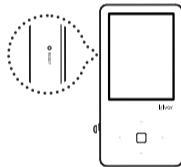

Notice.....


- Performing **RESET** does not delete the date / time settings and data in the integrated memory.

Basic Operations

Connecting Products


Connecting Earphones to the E150

1. Connect earphones to the earphone jack.

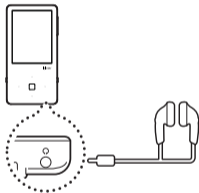

Charging the product

1. Turn on your PC and connect the E150 to it using the USB cable provided.

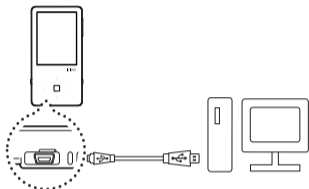

Notice.....


- While the product is connected to a PC using the USB cable, the integrated battery will be charged automatically.
- Do not use any USB cable other than the one included with the product. It may cause a malfunction.
- Check if the E150 is connected to a high-power USB 2.0 port. Some low-power USB ports built into certain peripheral devices, such as some types of keyboards and USB hubs without integrated power may not provide enough power to charge.
- While the PC is switched to standby mode, the product may not be charged.
- Charge the product only at room temperature. The product may not be charged in extreme hot or cold temperatures.
- The charging time might be extended if you use the product while charging.

Basic Operations

Connecting Products

|| Inserting / Removing the micro SD card ||

1. Open the cover of micro SD card after turning off the product.
2. Insert and slightly press a micro SD card in the direction as shown below.
3. Press again to remove the micro SD card.



Notice.....

- Be sure to insert / remove a micro SD card only after turning off the product.
- Do not use excessive power to insert a micro SD card.
This can cause product malfunction or damage the micro SD card.
- Do not remove a micro SD card while in use.
This can cause a deletion of data, product malfunction or damage micro SD card.
- Do not insert or remove a micro SD card repeatedly.
- If you insert a micro SD card improperly, it can cause product malfunction or cause the card to jam.

Basic Operations

Connecting Products

| Recommended micro SD card types |


Manufacturer: SanDisk


Notice.....

- Using improper type of micro SD card may cause product malfunction.
- Transfer speed of micro SD card is variable depending on your PC.
- Always backup valuable data first since formatting the micro SD card will delete all data on it.
- Do not turn off the product or remove a micro SD card while it is being formatted.
This can cause a malfunction of the product and damage the micro SD card.
- It is recommended to format a micro SD card as a FAT32 system in case its size is over 2 GB.
- If a micro SD card has already been formatted by the product, reset the product after disconnecting the USB cable and connect the cable again.
- Format the micro SD card if it is not detected or causes a malfunction.
- The micro SD card is not included with the product. (Optional item)
- Only SanDisk supports 8 GB. For more information, refer to the iriver website.

Connecting Products

Connecting the E150 to your PC

1. Press and hold the  button on the product to turn it on.
2. Turn on your PC and connect the E150 to it using the USB cable provided.

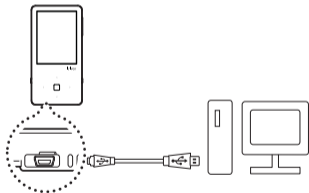

3. If properly connected, the LCD will display as below.




- **Power & Data** : The product is currently being charged and data is being transferred.
- **Power & Play** : The product is currently being charged and a file is being played.
- **Power Only** : The product is currently being charged.

Basic Operations

Connecting Products (Using as a removable disk)

Copying files / folders to the product

1. Select the desired files / folders in your PC and drag & drop to the drive which appears as the product.

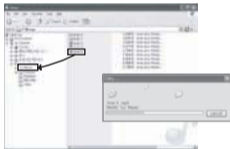

Deleting files / folders from the product

1. After selecting the desired file / folder, right-click with your mouse and select **Delete**.
2. Click **Yes** in the **Confirm File Delete / Confirm Folder Delete** popup window to delete the file / folder.



Notice.....


- Always connect the USB cable properly.
- While transferring data using the USB cable, never disconnect it or turn off the power to protect your data from loss or damage.

Basic Operations

Connecting Products

| Disconnecting the E150 from your PC |

1. Click the icon on the taskbar to disconnect the product using the Safely Remove Hardware menu.
2. Click the [Stop] button to confirm disconnection.



Notice.....

- The icon on the taskbar may be hidden in some operating systems. Click Show hidden icons to display the hidden icon.
- The Safely Remove Hardware function may not be available while using some applications such as Windows Explorer or Windows Media Player. Close all applications first before performing the Safely Remove Hardware.
- If the Safely Remove Hardware is not performed properly, try again after a few minutes. If the product is removed without observing the above process, data in the product might be damaged.



03 Using the Product

Music

- Selecting Music 20
- Playing Music 20
- Additional Features 21

Videos

- Selecting Video 23
- Playing Video 23
- Additional Features 24

Pictures

- Selecting Pictures 25
- Viewing Picture 25
- Additional Features 26

FM Radio

- Listening to FM Radio 27
- Scanning FM Radio Station 27
- Additional Features 28

Texts

- Selecting Text 29
- Viewing Text 29
- Additional Features 30

Recordings

- Recording 31
- Additional Features 31

File Manager

- Browsing Device 32
- Deleting File 32

Settings

- Selecting Setting 33
- Date & Time 33
- Display 33
- Timer 33
- Advanced 34
- Language 34

Using the Product

Music

|Selecting Music|

1. In the main menu, press the / button to select **Music** and press the button.
2. Press the / button to select the item and press the or button.
3. Press the / button to select the file and press the or button.

|Playing Music|

- Press the +/- button to control the volume.
- Press the button to pause or resume.
- While playing, press the / button to play the previous / next music.
- While playing, press and hold the / button to play fast forward or reverse.
- Press the button while playing to select the beginning (A) point. Press it again to select the end (B) point. The designated section between A and B will be played. Press the button again to deactivate the repeat playback.
- While playing, press the button to return to the previous menu.

Notice.....

- Supported file formats: MP3, WMA, OGG, FLAC, ASF
- In the **Music** mode, only music files in the Music folder will be displayed. To play other music files in any other folder, use the **File Manager** mode.
- You can manage your own playlist using iriver plus 3.
- When a micro SD card is inserted, you can display the file (folder) list by selecting **Internal Memory / External Memory**.

Using the Product

Music

Additional Features Press and hold the  button to display the **Options** screen.

• Play Mode

Selects the play mode which decides the playing order.

- Normal: Deactivates the play mode.
- Repeat: Repeats all files.
- Repeat One: Repeats one file.
- Shuffle: Randomly plays files in the current Database.
- Shuffle + Repeat: Randomly repeats files in the current Database.

• Study Mode

While playing, sets skip interval activated by pressing the [/ ] button.

(The Study Mode is disabled when it is set to OFF.)

• Select EQ

Selects the EQ to be used for playing music

Notice.....

- To avoid sound distortion, do not set the levels of **Custom EQ** and **SRS WOW HD** to high.

• Setup Sound

Sets the sound effect.

- Custom EQ: Changes levels of each frequency range to create your own equalization.
- SRS WOW HD: Sets the levels of 3D sound effect.
- SRS: Customizes the SRS 3D sound effects.
- TruBass: Customizes the bass sound level
- Focus: Sets sound clarity.
- WOW: Sets the proper boost level according to earphone type.
- Definition: Produces sharper and clearer sound.
- Fade-In: Volume increases gradually when playback starts.

Using the Product

Music

- **Replay times**

Sets the number of times for A-B repeat.

- **Repeat Interval**

Sets the interval for A-B repeat.

- **Scan Speed**

Sets the speed of fast forward and reverse.

- **Rate**

Classifies your favorite music by star ratings.

- **Lyric Display**

Shows / hides lyric. It is available only when the music file contains lyric information.

(It only supports Korean.)

- **Add Bookmark**

Bookmarks a specific point of time.

- **Delete File**

Deletes the selected file.

- **Information**












Displays information for the selected file.

Using the Product





Videos

Press the 4 direction buttons based on the direction of LCD.

[Selecting Video]

1. In the main menu, press the  /  button to select **Videos** and press the  button.
2. Press the  /  button to select the item and press the  or  button.
3. Press the  /  button to select the file and press the  or  button to play it.

[Playing Video]

- Press the +/- button to control the volume.
- Press the  button to pause or resume.
- Press and hold the  /  button to play fast forward or reverse.
- While playing, press the  button to return to the previous menu.

Notice.....

- Supported file formats: AVI, WMV
- In the **Videos** mode, only video files in the Video folder will be displayed. To play other video files in any other folder, use the **File Manager** mode.
- Max. playing time is variable depending on video type.
- When a micro SD card is inserted, you can display the video list by selecting **Videos > Dir List > Internal Memory / External Memory**.
- Be sure to use iriver plus 3 when transferring video files. Otherwise, unexpected errors occur during video playback.
- If there is a caption file (.smi), you can encode it together with video file using iriver plus 3. (Be sure to match both names of video and caption files.)

Using the Product

Videos

|Additional Features| Press and hold the  button to display the **Options** screen.

- **Play Mode**

Sets the repeat playback mode of video file.

- **Scan Speed**

Sets the speed of fast forward and reverse.

- **Resume**

Selects whether video is resumed from the last played point or from the beginning.

- **Sequential Play**

Plays files with related names in sequential order.

- **Add Bookmark**

Bookmarks a specific point of time

- **Delete File**

Deletes the selected file.







- **Information**

Displays information for the selected file.

Using the Product

Pictures





[Selecting Pictures]

1. In the main menu, press the  button to select **Pictures** and press the  button.
2. Press the  /  button to select the item and press the  or  button.





Play All Displays all pictures in the product.

Dir List Selects image file internal or external memory.

Picture Playlists Displays picture playlists made in iriver plus 3.

3. Press the  /  button to select the file and press the  or  button to display the picture on the screen.

[Viewing Picture]

- While playing pictures, press the  button to start / pause a slide show.
- While playing, press the  /  button to play the previous / next picture.
- While playing, press the  button to return to the previous menu.

Notice.....

- Supported file formats: JPG, BMP, PNG, GIF
(Some file types may not be fully compatible.)
- In the **Pictures** mode, only picture files in the Picture folder will be displayed.
To play other picture files in any other folder, use the **File Manager** mode.
- When a micro SD card is inserted, you can display the picture list by selecting **Pictures > Dir List > Internal Memory / External Memory**.
- Be sure to use iriver plus 3 when you transfer image file.
Otherwise, unexpected errors might occur during image playback.

Using the Product

Pictures

|Additional Features| Press and hold the  button to display the **Options** screen.

- **Image Delay**

Selects the amount of time each picture is displayed on the screen during a slide show.

- **Rotate**

Sets the direction of displayed image.

- **Zoom**

Enlarges the selected picture.

- Press the  button to return to the original size.

- **Delete File**

Deletes the selected file.

- **Information**

Displays information for the selected file.






Notice.....

- The Additional Features screen is deactivated during a slide show.










Using the Product

FM Radio

| Listening to FM Radio |

1. In the main menu, press the  /  button to select **FM Radio** and press the  button.
2. Press the  /  button to select the FM radio station.

| Scanning FM Radio Station |

- Press the  /  button to move to the next / previous frequency.
- Press the  button to activate the preset and press the  /  button to move to the available next / previous frequency.
- Press the  button to activate the preset and press the  /  button to move to the next / previous channel.
- While playing, press the  button to return to the previous menu.

Notice.....


- FM radio won't be working properly if earphone is not plugged in.

Using the Product

FM Radio

Additional Features Press and hold the  button to display the **Options** screen.

• Record

Records the FM radio which you are listening to.
- Press the  button to pause and resume recording.

• FM Recording Quality

Sets the recording quality of radio broadcasting.

• Save Preset / Delete Preset

Saves / deletes the current frequency to / from preset channel.

• Auto Preset

Automatically scans and stores frequencies to the channels.
- Up to 20 channels can be stored.

• Preset List

Displays saved channel list.

- Press the  /  button to select the channel and press the  button to listen to it.

• Tuner Region

Sets the frequency range based on local standards.

- Korea / US: 87.5 - 108.0MHz
- Japan: 76.0 - 108.0MHz
- Europe: 87.50 - 108.00 MHz












Notice.....

- You cannot control the volume while recording FM radio.
- If the remaining memory space or power is insufficient, recording will be automatically stopped.
- The file size per minute varies with recording quality.
Low: Approximately 720 KB / Middle: Approximately 960 KB / High: Approximately 1.4 MB
- The recorded file will be saved in the **Recordings/FM Radio** folder in the following format:
TUNERYMMDDXXX.WMA(YY: Year, MM: Month, DD: Day, XXX: Sequential number)





Using the Product

Texts

|Selecting Text|

1. In the main menu, press the  /  button to select **Texts** and press the  button.
2. Press the  /  button to select the item and press the  or  button.
Dir List Selects text file from internal or external memory.
Bookmark List Displays the list of bookmarks.
3. Press the  /  button to select the file and press the  or  button to display the text on the screen.

|Viewing Text|

- Press the  button to start or stop the automatic scroll function.
- Press the  /  button to scroll up or down.
- While playing, press the  button to return to the previous menu.

Notice.....



- Supported file formats: TXT (You cannot open the file over 10 MB.)
- In the **Texts** mode, only text files in the Text folder will be displayed.
To play other text files in any other folder, use the **File Manager** mode.
- When a micro SD card is inserted, you can display the text list by selecting **Texts > Dir List > Internal Memory / External Memory**.

Using the Product

Texts

Additional Features | Press and hold the  button to display the **Options** screen.

- **Skip to**

Press  /  to skip the amount of text based on the designated percentage.

- **Auto Scroll Speed**

Sets the scroll speed.

- **Font Size**

Selects font size.

- **Add Bookmark**

Bookmarks a specific point in the file.

- **Delete File**

Deletes the selected file.







Notice.....



- The **Additional Features** screen is deactivated when the **automatic scroll** function is activated.

Using the Product

Recordings

|Recording|


1. In the main menu, press the  button to select **Recordings** and press the  button.
2. Press the  /  button to select the item and press the  or  button.

External Mic Records sound using external microphone.
Internal Mic Records sound using internal microphone.
Line-in Records sound from the external device connected to the LINE-IN terminal.
3. In recording standby screen, press the  button to start recording. Press again to pause recording.
4. Press the  button to stop recording.

Notice.....

- You cannot control the volume while recording.
- If the remaining memory space or power is insufficient, recording will be automatically stopped.
- The file size per minute varies with recording quality.
 Low: Approximately 720 KB / Middle: Approximately 960 KB / High: Approximately 1.4 MB

|Additional Features|

In recording standby mode, press and hold the  button to display the **Options** screen.

●Recording Quality

Sets the quality of recordings.

●Auto Sync

Automatically starts and ends recording according to the input volume during external recording.

●External Input Volume

Set up the volume of external input.








- The recorded file will be saved in the following format:
 (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
 External Mic: [Recordings > Voice] EXMICYYMMDDXXX.WMA
 Internal Mic: [Recordings > Voice] VOICEYYMMDDXXX.WMA
 Line-in: [Recordings > Line-In] AUDIOYYMMDDXXX.WMA

Using the Product

File Manager






You can manually check and play various media saved in the iriver E150.

| Browsing Device |

1. In the main menu, press the  /  button to select **File Manager** and press the  button.
2. Press the  /  button to select the memory and press the  or  button.

Internal Memory Displays file / folder lists saved in internal memory.

External Memory Displays file / folder lists saved in external memory.

3. In file (folder) list, press the  /  button to select the previous / next file (folder).
4. Press the  or  button to move to the subfolder or play the selected file.
5. Press the  button to move to the upper folder.

| Deleting File |

1. After selecting the file, press and hold the  button.

Notice.....

- When the micro card is inserted, an external memory is displayed.

Using the Product

Settings

The iriver E150 supports customizable configurations.

The menu configurations are subject to change with different firmware versions.

|Selecting Setting|

1. In the main menu, press the / button to select **Settings** and press the button.
2. Press the / button to select the item and press the or button.
3. Press the / / / button to select the sub-item and press the or button.

|Date & Time|

- Sets the current date and time
 - button : Moves among fields.
 - / button : Sets the value of each field.

|Display|

- **Backlight**
Sets the amount of time to keep the backlight ON.
- **Brightness**
Changes LCD display brightness.
- **Theme**
Selects a display theme.

|Timer|

- **Auto Power off**
Automatically turns the power off after a pre-determined period without operation.
- **Sleep**
Automatically turns the power off after a predetermined time.

Using the Product

Settings

|Advanced|

- **Rebuild DB**
Rebuilds library data of a file.
- **Connection Type**
Selects PC file transfer type.
 - MSC(UMS) : Using iriver plus 3, transfers files via an MSC connection.
 - * Mass Storage Class (MSC) is a traditional UMS type.
 - MTP : Using Windows Media Player 11, transfers files via an MTP connection.
- **Format Internal Memory**
Deletes all data saved in internal memory.

Notice.....

- It is necessary to backup all valuable files before formatting, since deleted files cannot be recovered.
(iriver recommends formatting the memory using the E150.)
- Always check remaining battery power before you start formatting.

- **Format External Memory**
Deletes all data saved in external memory.
- **System Information**
Displays system information of the product.
- **Reset All Settings**
Resets the product to the factory setting.

|Language|

- **Menu Language**
Selects language for menu.
- **Countries**
Selects language for tag and text.



04 Other Information

iriver plus 3 Using the Product

- Adding Media to Library 36
- Ripping Songs from a CD 36
- Transferring Media to the iriver E150 37
- Supported File Formats 38
- Initializing Disk 39
- Upgrading Firmware 39

Copyrights/Certification/Trademarks/
Limited Liability 40

Safety Instructions 41

Troubleshooting 44

Other Information

iriver plus 3 Using the Product

To connect the product to iriver plus 3, select **Settings > Advanced > Connection type** and set to MSC (UMS).

| Adding Media to Library |

1. When you run iriver plus 3 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and pictures to the library.

| Ripping Songs from a CD |


1. Insert an audio CD into the CD drive and run iriver plus 3.
2. In iriver plus 3, select the checkbox from **Music > CD Drive** and click CD Ripping in bottom left.
3. After ripping a song, select the **All Music** to check whether the ripped song has been added to the library.

Other Information

iriver plus 3 Using the Product

[Transferring Media to the iriver E150]

iriver plus 3 Using the Product

1. Connect the product to the USB jack of your PC using the USB cable and run iriver plus 3.
2. Select the checkbox beside the file to transfer and click .
3. The selected file starts to transfer and the progress status is displayed in the Status window on bottom left.
4. Now you can find the selected music in your library.

Using Windows Explorer

1. Connect the product to the USB jack of your PC using the USB cable.
2. Copy the contents to proper folders as below.
 - Text: iriver E150/Text
 - Music: iriver E150/Music
 - Pictures: iriver E150/Pictures
 - Videos: iriver E150/Video

Other Information

iriver plus 3 Using the Product

Supported File Formats

Type	Extension	Format	Type	Extension	Format			
Music	MP3	8~320Kbps	Video	AVI	Video	MPEG4 SP (Simple Profile), less than 30 frames/sec, 800Kbps		
	WMA				Resolution	Resolution	QVGA(320X240)	
	OGG	Q1~Q10				Audio	Audio	Supports MP3 up to 320 Kbps and recommends 44.1 KHz, CBR
	ASF						WMV	Video
	FLAC	FLAC0~FLAC8			Resolution			Resolution
		Audio				Audio		Supports WMA up to 320 Kbps
Text	TXT			Unicode text, local code text				
Picture	JPG	Baseline JPG (Progressive JPG is not supported.)						
	BMP							
	PNG							
	GIF							

Other Information

iriver plus 3 Using the Product

|| Initializing Disk ||

1. Connect the product to the USB jack of your PC using the USB cable and run iriver plus 3.
2. Select **Tools > Portable Device > Initialize Disk** and click Start when the initialization confirmation message appears.
3. The initialization process is completed and the product is disconnected from your PC.

Notice.....

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.

|| Upgrading Firmware ||

1. After connecting the product to the USB jack of your PC using the USB cable, run iriver plus 3. The PC should be connected to the internet.
2. **Select Tools > Portable Device > Firmware Upgrade** and complete the upgrade process by following the on-screen instructions.

Notice.....

- Do not disconnect the product from PC while downloading the firmware upgrade file. Once the download is completed, disconnect the cable to activate the firmware upgrade.
- If the latest version of the firmware is already installed, the message to confirm the latest version appears.
- Messages regarding any available firmware updates will appear automatically when you connect the product to your PC.

Other Information

Copyrights/Certification/Trademarks/Limited Liability

Copyrights

Reigncom Limited holds all rights for the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by Reigncom Limited. You may be subject to criminal penalties for illegal use of any part of this manual.

Software, audio and video including intellectual property are protected by copyright and international laws. Reproduction or distribution of contents created with this product is the responsibility of the user.

The companies, institutions, products, people and events used in examples are for demonstration purposes only. Their appearance in this manual does not imply any affiliation between Reigncom and other parties.

Users are responsible for observing all copyrights and intellectual property laws.

©1999~2009 Reigncom Limited. All rights reserved.

Certification

KCC,FCC, CE

Class B Digital Device (Residential Communication Device). This device has been tested and found to comply with the requirements for a Class B digital device and designed to provide reasonable protection against harmful interference in a residential installation.

Trademarks

Windows 2000, Windows XP, Windows Vista and Windows Media Player are the registered trademarks of Microsoft Corp.

 is a trademark of SRS Labs, Inc.

WOW HD technology is incorporated under license from SRS Labs, Inc.

Limited Liability

Neither the manufacturer, importers nor dealers are responsible for any accidental damage, including bodily injury or any damages resulting from misuse or inappropriate operation on behalf of the user.

The information on this manual is prepared with the current player specifications. The manufacturer, Reigncom Limited, shall routinely add new features to the product and may continuously apply new technologies hereafter. All standards may be changed at any time without prior notice.

Other Information

Safety Instructions

|Product Safety|

- Do not display the same image on the screen for an extended amount of time since this may cause a ghosting effect.
- Do not place objects such as coins or hair pins inside the product.
This may cause malfunction.
- Do not place heavy objects on the product.
This may cause damage and malfunction.
- Do not expose the player to sources of moisture such as water, beverages, chemicals, cosmetics, and so on.
This may cause damage and malfunction.
- Keep away from harsh environments including humid, dusty, and smoky areas.
This may cause malfunction.
- Keep out of direct sunlight and extreme heat and cold.
This may cause malfunction.
- Do not keep the product close to magnetic substance such as magnets, TVs, monitors, or speakers.
This may cause malfunction.
- Never dismantle, repair, or rebuild your player without authorization.
This may cause damage and malfunction.
- Do not clean with chemicals or detergents.
This may cause malfunction.

Other Information

Safety Instructions

- **Do not drop or subject the device to impact.**
This may cause damage and malfunction.
- **Do not press more than two buttons simultaneously.**
This may cause damage and malfunction.
- **Do not disconnect the USB cable while transferring data.**
This may cause malfunction.
- **Try when possible to connect the product to the rear USB port in your PC.**
In some custom- assembled PCs, improper USB port may cause malfunction.
- **Do not connect any device or object other than earphones to the Earphone jack.**
This may cause damage and malfunction.

Other Information

Safety Instructions

|Other|

- Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.
This is dangerous and might be illegal in some areas.
- Do not use the product while in motion, such as while driving, walking, or mountain climbing.
- Use the product in a safe place to avoid accidents.
- Always be careful to steer clear of nearby objects if you use the product while in motion.
- It is not recommended to use the product during electrical storms.
- Reduce volume or stop using the player if you experience ringing in your ears.
- Do not listen to music via headphones/earphones at high volume for a long time.
- Keep headphone /earphone cords under control in order to avoid getting caught on nearby objects.
- Do not sleep with headphones / earphones in the ears.
Do not use headphones / earphones for excessive periods of time.

Other Information

Troubleshooting

■ Please check out!

- The player will not power on!
 - Check whether the battery is charged or not.
Charge the product using the USB cable and then check again.
 - Insert a thin and pointed object (such as a straightened paper clip) into the reset pinhole to reset the device.
- The product cannot be charged after connecting power.
 - Check whether the USB cable is firmly connected.
- The LCD display turns off frequently.
 - To save power consumption, the LCD is designed to be turned off after a designated period of time.
Set this amount of time in **Settings > Display > Backlight**.
- The product cannot be connected properly using the USB cable.
 - Check whether the USB cable is firmly connected.
- Poor radio reception with heavy interference!
 - Check whether the earphones jack is dirty.
 - Check whether the earphones are connected.
 - Adjust the position of the player and earphones.
 - Turn off any nearby electronic equipment to avoid potential interference.
- No sound during playback!
 - Check whether the volume is set to "0".
 - Check whether the earphone plug or connection jack is dirty.
 - Check whether the music file is corrupted.

Other Information

Troubleshooting

- **The memory space has changed after formatting.**
 - The memory space may be changed depending on the operating system.
- **The start-up time is too long.**
 - Check whether too many files are stored in the product. It is recommended to store up to 1,000 music files and 2000 picture files.

Other Information

Federal Communications Commission

| FCC RF |

- CAUTION :
Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- CAUTION : Exposure to Radio Frequency Radiation. Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation.
The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.
- This device complies with part 15 of the FCC Rules.
- Operation is subject to the following two Conditions :
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. for compliance could void the user's authority to operate the equipment.

| SAFETY |

- CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Notice.....

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.