



ENGLISH  
हिंदी



User Guide

उपयोगकर्ता मार्गदर्शिका

LG-A230



CE0168

P/N : MFL67213401 (1.0)

[www.lg.com](http://www.lg.com)

# LG-A230 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.

## **Product Registration Program**

Dear LG Mobile customer,

You are entitled for one year warranty on this model.

For automatic registration, One SMS containing the IMEI no. of your phone will be automatically sent to LG servers @ Rs.0.06p only.

In return you will get one year warranty from the date of purchase at any authorized LG Mobile Service center.

We assure you the information will be kept confidential and used for internal purpose only.

LG Electronics India Pvt. Ltd. does not have any revenue sharing with any cellphone operators for proceeds from SMS of automatic registration.

# Contents

Guidelines for Safe and Efficient Use .....	3
Getting to Know Your Phone.....	7
Installing the SIM Card and Charging the Battery.....	9
Menu Tree.....	10
Calls .....	11
Messaging.....	12
Contacts.....	13
E-mail.....	14
Media .....	14
Gallery .....	16
Organiser .....	16
Applications .....	17
Internet .....	17
Connectivity.....	18
Settings .....	19
PC Suite .....	20
Software update .....	21
Accessories .....	22
Troubleshooting .....	23
Technical Data .....	25

# Guidelines for Safe and Efficient Use

## Exposure to Radio Frequency Energy

### Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This LG-A230 mobile phone model has been designed to comply with the applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. SAR tests are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels for various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this phone model tested by DASY4 for use close to the ear is 1.43 W/kg (10 g), and when worn on the body is 1.44 W/kg (10 g).

- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

## Product Care and Maintenance



**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.

- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient Phone Operation

### Electronic Devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might experience disturbance due to mobile phones.
- Minor interference may affect TVs, radios, PCs etc.

### Road Safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give your full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle, such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, do not obstruct it with installed or portable wireless equipment. This may cause the airbag to fail or cause serious injury due to improper performance.

- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

**Note:** Excessive sound pressure from earphones can cause hearing loss.

## Blasting Area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

## Potentially Explosive Atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In Aircraft

Wireless devices can cause interference to aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency Calls

Emergency calls may not be available under all mobile networks. You should therefore never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery Information and Care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of batteries in the household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

# Getting to Know Your Phone

Earpiece


Main LCD

Send key

- Make call to a phone number and answers incoming calls.
- **In standby mode:** Shows the Call log.

Alpha numeric keys


\* Long press on Special function keys allow you activate unique features while in Idle mode.


 – Enter + symbol for making international call.


 – Connect voice mail centre

 to  – Speed dials

 – SOS Mode

 – Long press to Lock handset.

 – to go Silent mode in Idle screen

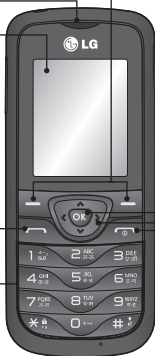

Soft keys  
(Left soft key / Right soft key)

- These keys perform the function Indicated in the bottom of the display.

Menu key / OK key

- Selects menu options and confirms actions.

4-way navigation key

- In Idle mode, access pre-defined menus. In Menu mode, scroll through menu options.


End key

- Switch on/off (hold down)
- End or reject a call.

**Note:** Depending on your service provider, pre-defined menus may differ.

**TIP! Widget Applications:** From Idle screen, by pressing Up Navigation key User can access widget applications like Weather, Facebook, Twitter, Orkut and Google Search. To scroll through different applications from widget press right and left navigation keys.



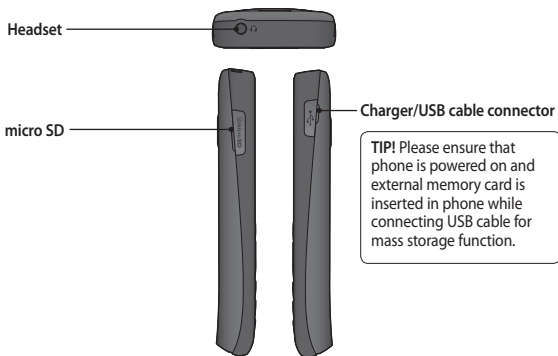

# Installing the SIM Card and Charging the Battery

## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

## Illustrations

1 Open the back cover

2 Remove the battery

3 Insert your SIM

4 Insert the battery

5 Close the back cover

6 Charge the battery

> If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.



**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

# Menu Tree

## MESSAGING

- Create Message
- Inbox
- Drafts
- Outbox
- Sent items
- Saved items
- Instant messenger
- Emoticons
- Message settings

## SETTINGS

- Dual SIM
- Profiles
- Display
- Date & Time
- Connectivity
- Call
- Phone
- Security
- SOS mode
- Memory info
- Restore factory settings

## ORGANISER

- Alarm clock
- Calendar
- To-do list
- Notes
- Secret notes
- Calculator
- Stopwatch
- Date finder
- Converter
- World time
- Go to
- Settings

## CONTACTS

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

## GALLERY

- My memory card
- My images
- My sounds
- My videos
- Others

## APPLICATIONS

- My games & apps
- Settings

## E-MAIL

- Get an account
- Others



## MEDIA

- Camera
- Video
- Music
- FM radio
- Voice recorder

## INTERNET


# Calls

## Making a Call


- 1 Key in the number using the keypad.  
To delete a digit, press **Clear**.
- 2 Press  to initiate the call.
- 3 To end the call, press .


**TIP!** To enter + when making an international call, press and hold 0.

## Making a Call from Your Contacts

- 1 Select **Names** from the Standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 From **Options** select **Call via(SIM1/Sim2)** or press  to initiate the call.

## Answering and Rejecting a Call

When your phone rings, press  to answer the call. You can control the volume by pressing the Up and Down Navigation keys.

Press  to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls using **Answer Mode** from Call Settings.

## Speed Dialing

(Menu > Contacts > Speed dials )

You can assign a speed dial number to a contact you call frequently.

## Viewing your Call Log

You can check the log of missed, received and dialed calls if the network supports Calling Line Identification (CLI) within the service area.

## Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

<SIM 1 / SIM 2>

- **Call divert** - Choose whether to divert your calls.
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You will need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Pre-recording** - It can record the voice during the call before the set time. User can select off, 3 sec, 10 sec or 60 sec.
- **Call waiting** - Be alerted when you have a call waiting. This depends on your network provider.

- **Send my number** - Choose whether your number will be displayed when you call someone. This depends on your network provider.
- **Auto-redial** - Choose **On** or **Off**.
- **Free call timer** - Choose whether or not to display the call time.
- **Minute minder** - Set the Minute Minder to **30 Sec**, **1 minute**, **3 minutes** and **5 minutes**, Set time **Manually** to hear a tone during a call.
- **Save new number** - Choose **Yes** or **No**.

#### <Common setting>

- **Answer mode** - Choose whether to answer the phone using Any key, Send key only.
- **BT answer mode** - Set to Hands-free or Handset.
- **Call rejection list** - Set the rejected call list.
- **Self call** - You can set a fake incoming call which will come after specific time with name and number you set.

**Note:** Self call can be activated or deactivated from idle screen using shortcut code ###.

## Messaging

Your LG-A230 includes text messaging and multimedia messaging, and can also receive network service messages.

## Sending a Message

- 1 Press **Menu**, select **Messaging** > **Create message**.
- 2 Enter a recipient number and scroll down.
- 3 Enter your message text.  
For sending as a text message, skip to step 5.  
For attaching multimedia, continue with step 4.
- 4 Scroll down and add the multimedia item (like **Image**, **Video clip** and so on) with Navigation keys (if necessary.)
- 5 Press the **OK** key to send the message.

#### NOTE:

- To select the desired SIM, press **Option** > **Send via** > **SIM1** or **SIM2**.
- Info. Service is only used for SIM1.

## Entering Text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available on the phone: ABC mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone numbers in the address book fields).

## ABC Mode

This mode allows you to enter letters by pressing the key labeled in Keypad.

## 123 Mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

## Message Folders

Press **Menu** and select **Messaging**. The folder structure used on your LG-A230 is fairly self-explanatory.

- **Inbox** - All the messages you receive are placed in your Inbox.
- **Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.
- **Outbox** - This is a temporary storage folder while messages are being sent. It also stores any messages that have failed to send.
- **Sent items** - All the messages you send are placed in your Sent folder.

**TIP:** You can send SMS to many contacts at a time. User can mark/unmark all contacts for sending the message. Only 20 contacts can be marked and if user select **Mark all** only first 20 contacts will be marked. To send the SMS to a particular group of contacts select Contact groups Option and select particular group.

## Instant Messenger

It provides MSN chat application. You can login with your MSN account.

## Contacts

### Searching for a Contact

- 1 Select **Names** from the standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 To scroll through the contacts, use navigation keys.

### Adding a New Contact

- 1 Press **Menu**, then select **Contacts** and choose **Names**. Then press **Options** - **Add new contact**.
- 2 Enter all the information you have in the fields provided and select **Options-Done**.

### Adding a Contact to a Group

You can save your contacts in groups; for example, to keep your work colleagues and family separate. There are a number of groups including **Colleagues**, **Family**, **Friends**, **School** and **VIP** already set up on the phone.

# E-mail

## Setting up Your E-mail

You can stay in touch on the move using email on your LG-A230. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Email > E-mail provider**.
- 2 Get an account.

## Sending an E-mail Using your New Account

To send/receive an email, you should set up an email account.

- 1 In Menu mode, select **Email > Inbox**.
- 2 Press **Options > Write e-mail** and a new email will open.
- 3 Enter an email address and scroll down.
- 4 Enter a subject and scroll down.
- 5 Enter your message text.
- 6 Press **Options > Attach** and add an item (if necessary).
- 7 Press the OK key to send the message.

# Media

## Music

Your LG-A230 has a built-in **Music** player so you can play all your favorite music.

### Playing a Song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All songs** then select the song you want to play.
- 3 Select **||** to pause the song.
- 4 Select **▶▶** to skip to the next song.
- 5 Select **◀◀** to start a song from beginning or double press on **◀◀** to go previous song.
- 6 Select **Back** to stop the music and return to the All tracks.


### Creating a Playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Press **Menu** and select **Media**.
- 2 Choose **Music**, then select **Playlists**.
- 3 Select **Add**, then enter the playlist name and press OK button.
- 4 The **All songs** folder will be displayed. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting Mark using OK Button.
- 5 Select **Done** to store the playlist.



## Camera

### Taking a Quick Photo

- 1 In Menu mode, select **Media > Camera** to turn on the camera.
- 2 Holding the phone, point the lens toward the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press the  key to take a photo.

## Video Camera

### Shooting a Quick Video

- 1 In Menu mode, select **Media > Video** to turn on the video camera.
- 2 Point the camera lens toward the subject of the video.
- 3 Press  to start recording.
- 4 "Rec" will appear on the viewfinder and a timer will show the length of your video.
- 5 Select  to stop recording.

## FM Radio

Your LG-A230 has an FM radio feature so you can tune into your favourite stations and listen on the move.

- 1 In Menu mode, select **Media > FM radio**.
- 2 Select **Options** and choose **Auto scan** then select **Yes**.

**Note:** The radio scans and saves available stations automatically.

- 3 Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	<ul style="list-style-type: none"><li>• Left/Right: Select an available radio station</li><li>• Up/Down: Adjust the volume</li></ul>

#### Note:

- Listening to the FM radio without a headset may reduce battery charge more quickly.
- When the current radio signal is weak, plug a headset.

**Note:** When recording, only music is saved automatically without radio host's comments. Only music played more than 40 seconds will be saved.

## Voice Recorder

Use your **Voice recorder** to record voice memos or other sounds.

### Recording a voice memo

- 1 In Menu mode, select **Media > Voice recorder**.
- 2 Press the **OK** key to start recording.
- 3 Speak your memo into the microphone.
- 4 When you are finished speaking, press **Stop**.



## To play a voice memo

- 1 From the voice recorder screen, press **Options > Go to voice recording**.
- 2 Select a file.

## Gallery

You can store media file on your phone's memory to give you easy access to all of your images, sounds, videos and others. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in the **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

### My memory card

If you have inserted a memory card, it will be displayed as a folder in the **Gallery**.

### My images

The **Images folder** contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

### My sounds

The **Sounds folder** contains default sounds, your voice recordings, radio recordings and sound files downloaded by you. From here you can manage and send sounds, or set them as ringtones.

## My videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

## Others

In the **Others folder**, you can view files that are not saved in the **Images, Sounds** or **Videos folders**.

## Organiser

### Setting your Alarm

You can set up to five alarms to go on at a specified time.

### Using the Calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

You can move the cursor to another date using the navigation keys, also you can set scheduler for desired date and time.

**Tip:** User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time from Left soft key option list > New scheduled SMS.

## Adding an Item to Your To-do list

You can view, edit and add To-do list.

## Adding Notes

You can register your own Notes here.

**Note:** To view the secret note, security code needs to be entered, also you can move notes to secret notes or vice versa.

## Using the Calculator

The calculator provides the basic arithmetic functions-addition, subtraction, multiplication and division-as well as scientific functions.

## Using the Stopwatch

This option allows you to use stopwatch functions.

## Date finder

It is a handy tool to help you calculate what the date will be once a certain number of days have passed.

## Converting Units

This can convert many measurements into the unit you want.

## Adding a City to Your World Time

You can add a required city to the list of world clocks. You can also check the time in major cities around the world.

## Applications

### My games & apps

Your LG-A230 comes with preloaded games to keep you amused in your spare time. If you choose to download any additional games or applications they will be saved in this folder.

**News Hunt** - News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

**Opera Mini 5** - It is a Java browser application.

**NOTE:** Please ensure Auto Update is On before using these Applications.

## Internet

### Accessing the Internet

You can launch the WAP browser and access the homepage of the activated profiles on Internet profiles. You can also manually enter a URL address and access the associated WAP page.

- 1 In Menu mode, select **Internet** > **Yes** to launch your service provider's homepage.
- 2 Navigate web pages using the following keys:

Key	Function
Navigation	Scroll up or down on a web page
OK	Select an item
Back	Return to the previous page
Options	Access a list of browser options

**Note:** Default Internet opens with Slot-1 SIM. If User wants to open the internet with slot-2 SIM then please follow below steps before opening the internet menu.

**Menu > Settings > Connectivity > Data network SIM > Select SIM2**

## Connectivity

### Changing your Connectivity Settings

USB connection mode

- 1 In Menu mode, select **Settings** > **Connectivity** > **USB connection mode**.
- **Mass storage:** Select Mass storage and connect the handset to your computer. You can then drag and drop files to the LG-A230 removable device folder.

- **PC Suite:** Select PC Suite and connect the handset to your computer in PCSync mode.
- **Always ask:** Selecting this option will allow you to choose which method to use every time you connect your handset to your computer.

**Note:** To use the USB mass storage function, you will need to select a memory location (Internal memory/ External memory) at first, if you want to select the External memory insert a memory card.

### Changing Your Bluetooth Settings

- 1 In Menu mode, select **Settings** > **Connectivity** > **Bluetooth**.
- 2 Choose **Settings** for the following options:
  - **My device visibility** - Choose whether to show or hide your device to others.
  - **My device name** - Enter a name for your LG-A230.
  - **Supported services** - Shows what services are supported.
  - **My address** - View your Bluetooth address.

### Pairing with Another Bluetooth Device

By pairing your LG-A230 and another device, your handset will create a password by default every time

you connect to another handset via Bluetooth.

- 1 Check your Bluetooth is On and Visible. You can change your visibility in the Settings menu by selecting **My device visibility** and then **Visible**.
- 2 Select **Search new device** from the Bluetooth menu.
- 3 Your LG-A230 will search for devices. When the search is complete, **Add icon** and **Refresh** will appear on the screen.
- 4 Choose the device you want to pair with, select **Add icon**, enter the passcode and then press the Center key.
- 5 Your phone will then connect to the other device. The same passcode will need to be entered on this device.
- 6 Your passcode-protected Bluetooth connection is now ready.

#### TIP!

- 1 When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera/Camcorder, MusicPlayer, UMS/PCSync)

## Settings

### Dual SIM

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards.

**Note:** Dual SIM Single Talk: while one of Dual SIM is operating with network such like WAP/JAVA/MMS/Call, another SIM can not use network related service.

### Changing Your Profiles

You can personalize each profile setting.

- 1 Choose the **Profiles** you want and select **Edit** from **Options**.
- 2 If you activate Silent mode, the phone will vibrate only.

### Using Flight Mode

(Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

### Changing Your Security Settings

Change your security settings to keep your LG-A230 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Select on or off to lock the handset or not respectively.
- **Application lock** - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).
- **Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT (Anti-theft mobile tracker) feature, enter the security code. And you will need to set ATMT on, and configure the ATMT settings with Sender name, primary number and secondary number. Default security code is "0000." ATMT SMS will contain information about the stolen phone IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.
- **Change codes** - Change your PIN code, PIN2 code and Security code.

## SOS mode

This enables SOS mode. After enabling if you press long key of 9 in Idle screen, the SOS message is sent and the phone stays in SOS Mode.

## Viewing memory status

(Menu > Settings > Memory info)

You can use the memory manager to determine how each memory is used and see how much space is available in the **Internal common memory**, **Internal reserved memory**, **SIM memory** or **Primary storage setting**. You can also set the **External memory** when the memory card is inserted.

## PC Suite

### Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

### Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Click the "Phone Backup & Restore" in PC suite (Tools > Phone Backup & Restore), and select Backup or Restore.

- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Now Select Back Up or Restore and Click Finish.
- 5 Your information will be Backed up or Restored.

## Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Open LG PC Suite icon in your PC which is already installed, after searching the phone it will be connected automatically.

**TIP!** Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

**Note:** Install PC Suite using CD provided and follow the Installation Guide.

## Software update

### Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> > select country > Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

# Accessories

Various accessories are available for your mobile phone. These are detailed below.

## Charger



## Battery



## Stereo headset



## CD



## User Guide LG-A230



### NOTE

- Always use genuine LG accessories. Failure to do so may invalidate your warranty.
- Accessories may be different in different regions. Please check with our regional service company or agent for further enquiries.

# Troubleshooting

This section lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Symptom	Possible causes	Possible Corrective measures
No connection to the network	Signal is weak or you're outside of the carrier network.	Move to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required.	Contact your Service Provider.
Calls not available	Dialing error or service limitations.	Check the number dialed and check the reception. Contact your service provider.
Calls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorized. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean the battery contacts.



<b>Symptom</b>	<b>Possible causes</b>	<b>Possible Corrective measures</b>
Charging error	<p>Battery totally empty. Contact problem.</p> <p>No power from outlet. Charger defective. Wrong charger. Battery defective.</p>	<p>Charge battery. Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. Plug in to a different socket or check voltage. Test with another charger. Only use original LG accessories. Replace battery.</p>
Network connection is lost.	Signal too weak.	Reconnection to another service provider if network mode is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check the Settings menu and turn the function off.





# LG-A230 उपयोगकर्ता मार्गदर्शिका – हिंदी

यह मार्गदर्शिका आपके नए मोबाइल फोन को समझने में आपकी मदद करेगी।

यह आपको आपके फोन में दी गई सुविधाओं के बारे में उपयोगी स्पष्टीकरण प्रदान करेगी। इस मैनुअल की कुछ सामग्री फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर आपके फोन से अलग हो सकती है।

## उत्पाद पंजीकरण प्रोग्राम

प्रिय एलजी मोबाइल ग्राहक,

आप इस मॉडेल पर एक वर्ष की वारंटी के पात्र हैं ।

स्वतः पंजीकरण के लिए , एक एसएमएस @रू.0.06p IMEI सहित आप के फोन से एलजी सर्वर पर भेजा जाएगा । इसके बदले में आप को किसी भी अधिकृत एलजी मोबाइल सेवा केंद्र पर खरीद की तारीख से एक साल की वारंटी मिलेगी ।

हम आपको विश्वास दिलाते हैं , की यह जानकारी गोपनीय रखी जाएगी और केवल आंतरिक उद्देश्य के लिए ही इस्तेमाल कि जायेगी ।

एलजी इलेक्ट्रॉनिक्स इंडिया प्राइवेट लिमिटेड का स्वतः पंजीकरण के एसएमएस से आय के लिए किसी भी सेल फोन ऑपरेटरों के साथ किसी भी प्रकार का राजस्व साझा नहीं है ।

# सामग्रियाँ

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश . 3	सहायक उपकरण ..... 23
अपने फोन को जानें..... 7	समस्या निवारण ..... 24
सिम कार्ड स्थापित करना और बैटरी चार्ज करना ..... 9	तकनीकी डेटा..... 26
मेनू ट्री..... 10	
कॉल्स ..... 12	
संदेश..... 13	
संपर्क..... 14	
ई-मेल..... 14	
मीडिया..... 15	
गैलरी ..... 16	
आयोजक..... 17	
सुविधायें ..... 18	
इंटरनेट..... 18	
संयोजकता..... 18	
सेटिंग्स ..... 20	
PC सुट..... 21	
सॉफ्टवेयर अपडेट..... 22	

# सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

## रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना रेडियो तरंग एक्सपोजर और विशिष्ट अवशोषण दर (SAR) की जानकारी

इस LG-A230 मोबाइल फोन मॉडल को रेडियो तरंगों के संपर्क में आने से संबंधित लागू होने योग्य सुरक्षा आवश्यकताओं का पालन करने के लिए डिजाइन किया गया है। यह आवश्यकताएं उन वैज्ञानिक मार्गदर्शिकाओं के आधार पर बनाई गई हैं, जो कि आयु और स्वास्थ्य पर ध्यान दिए बिना सभी उपयोगकर्ताओं की सुरक्षा को सुनिश्चित करने के लिए डिजाइन किए गए सुरक्षा उपायों को शामिल करता है।

- रेडियो तरंग एक्सपोजर दिशानिर्देश, विशिष्ट अवशोषण दर या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। समस्त प्रयुक्त फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित पॉवर स्तर पर ट्रांसमिट करते हुए मानक विधियों का उपयोग करके SAR के लिए परीक्षणों का संचालन किया जाता है।
- वैसे तो विभिन्न LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबद्ध दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- नॉन-आयनाइजिंग रेडिएशन प्रोटेक्शन (ICNIRP) के लिए अंतरराष्ट्रीय आयोग द्वारा अनुशंसित SAR सीमा 10 g टिश्यू पर औसतन 2 W/kg होती है।
- DASy4 द्वारा परिष्कृत, कान के पास उपयोग के लिए इस मॉडल फोन का उच्चतम SAR मान 1.43 W/kg (10 g) है और जब शरीर पर पहना जाए तो 1.44 W/kg (10 g) है।

- जिन देशों/क्षेत्रों ने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित SAR सीमा को स्वीकार किया है, वहाँ के निवासियों के लिए SAR डेटा जानकारी 1 g टिश्यू पर औसतन 1.6 W/kg है।

## उत्पाद की देखभाल और रखरखाव



**चेतावनी:** इस विशेष फोन मॉडल के लिए स्वीकृत बैटरियों, चार्जर्स और सहायक उपकरणों का ही उपयोग करें। किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकते हैं और यह खतरनाक हो सकता है।

- इस यूनिट को डिसअसेंबल न करें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें।
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- इसे गिराएँ नहीं।
- यूनिट को मैकेनिकल कंपन या झटकों से बचाएँ।
- जिस किसी भी क्षेत्र में विशेष नियम के तहत आवश्यक हो, वहाँ फोन बंद कर दें। उदाहरण के लिए, अपने फोन का उपयोग अस्पतालों में न करें, क्योंकि यह संवेदनशील मेडिकल उपकरणों को प्रभावित कर सकता है।
- चार्ज होते समय फोन को गीले हाथों से न पकड़ें। इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है।

- हैंडसेट को ज्वलनशील पदार्थों के नजदीक चार्ज न करें, क्योंकि हैंडसेट गर्म हो सकता है और आग के खतरे का कारण बन सकता है.
- यूनिट को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें (बैंजीन, थिनर, या एल्कोहल जैसे विलायकों का उपयोग न करें).
- फोन को हल्के साज-सामान पर रख कर चार्ज न करें.
- फोन को अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए.
- इस यूनिट को अत्यधिक धुएं या धूल में न रखें.
- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें, यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है.
- स्क्रीन को नुकीली वस्तु से न टकटकाएँ, क्योंकि इससे फोन को नुकसान हो सकता है.
- फोन को तरल पदार्थ या नमी में न रखें.
- ईयरफोन जैसे सहायक उपकरण का उपयोग सावधानी से करें. एंटीना को अनावश्यक रूप से न छुएँ.

## प्रमावी फोन कार्रवाई

### इलेक्ट्रॉनिक डिवाइसेज

- बिना अनुमति लिए अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास न करें. फोन को पेसमेकर के पास अर्थात् अपने शर्ट की ऊपरी जेब में न रखें.
- कुछ श्रवण संबंधी उपकरणों में मोबाइल फोन के कारण बाधा उत्पन्न हो सकती है.
- छोटा-सा व्यवधान भी टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकता है.

## सड़क सुरक्षा

- जिन क्षेत्रों में आप गाड़ी चलाते हैं, वहाँ मोबाइल फोन के उपयोग से संबंधित कानूनों और नियमों को जाँच लें.
- वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें.
  - वाहन चलाने पर पूरा ध्यान दें.
  - यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें.
  - यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ.
  - RF ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है.
  - जब आपका वाहन एयर बैग से सुसज्जित हो, तो इसमें स्थापित या पोटेंबल वायरलेस उपकरण से बाधा न डालें. इससे एयर बैग के काम न करने या ठीक से काम न करने की वजह से गंभीर नुकसान हो सकता है.
  - यदि आप यात्रा के समय संगीत सुन रहे हैं, तो कृपया सुनिश्चित करें कि वॉल्यूम उचित स्तर पर रहे, जिससे आप अपने चारों ओर के वातावरण के प्रति सचेत रहें. यह तब विशेष रूप से जरूरी है, जब आप रास्ते में हों.

## अपने सुनने की क्षति से बचें

यदि आप लंबे समय तक तेज ध्वनि सुनते हैं तो आपकी सुनने की क्षमता को क्षति पहुंच सकती है। इसलिए हम सलाह देते हैं कि आप कान के पास हैंडसेट को चालू या बंद न करें। हम इसकी भी सलाह देते हैं कि संगीत और कॉल वॉल्यूम उचित स्तर पर सेट हों।

**नोट:** इअरफोन से अत्यधिक ध्वनि और दबाव के कारण सुनने की क्षमता खो सकती है।

## विस्फोटन क्षेत्र

फोन का उपयोग ऐसे स्थान पर न करें, जहाँ विस्फोट हो रहे हों। प्रतिबंधों पर ध्यान दें, और नियमों-विनियमों का पालन करें।

## संभावित रूप से विस्फोट वाले वातावरण

- फोन का उपयोग ईंधन भरने के स्थान पर न करें।
- ईंधन या रसायनों के पास उपयोग न करें।
- मोबाइल फोन और सहायक उपकरणों को ज्वलनशील गैस, तरल या विस्फोटकों के साथ अपने वाहन में न ले जाएँ या न ही रखें।

## विमान में

वायरलेस डिवाइसेज से एयरक्रॉफ्ट में व्यवधान उत्पन्न हो सकता है।

- किसी भी एयरक्रॉफ्ट में चढ़ते समय अपना मोबाइल फोन बंद कर दें।
- इसका उपयोग हवाईजहाज में कर्मीदल की अनुमति के बिना न करें।

## बच्चे

फोन को छोटे बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें। इसमें छोटे-छोटे भाग होते हैं जो यदि अलग हो जाएँ तो गले में फँस सकते हैं।

## आपातकालीन कॉल्स

संभव है कि आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स के तहत उपलब्ध न हों। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

## बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है। अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।
- केवल LG बैटरियों और चार्जर्स का उपयोग करें। LG के चार्जर्स बैटरी का जीवन बढ़ाने के लिए होते हैं।
- बैटरी पैक को डिसअसेंबल न करें या उसे शॉर्ट-सर्किट से बचाएँ।
- बैटरी पैक के धातु वाले हिस्सों को साफ रखें।
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें। बैटरी पैक को सैकड़ों बार रिचार्ज किया जा सकता है, जब तक कि उसे बदलने की आवश्यकता न हो।
- यदि बैटरी को लंबे समय से उपयोग नहीं किया गया है तो उसकी क्षमता बढ़ाने के लिए उसे रिचार्ज करें।
- बैटरी चार्जर को सीधे धूप में न रखें या बाथरूम जैसी अधिक नमी वाली जगहों पर इसका उपयोग न करें।



- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है.
- यदि बैटरी को गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा है.
- उपयोग की गई बैटरीज का निपटान निर्माता के निर्देशों के अनुसार ही करें. जब भी संभव हो इसे रीसायकल करें. बैटरियों को घरेलू कचरे में न फेंकें.
- यदि आप बैटरी बदलना चाहते हैं तो सहायता के लिए इसे नजदीक के अधिकृत LG इलेक्ट्रॉनिक्स सेवा केंद्र या डीलर के पास ले जाएं.
- फोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर की अनावश्यक पॉवर खपत को बचाया जा सके.
- वास्तविक बैटरी जीवन, नेटवर्क कॉन्फिगरेशन, उत्पाद सेटिंग्स, उपयोग पद्धति, बैटरी और वातावरण की परिस्थितियों पर निर्भर करेगा.

# अपने फोन को जानें

इयरपीस

मुख्य LCD

भेजे कुंजी

- किसी फोन नंबर पर कॉल करें और इनकमिंग कॉल्स को उत्तर दें.
- **स्टैंडबाय मोड में:** कॉल लॉग दिखाता है.

अल्ट्रान्यूमेरिक कुंजियाँ

- \* विशेष फंक्शन कुंजियों को लंबे समय तक दबाए रहना आपको निष्क्रिय मोड में रहते हुए अनन्य सुविधाएं सक्रिय करने की अनुमति देता है.

**0** - अंतर्राष्ट्रीय कॉल करने के लिए + चिह्न दर्ज करें


**1** - वॉयस मेल केंद्र से कनेक्ट हों

**2** से **8** - स्पीड डायलस

**9** - एसओएस मोड

**\*** - हैंडसेट को लॉक करने के लिए देर तक दबाएँ।

**#** - निष्क्रिय स्क्रीन में शांत मोड पर जाने के लिए

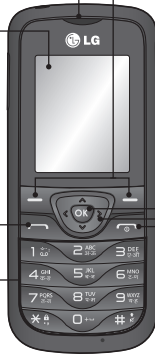

सॉफ्ट कुंजियाँ (बाई सॉफ्ट कुंजी / दाई सॉफ्ट कुंजी)

- ये कुंजियां डिस्प्ले के नीचे इंगित किया गया फंक्शन पूरा करती हैं.

मेनू कुंजी / ठीक कुंजी

- मेनू विकल्पों का चयन करती है और क्रियाओं की पुष्टि करती है.

4-वे नेविगेशन कुंजियाँ


- निष्क्रिय मोड में, पूर्व-निर्देशित मेनूज तक पहुंच प्राप्त करें. मेनू मोड में, मेनू विकल्पों में स्कॉल करें.

समाप्त कुंजी

- पॉवर चालू/बंद करें (दबाकर रखें)
- किसी कॉल को समाप्त करें या अस्वीकारें.

**नोट:** आपके सेवा प्रदाता के आधार पर, पूर्व-निर्देशित मेनूज अलग हो सकते हैं.

**युक्ति! विजेट सुविधाएँ:** प्रयोक्ता निष्क्रिय स्क्रीन से उपर नेविगेशन कुंजि दबाकर मौसम, Facebook, Twitter, Orkut और गुगल खोज सुविधाएँ उपयोग कर सकते हैं। विजेट से बाएँ और दाएँ नेविगेशन कुंजि दबाकर विभिन्न विजेट सुविधाओं तक पहुंच सकते हैं।

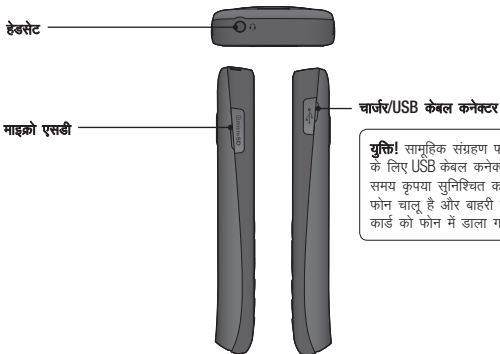

**युक्ति!** सामूहिक संग्रहण फंक्शन के लिए USB केबल कनेक्ट करते समय कृपया सुनिश्चित करें कि फोन चालू है और बाहरी मेमोरी कार्ड को फोन में डाला गया है.

# सिम कार्ड स्थापित करना और बैटरी चार्ज करना

## सिम कार्ड स्थापित करना

जब आप किसी सैल्यूलर नेटवर्क को सबस्क्राइब करते हैं, तो आपको आपके सबस्क्रिप्शन विवरणों, जैसे कि आपका PIN, कोई अन्य उपलब्ध वैकल्पिक सेवा और बहुत सी अन्य सेवाओं के साथ लोड एक सिम कार्ड प्रदान किया जाएगा ।

**महत्वपूर्ण!** प्लग-इन सिम कार्ड को स्क्रीच द्वारा या मोड़कर आसानी से क्षति पहुँचाई जा सकती है, इसलिए कार्ड हैंडल करते, डालते या निकालते समय सावधानी बरतें. सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें.

## उदाहरण

- 1 बैटरी का कवर खोलें
- 2 बैटरी निकालें
- 3 अपना सिम डालें
- 4 बैटरी डालें
- 5 बैटरी कवर बंद करें
- 6 बैटरी चार्ज करें.

> यदि फोन चालू नहीं हुआ, या यदि डिसप्ले अटक गया है या प्रतिसाद नहीं देता है, तो बैटरी को फिर से स्थापित करने के लिए निर्देशों का पालन करें.



**चेतावनी:** फोन चालू होने पर बैटरी न निकालें, ऐसा करने से आपका फोन खराब हो सकता है.

# मेनू ट्री

## संदेश

संदेश लिखें  
इनबॉक्स  
प्रारूप  
आउटबॉक्स  
प्रेषण आइटम्स  
सहेजे गए आइटम्स  
इन्स्टन्ट मेसिन्जर  
भावनाएं  
संदेश अनुकूलन

## सेटिंग्स

डुअल SIM  
प्रोफाइल्स  
प्रदर्शन  
दिनांक और समय  
संयोजकता  
कॉल  
फोन  
सुरक्षा  
एसओएस मोड  
स्मृति की जानकारी  
फ़ैक्ट्री सेटिंग्स पुनर्स्थापित करें

## आयोजक

अलार्म घड़ी  
कैलेंडर  
टू-डू सूची  
नोट्स  
गुप्त नोट्स  
कैलकुलेटर  
स्टॉपवॉच  
तिथि खोजक  
परिवर्तक  
विश्व समय  
के पास जाओ  
सेटिंग्स

## संपर्क

नाम  
सेटिंग्स  
समूह  
शीघ्र डायल्स  
सेवा डायल नंबर  
स्वयं का नंबर  
मेरा व्यवसाय कार्ड

## गैलेरी

मेरा मेमोरी कार्ड  
मेरे छवियाँ  
मेरी ध्वनि  
मेरे वीडियो  
अन्य

## सुविचार्य

मेरे खेल एवं अनुप्रयोग  
सेटिंग्स

## ई-मेल

कोई खाता प्राप्त करें  
अन्य

## मीडिया

कैमरा  
वीडियो  
संगीत  
FM रेडियो  
वॉइस रिकॉर्डर

## इंटरनेट

## अक्षर व अंक प्रविष्ट करने की तालिका

कुंजी	अक्षर / अंक (कुन्जियों को इतनी बार दबाएं)												
1	ँ	ं	ः	्	्र	1	१	.	,	?	!		
2	ा	ि	ी	ु	ू	२	अ	आ	इ	ई	उ	ऊ	ऋ २ २
3	े	ै	ँ	ो	ौ	३	ए	ऐ	एँ	ओ	औ	ऑ	३ ३
4	क	ख	ग	घ	ङ	4	४	क	ख	ग			
5	च	छ	ज	झ	ञ	5	५	ज					
6	ट	ठ	ड	ढ	ण	6	६	ड	ढ				
7	त	थ	द	ध	न	7	७	न					
8	प	फ	ब	भ	म	8	८	फ					
9	य	र	ल	व	श	ष	स	ह	9	९	ळ	र	ळ य
0	sp ac e	0	°										

## हिन्दी शब्द लिखने के उदाहरण

### 1) किताब

- क :- कुंजी 4 को 1 बार दबाएं ।  
 ि :- कुंजी 2 को 2 बार दबाएं ।  
 त :- कुंजी 7 को 1 बार दबाएं ।  
 ा :- कुंजी 2 को 1 बार दबाएं ।  
 व :- कुंजी 8 को 3 बार दबाएं ।

### 3) ज्ञानी



- ज :- कुंजी 5 को 3 बार दबाएं ।  
 . :- कुंजी 1 को 4 बार दबाएं ।  
 ञ :- कुंजी 5 को 5 बार दबाएं ।  
 ा :- कुंजी 2 को 1 बार दबाएं ।  
 न :- कुंजी 7 को 5 बार दबाएं ।  
 ी :- कुंजी 2 को 3 बार दबाएं ।

### 2) शत्रिय

- क :- कुंजी 4 को 1 बार दबाएं ।  
 . :- कुंजी 1 को 4 बार दबाएं ।  
 ष :- कुंजी 9 को 6 बार दबाएं ।  
 त :- कुंजी 7 को 1 बार दबाएं ।  
 . :- कुंजी 1 को 4 बार दबाएं ।  
 र :- कुंजी 9 को 2 बार दबाएं ।  
 ि :- कुंजी 2 को 2 बार दबाएं ।  
 य :- कुंजी 9 को 1 बार दबाएं ।


# कॉल्स

## कॉल करना


- 1 कीपैड का उपयोग करते हुए नंबर की कुंजी. कोई अंक हटाने के लिए, साफ करें दबाएँ.
- 2 कॉल प्रारंभ करने के लिए  दबाएँ.
- 3 कॉल समाप्त करने के लिए,  दबाएँ.


**युक्ति!** अंतर्राष्ट्रीय कॉल करते समय + दर्ज करने के लिए, 0 दबाकर रखें.

## अपने संपर्कों से कॉल करना

- 1 स्टैंडबाय स्क्रीन से नाम का चयन करें.
- 2 कीपैड का उपयोग करते हुए, उस संपर्क का पहला अक्षर दर्ज करें जिसे आप कॉल करना चाहते हैं.
- 3 देखें फिर विकल्प से कॉल वाया (SIM1/SIM2) का चयन करें या कॉल प्रारंभ करने के लिए  दबाएँ.

## कॉल का उत्तर देना और कॉल अस्वीकार करना.

जब आपका फोन रिंग होता है, तो कॉल का उत्तर देने के लिए,  दबाएँ. आप ऊपर या नीचे नेविगेशन कुंजियों को दबाकर वॉल्यूम नियंत्रित कर सकते हैं.

इनकमिंग कॉल अस्वीकार करने के लिए  दबाएँ.

**युक्ति!** कॉल सेटिंग्स से उत्तर मोड का उपयोग करते हुए आप अपनी कॉल्स का उत्तर देने के लिए फोन की सेटिंग्स बदल सकते हैं.

## शीघ्र डायलस

(संपर्क > शीघ्र डायलस)

आप ऐसे संपर्क को स्पीड डायल नंबर असाइन कर सकते हैं, जिसे आप बार-बार कॉल करते हैं.

## अपना कॉल लॉग देखना

आप छुटी, प्राप्त की गई और डायल की गई कॉल्स का लॉग जाँच सकते हैं, यदि नेटवर्क सेवा क्षेत्र के अंतर्गत कॉलिंग लाइन आइडेंटिफिकेशन (CLI) का समर्थन करता है.

## कॉल सेटिंग्स बदलना

आप कॉल-विशिष्ट फंक्शंस सेट कर सकते हैं. मेनु दबाएँ, सेटिंग्स का चयन करें और कॉल चुनें.

### <सिम 1/सिम 2>

- **कॉल अंतरण** — चुनें कि अपनी कॉल्स को डायवर्ट करना चाहते हैं या नहीं.
- **कॉल रोशन** — चयन करें कि आप कॉल्स को कब अवरोधित करना चाहेंगे.
- **सीमित डायल नंबरर्स** — उन नंबरर्स की सूची चुनें, जिसे आपके फोन से कॉल किया जा सके. आपको अपने ऑपरेटर से पिन2 कोड की आवश्यकता होगी. केवल FDN सूची में शामिल नंबरों को ही आपके फोन से कॉल से किया जा सकता है.
- **पूर्व-रिकॉर्डिंग** — यह सेट समय से पहले कॉल के दौरान वॉयस रिकॉर्ड कर सकता है. उपयोगकर्ता चयन कर सकते हैं, 3 सेकेंड, 10 सेकेंड या 60 सेकेंड.
- **कॉल प्रतीक्षा** — किसी कॉल के प्रतीक्षा में होने पर संकेत प्राप्त करें. यह आपके नेटवर्क प्रदाता पर निर्भर करता है.
- **मेरा नंबर भेजे** — चुनें कि किसी व्यक्ति को कॉल करने पर आपका नंबर प्रदर्शित हो या नहीं. यह आपके नेटवर्क प्रदाता पर निर्भर करता है.

- **स्वतः रीडायल** – चालू या बंद चुनें.
- **निशुल्क कॉल टाइमर** – चुनें कि कॉल समय प्रदर्शित करें या नहीं.
- **मिनट माइंडर** – आपके कॉल पर होने के समय, निर्धारित करता है कि प्रत्येक सेट किये मिनट पर टोन की आवाज करे.
- **नया नंबर सहेजें** – नया नंबर सहेजने के लिए 'हाँ' का चयन करें ।

### <सामान्य सेटिंग>

- **उत्तर मोड** – चुनें कि यदि फोन का उत्तर किसी भी कुंजी, मेजें कुंजी के उपयोग द्वारा दिया जाए.
- **BT उत्तर मोड** – हैंड्स-फ्री या हैंडसेट पर सेट करें.
- **कॉल निरस्त सूची** – अस्वीकृत कॉल सूची सेट करें.
- **सेल्फ कॉल** – आप एक फेक इनकमिंग कॉल सेट कर सकते हैं, जो आपके द्वारा सेट किए गए नाम और नंबर के साथ निर्दिष्ट समय के बाद आएगी.

**नोट:** सेल्फ कॉल को शार्टकट कोड ##\*# का उपयोग करके निष्क्रिय स्क्रीन से सक्रिय या निष्क्रिय किया जा सकता है.

## संदेश

आपके LG-A230 में पाठ संदेश भेजना और मल्टीमीडिया संदेश भेजना शामिल है और नेटवर्क सेवा संदेश भी प्राप्त कर सकता है.

## संदेश भेजना

- 1 मेनू दबाएँ, संदेश > संदेश लिखें का चयन करें.
- 2 किसी प्राप्तकर्ता का नंबर दर्ज करें और नीचे स्क्रॉल करें.
- 3 अपना संदेश पाठ लिखें. पाठ संदेश के रूप में भेजने के लिए, सीधे चरण 5 पर जाएँ. मल्टीमीडिया अनुलग्न करने के लिए, चरण 4 के साथ जारी रखें.
- 4 नीचे स्क्रॉल करें और मल्टीमीडिया आइटम जोड़ें (जैसे छवि, वीडियो विलप और इसी प्रकार अन्य) नेविगेशन कुंजियों के साथ (यदि आवश्यक हो.)
- 5 संदेश भेजने के लिए ठीक कुंजी दबाएँ.

### युक्ति!

- वांछित सिम का चयन करने के लिए, विकल्प > से मेजें > सिम1 या सिम2 दबाएँ.
- जानकारी. सेवा को केवल सिम1 के लिए उपयोग किया गया है.

## पाठ दर्ज करना

आप फोन के कीपैड का उपयोग करते हुए अल्फान्यूमेरिक वर्ण दर्ज कर सकते हैं. निम्न पाठ इनपुट विधियां फोन में उपलब्ध हैं: ABC मोड और 123 मोड.

**नोट:** हो सकता है कि कुछ फील्ड्स केवल एक पाठ इनपुट मोड की अनुमति दें (उदा. पता बुक फील्ड्स में टेलीफोन नंबर).

## ABC मोड

यह मोड आपको कीपैड में लेबल कुंजी को दबाकर अक्षर दर्ज करने की अनुमति देता है.



## 123 मोड

प्रति संख्या एक कुंजीरट्टोक के उपयोग से संख्याएं टाइप करें। आप अक्षर मोड में रहते हुए भी इच्छित कुंजी को दबाए रखकर अंक डाल सकते हैं।

## संदेश फोल्डर्स

मेनू दबाएँ और संदेश भेजना का चयन करें।

आपके LG-A230 पर उपयोग की जाने वाली फोल्डर संरचना उचित रूप से स्वतः स्पष्ट है।

- **इनबॉक्स** — आपको प्राप्त सभी संदेश आपके इनबॉक्स में स्थित होते हैं।
- **प्रारूप** — यदि आपके पास संदेश को पूरा करने का समय नहीं है, तो आप अब तक लिखे संदेश को यहाँ सहेज सकते हैं।
- **आउटबॉक्स** — संदेश के भेजे जाने तक यह एक अस्थायी संग्रहण फोल्डर है। यह उन संदेशों का संग्रहण भी करता है जो कि भेजे जाने में विफल रहे।
- **प्रेषण आइटम्स** — आपके द्वारा भेजे गए सभी संदेश, आपके भेजे गए फोल्डर में रखे जाते हैं।

## इन्स्टन्ट मेसिन्जर

यह MSN चैट अनुप्रयोग प्रदान करते हैं। आप अपने MSN खाते के साथ लॉग इन कर सकते हैं।

## संपर्क

### संपर्क खोजना

- 1 स्टैंडबाय स्क्रीन से नाम का चयन करें।
- 2 कीपैड का उपयोग करते हुए, उस संपर्क का पहला अक्षर दर्ज करें जिसे आप कॉल करना चाहते हैं।

- 3 संपर्कों में स्कॉल करने के लिए, नेविगेशन कुंजियों का उपयोग करें।

## नया संपर्क जोड़ना

- 1 मेनू दबाएँ, फिर संपर्क का चयन करें और नाम चुनें। तब विकल्प - नया संपर्क जोड़ें दबाएँ।
- 2 आपको फील्ड्स में प्रदान की गई सभी जानकारी दर्ज करें और पूर्ण का चयन करें।

## किसी समूह में संपर्क जोड़ना

आप अपने संपर्कों को समूहों में सहेज सकते हैं; उदाहरण के लिए, अपने सहकर्मियों और परिजनों को अलग रखते के लिए। फोन में परिवार, मित्र, सहकर्मी, स्कूल और VIP सहित कई समूह पहले से सेट हैं।

## ई-मेल

### आपका ई-मेल सेट करना

आप अपने LG-A230 पर ईमेल का उपयोग करके कहीं भी संपर्क में रह सकते हैं। POP3 या IMAP4 ईमेल खाता सेट करना तेज और आसान है।

- 1 मेनू दबाएँ, ईमेल > ई-मेल प्रदाता का चयन करें।
- 2 खाता बनाएँ।

### आपके नए खाते का उपयोग कर ई-मेल भेजना

ईमेल भेजने/प्राप्त करने के लिए, आपको ईमेल खाता सेट करना होगा।

- 1 मेनू मोड में, ईमेल > इनबॉक्स का चयन करें।
- 2 विकल्प > ई-मेल लिखें दबाएँ और एक नया ईमेल खुलेगा।
- 3 ईमेल पता लिखें और नीचे स्कॉल करें।





- विषय लिखें और नीचे स्कॉल करें।
- अपना संदेश पाठ लिखें।
- विकल्प > संलग्न दबाएँ और एक आइटम जोड़ें (यदि आवश्यक हो)।
- संदेश भेजने के लिए ठीक कुंजी दबाएँ।

## मीडिया

### संगीत

आपके LG-A230 में एक अंतर्निहित संगीत प्लेयर है ताकि आप अपना पसंदीदा संगीत प्ले कर सकें।

#### कोई गीत चलाना

- मेनू दबाएँ और मीडिया का चयन करें, फिर संगीत चुनें।
- सभी गीत चुनें और फिर उस गीत का चयन करें जिसे आप चलाना चाहते हैं।
- गीत को विराम देने के लिए  का चयन करें।
- अगले गीत पर जाने के लिए  का चयन करें।
- गीत को शुरू से प्रारंभ करने के लिए  का चयन करें या पिछले गीत पर जाने के लिए दो बार  दबाएँ।
- संगीत रोकने और सभी ट्रैक्स पर लौटने के लिए वापस का चयन करें।

#### प्लेलिस्ट बनाना


सभी ट्रैक्स फोल्डर से गानों का एक चयन चुन कर आप अपनी प्लेलिस्ट बना सकते हैं।

- मेनू दबाएँ और मीडिया का चयन करें।
- संगीत चुनें फिर प्लेलिस्ट का चयन करें।

- जोड़ें का चयन करें, फिर प्लेलिस्ट नाम दर्ज करें और ठीक बटन दबाएँ।
- सभी गीत फोल्डर प्रदर्शित होगा। उन सभी गीतों को स्कॉल करके और ठीक बटन के उपयोग द्वारा विद्युत चयनित करके उन सभी गीतों का चयन करें जिन्हें आप अपनी प्लेलिस्ट में शामिल करना चाहेंगे।
- प्लेलिस्ट का संग्रहण करने के लिए पूर्ण का चयन करें।



### कैमरा

#### त्वरित फोटो लेना

- मेनू मोड में, कैमरा चालू करने के लिए मीडिया > कैमरा का चयन करें।
- फोन को पकड़ कर, लेंस को फोटो के विषय पर केंद्रित करें।
- फोन इस तरह रखें कि आप अपने फोटो के विषय को देख सकें।
- फोटो खींचने के लिए  कुंजी दबाएँ।

### वीडियो कैमरा

#### त्वरित वीडियो शूट करना

- मेनू मोड में, वीडियो कैमरा चालू करने के लिए मीडिया > वीडियो का चयन करें।
- कैमरा लेंस को वीडियो के विषय पर केंद्रित करें।
- रिकॉर्डिंग प्रारंभ करने के लिए  दबाएँ।
- "Rec" व्यूफाइंडर में प्रकट होगा और एक टाइमर आपके वीडियो की लंबाई दिखाएगा।
- रिकॉर्डिंग रोकने के लिए  का चयन करें।

## FM रेडियो

आपके LG-A230 में FM रेडियो सुविधा है ताकि आप अपने पसंदीदा स्टेशन ट्यून कर सकें और चलते चलते उन्हें सुन सकें।

- 1 मेनू मोड में, मीडिया > FM रेडियो का चयन करें।
- 2 विकल्प का चयन करें और स्वतः स्कैन चुनें फिर हॉ का चयन करें।

**नोट:** रेडियो स्वचालित रूप से उपलब्ध स्टेशनों को स्कैन करता है और सहेजता है।

- 3 निम्न कुंजियों के उपयोग द्वारा FM रेडियो नियंत्रित करें:  
ठीक कुंजी: FM रेडियो चालू करें और FM रेडियो स्क्रीन में ध्वनि रिकॉर्ड करने के लिए ठीक दबाएँ।  
नेविगेशन:
  - दाएं/बाएं: किसी उपलब्ध रेडियो स्टेशन का चयन करें
  - ऊपर/नीचे: वॉल्यूम समायोजित करें

### नोट:

- हेडसेट के बिना FM रेडियो सुनने से बैटरी चार्ज त्वरित रूप से घट सकता है।
- जब वर्तमान में रेडियो सिग्नल कमजोर हों, तो हेडसेट लगाएं।

**नोट:** रिकॉर्ड करते समय, रेडियो होस्ट की टिप्पणी के बिना केवल संगीत स्वतः रक्षित होता है। केवल 40 सेकेंड से ज्यादा चलाया गया संगीत रक्षित होगा।

## वाइस रिकॉर्डर

वाइस मेमो या अन्य ध्वनियाँ रिकॉर्ड करने के लिए अपने वाइस रिकॉर्डर का उपयोग करें।

## वाइस मेमो रिकॉर्ड करना

- 1 मेनू मोड में, मीडिया > वाइस रिकॉर्डर का चयन करें।
- 2 रिकॉर्डिंग प्रारंभ करने के लिए ठीक कुंजी दबाएँ।
- 3 माइक्रोफोन में अपने मेमो बोलें।
- 4 जब आप बोलना पूर्ण कर लें, तो रोकें दबाएँ।

## वाइस मेमो चलाने के लिए

- 1 वाइस रिकॉर्डर स्क्रीन से, विकल्प > वाइस रिकॉर्डिंग पर जाएं दबाएँ।
- 2 फाइल का चयन करें।

## गैलरी

अपनी सभी छवियों, ध्वनियों, वीडियोज और अन्यो तक आसान पहुंच प्राप्त करने के लिए आप अपने फोन की मेमोरी में मीडिया फाइल का संग्रहण कर सकते हैं। आप अपनी फाइलों को मेमोरी कार्ड में भी सहेज सकते हैं। मेमोरी कार्ड उपयोग करने का लाभ यह है कि आप अपने फोन की मेमोरी का स्थान खाली कर सकते हैं। आपकी सभी मल्टीमीडिया फाइलें गैलरी में सहेजी जाएंगी। फोल्डर्स की एक सूची खोलने के लिए मेनू दबाएँ फिर गैलरी का चयन करें।

## मेरा मेमोरी कार्ड

यदि आपने कोई मेमोरी कार्ड डाला है, तो यह गैलरी में एक फोल्डर के रूप में प्रदर्शित होगा।

## मेरे छवियाँ

छवि फोल्डर में आपके फोन की डिफॉल्ट छवियों का फोल्डर, आपके द्वारा डाउनलोड की गई छवियाँ और आपके फोन के कैमरे से ली गई मेरे मेरे छवियाँ शामिल होती हैं।

## मेरी ध्वनि

ध्वनि फोल्डर में डिफॉल्ट ध्वनियाँ, आपकी वॉइस रिकॉर्डिंग, रेडियो रिकॉर्डिंग, और आपके द्वारा डाउनलोड की गई ध्वनि फाइलें हैं। यहाँ से आप ध्वनियाँ प्रबंधित कर सकते हैं और भेज सकते हैं या उन्हें रिंगटोन्स के रूप में सेट कर सकते हैं।

## मेरे वीडियो

वीडियो फोल्डर में डाउनलोड किए गए वीडियो और उन वीडियो की सूची दिखाई देती है, जो आपने अपने फोन पर रिकॉर्ड की थीं।

## अन्य

अन्य फोल्डर में, आप उन फाइलों को देख सकते हैं जो कि छवियाँ, ध्वनियाँ या वीडियो फोल्डर में सहेजी नहीं गई हैं।

## आयोजक

### अपना अलार्म सेट करना

आप किसी विशिष्ट समय के लिए पांच अलार्म तक सेट कर सकते हैं।

### कैलेंडर का उपयोग करना

जब आप इस मेनू में आते हैं, तो एक कैलेंडर दिखाई देता है। वर्तमान दिनांक पर वर्गाकार कर्सर स्थित होता है।

आप नेविगेशन कुंजियों का उपयोग करते हुए कर्सर

को किसी अन्य दिनांक पर ले जा सकते हैं, साथ ही आप किसी वांछित दिनांक और समय के लिए शेड्यूलर सेट कर सकते हैं।

**सुझाव:** उपयोगकर्ता कोई SMS शेड्यूल कर सकते हैं, ताकि विकल्प सूची से यह सेट की गई दिनांक और सेट किए गए समय पर पहले से निर्धारित नंबर/संपर्क को भेजा जा सके।

## अपनी टु-डू सूची में आइटम जोड़ना

आप टु-डू सूची को देख, संपादित और जोड़ सकते हैं।

## नोट्स जोड़ना

आप अपने स्वयं के नोट्स यहाँ पंजीकृत कर सकते हैं।

**नोट:** गुप्त नोट देखने के लिए, सुरक्षा कोड डालने की आवश्यकता है, साथ ही साथ आप नोट्स को गुप्त नोट्स में ले जा सकते हैं या इसके विपरीत कर सकते हैं।

## कैलकुलेटर का उपयोग करना

कैलकुलेटर मूल गणितीय फंक्शन प्रदान करता है—जोड़, घटा, गुणा और भाग—साथ ही साथ वैज्ञानिक फंक्शंस भी।

## स्टॉपवॉच का उपयोग करना

यह विकल्प आपको स्टॉपवॉच फंक्शंस का उपयोग करने की अनुमति देता है।

## तिथि खोजक

तिथि खोजक एक हैंडी उपकरण है, जो दिनों की एक निश्चित संख्या के बीतने के बाद कौन सी दिनांक होगी, यह परिकलित करने में आपकी मदद करता है।

## इकाइयाँ कनवर्ट करना

यह कई मापों को आपकी इच्छित इकाई में कनवर्ट कर सकता है।

## आपके विश्व समय में एक शहर जोड़ना

आप विश्व समय की सूची में वह शहर जोड़ सकते हैं, जिसकी आपको आवश्यकता है। आप विश्व के मुख्य शहरों का वर्तमान समय भी जाँच सकते हैं।

## सुविधायें

### मेरे खेल एवं अनुप्रयोग

आपका LG-A230 खाली समय में आपके मनोरंजन के लिए पूर्व लोडेड गेम्स के साथ आता है। यदि आप कोई भी अतिरिक्त गेम या अनुप्रयोग डाउनलोड करना चुनते हैं, तो वे इस फोल्डर में सहेजे जाएंगे।

**NewsHunt :** राह में होने पर भी क्षेत्रीय भाषाओं में न्यूज़पेपर्स देखने और पढ़ने हेतु सक्षम किए जाने के लिए डिज़ाइन किया गया एक विशिष्ट मोबाइल अनुप्रयोग है।

**Opera Mini 5 :** ये एक जावा ब्राउज़र अनुप्रयोग है।

**नोट:** उपर दिए गये अनुप्रयोग उपयोग करने से पहले कृपाया सुनिश्चीत करे कि स्वतः अधतम चालु हैं।

## इंटरनेट

### इंटरनेट तक पहुंच प्राप्त करना

आप वैप ब्राउज़र लॉन्च कर सकते हैं और इंटरनेट प्रोफाइल्स पर सक्रिय की गई प्रोफाइल्स के मुखपृष्ठ

तक पहुंच प्राप्त कर सकते हैं। आप मैन्युअल रूप से भी URL पता दर्ज कर सकते हैं और संबद्ध वैप पृष्ठ तक पहुंच प्राप्त कर सकते हैं।

1 मेनू मोड में, अपने सेवा प्रदाता का मुखपृष्ठ लॉन्च करने के लिए इंटरनेट > हाँ का चयन करें।

2 निम्न कृंजियों के उपयोग द्वारा वेब पृष्ठ नेविगेट करें:

**नेविगेशन :** वेब पृष्ठ पर ऊपर या नीचे स्क्रॉल करें

**ठीक :** आइटम का चयन करें

**गमन :** पिछले पृष्ठ पर लौटें

**विकल्प :** ब्राउज़र विकल्पों की सूची तक पहुंच प्राप्त करें

**नोट:** डिफ़ॉल्ट इंटरनेट Slot 1 SIM में खुलता है। यदि उपयोगकर्ता को Slot 2 SIM के साथ इंटरनेट खोलना चाहते हैं तो नीचे दिए गये स्टेप्स का पालन करें।  
मेनू > सेटिंग्स > डेटा नेटवर्क SIM > SIM 2 चुनें।

## संयोजकता

### अपनी कनेक्टिविटी सेटिंग्स बदलना

#### USB संयोग मोड

1 मेनू मोड में, सेटिंग्स > संयोजकता का चयन करें।

• **व्यापक संग्रहण :** व्यापक संग्रहण का चयन करें और हैंडसेट को अपने कंप्यूटर से कनेक्ट करें। आप फिर LG-A230 निकालने योग्य डिवाइस फोल्डर में फाइलें ले जा कर छोड़ सकते हैं।

- **PC suite : PC** सुइट का चयन करें और **PCSync** मोड में हैंडसेट को अपने कंप्यूटर से कनेक्ट करें.
- **सदा पूर्ण** : इस विकल्प का चयन करना आपको प्रत्येक बार अपने हैंडसेट को अपने कंप्यूटर से कनेक्ट करने पर उपयोग करने की पद्धति चुनने की अनुमति देता है.

**नोट:** USB व्यापक संग्रहण फंक्शन का उपयोग करने के लिए, आपको सबसे पहले एक मेमोरी स्थान (आंतरिक मेमोरी/बाहरी मेमोरी) का चयन करने की आवश्यकता होगी, यदि आप बाहरी मेमोरी का चयन करना चाहते हैं तो एक मेमोरी कार्ड डालें.

## अपनी ब्लूटूथ सेटिंग्स बदलना

- 1 मेनू मोड में, सेटिंग्स > संयोजकता > ब्लूटूथ > सेटिंग्स का चयन करें.
- 2 निम्न विकल्पों के लिए सेटिंग्स चुनें.
  - **यंत्र दृश्यता** — चुनें कि क्या अन्यो को आपका डिवाइस दिखाएँ या छुपाएँ.
  - **यंत्र का नाम** — अपने LG-A230 के लिए कोई नाम लिखें.
  - **समर्थित सेवाएं** — दिखाता है कि कौन सी सेवाएं समर्थित हैं.
  - **पता** — अपने ब्लूटूथ का पता दिखाएँ.

## किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना

अपने LG-A230 और किसी अन्य डिवाइस को युग्मित करने से, आपके द्वारा प्रत्येक बार ब्लूटूथ के माध्यम से किसी अन्य हैंडसेट से कनेक्ट होने पर आपका हैंडसेट डिफॉल्ट रूप से एक पासवर्ड बनाएगा.

- 1 जाँचें कि आपका ब्लूटूथ चालू और दृश्यमान है. सेटिंग्स मेनू में मेरी डिवाइस दृश्यता और फिर दृश्यमान का चयन कर आप अपनी दृश्यता बदल सकते हैं.
- 2 ब्लूटूथ मेनू से नई डिवाइस खोजें का चयन करें.
- 3 आपका LG-A230 डिवाइसेज के लिए खोजेगा. खोज पूर्ण होने पर, पुनश्चर्या ओर जोड़ें (OK कुंजी) करें स्क्रीन पर प्रकट होंगे.
- 4 युग्मित करने के लिए इच्छित डिवाइस चुनें, जोड़ें का चयन करें, पासकोड दर्ज करें और फिर केंद्रीय कुंजी दबाएँ.
- 5 आपका फोन फिर अन्य डिवाइस से कनेक्ट होगा. समान पासकोड को इस डिवाइस पर दर्ज किया जाना आवश्यक है.
- 6 आपका पासकोड—सुरक्षित ब्लूटूथ कनेक्शन अब तैयार है.

## युक्ति!

- 1 जब आप ब्लूटूथ हैंडसेट का उपयोग करते हैं, तो वीडियो चलाते समय A2DP और AVRCP प्रोफाइल्स समर्थित नहीं होतीं. इसका अर्थ है कि यदि आप ब्लूटूथ हैंडसेट का उपयोग करते हैं तो आप वीडियो ध्वनि नहीं सुनेंगे.
- 2 ब्लूटूथ फाइल स्थानांतरण फंक्शन को कुछ अनुप्रयोगों के चलते समय अवरोधित किया जाएगा. (वॉइस कॉल, कैमरा/कैमकोर्डर, म्यूजिक प्लेयर, UMS/PCसिंक)

# सेटिंग्स

## डुअल SIM

आपका फोन Dual SIM कार्ड्स मोड का समर्थन करता है और आपको एक बार में दो SIM कार्ड्स को न बदलते हुए उपयोग करने में सक्षम करता है। जब दो SIM कार्ड्स स्थापित हों, तो आप दो में से एक या दोनों SIM कार्ड्स को सक्रिय कर सकते हैं।

### युक्ति: दोहरी सिम एकल वातालीय:

जब दोहरी सिम में से कोई एक WAP/JAVA/MMS/कॉल जैसे नेटवर्क के साथ क्रिया कर रहे हों, तो दूसरी सिम नेटवर्क संबंधित सेवा का उपयोग नहीं कर सकते हैं।

## अपनी प्रोफाइल्स बदलना

आप प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं।

- 1 इच्छित प्रोफाइल चुनें और विकल्प से संपादित करें का चयन करें।
- 2 यदि आप शांत मोड सक्रिय करते हैं, तो फोन केवल वायब्रेट होगा।

## फ्लाइट मोड का उपयोग करना

### (मैनु > सेटिंग्स > प्रोफाइल्स > फ्लाइट मोड)

फ्लाइट मोड चालू करने के लिए इस फंक्शन का उपयोग करें। फ्लाइट मोड चालू होने पर, आप कॉल नहीं कर सकेंगे, इंटरनेट से कनेक्ट नहीं हो सकेंगे, संदेश नहीं भेज सकेंगे।

## अपनी सुरक्षा सेटिंग्स बदलना

अपने LG-A230 और इसके द्वारा रखी जाने वाली महत्वपूर्ण जानकारी को सुरक्षित रखने के लिए, अपनी सुरक्षा सेटिंग्स बदलें।

- **PIN कोड अनुरोध** — जब आप अपना फोन चालू करें तो अनुरोध किए जाने पर एक पिन कोड चुनें।
- **हैंडसेट अवरोधित** — हैंडसेट को लॉक करने या नहीं करने के लिए क्रमशः चालू या बंद का चयन करें।
- **अनुप्रयोग लॉक** — फोन के अनुप्रयोग का अनअधिकृत इस्तमाल रोकने के लिए, अनुप्रयोग लॉक सक्रिय कर सकते हैं। एक बार अनुप्रयोग लॉक सक्रिय होने पर सिर्फ पासवर्ड से ही अनुप्रयोग में प्रवेश कर सकते हैं। डिफॉल्ट पासवर्ड 0000 हैं।
- **एंटी-थेफ्ट मोबाइल ट्रैकर** — हैंडसेट चोरी हो जाने पर, हैंडसेट वास्तविक स्वामी द्वारा कॉन्फिगर किए गए नंबर पर SMS भेजता है। ATMT(एंटी-थेफ्ट मोबाइल ट्रैकर) सुविधा को सक्रिय करने के लिए, सुरक्षा कोड दर्ज करें और आपको ATMT को चालू पर सेट करने, और ATMT सेटिंग्स को प्रेषक नाम, प्राथमिक नंबर और द्वितीय नंबर के साथ सेट करने की आवश्यकता होगी। डिफॉल्ट सुरक्षा कोड "0000" है। ATMT SMS में चोरी हुए फोन IMEI के बारे में जानकारी, वर्तमान स्थान (जो सेल ब्रॉडकास्ट संदेश के अनुसार कैप्चर किया गया) और उस हैंडसेट का उपयोग कर रहे व्यक्ति का नंबर होगा।
- **कोड बदलें** — अपना पिन कोड, पिन2 कोड और सुरक्षा कोड बदलें।

## एसओएस मोड सेट करें

यह एसओएस मोड सक्षम करता है। सक्षम करने के बाद निष्क्रिय स्क्रीन में यदि आप 9 कुंजी को दो बार तक दबाते हैं, तो एसओएस संदेश भेजा जाता है और फोन एसओएस मोड में रहता है।

## मेमोरी स्थिति देखना

### (मैनु > सेटिंग्स > स्मृति की जानकारी)

आप यह निर्धारित करने के लिए मेमोरी प्रबंधक का उपयोग कर सकते हैं कि कैसे प्रत्येक मेमोरी का उपयोग किया गया है और यह देखने के लिए कि आंतरिक सामान्य मेमोरी, आंतरिक आरक्षित मेमोरी, सिम मेमोरी या प्राथमिक संग्रहण सेटिंग में कितना स्थान उपलब्ध है. मेमोरी कार्ड डाले जाते समय आप बाहरी मेमोरी भी सेट कर सकते हैं.

## PC सुट

### अपने फोन को अपने PC के साथ सिंक्रनाइज करना

आप अपने फोन को अपने PC से सिंक्रनाइज करके यह सुनिश्चित कर सकते हैं कि न केवल आपके सभी महत्वपूर्ण विवरण और दिनांक मेल खाएँ, बल्कि अपनी फाइलों का बैकअप लेकर चिंतामुक्त भी हो सकते हैं.

### अपने फोन की जानकारी बैकअप करना और पुनर्स्थापित करना

- 1 USB केबल को अपने फोन और अपने PC से कनेक्ट करें.
- 2 अपने फोन में पॉपअप मेनू से PC suite का चयन करें और अपने PC में PC सुट प्रोग्राम चलाएँ.
- 3 PC सुट में "फोन बैकअप और पुनर्स्थापना" पर क्लिक करें (उपकरण > फोन बैकअप और पुनर्स्थापना) और बैकअप या पुनर्स्थापना का चयन करें.

- 4 आप जिन सामग्रियों का बैकअप या पुनर्स्थापना चाहते हैं उन्हें चिह्नित करें. उस स्थान का चयन करें जहाँ आप जानकारी को बैकअप करना चाहते हैं, या जहाँ से जानकारी को पुनर्स्थापित करना चाहते हैं. अब बैकअप या पुनर्स्थापना का चयन करें और समाप्त पर क्लिक करें.
- 5 आपकी जानकारी बैकअप या पुनर्स्थापित हो जाएगी.

### अपनी फोन फाइलों को अपने पीसी पर देखना.

- 1 USB केबल को अपने फोन और अपने PC से कनेक्ट करें.
- 2 अपने फोन में पॉपअप मेनू से PC Suite का चयन करें और अपने PC में PC सुट प्रोग्राम चलाएँ.
- 3 अपने PC में LG PC सुट आइकन खोलें जो कि पहले से ही स्थापित है, फोन में खोजे जाने के बाद यह स्वचालित रूप से कनेक्ट किया जाएगा.

**युक्ति!** अपने फोन की सामग्री को अपने PC पर देखने से आपको फाइलों को व्यवस्थित करने, दस्तावेजों को संगठित करने और अब जिस सामग्री की आवश्यकता न हो उसे हटाने में मदद मिलती है.

**नोट:** प्रदान किए गए CD उपयोग करके PC सुइट इंस्टाल करें एवं इंस्टालेशन गाइड का पालन करें ।



# सॉफ्टवेयर अपडेट

## फोन सॉफ्टवेयर अपडेट

LG मोबाइल फोन सॉफ्टवेयर इंटरनेट से अपडेट होता है

इस फंक्शन का उपयोग करने के बारे में अधिक जानकारी के लिए, कृपया <http://update.lgmobile.com> या <http://www.lg.com/common/index.jsp>

> चुनें देश > सहायता पर जाएं.

यह सुविधा आपको सर्विस सेंटर जाए बिना ही आसानी से इंटरनेट द्वारा अपने फोन के फर्मवेयर को नवीनतम संस्करण से अपडेट करने की अनुमति देता है.

जैसा कि मोबाइल फोन फर्मवेयर अपडेट को अपडेट प्रक्रिया के लिए उपयोगकर्ता के संपूर्ण ध्यान की आवश्यकता होती है, कृपया आगे बढ़ने से पहले प्रत्येक चरण पर प्रकट होने वाले निर्देशों और नोट्स की जाँच करना सुनिश्चित करें.

कृपया ध्यान दें कि नवीनीकरण के दौरान USB डेटा केबल या बैटरी निकालना आपके मोबाइल फोन को गंभीर रूप से क्षतिग्रस्त कर सकता है.

## सहायक उपकरण

आपके मोबाइल फोन के लिए विभिन्न सहायक उपकरण उपलब्ध हैं। नीचे ब्यौरे दिए गए हैं।

### चार्जर



### बैटरी



### स्टीरियो हेडसेट



### CD



### उपयोगकर्ता मार्गदर्शिका LG-A230



### नोट

- हमेशा प्रामाणिक LG सहायक उपकरणों का उपयोग करें। ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- भिन्न क्षेत्रों में सहायक उपकरण भिन्न हो सकते हैं। अधिक जानकारी के लिए कृपया हमारी क्षेत्रीय सेवा कंपनी या एजेंट से संपर्क करें।

## समस्या निवारण

यह अध्याय कुछ ऐसी समस्याएँ सूचीबद्ध करता है जिससे आपका सामाना अपने फोन का उपयोग करते समय हो सकता है। कुछ समस्याओं में आवश्यकता होती है कि आप अपने सेवा प्रदाता से संपर्क करें, लेकिन अधिकतर समस्याएँ जिनका आप सामना करते हैं, उसे स्वयं ही सही करना सरल होता है।

लक्षण	संभावित कारण	संभावित सुधार उपाय
नेटवर्क से कोई कनेक्शन नहीं	सिग्नल कमजोर है या आप कैरियर नेटवर्क से बाहर हैं।	किसी खिड़की या खुले स्थान पर जाएँ। सेवा प्रदाता कवरेज मैप की जाँच करें।
कोड्स मैच नहीं करते	जब आप किसी सुरक्षा कोड को बदलना चाहते हैं, तो आपको नया कोड पुनः दर्ज करके इसे पुष्टि करनी होती है। जिन दो कोड्स को आपने दर्ज किया है वे मेल नहीं खाते हैं।	अपने सेवा प्रदाता से संपर्क करें।
फंक्शन सेट नहीं किए जा सकते	सेवा प्रदाता द्वारा समर्थित नहीं या पंजीकरण आवश्यक है।	अपने सेवा प्रदाता से संपर्क करें।
कॉल्स उपलब्ध नहीं	डायलिंग त्रुटि या सेवा सीमाएँ।	डायल किया गया नंबर जाँचें और रिसीप्शन जाँचें। अपने सेवा प्रदाता से संपर्क करें।
कॉल्स उपलब्ध नहीं	डायलिंग त्रुटि नया सिम कार्ड डाला गया प्रीपेड चार्ज सीमा समाप्त	नया नेटवर्क अधिकृत नहीं। नए प्रतिबंधों के लिए जाँच करें। सेवा प्रदाता से संपर्क करें या पिन 2 के साथ सीमा रीसेट करें।
फोन चालू नहीं किया जा सकता	चालू/बंद कुंजी बहुत थोड़ी देर के लिए दबाई गई। बैटरी चार्ज नहीं है। बैटरी संपर्क गंदे हैं।	कम से कम दो सेकंड के लिए चालू/बंद कुंजी दबाएँ। बैटरी चार्ज करें। डिस्ले में चार्जिंग सूचक की जाँच करें। बैटरी संपर्क साफ करें।

लक्षण	संभावित कारण	संभावित सुधार उपाय
चार्ज करने में त्रुटि	बैटरी पूर्ण रूप से खाली. संपर्क समस्या.  आउटलेट से कोई पावर नहीं. दूषित चार्जर. गलत चार्जर. दूषित बैटरी.	बैटरी चार्ज करें. फोन के लिए पावर पूर्ति और कनेक्शन जाँचें. बैटरी संपर्कों को जाँचें, यदि आवश्यक हो तो उन्हें साफ करें. भिन्न सॉकेट से प्लग इन करें या वॉल्टेज जाँचें. किसी अन्य चार्जर से जाँचें. केवल मूल LG सहायक सामग्री का उपयोग करें. बैटरी बदलें.
नेटवर्क कनेक्शन गुम हैं.	सिग्नल बहुत कमजोर है.	यदि नेटवर्क मोड स्वचालित है तो किसी अन्य सेवा प्रदाता से पुनः कनेक्शन.
नंबर की अनुमति नहीं है	फिक्सड डायल नंबर फंक्शन चालू है.	सेटिंग्स मेनू जाँचें और फंक्शन को बंद करें.

# तकनीकी डेटा

परिवेश के तापमान

अधिकतम : +55°C (डिसचार्जिंग) +45°C (चार्जिंग)

न्यूनतम : -10°C

## Declaration of Conformity LG Electronics

### Suppliers Details

#### Name

LG Electronics Inc

#### Address

LG Electronics Inc, LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

### Product Details

#### Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

#### Model Name

LG-A230

#### Trade Name

LG

# CE 0168

### Applicable Standards Details

R&TTE Directive 1999/5/EC  
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1  
EN 301 511 V9.0.2  
EN 50360:2001/AC:2006, EN 62209-1:2006, EN 62209-2:2010  
EN 60950-1-2006+A11:2009  
EN300328 V1.7.1

### Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

### Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Issued Date

Doo Haeng Lee / Director 21, Apr. 2011



Signature of representative

LG Electronics Inc. - EU Representative  
Veluwezoom 15, 1327 AE Almere, The Netherlands

**CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.**  
**Delhi Regional Office Plot no. 6, First Floor,Opp.**  
**HP Petrol Pump, Near Metro Pillar No. 81**  
**Pusa Road, Delhi - 110005**

TO

CHOLAMANDALAM MS GENERAL  
INSURANCE CO. LTD.  
Delhi Regional Office Plot no. 6,  
First Floor,Opp. HP Petrol Pump,  
Near Metro Pillar No. 81 Pusa Road,  
Delhi - 110005

DATE...../...../.....

Dear Sir,

RE: Loss of mobile phone no.: .....

MAKE .....MODEL .....

This is to inform that my mobile phone has been lost due to theft on  
.....at.....FIR/DD entry has been lodged  
with ..... Police Station. I am enclosing the Claim  
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

### CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No.  Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft  Time

Place of Theft

Details of Theft

FIR No./DD No.  Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES  NO

DATE

PLACE

SIGNATURE OF CUSTOMER

**TERMS AND CONDITIONS:**

**POLICY COVERAGE**

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only.No other loss covered.
2. Offer applicable on all purchases made from April 7, 2011 to April 6, 2012. under Policy No. **PBG-00030389-000-00**. Dated 07/04/11
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:
 

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

## **CLAIM PROCESSING DOCUMENTS**

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
- (i) Original Invoice & Cash Memo.
- (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
- (iii) Translation of vernacular documents in English/Hindi.
- (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.



**Note:** In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. Delhi Regional Office Plot no. 6, First Floor, Opp. HP Petrol Pump, Near Metro Pillar No. 81 Pusa Road, Delhi - 110005

Tel: +91-11-39813100, Fax: +91-11-39813110

e-mail id : [customercare@cholams.murugappa.com](mailto:customercare@cholams.murugappa.com)



---

### DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of ..... (in words) Rs.....

Signature of Insured /Customer  
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

# Customer Information Center

For any query related to the after sales service and customer support please contact us at below details



**LG**

**24 x 7** CALL CENTER



**1800-180-9999**  
(Toll Free)



**5757554**  
(Send SMS)



**www.lg.com**  
**serviceindia@lge.com**















