



XPERIA™

X10 mini pro

Extended User guide

Contents

User support.....	6
User guide in the phone.....	6
User support application.....	6
Experience more. Discover how.....	6
Getting started.....	7
Assembly.....	7
Turning the phone on and off.....	7
Setup guide.....	8
Getting to know your phone.....	9
Phone overview.....	9
Charging the battery.....	9
Using the hardware keys.....	10
Home screen.....	10
Status bar.....	12
Notification panel.....	14
Applications panes.....	14
Recently used applications window.....	17
Notification LED.....	17
Sensors.....	17
Using the touch screen.....	17
Screen lock.....	19
SIM card.....	20
Memory.....	20
Stereo portable handsfree.....	21
Adjusting the volume.....	21
Entering text.....	21
Phone settings overview.....	22
Internet and messaging settings.....	25
Data traffic.....	26
Network settings.....	26
Calling.....	28
Emergency calls.....	28
Call handling.....	28
Voicemail.....	29
Multiple calls.....	29
Conference calls.....	30
Call settings.....	30
Phonebook	32
Getting contacts into your phone.....	32

Managing your contacts.....	33
Communicating with your contacts.....	35
Favourites	36
Sharing your contacts.....	36
Multimedia and text messaging.....	37
Using text and multimedia messaging.....	37
Text and multimedia message options.....	38
Email.....	39
Using email.....	39
Email accounts.....	40
Gmail™	42
Google Talk™	43
Sony Ericsson Timescape™.....	44
The Timescape™ start screen.....	44
Using Timescape™.....	44
Timescape™ settings.....	46
Timescape™ widget.....	47
Applications and content.....	48
Before you download applications and content.....	48
Android™ Market.....	48
PlayNow™ service.....	49
Downloading from the web.....	50
Managing applications.....	50
Copyright-protected content.....	52
Getting organised.....	53
Calendar.....	53
Notes.....	55
Alarm clock.....	55
NeoReader™ application.....	56
Synchronising.....	58
Sony Ericsson Sync.....	58
Google Sync™ synchronisation service.....	59
Synchronising with a Microsoft® Exchange Server using the RoadSync™ application.....	59
Connecting to wireless networks.....	61
Wi-Fi®.....	61
Virtual private networks (VPNs).....	63
Web browser.....	64
Toolbar.....	64
Browsing the web.....	64
Navigating web pages.....	65

Managing web pages.....	65
Managing bookmarks.....	65
Text and image handling.....	66
Multiple windows.....	66
Downloading from the web.....	50
Browser settings.....	67
Connecting your phone to a computer.....	68
Transferring and handling content using a USB cable.....	68
PC Companion.....	68
Media Go™	69
Bluetooth™ wireless technology.....	70
Phone name.....	70
Pairing with another Bluetooth™ device.....	70
Sending and receiving items using Bluetooth™ wireless technology.....	71
Back up and restore	73
Types of content you can back up.....	73
Music.....	75
Using the music player.....	75
Podcasts.....	78
TrackID™ technology.....	78
FM radio.....	79
FM radio overview.....	79
Moving between radio channels.....	79
Using favourite radio channels.....	79
Making a new search for radio channels.....	80
Switching between the speaker and the handsfree.....	80
Videos	81
Using the video player.....	81
YouTube™.....	82
Camera.....	83
Viewfinder and camera controls.....	83
Using the camera.....	83
Camera album.....	87
Sharing photos and videos.....	88
Location services.....	89
Using GPS technology.....	89
Google Maps™.....	89
Getting driving directions.....	90
Locking and protecting your phone.....	91
IMEI number.....	91
SIM card protection.....	91

Screen unlock pattern.....	92
Updating your phone.....	93
Updating your phone wirelessly.....	93
Updating your phone using a USB cable.....	93
Troubleshooting.....	94
Common questions.....	94
Error messages.....	95
Legal information.....	96
Index.....	97



User support

User guide in the phone

An extended User guide is available in your phone.

- ! The extended User guide is also available at www.sonyericsson.com/support.

To access the User guide in your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap  **User guide**.

- 💡 If the supplied memory card is not inserted into your phone, you can access the User guide by selecting the **Online user guide** option after you tap **User guide** in step 2.

User support application

The support application is your window to Sony Ericsson support. Watch how-to videos, get the latest support news, enter the support zone or get the latest software for your phone.

To open the user support application

- From the **Home screen**, flick through the horizontal list of widgets and tap **Support** .

Experience more. Discover how.

Visit www.sonyericsson.com/support to get the most from your phone.

Important information

Please read the *Important information* leaflet before you use your mobile phone.

- ! Some of the services and features described in this User guide are not supported in all countries/regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Getting started


Assembly

To insert the SIM card and the memory card



- Slide in the SIM card and the memory card with the gold-coloured contacts facing down.

To remove the memory card

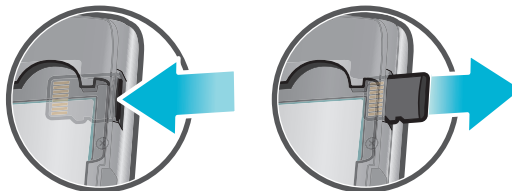

- Remove the battery cover and press the edge of the memory card to release and remove it.

To insert the battery



- Insert the battery with the battery usage labels facing down and the connectors facing each other.

Turning the phone on and off

To turn on the phone

- 1 Press and hold down the **⏻** key on the top of the phone.
 - 2 Enter your SIM card PIN, if requested, and select **OK**.
 - 3 At first startup, follow the instructions in Setup guide.
- 💡 Your PIN is supplied by your network operator. If you want to correct a mistake made while entering your SIM card PIN, press **✖**.

To turn off the phone

- 1 Press and hold **⏻** until the options menu opens.
- 2 In the options menu, tap **Power off**.
- 3 Tap **OK**.

To activate the screen

- Press  or press  briefly.

Setup guide

The first time you start your phone, a setup guide helps you get things started with all essential phone settings. Take the opportunity to enter the settings so you can use the phone to the full. You can also learn some of the phone's functions in this setup guide.


The setup guide helps you with:

- Basic phone settings such as language, Internet, time and date.
 - The wireless network connection or Wi-Fi® settings, speed up the connection and decrease data transfer costs.
 - Application settings such as email setup, online service accounts, and transfer of your SIM/memory card contacts. You can enter your personal details for all the available online service accounts in one place.
- ! To use the contacts you import from your SIM/memory card with a synchronization account, you need to set up the synchronization account first. If you do not want your SIM/memory card contacts to be synchronized, then you should import the contacts from the SIM/memory card before you set up the synchronization account.
- 💡 If you skip the setup guide, you can set up the phone or change the settings later from the **Settings** menu.

Getting to know your phone

Phone overview

- 1 Sensors
- 2 Ear speaker
- 3 Notification LED
- 4 Touch screen
- 5 Back key
- 6 Home key
- 7 Menu key
- 8 Keyboard

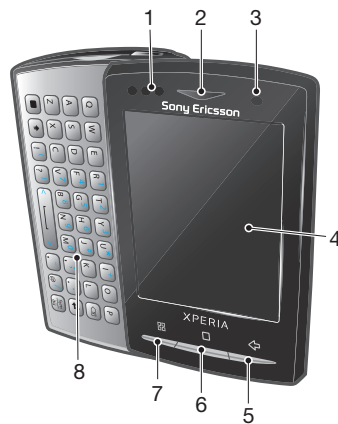

- 9 Power key/screen lock
- 10 3.5 mm headset connector
- 11 Camera lens
- 12 Camera light
- 13 Volume key
- 14 Camera key
- 15 Speaker
- 16 Strap hole
- 17 Connector for charger/USB cable



Charging the battery

The phone battery is partly charged when you buy the phone. It may take a few minutes before the battery icon appears on the screen when you connect the phone to a power source. You can still use your phone while it is charging.

- ! The battery will start to discharge a little after it is fully charged and then charges again after a certain time. This is to extend battery life and may result in the charge status showing a level below 100 percent.




To charge the phone using the power adapter

- Connect the phone to a power outlet using the USB cable and the power adapter.


To charge the phone using a computer




- 1 Connect the phone to a USB port on a computer using the USB cable included in the phone kit.
- 2 Tap **Charge phone**.

To check the battery level

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **About phone** > **Status**.

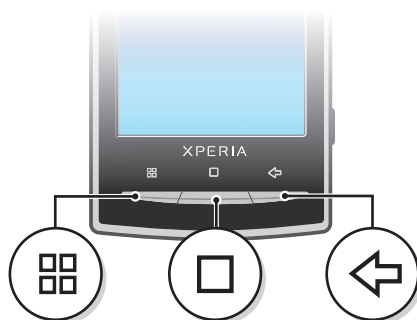Using the hardware keys



	Menu	<ul style="list-style-type: none">• Open a list of options available in the current screen or application
	Home	<ul style="list-style-type: none">• Go to the Home screen or to the applications panes from any application or screen• Open the recently used applications window
	Back	<ul style="list-style-type: none">• Go back to the previous screen• Close the onscreen keypad, a dialog box, an options menu, or the Notification panel

Home screen

The **Home screen** is the starting point of your phone. You can personalise the **Home screen** by adding widgets, or by changing the wallpaper and the applications in the corners.

When you add more than one widget, the **Home screen** extends beyond the screen width. The corners on the **Home screen** are used to access applications or bookmarks quickly. You can add any application or bookmark to the corners.

- ! When you go to the **Home screen**, some applications may continue to run in the background. If you do not want applications to run in the background, you should exit each application you have opened before going to the **Home screen**.
- ! A widget is a part of an application on the **Home screen**. It displays important information from a particular application. For example, the Sony Ericsson Timescape™ widget displays incoming messages and the Media widget allows you to start playing music directly.





To view the extended Home screen

- Drag your finger to the sides of the screen.

Live wallpapers

Animated wallpapers give you the chance to lighten up your **Home screen**. Some of the live wallpapers change with the changing hours of day and night.




To change the Home screen wallpaper

- 1 Press .
 - 2 Tap **Change wallpaper**.
 - 3 Select an option.
-  Tap **Live wallpapers** to get animated wall papers.

To add widgets to the Home screen

- 1 Press .
- 2 Tap **Arrange widgets > Add widget**.
- 3 Select a widget from the list.
- 4 Press  to exit the edit mode.



To delete a widget from the Home screen

- 1 Press .
- 2 Tap **Arrange widgets**.
- 3 Flick horizontally across the screen and tap the widget you want to delete.
- 4 Tap  in the widget.
- 5 Tap **Yes**.
- 6 Press  to exit the edit mode.

Creatouch™ application

Mix different backgrounds, colors and shapes to create your own unique wallpapers. You can also create free-hand drawings, and add text or photos. Share your self-designed wallpapers with friends by uploading them to Facebook™ and Picasa™.

To open Creatouch™

- 1 From the **Home screen**, drag  upwards.
- 2 Tap  **Creatouch™**.

Creatouch™ menu overview

Choose from a variety of colors, backgrounds, shapes and elements:



- 1 Select different shapes, numbers, text, or the free-hand paintbrush. You can also select the eraser if you want to correct something
- 2 Select which color scheme you want to use when creating your wallpaper
- 3 Set a background by choosing a photo from your camera album, or select a preset color
- 4 Upload your wallpaper to Facebook™ or Picasa™
- 5
 - Save the current wallpaper to your memory card
 - Set the current design as wallpaper
 - Clear the workspace area
 - View information about Creatouch™
 - Mute the sound

To add shapes and text to your wallpaper

- 1 Touch and hold ◀ or ▶ to scroll to the left or right, and choose which home screen pane you want to start working on.
- 2 Tap the ▶ icon to open the menu.
- 3 Choose which shape or text you want to add to your wallpaper. If you tap the text icon, you also need to tap the text input field and enter the desired text.
- 4 Tap the ◀ icon to go back to the workspace.
- 5 Tap the screen to apply the shapes or text to the current pane. You can also hold and drag your finger across the screen to scatter the shapes or text.

Status bar

A status bar at the top of the screen displays phone status information and notifications. Notification icons appear on the left side of the status bar. Phone status icons appear on the right side. From the status bar you can access the notification panel.



Phone status icons

The following status icons may appear on your screen:










Signal strength



No signal
















Roaming

	GPRS available
	EDGE available
	3G available
	Sending and downloading GPRS data
	Sending and downloading EDGE data
	Sending and downloading 3G data
	Battery status
	The battery is charging
	GPS is activated
	Airplane mode is activated
	A headset connected
	The Bluetooth function is activated
	Connected to another Bluetooth device
	The SIM card is locked
	The microphone is muted
	The speakerphone is on
	The phone speaker is muted
	Vibrate mode
	An alarm is set
	Data traffic notification is on

Notification icons

The following notification icons may appear on your screen:


	New email message
	New text message/multimedia message
	Problem with text message/multimedia message delivery
	New instant message
	New voicemail
	An upcoming calendar event
	A song is playing
	Problem with sign-in/sync
	The storage card is full
	The Wi-Fi® connection is enabled and wireless networks are available
	The phone is connected to a computer with a USB cable
	Error message

	Missed call
	Call on hold
	Call forwarding on
	Downloading data
	Uploading data
	More (undisplayed) notifications

Notification panel

In the Notification panel, notification icons are displayed in a detailed view. You can open notifications, such as messages, reminders, or event notifications directly from the Notification panel. You can also open running applications such as the music player or the radio.

To open the Notification panel

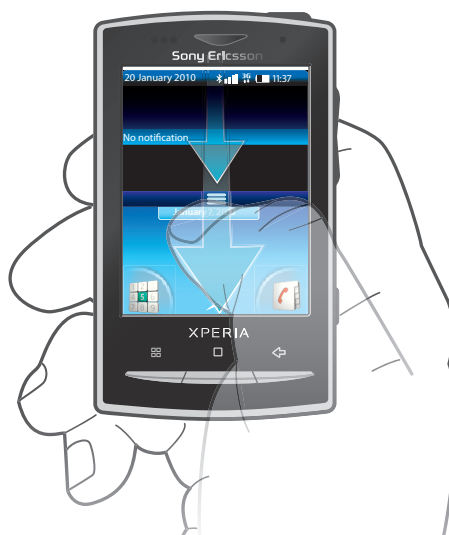

- Drag the status bar downwards.

To close the Notification panel

- Press .
- Drag the Notification panel upwards.

To open a running application from the Notification panel

- From the Notification panel, tap the icon for the running application to open it.

To clear the Notification panel

- From the Notification panel, tap **Clear**.

Applications panes




You can access your applications in the phone using the applications panes. The applications panes extend beyond the screen. You can create new panes and arrange the applications according to your preferences.



Shows which applications pane you are in

To open the applications panes



! You can open the applications panes by different ways.

- From the **Home screen**, drag  upwards.
- From the **Home screen**, tap .
- Flick the **Home screen** upwards.
- From the **Home screen**, press .



To browse the applications panes

- From the applications panes, flick right or left.

To create a new applications pane

- 1 From the **Home screen**, press .
- 2 Tap **Arrange icons**.
- 3 Touch and hold an item in the last pane until it vibrates and then drag it to the right.
- 4 Press  to exit the edit mode.

To move an application




- 1 From the **Home screen**, press .
- 2 Tap **Arrange icons**.
- 3 Touch and hold an item until it vibrates and drag it to one of the corners or to another application pane. If you move an item in the last applications pane, the pane switches to the next pane.
- 4 Press  to exit the edit mode.






The items in the applications panes are not shortcuts to the applications but the actual applications. When you move an application from the applications panes to corners or vice versa, the actual application gets moved and not shortcut. There are no shortcuts to the applications.

To rearrange the corners

- ! The corners are not shortcuts to applications, but the actual applications.










- 1 From the **Home screen**, press .
 - 2 Tap **Arrange icons**.
 - 3 Touch and hold an item in the applications pane and then drag it to one of the corners. You can also interchange an item between applications panes and any corner.
 - 4 Press  to exit the edit mode.
-  You can also add your favourite bookmarks as corners or drag them away from the corners to the applications panes.

To delete an applications pane

- 1 From the **Home screen**, press .
 - 2 Tap **Arrange icons**.
 - 3 Touch and hold each item until it vibrates, and drag one by one to the left pane until the last pane to the right is empty.
 - 4 Press  to exit the edit mode.
-  Before you move items to the left make sure that the pane to the left has enough space.

Applications overview

	Messaging	Send and receive text and picture messages
	Music player	Play music and playlists
	Phone	Make and receive calls, switch between calls, set up conference calling and view your call history
	Contacts	Keep track of your friends and colleagues
	Browser	Browse the web and download new programs and files
	Camera	Take photos and record video clips
	Album	View your pictures and photos
	Email	Send and receive emails
	Settings	Tailor phone settings to your own liking
	Market	Go to Android™ Market to download free and non-free applications for your phone
	Alarm Clock	Set an alarm
	Calendar	Keep track of your appointments
	Notes	Take notes
	FM radio	Listen to the radio in your phone
	TrackID™	A music recognition service
	Video	View videos saved in your phone
	PlayNow™	Download a variety of exciting content to your phone
	YouTube	Share and view videos from around the world
	Maps	View your current location, find other locations and calculate routes
	Gmail™	An email application that supports Gmail™
	Calculator	Perform basic calculations

	Creatouch™	Create your own wallpapers
	Talk	Chat online
	Photo fun	Edit your photos
	Timer	Count down time
	Stopwatch	Keep track of time
	Sony Ericsson Sync	Synchronise your contacts, calendar and more
	Timescape™	Keep track of all daily communication
	Dataviz® RoadSync	Sync application. Synchronise Dataviz® RoadSync with your phone using Microsoft® Exchange ActiveSync®
	User guide	Read the extended User guide in the phone


! Some applications are not supported by all networks and/or service providers in all areas.

💡 Applications you download appear in the applications panes.

Recently used applications window

You can view and access recently used applications from this window.

To open the recently used applications window

- From any application, press and hold down .

Notification LED

The Notification LED (Light-emitting diode) is located at the top of the phone. It provides information on the phone status and on pending notifications.

LED status

Green	The battery is fully charged
Flashing red	The battery level is low
Orange	The battery is charging. The battery level is between low and full
Flashing green	There is a pending message or you have missed a call

💡 While the phone is charging but the battery level is still low, pending notifications (flashing green) are not indicated by the LED.

Sensors

Your phone includes a light sensor and a proximity sensor. The light sensor detects the ambient light level and adjusts the brightness of the screen accordingly. The proximity sensor turns the touch screen off when your face touches the screen. This prevents you from unintentionally activating phone functions when you are engaged in a call.

Using the touch screen

To open or highlight an item

- Tap the item.

To mark or unmark options



- Tap the relevant checkbox or in some cases the right side of the list option, to mark or unmark an option.

<input checked="" type="checkbox"/>	Marked checkbox
<input type="checkbox"/>	Unmarked checkbox
<input checked="" type="checkbox"/>	Marked list option
<input type="checkbox"/>	Unmarked list option



To pan

- When this option is available, drag the screen to pan.

Zooming

There are two ways to zoom. The zoom alternative depends on the application you are using. For example, the Web browser uses  and , while the Camera album uses the touch, hold and drag alternative.

To zoom

- When available, tap  or  to zoom in or out.
- Touch, hold and drag upwards or downwards to zoom in or out.
- ! You may have to drag your finger on the screen (in any direction) to make the zoom icons appear.

Scrolling

You can scroll up or down, and on some webpages you can also scroll to the sides.


- ! Dragging or flicking will not activate anything on the screen.

To scroll



- Drag up or down to scroll.


To flick

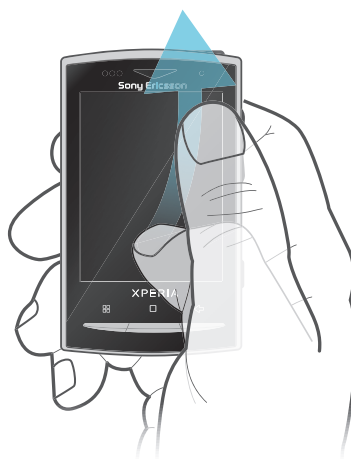



- Flick to scroll quickly. You can wait for the scrolling to come to a stop or you can stop it immediately by tapping the screen.

Lists

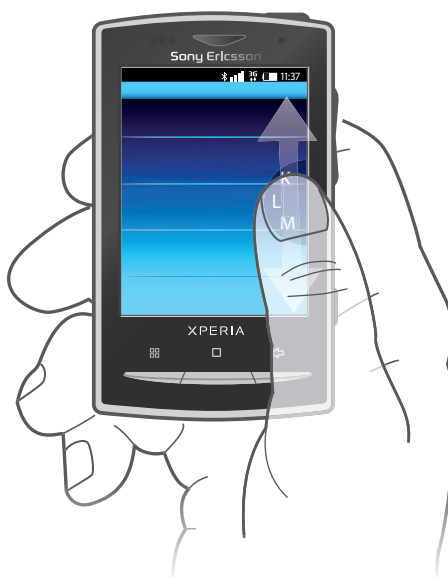You can browse through alphabetical lists by using the index icon.



To use the index icon

- 1 From any alphabetical list, flick up or down to make  appear.
- 2 Touch, hold and drag  up or down to browse to an index letter.



Screen lock

The screen lock prevents unwanted actions on the touch screen when you are not using your phone. When the phone is left idle for a set period of time, the screen locks automatically.


To lock the screen

- Press  briefly.

To unlock the screen

- 1 Press  to activate the screen.
- 2 Drag the  icon along the screen lock path to the other side.

To set the time interval for the automatic screen lock

- 1 From the **Home screen**, drag  upwards..
- 2 Find and tap **Settings > Sound & display > Screen timeout**.
- 3 Select an option.

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

Memory

You can save content on a memory card and in the phone memory. Music, video clips and photos are saved on the memory card while applications, contacts and messages are saved in the phone memory.

Memory card

- ! You may have to purchase a memory card separately.

Your phone supports a microSD™ memory card, which is used for media content. This type of card can also be used as a portable memory card with other compatible devices.


- ! Without a memory card you cannot use the camera, nor can you play or download music files and video clips.

Formatting the memory card

The memory card in your phone may be formatted in order to, for example, free memory.

- ! All content on the memory card will be lost. Make sure you have made backups of everything you want to save before formatting the memory card. To backup your content you can copy it to your computer. For more information, refer to the chapter *Connecting your phone to a computer* on page 68 .

To format the memory card

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > SD card & phone storage settings > Unmount SD card**.
- 3 After you have unmounted the memory card, tap **Format SD card > Erase everything**.

Stereo portable handsfree



To use a handsfree

- 1 Connect a portable handsfree.
 - 2 To answer a call, press the call handling key. If you listen to music, it stops when you receive a call and resumes when the call has ended.
 - 3 To end a call, press the call handling key.
- ! If a portable handsfree is not included with the phone, you may purchase it separately.

Adjusting the volume

You can adjust the ringtone volume for phone calls and notifications as well as for music and video playback.

To adjust the ring volume with the volume key

- Press the volume key up or down.

To adjust the media playing volume with the volume key







- When playing music or watching video, press the volume key up or down.

To set the phone to silent and vibrating mode

- 1 Press the volume key down to minimum. The phone is in silent though still vibrating mode.
- 2 Press the volume key further one step down to turn off the vibrating mode.

Entering text

Using the slideout keyboard



- To type lower-case letters, press the relevant letter keys.
- To type a single upper-case letter, press  and then press the relevant letter key.
- To use all upper-case letters, press  twice. To change back to all lower-case letters, press  again.
- To type special characters, press and hold , and then press the letter key until the required character appears.
- To enter a character printed in blue, press  and then press the relevant key.
- To use all the characters printed in blue, press  twice and enter the relevant characters.

To change writing language using the slideout keyboard

- 1 When you enter text, tap the language icon in the lower left corner of the screen.
- 2 Select a language.

Using the on-screen keypad

When you start a program or select a field that requires text or numbers, the default on-screen keypad appears.

You can use multitap text input method  or quick text input method  to enter text. The quick text input method uses a built-in dictionary.

- 💡 You can close the keypad at any time by pressing .


To display the on-screen keypad and enter text

- Tap the text field and the keypad appears.

To shift between upper-case and lower-case letters

- Before you enter a letter, tap .


To turn on the caps lock

- Before you type a word, tap  until  appears.

To enter numbers using the keypad

- When you enter text, drag  left. A keypad with numbers appears.

To insert symbols

- When you enter text, drag  right.

To use the landscape keyboard

- When you enter text, turn the phone sideways.

- 💡 For the keyboard to support this feature, landscape mode must be supported by the application you are using, and your screen orientation settings must be set to automatic.


To change writing language using the on-screen keypad

- 1 When you enter text, tap the language icon in the upper right corner.
- 2 Select an option.

To enter text using multitap text input

- 1 When you enter text, tap the language icon in the upper right corner.
- 2 Tap **Multitap** to change to multitap input method.
- 3 To write a word, tap the character key as many times as needed to show the letter you want.

To enter text using quick text input

- 1 When you enter text, tap the language icon in the upper right corner.
- 2 Tap **Quick text** to change to quick text input.
- 3 To write a word, tap each character key only once, even if the letter you want is not the first letter on the key.
- 4 Tap the word that appears or tap  to select a word from the list.
- 5 If the word you want is not in the list, tap **Spell**, make any necessary changes and tap **Save**.


To edit text

- 1 When you enter text, touch and hold the text field until the **Edit text** menu appears.
- 2 Select an option.


Phone settings overview

You can set up the phone to suit your requirements, for example, **Date & time**, **Wireless & networks** and **Accounts & sync**.

To access the phone settings

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings**.


To access the setup guide

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Setup guide**.


Time and date

You can change the time and date in your phone.


To set the date manually

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Date & time**.
- 3 Unmark the **Automatic** checkbox, if it is marked.
- 4 Tap **Set date**.
- 5 Tap **+** or **-** to adjust the date.
- 6 Tap **Set**.

To set the time manually

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Date & time**.
 - 3 Unmark the **Automatic** checkbox, if it is marked.
 - 4 Tap **Set time**.
 - 5 Tap **+** or **-** to adjust the hour and minute.
 - 6 Tap **AM** to change to **PM** or vice versa.
 - 7 Tap **Set**.
- ! If you want to use **AM** and **PM**, you have to unmark **Use 24-hour format**.

To set the time zone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Date & time**.
- 3 Unmark the **Automatic** checkbox, if it is marked.
- 4 Tap **Select time zone**.
- 5 Select an option.

To set the hour format


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Date & time > Use 24-hour format**.
- 3 Mark the checkbox to shift between 12 hour and 24 hour format.

To set the date format

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Date & time > Select date format**.
- 3 Select an option.


Ringtone settings

To set a phone ringtone


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display > Phone ringtone**.
- 3 Select a ringtone.

💡 If the phone is in **Silent mode**, unmark the **Silent mode** checkbox before you set the ringtone.


To enable touch tones

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display**.
- 3 Select the **Audible touch tones** or **Audible selection**.

To select a notification ringtone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display > Notification ringtone**.
- 3 Select a ringtone and tap **OK**.

To set the vibrating alert

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display**.
- 3 Mark the **Phone vibrate** checkbox.

Screen settings

Orientation

When you open the keyboard, the screen orientation changes automatically from portrait to landscape view. You can also set the phone to stay in portrait orientation by disabling the automatic orientation setting.


To prevent the screen orientation from changing automatically

- 1 From the **Home screen**, tap the applications bar.
 - 2 Tap **Settings > Sound & display**.
 - 3 Unmark the **Orientation** check box.
- ! Preventing the screen orientation from changing automatically means that the phone stays in portrait orientation.


To adjust the screen brightness


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display > Brightness**.
- 3 To decrease the screen brightness, drag the slider to the left. To increase the screen brightness, drag the slider to the right.
- 4 Tap **OK**.

To set the screen to vibrate


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display > Haptic feedback**. In some applications, the screen vibrates when you tap it.

To adjust the idle time before the screen turns off

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sound & display > Screen timeout**.
- 3 Select an option.

- 💡 To turn off the screen quickly, briefly press the power key .


To keep the screen on while charging the phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Applications > Development**.
- 3 Mark the **Stay awake** check box.

Phone language

You can select a language to use in your phone.

To change the phone language


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Language & keyboard > Select locale**.
- 3 Select an option.

! If you choose the wrong language and cannot read the menu texts, go to www.sonyericsson.com/support for help.

Flight mode

In Flight mode, no radio transmissions are made by the phone. You will not be able to turn on Bluetooth™ or Wi-Fi®.

To turn on Flight mode

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks**.
- 3 Mark the **Flight mode** checkbox.

💡 You can also press and hold  to turn on Flight mode.

Internet and messaging settings

To send text and multimedia messages and to access the Internet, you must have a 2G/3G mobile data connection and the correct settings. There are different ways to get these settings:

- For most mobile phone networks and operators, Internet and messaging settings come preinstalled on your phone. You can then start using the Internet and send messages right away.
- In some cases you will get the option to download Internet and messaging settings the first time you turn on your phone. It is also possible to download these settings later from the **Settings** menu.
- You can manually add and change Internet and network settings in your phone at any time. Contact your network operator for detailed information on your Internet and messaging settings.

To download Internet and messaging settings






- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sony Ericsson > Settings download**.

To view the current Access Point Name (APN)

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks**.
- 3 Tap **Access Point Names**.




! If you have several available connections, the active network connection will be indicated by a marked button to the right.

To configure Internet settings manually

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks > Access Point Names**.
- 3 Press .
- 4 Tap **New APN** .
- 5 Tap **Name** and enter the name of the network profile you want to create.
- 6 Tap **APN** and enter the access point name.
- 7 Tap and enter all other information required by your network operator.
- 8 Press  and tap **Save** .

💡 Contact your network operator for detailed information about your network settings.

To reset to the default Internet settings

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks > Access Point Names**.
- 3 Press .
- 4 Tap **Reset to default** .

Data traffic

Turning off data traffic

You can disable all data connections over 2G/3G networks with your phone to avoid any unwanted data downloads and synchronisations. Contact your network operator if you need detailed information about your subscription plan and data traffic costs.

- 💡 When data traffic is turned off, you can still use Wi-Fi® and Bluetooth™ connections. You can also send and receive multimedia messages.

To turn off all data traffic

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks**.
- 3 Unmark the **Data traffic** checkbox.

Data roaming

Depending on your network operator, it might be possible to allow mobile data connections via 2G/3G outside of your home network (roaming). Please note that data transmission charges may apply. Contact your network operator for more information.

- ! Applications may sometimes use the Internet connection in your home network without any notification, for example, when sending search and synchronisation requests.

To activate data roaming


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks**.
- 3 Mark the **Data roaming** checkbox.

Network settings


Your phone automatically switches between networks depending on availability. Some network operators allow you to switch networks manually, for example, if you are travelling abroad and want to use a particular network.

To save battery, you can limit your phone to only use GSM networks. Data downloads and uploads will however be slower. If you are going to download or upload large amounts of data, we recommend that you change to another network mode or connect to the Internet through a Wi-Fi® network.


To use GSM networks only

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks**.
- 3 Tap **Network Mode**.
- 4 Select **GSM only**.

To select another network manually

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks > Mobile networks > Network operators**.
 - 3 Tap **Select manually**.
 - 4 Select a network.
- ! If you select a network manually, your phone will not search for another network, even if you move out of range of the manually selected network.

To activate automatic network selection




- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Mobile networks > Network operators**.
- 3 Tap **Select automatically**.

Calling



Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

To make an emergency call





- 1 From the **Home screen**, tap .
 - 2 Enter the emergency number and tap . To delete a number, tap .
- 💡 You can make an emergency call without a SIM card inserted.

To make an emergency call while the SIM card is locked

- 1 Tap **Emergency call**.
- 2 Enter the emergency number and tap . To delete a number, tap .

Call handling



To make a call

- 1 From the **Home screen**, tap .
- 2 If the call log is shown, tap  to enter the dial pad view.
- 3 Enter the number of the recipient and tap . To delete a number, tap .

To end a call

- Tap .

To make an international call

- 1 From **Home screen**, tap .
- 2 Touch and hold down **0** until a “+” sign appears.
- 3 Enter the country code, area code (without the first 0) and phone number, then tap .

To answer a call



- Drag  to the right across the screen.

To decline a call

- Drag  to the left across the screen.

To mute the ringtone for an incoming call

- When you receive the call, tap .

To change the ear speaker volume during a call

- Press the volume key up or down.


To turn on the loudspeaker during a call

- Tap .

To mute the microphone during a call

- Tap .


To enter numbers during a call

- 1 During a call, tap . A keypad appears.
- 2 Enter numbers.


Recent calls

In the call log, you can view missed , received  and dialled  calls.





To view missed calls

- 1 When you have missed a call,  appears in the status bar. Drag the status bar downwards.
- 2 Tap the notifications for missed calls to open them in the call log.

To call a number from the call log

- 1 From the **Home screen**, tap .
- 2 If the dial pad is shown, tap  to enter the call log view.
- 3 Tap the number you want to call.


To add a number from the call log to your contacts

- 1 From the **Home screen**, tap .
- 2 If the dial pad is shown, tap  to enter the call log.
- 3 Tap  next to the number you want to add.
- 4 Tap an existing contact to add the number to that contact, or tap  for a new contact.
- 5 Edit the contact details and tap **Save**.


Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call. Usually, the voicemail number is saved on the SIM card. If not, contact your service provider to get your voicemail number. You can then enter the number manually.

To enter your voicemail number

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Call settings > Voicemail settings**.
- 3 Enter your voicemail number.
- 4 Tap **OK**.

To call your voicemail service

- 1 From the **Home screen**, tap .
- 2 Touch and hold down **1**.

Multiple calls

If you have activated call waiting, you can handle multiple calls at the same time. When it is activated, you will be notified by a beep if you receive another call.

To activate or deactivate call waiting

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Call settings > Additional settings**.
- 3 To activate or deactivate call waiting, tap **Call waiting**.

To reject a second call

- When you hear repeated beeps during a call, tap **Busy**.



To answer a second call and end the ongoing call

- When you hear repeated beeps during a call, tap **Replace**.

To answer a second call and put the ongoing call on hold

- When you hear repeated beeps during a call, tap **Answer**.

To make a second call

- 1 During an ongoing call, tap .
- 2 Enter the number of the recipient and tap .
- 3 If the recipient answers, the first call is put on hold.

- 💡 The same procedure applies to subsequent calls.

To switch between multiple calls

- To switch to another call and put the current call on hold, tap the desired number or contact.




To end the ongoing call and return to the next call on hold

- Tap .

Conference calls

With a conference or multiparty call, you can have a joint conversation with two or more persons.

To make a conference call

- 1 During an ongoing call, tap .
- 2 Dial the number of your second participant and tap .
- 3 If the second participant answers, the first call is put on hold.
- 4 Tap .

- 💡 To add more participants, repeat steps 1 to 4.

To end a conference call


- During the call, tap .

Call settings


Forwarding calls

You can forward calls, for example, to another phone number, or to an answering service.

To forward calls

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > **Call forwarding**.
- 3 Select an option.
- 4 Enter the number you want to forward the calls to and tap **Enable**.

To turn off call forwarding

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > **Call forwarding**.
- 3 Select an option.
- 4 Tap **Disable**.

Showing or hiding your phone number

You can select to show or hide your phone number on call recipients' devices when you call them.

To show or hide your phone number

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > Additional settings > **Caller ID**.
- 3 Select an option.


Fixed Dialling Numbers

If you have received a PIN2 code from your service provider, you can use a list of Fixed Dialling Numbers (FDN) to restrict outgoing and incoming calls.

To enable or disable fixed dialling

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > **Fixed Dialling Numbers**.
- 3 Tap **Enable FDN** or **Disable FDN**.
- 4 Enter your PIN2 and tap **OK**.


To access the list of accepted call recipients

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > **Fixed Dialling Numbers** > **FDN list**.

Telephone Typewriter (TTY)

Telephone Typewriter (TTY) is a telecommunications device for a deaf or speech impaired person which allows text communication on a standard phone call to be transmitted to another phone. If you use a TTY (Telephone Typewriter) device, you can enable your phone to communicate with it.

To enable a TTY mode


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Call settings** > **TTY mode**.
- 3 Select an option.

Phonebook

In the **Phonebook** application, you can enter information for your personal contacts, for example, phone numbers and email addresses. When you view a contact, you get quick access to all communication with that contact.

- 💡 If you have set up your phone for use with a synchronisation service account, you can synchronise your phone contacts with the account contacts. When you create or import contacts, you are asked to select if you want to synchronise the newly created or imported contacts with the account, or if you only want to use them in the phone (**Phone contact**). See *Synchronising* on page 58.

To view your contacts

- From the **Home screen**, tap  to open the **Phonebook** application.
- 💡 If you have not set up your phone for synchronisation with a web service, or imported SIM contacts, you can choose to do so the first time you open the **Phonebook** application. If you want to use the contacts you import from your SIM/memory card with a synchronisation service, you need to set up the synchronisation with the service before you import the contacts from the SIM/memory card.



Getting contacts into your phone

You can get existing contact information into your phone in several different ways.

- You can use a synchronisation service, such as Sony Ericsson Sync or Google Sync™. This way, you can manage your contacts both directly in the phone, or by using a computer. If you want to use contacts with a synchronisation account later, but you want to transfer the contacts using any of the methods below, make sure you set up the synchronisation before you transfer the contacts to your phone.
- You can import contacts from a SIM card. Not all information may be possible to transfer from one phone to another this way, due to the limited memory on a SIM card. Also, some phones do not support export of contacts to a SIM card.
- You can import contacts from a memory card. It may not be possible to transfer contacts from one phone to another this way, since some phones do not support import or export of contacts to a memory card.
- You can use a Bluetooth™ connection. If you want to use this method for transferring contacts from one phone to another, note that some phones need to have a SIM card inserted to use the Bluetooth™ function.
- You can send contacts using messaging services such as SMS, MMS or email. Not all phones support sending of contacts using messaging services.


To synchronise your phone contacts with an account

- 💡 If you want to transfer contacts from your old phone to your phone using this method, you need to synchronise your old phone contacts with the account first. See the User guide of your old phone.

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Accounts**.
- 3 To set up an account, tap **Add account** and follow the on-screen instructions. To synchronise with an account you have already set up, tap the account.

To import contacts from the SIM card

- 💡 If you want to transfer contacts from your old phone to your phone using this method, you need to export your old phone contacts to the SIM card first. See the User guide of your old phone.

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Import/export** > **Import from SIM card**.
- 3 Tap **OK**.

To import contacts from the memory card

💡 If you want to transfer contacts from your old phone to your phone using this method, you need to export your old phone contacts to the memory card first. See the User guide of your old phone.

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Import/export** > **Import from memory card**.
- 3 Select an option and tap **OK**.

To receive contact data sent using Bluetooth™ technology

💡 To receive data from other devices using Bluetooth™ technology, you need to have the Bluetooth™ function turned on and your phone set to visible. If you want to use this method for transferring contact data from your old phone using Bluetooth™ technology, see the User guide of your old phone.

- 1 When you are asked to allow a Bluetooth™ connection to your phone, tap **OK**.
- 2 When you are asked to save the contacts, tap **OK**.

To receive contacts sent using a messaging service

💡 If you want to use this method for transferring contact data from your old phone, see the User guide of your old phone.



- 1 When you receive a new text message, multimedia message, or email message, open the message.
- 2 The received contact data appears as a vCard attachment. Tap, or touch and hold, the vCard file to open a menu so you can save the contact data.

Managing your contacts




Create, edit and synchronise your contacts in a few simple steps. Select to display only the contacts you want to use in the phone. If you synchronise your contacts with more than one account, you can join contacts in your phone to avoid duplicates.

! Some synchronisation services, for example some social networking services, do not allow you to edit contact details.

To select which contacts to display

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Contacts to view**.
- 3 In the list that appears, mark and unmark the desired options. If you have synchronised the contacts with an account, that account appears in the list. You can tap the account to expand the list of options further. When you are finished, tap **OK**.

To add a contact

- 1 From the **Home screen**, tap .
 - 2 Tap .
 - 3 If you have synchronised your contacts with an account, select if you want to use this contact for the account, or if you want to use it only in the phone.
 - 4 Tap **Name**, enter the name and tap **Next**.
 - 5 Enter the phone number and tap **Done**.
 - 6 To add an additional information field, such as an email address or another phone number, tap **Add more** and select the desired address type.
 - 7 To add a contact picture, tap  and select a picture or take a photo.
 - 8 To select a contact ringtone, scroll down, tap **Add more** > **Ringtone**, select a ringtone and tap **Done**.
 - 9 When you are finished, scroll up and tap **Save**.
- 💡 The phone number type is selected automatically when you enter the number. You can tap the number type field to change it, for example, from **Mobile** to **Home**.
- 💡 If you add a plus sign and the country code before a contact phone number, you can use the number when you make calls from other countries.

Contact details screen



- | | |
|---|---|
| 1 | Contact picture |
| 2 | The contact is a favourite |
| 3 | Phone number of the contact |
| 4 | Infinite button for access to all communication in Timescape™ |
| 5 | The contact is linked to a web service contact |
| 6 | Send a text or multimedia message to the contact |
| 7 | Edit the contact |

To edit a contact

- 1 From the **Home screen**, tap
- 2 Tap the contact you want to edit.
- 3 Scroll down and tap **Edit**.
- 4 Edit the desired information. When you are finished, scroll up and tap **Save**.

To join contacts

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to join with another contact, then tap **Edit**.
- 3 Press , then tap **Join contacts**.
- 4 Select the contact you want to join with from the list of suggestions, or tap **All contacts** and select from all contacts.
- 5 Tap **OK**.


To separate contacts

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to edit.
- 3 Scroll down and tap **Edit**.
- 4 Press , then tap **Separate contacts**.
- 5 Tap **OK**.

To delete a contact

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to delete.
- 3 Scroll down and tap **Edit**.
- 4 Scroll down and tap **Delete contact** > **Delete**.

To delete all contacts

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings**.
- 3 Tap **Applications > Manage applications**.
- 4 Tap **Contacts Storage**.
- 5 Tap **Clear data**.

To export contacts to the SIM card

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Import/export > Export to SIM card**.
- 3 Tap **OK**.

! When you export contacts to your SIM card, the amount and the type of information you can transfer for each contact is limited. This is due to limited memory on SIM cards.

To export all contacts to the memory card


- 1 From the **Home screen**, tap .
- 2 Press , then tap **Import/export > Export to memory card**.
- 3 Tap **OK**.

Communicating with your contacts



To search for a contact

- 1 From the **Home screen**, tap .
- 2 Tap **Search**.
- 3 Enter the first letters of the contact name you are searching for.
- 4 The hits appear in a list. If you get more than one hit, tap the down arrow to see the full list of hits.
- 5 Scroll to and tap the desired contact.

To call a contact


- 1 From the **Home screen**, tap .
- 2 Tap the contact.
- 3 Tap the desired phone number of the contact.

To send a text or multimedia message to a contact



- 1 From the **Home screen**, tap .
- 2 Tap the contact.
- 3 Tap  next to the desired phone number of the contact.
- 4 Edit the message and tap **Send**.

! You can only send text messages and multimedia messages to mobile phone numbers.

To send an email message to a contact

- 1 From the **Home screen**, tap .
- 2 Tap the contact.
- 3 Tap the desired email address for the contact.
- 4 Edit the message and tap **Send**.

To view all communication with a contact in Timescape

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to view the communication for.
- 3 Tap . If you have never used Timescape before, tap **Continue**.
- 4 All missed calls, text and multimedia messages, Facebook and Twitter updates from the contact are displayed in Timescape.



Favourites

You can mark a contact as a favourite for quick access. In the favourites view, a contact is represented by its picture. If one of your favourite contacts does not have a picture, that contact is given a default picture.



To mark or unmark a contact as a favourite

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to add to or remove from your favourites.
- 3 Tap **Edit** > **Favourite** > **Save**.

To access your favourite contacts

- 1 From the **Home screen**, tap .
- 2 Tap the  tab. The favourites appear as thumbnails.


To add a contact picture

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to add a picture to.
- 3 Scroll down and tap **Edit**.
- 4 Tap .
- 5 If you want to select a picture from the camera album, tap **Photos** and select a photo. If you want to take a photo with the camera, tap **Take new photo** and take the picture.
- 6 Crop the picture by using the frame and tap **Save**.
- 7 Scroll up and tap **Save**.


 You can also add a picture to a contact from **Album**.

Sharing your contacts

To send a contact

- 1 From the **Home screen**, tap .
- 2 Tap the contact you want to send, then tap **Send contact**.
- 3 Select an available transfer method, and follow the on-screen instructions.

To send all contacts






- 1 From the **Home screen**, tap .
- 2 Press , then tap **Send all contacts**.
- 3 Select an available transfer method, and follow the on-screen instructions.

Multimedia and text messaging




Using text and multimedia messaging

You can send and receive text messages from your phone using SMS (Short Message Service). If your subscription includes MMS (Multimedia Messaging Service), you can also send and receive messages that contain media files, for example, pictures and videos. A single text message may contain up to 160 characters. Longer messages are concatenated and sent as multiple messages. You are charged for each of the messages sent. When you view your messages, they appear as conversations, which means that the messages are grouped per recipient.


To create and send a message

- 1 From the **Home screen**, tap .
 - 2 Tap **New message**.
 - 3 Tap **Write message**, enter your message text and tap **Next**.
 - 4 To add a recipient, select a contact, or enter the full number manually in the text input field and tap **Done**.
 - 5 If you want to add a media file, tap  and select an option.
 - 6 If you want to add, remove or edit the recipients further before sending the message, press , then tap **Edit recipients**. Tap a recipient field to edit the recipient number, or tap  next to a recipient field to remove the recipient. When you are finished, tap **Done**.
 - 7 To send the message, tap **Send**.
-  If you exit a message before sending, it will be saved as a draft. The conversation will be tagged with the word **Draft**.


To read a received message

- 1 From the **Home screen**, tap .
 - 2 Tap the desired conversation.
 - 3 If the message is not downloaded yet, touch and hold the message, then tap **Download message**.
-  When you receive a text or multimedia message,  appears in the status bar. To read the message, you can also drag the status bar downwards and tap the received message when the status bar is open.


To reply to a message

- 1 From the **Home screen**, tap .
- 2 Tap the desired conversation.
- 3 Enter your reply and tap **Send**.



To forward a message

- 1 From the **Home screen**, tap .
- 2 Tap the desired conversation.
- 3 Touch and hold the message you want to forward, then tap **Forward message**.
- 4 Select a recipient from the list, or tap **New conversation** to add a recipient who is not in the list.
- 5 Edit the message and tap **Send**.




To delete a message

- 1 From the **Home screen**, tap .
- 2 Tap the desired conversation.
- 3 Touch and hold the message you want to delete, then tap **Delete message** > **Yes**.



To delete conversations

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Delete several**.
- 3 Mark the checkboxes for the conversations you want to delete, then tap **Delete**.


To save a sender's number to a contact

- 1 From the **Home screen**, tap .
- 2 Tap a conversation.
- 3 Tap the sender's number at the top of the screen.
- 4 Tap .
- 5 Select an existing contact, or tap  if you want to create a new contact.
- 6 Edit the contact information and tap **Save**.

To call a message sender



- 1 From the **Home screen**, tap .
- 2 Tap a conversation.
- 3 Tap the recipient's number at the top of the screen.
- 4 If the number is saved in your contacts, tap the phone number for the contact you want to call. If you have not saved the number in your contacts, tap .

To save a file received in a message




- 1 From the **Home screen**, tap .
- 2 Tap the desired conversation.
- 3 If the message has not been downloaded yet, touch and hold the message, then tap **Download message**.
- 4 Touch and hold the message, then select the desired option.

Text and multimedia message options



To change the notification settings for messages

- 1 From the **Home screen**, tap .
- 2 Press , then tap **Settings**.
- 3 If desired, tap **Notification tone** and select a notification sound.
- 4 If desired, select the **Notification vibration** setting.

To change the delivery report settings for outgoing messages

- 1 From the **Home screen**, tap .
 - 2 Press , then tap **Settings**.
 - 3 Tap **Delivery report** to activate or deactivate the delivery report.
- ! When a message has been delivered to the recipient,  is shown in the message.

To view messages saved on the SIM card


- 1 From the **Home screen**, tap .
- 2 Press , then tap **Settings** > **SIM messages**.

Email

You can use your phone to send and receive emails through your regular email account.




- 💡 You can set up synchronisation with a Microsoft® Exchange Server by using the Dataviz® RoadSync™ application in your phone. You can then use the **RoadSync Mail** application in your phone with your Microsoft® Exchange Server email account. Go to www.dataviz.com for more information.

To set up an email account in your phone




- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Email**.
 - 3 Enter your email address and password and tap **Next**.
 - 4 If the settings for the email account cannot be downloaded automatically, you can complete the setup manually.
- ! If you need to enter the settings manually, contact your email service provider for the correct email account settings. For example, you need to know if the server type is POP3 or IMAP.

Using email


To create and send an email message

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 If you are using several email accounts, tap the account you want to send the message from.
- 4 Tap **Write new**.
- 5 Tap **To:** and enter the recipient's address, then tap **Done**. You can add more recipients the same way, or delete a recipient by tapping .
- 6 Tap **Subject**, enter the subject and tap **Done**.
- 7 Tap **Write email**, enter the message text and tap **Done**.
- 8 To attach a file, tap  and select the type of file to attach.
- 9 Tap **Send**.


To receive and read email messages

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Email**.
 - 3 If you are using several email accounts, tap the account that you want to check for new messages for, then tap **Inbox**.
 - 4 To update the inbox with new messages, tap .
 - 5 Tap a message that you want to read.
- 💡 If you press  when you are viewing all your email accounts, you will update the inbox for all email accounts.


To use an email message attachment

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Find and tap the desired message.
- 4 If necessary, tap the attachment to download it.
- 5 Tap the icon in the left corner, then select an option.



To reply to an email message

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Find and tap the message you want to reply to.
- 4 Scroll down the message and tap **Reply** or, if there are many recipients, **Reply all**.
- 5 Tap the message text field, enter the message text and tap **Done**.
- 6 Tap **Send**.



To forward an email message

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Find and tap the message you want to forward.
- 4 Scroll down the message and tap **Forward**.
- 5 Tap **To:**, enter the recipient's address and tap **Done**.
- 6 Tap the message text field, enter the message text and tap **Done**.
- 7 Tap **Send**.

To save a sender's email address to your contacts



- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Find and tap the desired message.
- 4 Tap the sender's field at the top of the screen.
- 5 Tap the email address under **From:**, then tap **Save contact**.
- 6 Select an existing contact, or tap  if you want to create a new contact.
- 7 Edit the contact information and tap **Save**.

To delete email messages



- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Find and tap the folder containing the messages you want to delete.
- 4 Press , then tap **Delete several**.
- 5 Mark the checkboxes for the messages you want to delete, then tap **Delete**.

Email accounts




To add an extra email account in your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Press , then tap **Add account**.
- 4 Enter your email address and password and tap **Next**.
- 5 If the settings for the email account cannot be downloaded automatically, you can complete the setup manually.



To set an email account as the default account to use

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Tap the account you want to set as default.
- 4 Press , then tap **Account settings**.
- 5 Mark the **Default account** checkbox.



To remove an email account from your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Press , then tap **Account settings**.
- 4 Press , then tap **Delete account > OK**.

To change the email check frequency

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Email**.
- 3 Press , then tap **Account settings > Email check frequency** and select an option.


To change the inbox size for an account

- ! The number of messages that are shown in the phone depend on the inbox size. Only the latest received messages are shown.
- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Email**.
 - 3 Press , then tap **Account settings > Inbox size** and select an option.


Gmail™

If you have a Google™ account, you can use it with the Gmail™ application in your phone. When you have set up the Google™ account in your phone, you can chat using the Google Talk™ application and synchronise your phone calendar application with your Google Calendar™.

To set up a Google™ account in your phone

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Accounts & sync > Add account > Google™**.
 - 3 Follow the registration wizard to create a Google™ account, or sign in if you already have an account.
 - 4 Your phone is now ready to use with Gmail™, Google Talk™ and Google Calendar™.
- 💡 It is also possible to set up, or create, a Google™ account from the setup wizard the first time you start your phone. You can also create a Google™ account by going to www.google.com/accounts in the web browser of your computer.


To open the Gmail™ application

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Gmail™**.


Google Talk™

You can use Google Talk™ instant messaging in your phone to chat with friends who also use this application.

To start Google Talk™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Talk**.

To reply to an instant message with Talk


- 1 When someone contacts you on **Talk**,  appears in the status bar.
- 2 Drag the status bar downwards, then tap the message and begin to chat.

Sony Ericsson Timescape™

Sony Ericsson Timescape™ revolutionises your social experience by collecting all your communications into one view. Every event – Facebook or Twitter updates, text and multimedia messages, missed calls – appears as a tile in a chronological flow on the screen. You can see a snack-size preview of an event before choosing to view the full content. You can filter by event type to view all communications for a contact.

- 💡 The services and features described in this chapter may not be supported in all countries/regions or by all networks and/or service providers in all areas.

To start Timescape™

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Timescape™**.
 - 3 The first time you start Timescape, you can tap **Log in** and log in to your **Facebook** or **Twitter** account to receive **Facebook** and **Twitter** updates in Timescape. If you do not want to log in, tap **Continue**.
- 💡 If you are already logged in to Facebook, Twitter, or another online service while setting up the phone for the first time, when you start Timescape™, the welcome screen will not be displayed and you are not required to log in again.
 - 💡 If you are not logged in and you tap **Continue**, then you can always log in from the Home screen by tapping **Settings > Sony Ericsson > Timescape™ settings**.

The Timescape™ start screen



- | | |
|---|---|
| 1 | Tile filter icon |
| 2 | Status update icon |
| 3 | Go to contact icon |
| 4 | Refresh icon (only visible if you are logged in to a web service account) |
| 5 | Timescape™ tiles, in chronological order |
| 6 | Tile content icon |

Using Timescape™

To scroll through tiles in Timescape™





- Touch and hold a tile, then drag it up or down.

To preview a tile in Timescape™



- Scroll to the tile you want to preview.

Tile icons


The following icons on a tile indicate a type of event. When you are previewing a tile, you can tap the icon or the tile to view the related event.

- | | |
|---|---------------------------------|
|  | A missed call |
|  | A text or multimedia message |
|  | A Twitter update from a friend |
|  | A Facebook update from a friend |


To update your Facebook or Twitter status in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Tap .
- 4 Tap **Select services**.
- 5 Use the toggles to select the services for which you want to update your status. If you want to update your status for a service you are not logged in to, tap the service and log in to it. When you have selected the desired services, tap **Done**.
- 6 Tap **Edit status**, enter your new status, and tap **Send**.


To view an event in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to the tile for the desired event, then tap the tile.




To call back from Timescape™ when you have a missed call

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to the tile representing the missed call, then tap the tile.
- 4 In the list of calls, tap the desired number.



To reply to a text or multimedia message in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to a text or multimedia message tile, then tap the tile.
- 4 Edit the message and tap **Send**.



To add a number from a Timescape tile to a contact


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to the tile containing the number you want to add to your contact.
- 4 Tap .
- 5 Select the contact to which you want to add the number, or tap  to create a new contact.
- 6 Edit the contact details and tap **Save**.

To link a web service contact to a phone contact in Timescape™


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to a tile representing an update from the web service contact.
- 4 Tap , then tap **OK**.
- 5 Tap the phone contact which you want to link to the web service contact, then tap **OK**.

To refresh the start screen in Timescape™



- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Tap .


 When you refresh the start screen in Timescape™ your phone connects to the Internet to update information from your Twitter, Facebook or other available online service accounts. You can only refresh the start screen if you are logged in to at least one web service.

To filter the events displayed in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Tap the tile filter icon on the top left corner.
- 4 Select the types of events you want to view. You can filter on web services, **Messages**, **Missed calls**, or view all communications with a contact.



To view all communication with a contact

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Scroll to the tile for the contact you want to view.
- 4 Tap .
- 5 Tap the contact name.



 You can only view all communication with a contact if the contact is saved in **Contacts**.

Timescape™ settings



To access Timescape™ settings

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Press , then tap **Settings**.



To change the events displayed in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Press , then tap **Settings** > **Select content**.
- 4 Tap the desired checkboxes, then tap **Done**. If you are not logged in to a web service you want to select, tap the service and enter your login details.




To clear Timescape™ content

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Press , then tap **Settings** > **Clear content**.
- 4 Tap the content you want to clear, then tap **OK**.



To schedule web service content updates in Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Press , then tap **Settings** > **Schedule updates**.
- 4 Tap the desired option. If you select **Manual**, no automatic updates will be made.

To log in to Facebook™ or Twitter™ from Timescape™

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Timescape™**.
 - 3 Press , then tap **Settings > Services**.
 - 4 Tap the service you want to log in to.
 - 5 Enter your login details.
-  When you have logged in to a web service, you can update your status or view updates from the web service in Timescape™.

To log out of Facebook™ or Twitter™ from Timescape™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Timescape™**.
- 3 Press , then tap **Settings > Services**.
- 4 Tap the service you want to log out of, then tap **Log out**.

Timescape™ widget

For quick access, the Timescape™ widget can be added on the **Home screen**. See *Home screen* on page 10.

Applications and content

You can personalise and find new ways to use your phone by downloading additional applications and content. Use the PlayNow™ service, the Android™ Market application store or browse the web to find useful applications, games, dictionaries, RSS readers, or anything your imagination allows.

Before you download applications and content

Before you download, make sure that you have an Internet connection. Also, you may need to have a memory card inserted in your phone to download content, such as music, ringtones and themes.

- ! When you download content to your phone, you might be charged for the amount of data transferred. Contact your operator for information about data transfer rates in your country.


Android™ Market

When you open Android™ Market you enter a world of applications and games. You can browse the applications and games through categories and top downloads. You can also rate an application or game and send feedback on it.

To use Android™ Market, you need to have a Google™ account. See *To set up a Google™ account in your phone* on page 42.

- ! Android™ Market may not be available in all countries or regions

To open Android™ Market

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Market**.

Payment options

When you download paid applications from Android™ Market, your purchase is handled through Google Checkout™. In some cases, you can download free trial versions of applications through Android™ Market, but if you want to continue using the application, the download and payment of the full version must be made through the manufacturer's web page.

- **Google Checkout™** – Google Checkout is an online payment processing service. It offers, for example, information about your purchase history, and gives you protection from credit card fraud by not giving your full credit card number to the vendor. You can use your Google email account to log in to Google Checkout in your phone, or you can sign up for a new Google Checkout account. Payment can be made with a credit, debit, or gift card. Some vendors may also accept payment through your phone billing account.
- ! It is not possible to buy applications through Android™ Market in all countries.

Downloading from Android™ Market

You can download applications from Android™ Market. If you pay for an application through Google Checkout, it will be tied to your Google account so that the application can be installed an unlimited amount of times on any device.


To download a free application

- 1 In Android™ Market, find an item you wish to download by browsing categories, or by using the search function.
- 2 Tap the item to view its details.
- 3 Tap **Install**.
- 4 An additional screen might appear, showing the application's access rights to parts of your phone, such as Internet access. Tap **OK** if you agree, or **Cancel** if you wish to cancel the download.

To download a paid application


- 1 In Android™ Market, find an item you wish to download by browsing categories, or by using the search function.
- 2 Tap the item to view its details.
- 3 Tap **Buy**.
- 4 Enter your username and password to log in to Google Checkout. You can use your Google email account, or create a new Google Checkout account.
- 5 Once you are logged in, follow the instructions in your phone to complete your purchase.

To open a downloaded application



- 1 In Android™ Market, press , then tap **Downloads**.
 - 2 Tap the downloaded application.
- ! You can also access downloaded applications from the applications panes.

PlayNow™ service

You can use the PlayNow™ service to download applications, games and music. The PlayNow™ service offers both free and non-free downloads. You can download items from your phone, or from your computer.

-  The PlayNow™ service is not available in all countries.

To start PlayNow™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap .

Registering for a PlayNow™ account

You can download content from the PlayNow™ service without registering for an account, but registration will give you some benefits. You will be able to pay using your credit card, and review your purchase and download history. You can also download all your music twice; once to your mobile and once in high-quality MP3 format to your computer. By registering, you will be able to redeem vouchers.

To register a PlayNow™ account

- 1 Tap , then press .
- 2 In the menu, tap **Login > Sign up**.
- 3 Enter your personal information, and then tap **Sign up**.

Payment options

There are two ways to pay for applications and other content you purchase from the PlayNow™ service:

- **Credit card** – pay with your credit card. You need to be logged in to your PlayNow™ account to be able to pay with your credit card. If you pay by credit card, the price will be lower than if you pay using Premium SMS. All your personal data is securely transferred using Secure Sockets Layer (SSL) encryption. When your purchase has been validated, the download will start automatically.
 - **Premium SMS** – pay using SMS when you are in your home country. You do not have to be a registered user to pay for content using the Premium SMS method. Your purchased items will be automatically downloaded to your phone.
- ! Both payment options are not always available in all countries, or with all service providers.


Vouchers

Vouchers are codes to access free content such as music, applications and games offered in a campaign.

You can access the vouchers option, when you register for PlayNow. Ask your network operator for more information on voucher offerings and their codes in a specific campaign.

- ! Vouchers and campaigns are not available in all countries and on all networks. If the voucher service is not available in your country, you cannot access the vouchers option in your phone.

To redeem a voucher

- 1 From the **PlayNow™** screen, .
- 2 Tap **Voucher**.
- 3 Enter the voucher code.
- 4 Tap **Redeem Voucher**.

- ! Vouchers are not offered in all countries or on all networks.


Downloading from the PlayNow™ service

You can download content from the PlayNow™ service both from your phone and from your desktop browser. Choose from a variety of applications, games and music.

To download an item from your phone

- 1 Open the PlayNow™ service and find an item you want to download by browsing categories, or by using the search function.
- 2 Tap the item to view its details.
- 3 Select to buy the item using your credit card or premium SMS. The item will start to download automatically.

To access a downloaded item

- 1 In the PlayNow™ service, press , then tap **Downloads**.
- 2 Tap the downloaded item.

Downloading from the web


You can download applications and content when you browse the web using the web browser in your phone. Usually you have to touch a download link for the desired file and the download then starts automatically.


To view your downloaded files

- 1 From the **Browser** screen, press .
- 2 Tap **More > Downloads**.


Managing applications

Application menu

You can open a menu at any time when you are using an application by pressing the  key on your phone. The menu will look different depending on which application you are using.

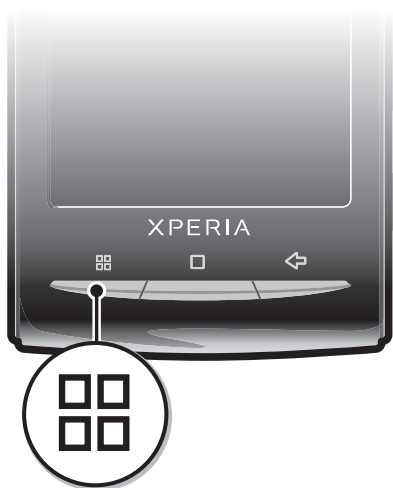


To open a menu in an application

- While using the application, press .
- ! A menu is not available in all applications.


Clearing your application data

You may sometimes need to clear data for an application. This might happen if, for example, the application memory becomes full, or you want to clear high scores for a game. You might also want to erase incoming email, text and multimedia messages in some applications.

To clear all data for an application

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings**.
 - 3 Tap **Applications > Manage applications**.
 - 4 Tap the desired application.
 - 5 Tap **Clear data**.
- ! It is not possible to clear the data for some applications.


To delete an installed application

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings**.
 - 3 Tap **Applications > Manage applications**.
 - 4 Tap the desired application.
 - 5 Tap **Uninstall**.
- ! It is not possible to delete some preinstalled applications.

Permissions

Some applications need to access parts of your phone to be able to work properly. For example, a navigation application needs permissions to send and receive data traffic, and access your location. Some applications might misuse their permissions by stealing or deleting data, or reporting your location. Make sure you only install and give permissions to applications you trust.


To view permissions of an application

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings**.
- 3 Tap **Applications > Manage applications**.
- 4 Tap the desired application.
- 5 Scroll down to view **Permissions**.

Installing applications from unknown sources

Installing applications of unknown or unreliable origin can damage your phone. By default, your phone is set to block such installations. However, you can change this setting and allow installations from unknown sources.

To allow the installation of applications from unknown sources

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Applications**.
- 3 Mark the **Unknown sources** checkbox.

Copyright-protected content



Some listed items or content that you want to access, for example, applications, games or music albums, may be copyright-protected by DRM (Digital Rights Management). You need to buy or renew a license to be able to use copyright-protected content. You might not be able to copy, send or transfer copyright-protected items.

DRM Settings

From the **DRM settings** menu, you can change your DRM settings:

- **DRM Reset** – Clear all DRM data, such as licenses and license consumption information. When DRM-protected files, applications or services have been deleted, or are no longer in use, you can select **DRM Reset** to free memory in the phone.

To reset your DRM data

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Sony Ericsson > DRM settings**.
 - 3 Tap **DRM Reset**.
-  If you have bought DRM-protected content, for example, music, games or applications, you might not be able to use such content after you have reset your DRM data.


Getting organised

Calendar


Your phone has a calendar for managing your time schedule. If you have a Sony Ericsson account or a Google™ account, you can also synchronise your phone calendar with your web calendar. See *Synchronising* on page 58.

- 💡 You can set up synchronisation with a Microsoft® Exchange Server by using the Dataviz® RoadSync™ application in your phone. You can then use the **RoadSync Calendar** application in your phone with your Microsoft® Exchange Server calendar. Go to www.dataviz.com for more information.


To open the Calendar application

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Calendar**.
- 💡 When you open the **Calendar** application for the first time, it opens in month view.


Calendar month view

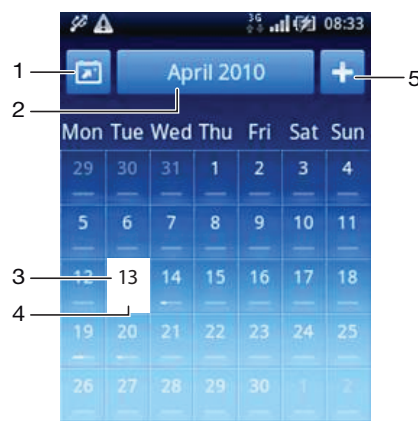

- 1 View current month (only available when viewing another month than the current)
- 2 Select a month
- 3 Current day
- 4 Meetings indicator. A completely white bar indicates meetings throughout the day
- 5 Add appointment

- 💡 When you are using landscape screen view, the items 1, 2 and 5 above do not appear on the screen. To add an appointment, or go directly to a month, press .








To switch between day and month view

- 1 To switch from month view to day view, tap the desired day.
- 2 To switch from day view to month view, press .


To view other days and months

- In the month view and day view, flick left to view the previous day or month, or flick right to view the next day or month.
- 💡 In the month view, you can also tap the month selector at the top of the screen to change the month.


To create a calendar event

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Calendar**.
 - 3 Tap .
 - 4 Tap **Subject**, enter a subject and tap **Done**.
 - 5 Tap **Time**. Tap a number field and scroll up or down to select the desired hour or minute. Tap **Done**.
 - 6 Tap **Date**. Tap a number field, then scroll up or down and tap the desired date. Tap **Done**.
 - 7 If you synchronise your phone calendar with multiple calendars, tap **Calendar**, tap the desired calendar for the appointment and tap **Done**.
 - 8 Tap **Reminder**. Tap a number field, then scroll up or down and tap the desired number. Tap **Done**.
 - 9 Tap **Location** and **Description**, if relevant.
 - 10 If you want to set a recurring appointment, tap **Recurrence**, mark the desired option and tap **Done**.
 - 11 Scroll up and tap **Save**.
-  In step 3 you need to press  to add an appointment when you are using landscape screen view.
-  When the appointment time approaches, your phone plays a short sound to remind you. Also,  appears in the status bar.
-  For events that last overnight, you need to select a start and end date before you set a start and end time.


To view a calendar event

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Calendar**.
- 3 Navigate to the desired day, then tap the event.


To edit a calendar event

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Calendar**.
- 3 Navigate to the desired day, then tap the event.
- 4 Tap **Edit**, edit the information and tap **Save**.



To delete a calendar event

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Calendar**.
- 3 Navigate to the desired day, then tap the event.
- 4 Tap **Edit**.
- 5 Scroll down and tap **Delete appointment** at the bottom of the screen.

To view an event reminder

- When the reminder icon  appears in the status bar, drag the status bar downwards, then tap the event reminder.

To dismiss an event reminder

- 1 When the reminder icon  appears in the status bar, drag the status bar downwards. The notification panel opens.
- 2 Tap the desired event.
- 3 Press .

Synchronising your calendar





If you have a Sony Ericsson account or a Google™ account, you can also synchronise your phone calendar with your web calendar. See *Synchronising* on page 58.

- 💡 If you synchronise with Google Calendar™ and have access to multiple shared calendars in Google Calendar™, all appointments from all of the shared calendars will appear in the calendar view of your phone.


Notes

You can use the Notes application to write short messages and lists. You can also set reminders for notes you enter.


To add a note

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Notes**.
- 3 Tap **Add note**, enter some text and tap **Done**.
- 4 If you want to set a reminder, tap . To change a number, tap the number, then scroll to and tap the desired number. When you are finished, tap **Done**.
- 5 If you want the note to appear on the Home screen, tap .
- 6 When you are finished, press .



To view and edit a note

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Notes**.
- 3 Scroll through the notes and tap the note you want to edit.
- 4 Edit the text and tap **Done**.

To view a note reminder

- When the reminder icon  appears in the status bar, drag the status bar downwards, then tap the note reminder.


To delete a note

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Notes**.
- 3 Scroll through the notes and tap the note you want to delete.
- 4 Tap , then tap **Delete**.


Alarm clock

You can use your phone as an alarm clock. You can use any sound in your phone as an alarm signal. If the phone is set to silent mode, the alarm signal will still sound.

To open the alarm clock


- 1 From the **Home screen**, drag  upwards.
- 2 Find and press **Alarm**.

To set an alarm


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap **Add new**.
- 4 To adjust a time, tap it, scroll the bar up or down, and tap the desired time.
- 5 If you use 12-hour format, tap **am** or **pm** and select an option.
- 6 Tap **Done**.

- 💡 The alarm will use 12- or 24-hour format depending on the time settings for the phone.


To add another alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap **Add new**.
- 4 Set the time and tap **Done**.


To deactivate an alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Drag the slider button to the left to grey out the alarm clock icon. The alarm is now deactivated.


To activate an existing alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Drag the slider button to the right to turn on the alarm.


To delete an alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap the desired alarm.
- 4 Tap **Delete**.


To set the alarm signal

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap the desired alarm.
- 4 Tap **Alarm signal**.
- 5 Select an option.
- 6 Tap **Done**.

To set a recurring alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap the desired alarm.
- 4 Tap **Recurrence**.
- 5 Mark the checkboxes for the desired days, then tap **Done**.

To set a title for an alarm

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Alarm**.
- 3 Tap the desired alarm.
- 4 Tap **Alarm text** and write something in the text field.
- 5 Tap **Done**.

To turn off or snooze an alarm when it sounds



- When the alarm signal is ringing, drag the slider to the right to turn it off, or tap **Snooze** to snooze it.

NeoReader™ application


Use the NeoReader™ application in your phone, to scan bar codes from print ads, publications, packaging, billboards, retail displays, broadcast media, and other media. Depending on what types of codes you scan, you will be directly linked to, for example, a web page, a location on a map, or a web page with information about a product. By scanning bar codes you do not have to enter long web addresses manually, or use search engines, to access the information you want.

The NeoReader™ application scans standard code types, such as Data Matrix, QR codes, Aztec Codes, and Code 128.


To start the NeoReader™ application

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap  **NeoReader™**.

To scan a bar code










- 1 In the NeoReader™ application, hold the phone camera over the bar code until the complete bar code is visible in the viewfinder.
- 2 The phone automatically scans the bar code, and vibrates when the bar code is recognised. If the bar code is not recognised, tap  to scan the code manually.
- 3 When the bar code is recognised, tap **Continue** to display the bar code information, or tap **Back** to cancel the operation.

To enter bar code numbers manually

- 1 In the NeoReader™ application, tap .
- 2 Tap the text field, then enter the bar code numbers.
- 3 Tap **OK**.

NeoReader™ application menu overview

The following menu options are available in the NeoReader™ application:

- | | |
|---|--|
|  | Click to scan the bar code manually, using a higher image resolution |
|  | Enter the bar code numbers manually. This option can be used if your camera has difficulty reading the bar code |
|  | View a list of previously scanned bar codes |
|  | Set your preferences: <ul style="list-style-type: none">• Mute or enable the sound• Enable or disable the message confirmation function. If enabled, you will receive a confirmation message asking if you want to continue to view bar code mobile web content after a successful scan• Choose if you want to go back to the NeoReader™ application, or to the applications panes, after you have viewed the bar code content• Select how many bar codes to keep in the history list |
|  | View information about the NeoReader™ application |
|  | Read more about different bar code types, and about how to use NeoReader™ |
|  | Select your personal settings. This information will be used to personalise the bar code content |
|  | Send a text message to invite a friend to download the NeoReader™ application |
|  | Exit the NeoReader™ application |

Synchronising

Synchronising information between your phone and a computer is an easy and practical way to share the same contacts, messages or calendar events on both devices. You can use the applications in your phone to synchronise different information:

- Sony Ericsson Sync – synchronise your phone contacts with your personalised Sony Ericsson website. The contacts are safely stored in one place and you can use them with several phones.
- Google Sync™ – synchronise your phone with your Gmail™, Google Calendar™ and Google™ contacts.
- RoadSync™ – synchronise your phone with your corporate Microsoft® Exchange email, contacts and calendar to keep them with you all the time.


Sony Ericsson Sync

Use Sony Ericsson Sync to synchronise your phone contacts with a personalised Sony Ericsson website at www.sonyericsson.com/user.

At this website you can safely store and edit your contacts in one place. With Sony Ericsson Sync you can synchronise them with several phones or a new phone. You need to have a Sony Ericsson account to use the website. See *To set up a Sony Ericsson account in your phone* on page 58.

- 💡 At the Sony Ericsson website www.sonyericsson.com/user you can also use your personal information with different social media, for example, you can match your phone contacts with your Facebook™ friends.

To set up a Sony Ericsson account in your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings > Accounts & sync > Add account > Sony Ericsson Sync**.
- 3 Follow the registration wizard to create a Sony Ericsson account, or sign in if you already have an account.
- 4 Tap **Sync interval** and select how often you want the phone to synchronise automatically.
- 5 Tap **Done**.



To set up an existing Sony Ericsson account in your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Accounts & sync > Sony Ericsson Sync**.
- 3 Enter your username and password, then tap **Log in**.
- 4 If desired, change the default synchronisation settings. Tap **Done**.


To synchronise manually using Sony Ericsson Sync

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Accounts & sync > Sony Ericsson Sync**.
- 3 Press .
- 4 Tap **Sync now**.

To set up a SyncML account using the Sony Ericsson Sync application

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Accounts & sync > Add account**.
 - 3 Tap **SyncML**.
 - 4 Tap the account, server address, username and password boxes and enter the information required.
 - 5 If desired, change the default synchronisation settings. Tap **Done**.
- ! Contact your SyncML service provider for more information about your account settings.
- 💡 To add a second account, tap  in the account list view.


To edit your Sony Ericsson account

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Accounts & sync > Sony Ericsson Sync > Account settings**.
- 3 Tap and edit the desired information.
- 4 Tap **Done**.

To set a synchronisation interval

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Accounts & sync > Sony Ericsson Sync > Account settings**.
- 3 Tap **Sync interval** to set a synchronisation interval.

To remove a Sony Ericsson account from your phone

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings > Accounts & sync > Sony Ericsson Sync**.
- 3 Tap **Remove account**.

- ! The account is removed from your phone, but it still exists. You can use it to log in to the Sony Ericsson website at www.sonyericsson.com/user.

To stop synchronisation in Sony Ericsson Sync



- When synchronising, tap **Cancel**.

Google Sync™ synchronisation service


You can use the Google Sync™ synchronisation service to synchronise your phone with your Gmail™, Google Calendar™ and contacts.

- ! To synchronise with your Google™ account, the account needs to be set up in your phone. See *To set up automatic synchronisation in Google Sync™* on page 59.


To set up automatic synchronisation in Google Sync™

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings > Accounts & sync**.
- 3 Mark the **Background data** checkbox.
- 4 Mark the **Auto-sync** checkbox.
- 5 Mark the checkboxes for the synchronisation items you want to synchronise automatically.
- 6 Press .
- 7 Mark the checkbox to enable automatic synchronisation for **Gmail™**.

To synchronise manually with your Google™ account

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings > Accounts & sync**.
- 3 Tap the Google™ account you want to synchronise.
- 4 Tap **Sync now**.

To stop synchronisation in Google Sync™

- 1 When synchronising, press .
- 2 Tap **Cancel sync**.



Synchronising with a Microsoft® Exchange Server using the RoadSync™ application

You can use the RoadSync™ application in your phone to synchronise phone content with a Microsoft® Exchange Server. This way you can access all of your corporate emails, calendar events and contacts from your phone.


Once you set up the service, your emails, calendar events and contacts will be wirelessly synchronised with the RoadSync™ application in your phone. You can then set up new emails to be automatically pushed to your phone. It is also possible to set up automatic synchronisation schedules for peak hours and off peak hours.

For more information on the RoadSync™ application, go to www.dataviz.com.



To set up RoadSync™ synchronisation

- ! Contact your Microsoft® Exchange Server administrator for the correct account settings.
- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **RoadSync**.
- 3 Follow the on-screen instructions to set up a Microsoft® Exchange Server synchronisation.
- 4 Once you have entered your account settings, you can change the account preferences. When finished, press , then tap **Done**.



To read emails in Roadsync

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **RoadSync > E-mail**.
- 3 Tap a message to read it.


To view calendar events in RoadSync Calendar

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **RoadSync > Calendar**.
- 3 Press .
- 4 Select whether you want to display your agenda, the current day, the current week or the current month.

To manually synchronise RoadSync Mail

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **RoadSync > E-mail**.
- 3 Press .
- 4 Tap **Sync**.

To change the synchronisation schedule for the RoadSync™ applications

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **RoadSync > Settings > Sync Schedule**.
- 3 Tap any setting to change it.
- 4 When finished, tap **Set**.

Connecting to wireless networks


You can access the Internet wirelessly from your phone using Wi-Fi® technology. This way you can browse the web and access cheaper call and data rates.

If your company or organisation has a virtual private network (VPN) you can connect to this network with your phone. This way you can, for example, access intranets and other internal services at your company.

Wi-Fi®





Using Wi-Fi® technology you can access the Internet wirelessly with your phone. To access the Internet using a Wi-Fi® connection, you first need to search for and connect to an available Wi-Fi® network. The signal strength of the Wi-Fi® network may differ depending on your phone's location. Moving closer to the Wi-Fi® access point may increase the signal strength.

To turn on Wi-Fi®

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Wireless & networks**.
- 3 Mark the **Wi-Fi** checkbox. The phone will now scan for available Wi-Fi® networks.

! It may take a few seconds before Wi-Fi® gets enabled.

To connect to a Wi-Fi® network

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings** > **Wireless & networks** > **Wi-Fi settings**.
 - 3 Available Wi-Fi® networks are displayed under **Wi-Fi networks**. The available networks may be open or secured. Open networks are indicated by  and secured networks are indicated by  next to the Wi-Fi® network name.
 - 4 Tap a Wi-Fi® network to connect to it. If you are trying to connect to a secure Wi-Fi® network, you are asked to enter the password.  is displayed in the status bar once you are connected.
- ! Your phone remembers Wi-Fi® networks you connect to. The next time you come within reach of a previously connected Wi-Fi® network, your phone automatically connects to it.
- 💡 In some locations, open Wi-Fi® networks require you to log in to a web page before you can get access to the network. Contact the relevant Wi-Fi® network administrator for more information.

To connect to another Wi-Fi® network

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **Wireless & networks** > **Wi-Fi settings**. Detected Wi-Fi® networks are displayed in the **Wi-Fi networks** section.
- 3 Tap another Wi-Fi® network to connect to it.



Wi-Fi® network status

When you are connected to a Wi-Fi® network or when there are Wi-Fi® networks available in your vicinity, it is possible to see the status of these Wi-Fi® networks. You can also enable the phone to notify you whenever an open Wi-Fi® network is detected.

To enable Wi-Fi® network notification

- 1 Make sure Wi-Fi® is turned on.
- 2 From the **Home screen**, drag  upwards.
- 3 Find and tap **Settings** > **Wireless & networks** > **Wi-Fi settings**.
- 4 Mark the **Network notification** checkbox.


To scan for Wi-Fi® networks manually

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Wi-Fi settings**.
- 3 Press .
- 4 Tap **Scan** . The phone scans for Wi-Fi® networks and displays them in the **Wi-Fi networks** section.
- 5 Tap a Wi-Fi® network in the list to connect to the network.


Advanced Wi-Fi® settings

Before you add a Wi-Fi® network manually, you need to turn on the Wi-Fi® setting in your phone.

To add a Wi-Fi® network manually

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks > Wi-Fi settings**.
 - 3 Tap **Add Wi-Fi network**.
 - 4 Enter the **Network SSID** for the network.
 - 5 Tap the **Security** field to select a security type.
 - 6 If required, enter a password.
 - 7 Tap **Save**.
- ! Contact your Wi-Fi® network administrator to get the **Network SSID** name and **Wireless password**.

To view detailed information on a connected Wi-Fi® network



- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Wi-Fi settings**.
- 3 Tap the Wi-Fi® network that you are currently connected to. The detailed network information will be displayed.

Wi-Fi® sleep policy

By adding a Wi-Fi® sleep policy, you can disable the Wi-Fi® functionality in your phone when the screen turns off. This will maximise your phone's battery performance. You can also set the phone to never turn off the Wi-Fi® functionality, or to never turn it off when you are charging your phone.

- ! If you are not connected to a Wi-Fi® network, the phone uses a 2G/3G mobile data connection to access the Internet (if you have set up and enabled a mobile data connection in your phone).






To add a Wi-Fi® sleep policy

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Wi-Fi settings**.
- 3 Press .
- 4 Tap **Advanced** .
- 5 Tap **Wi-Fi sleep policy**.
- 6 Select a **Wi-Fi sleep policy** to use.

Using a static IP address

You can set up the phone to connect to a Wi-Fi® network using a static IP address.

To set up a static IP address



- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Wi-Fi settings**.
- 3 Press .
- 4 Tap **Advanced** .
- 5 Mark the **Use static IP** checkbox.
- 6 Tap and enter the information needed for your Wi-Fi® network:
 - **IP address**
 - **Gateway**
 - **Netmask**
 - **DNS 1**
 - **DNS 2**
- 7 Press  and tap **Save** .

Virtual private networks (VPNs)

Use your phone to connect to virtual private networks (VPNs), which allow you to access resources inside a secured local network from outside the actual network. For example, VPN connections are commonly used by corporations and educational institutions for users who need to access intranets and other internal services when they are outside of the internal network, for example, when they are traveling.

VPN connections can be set up in many ways, depending on the network. Some networks may require you to transfer and install a security certificate in your phone. See *Connecting your phone to a computer* on page 68 for more information on how to transfer content to your phone. For detailed information on how to set up a connection to your virtual private network, please contact the network administrator of your company or organisation.

To add a virtual private network

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > VPN settings**.
- 3 Tap **Add VPN**.
- 4 Select the type of VPN to add.
- 5 Enter your VPN settings.
- 6 Press  and tap **Save**.

To connect to a virtual private network

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > VPN settings**.
- 3 In the list of available networks, tap the VPN you want to connect to.
- 4 Enter the required information.
- 5 Tap **Connect**.



To disconnect from a virtual private network

- 1 Drag the status bar downwards.
- 2 Tap the notification for the VPN connection to turn it off.

Web browser







You can use the web browser to view and navigate different web pages, add them as bookmarks or create shortcuts from the applications panes. You can open several browser windows at the same time and use the zoom function when navigating a web page.

To open the web browser

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Browser** .

Toolbar

The toolbar options make browsing easy:

- | | |
|---|---|
|  | Open a new browser window |
|  | Add, open or edit a bookmark. View your most visited web pages or open web pages from the browser history |
|  | View open windows |
|  | Refresh the current web page. This option is only visible in landscape mode |
|  | Go forward one page in the browsing history |
|  | Open a menu to see more options |

To open the toolbar

- From the browser, press .



Browsing the web

Search and address bar

Use the search and address bar to browse the web:



- 1 View the download progress of the current web page
- 2 Enter a search word to search for a web page, or enter a web page address to load a web page
- 3 Cancel the download of the current web page

-  When a page has finished downloading, you can bookmark it by pressing the bookmark icon  next to the search and address bar.


To go to a web page

- 1 Tap the search and address text field to activate the keypad.
- 2 Enter a web address.
- 3 Tap **Go**.

To search a web page

- 1 Tap the search and address text field to activate the keypad.
- 2 Enter a search word.
- 3 Tap **Go**.

To exit the web browser

- While browsing, press .
- 💡 When you open the browser again, the browser appears exactly as it did before you exited, that is, with the same number of windows, position and zoom levels.

Navigating web pages



To select a link

- To select a link in a web page, tap the link. The selected link is highlighted in orange, and the web page is loaded when you release your finger.
- 💡 If you select a link by mistake before releasing your finger, you can deselect it by dragging your finger away until the link is no longer highlighted.

To go to the previous page while browsing

- Press .

To zoom in or out on a web page


- 1 Drag your finger in any direction on the screen to activate the zoom controls on the web page.
 - 2 Tap the  icon to zoom out, or tap  to zoom in.
- 💡 Double-tap anywhere on the web page to quickly zoom in or out.

To reload the current web page


- 1 Press .
- 2 Tap **Refresh**

Managing web pages

To create a shortcut to the current web page

- 1 When viewing a web page, press .
- 2 Tap **More > Add shortcut to Home**.
- 3 Edit the predefined shortcut name, if desired.
- 4 Tap **Add** to add the shortcut to the applications panes.



To share a link to the current web page

- 1 While browsing, press .
- 2 Tap **More > Share page**.
- 3 Select an available transfer method, and follow the on-screen instructions.


Managing bookmarks

Bookmarks let you access your favourite and frequently visited web pages quickly. Depending on your network operator, some bookmarks may be pre-installed on your phone.


To bookmark a web page

- 1 While you are viewing a web page, press .
 - 2 Tap **Bookmarks > Add**.
 - 3 If desired, you can edit the name and the web address.
 - 4 When you are done, tap **OK**.
- 💡 To quickly bookmark a web page you can also tap the  icon to the right of the search and address field.


To open a bookmark

- 1 From the **Browser** screen, press .
- 2 Tap **Bookmarks**.
- 3 Tap the bookmark you want to open.



To edit a bookmark

- 1 From the **Browser** screen, press .
- 2 Tap **Bookmarks**.
- 3 Tap and hold your finger on a bookmark to open a menu.
- 4 Tap **Edit bookmark**.
- 5 Edit name and web address, as desired.
- 6 Tap **OK**.

To delete a bookmark



- 1 From the **Browser** screen, press .
- 2 Tap **Bookmarks**.
- 3 Tap and hold your finger on a bookmark to open a menu.
- 4 Tap **Delete bookmark** to delete the selected bookmark.

To bookmark a previously visited web page

- 1 From the **Browser** screen, press .
- 2 Tap the **History** tab, or the **Most visited** tab, to view a list of previously visited web pages.
- 3 Tap the  icon to the right of the web page you want to add as bookmark.

Text and image handling

To find text within a web page

- 1 When you are viewing a web page, press .
- 2 Tap **More > Find on page**
- 3 Enter the search word and press **Done**.
- 4 Matching characters will be highlighted in green. Tap the left or right arrow to go to the previous or next matching item.
- 5 Tap  to close the search bar.


To save an image

- 1 Tap and hold your finger on the desired image until a menu appears.
- 2 Tap **Save image**.

Multiple windows

Your browser can run in up to eight different windows at the same time. You can, for example, log in to your webmail in one window and read today's news in another. You can easily switch from one window to another.


To open a new browser window

- 1 From the **Browser** screen, press .
- 2 Tap **New window**.

To open a link in a new browser window

- 1 Tap and hold your finger on desired link until a menu appears.
- 2 Tap **Open in new window**.

To switch between browser windows

- 1 From the **Browser** screen, press .
- 2 Tap **Windows** to see a list of all open windows.
- 3 Tap the window you want to switch to.


Downloading from the web

You can download applications and content when you browse the web using the web browser in your phone. Usually you have to touch a download link for the desired file and the download then starts automatically.

To view your downloaded files

- 1 From the **Browser** screen, press .
- 2 Tap **More > Downloads**.

To cancel an ongoing download

- 1 From the **Browser** screen, press .
- 2 Tap **More > Downloads**.
- 3 Tap and hold your finger on a file download to open a menu.
- 4 Tap **Cancel download**.

Browser settings

To change your browser settings

- 1 From the **Browser** screen, press .
- 2 Tap **More > Settings**.

Auto-fitting web pages

The auto-fit option makes it easier to read large web sites with text and images, such as new sites. For example, if you zoom a web page with auto-fit enabled the text will automatically adjust to the new screen size, while if you have it disabled, you might need to scroll sideways to read a full sentence.

To auto-fit web pages

- 1 From the **Browser** screen, press .
- 2 Tap **More > Settings > Auto-fit pages**.

Connecting your phone to a computer

By connecting your phone to a computer you can transfer and handle files such as pictures and music. You may not be allowed to exchange some copyright-protected material.

You can connect your phone to a computer with a USB cable or by using Bluetooth™ wireless technology. When connecting your phone to a computer with a USB cable you will be able to install and use the PC Companion application on your computer. With the PC Companion application you can access additional applications to transfer and organise media files, update your phone and more.

Transferring and handling content using a USB cable

You can connect your phone to a computer with a USB cable in order to manage files on your phone. From your computer's file explorer, you can then drag and drop content between your phone and the computer. Use the Media Go™ application on your computer when you transfer music, video and pictures or any other media files, to make sure they get adapted and transferred to your phone in a correct and convenient way.

- ! If you are running an application on your phone and the application is using the memory card, you may need to close the application in order to access the memory card.

To drag and drop content between your phone and a computer

- 1 Connect your phone to a computer using a USB cable.
 - 2 **Phone:** Drag the status bar downwards and tap **USB connected > Mount**.
 - 3 **Computer:** Wait until the memory card appears as external disks in the file explorer.
 - 4 **Computer:** Drag and drop selected files between the phone and the computer.
- ! When the memory card is mounted to the computer, the phone cannot access the memory card. Some functionality and applications in the phone, such as the camera, may not be accessible.
 - ! You can transfer files by using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.

To disconnect the USB cable safely

- ! Do not disconnect the USB cable when transferring content as this may corrupt the content.
- 1 **Computer:** Make sure to enable the hardware to be safely removed.
 - 2 **Phone:** Drag the status bar downwards.
 - 3 Tap **Turn off USB storage**.
 - 4 Tap **Turn Off**.
 - 5 Disconnect the USB cable.
- ! Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information.

PC Companion

PC Companion enables you to access and use additional features and services connected to your phone, for example, the Media Go™ application, to transfer music, video and pictures. You can also update your phone to get the latest software available.

You need one of these operating systems to use the PC Companion application:

- Microsoft® Windows 7
- Microsoft® Windows Vista®
- Microsoft® Windows® XP, Service Pack 3 or higher

Connect your phone and computer with a USB cable to install and use PC Companion.

To install PC Companion

- 1 Connect your phone to a computer using a USB cable.
- 2 **Phone:** Tap **Start** in the PC Companion installation window.
- 3 **Computer:** PC Companion automatically starts on your computer after a few seconds. Follow the on-screen instructions to install PC Companion.

To use PC Companion

- 1 Connect your phone to a computer using a USB cable.
- 2 **Phone:** Drag the status bar downwards and tap **USB connected > Mount**.
- 3 **Computer:** PC Companion automatically starts on your computer after a few seconds.

! If PC Companion does not start automatically, you can start it from the start menu of your computer.

💡 If you want to install PC Companion on another computer at a later stage, you can enable installation in the Sony Ericsson settings.

Media Go™

The Media Go™ computer application helps you transfer and manage media content in your phone and computer. Install the Media Go™ application from the PC Companion application. See *PC Companion* on page 68 for more information.

You need one of these operating systems to use the Media Go™ application:

- Microsoft® Windows 7
- Microsoft® Windows Vista™
- Microsoft® Windows® XP, Service Pack 3 or higher

To be able to transfer files between Media Go™ and your phone, you must first connect a USB cable between your phone and a computer. You must also enable your phone to connect to the computer. See *To drag and drop content between your phone and a computer* on page 68 for more information.

💡 To learn more about how to use the Media Go™ application, see the help section in the main menu of the Media Go™ application.

To transfer content using the Media Go™ application

- 1 Connect your phone to a computer using a USB cable.
- 2 Drag the status bar downwards and tap **USB connected > Mount**.
- 3 **Computer:** In PC Companion, click to start Media Go™. If it is the first time you start Media Go™ it may need to install before you move on to the next step.
- 4 Move files between your phone and the computer in the Media Go™ application.

! Media Go™ can also be downloaded from www.sonyericsson.com/support.


Bluetooth™ wireless technology

Turn on the Bluetooth™ function in your phone and create wireless connections to other Bluetooth™ compatible devices such as computers, handsfree accessories, and phones. Bluetooth™ connections work better within a 10 metre (33 feet) range, with no solid objects in between. In some cases you have to manually pair your phone with other Bluetooth™ devices. Remember to set your phone to discoverable if you want other Bluetooth™ devices to detect it.



Alternatively, you can send files to other devices by email, or transfer them to your computer using a USB cable connection.


To turn on the Bluetooth™ function and make your phone visible

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks**.
- 3 Mark the **Bluetooth** checkbox.  appears in the status bar.
- 4 Tap **Bluetooth settings**.
- 5 Mark the **Discoverable** checkbox. The phone will now be visible to other devices for 120 seconds.

Phone name

You can give your phone a name. This name is shown to other devices after you have turned on the Bluetooth™ function and your phone is set to visible.

To enter a phone name

- 1 Make sure the Bluetooth™ function is turned on.
- 2 From the **Home screen**, drag  upwards.
- 3 Find and tap **Settings > Wireless & networks > Bluetooth settings > Device name**.
- 4 Enter a phone name of your choice.
- 5 Tap **OK**.

Pairing with another Bluetooth™ device


When you pair your phone with another device, you can, for example, connect your phone to a Bluetooth™ handsfree or a Bluetooth™ car kit and use these devices to make and receive calls.

Once you have paired your phone with a Bluetooth™ device the phone will remember this pairing. When pairing the phone with a Bluetooth™ device, you may need to enter a passcode. Your phone will automatically try the generic passcode 0000. If this does not work, refer to your Bluetooth™ device documentation for the device passcode. You do not need to re-enter the passcode the next time you connect to a paired Bluetooth™ device.

Some Bluetooth™ devices, for example, most Bluetooth™ headsets, require you to both pair and connect with the other device.

You can pair your phone with several Bluetooth™ devices, but you can only connect to one Bluetooth™ profile at the same time.

To pair your phone with another Bluetooth™ device

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks > Bluetooth settings**.
 - 3 Tap **Scan for devices**. The Bluetooth™ devices found will be listed under **Bluetooth devices**.
 - 4 Tap the Bluetooth™ device that you want to pair with your phone.
 - 5 Enter a passcode, if required.
 - 6 The phone and the Bluetooth™ device are now paired. With some devices you also need to connect before you can start using them. The status of the pairing and connection is shown below the name of the Bluetooth™ device in the **Bluetooth devices** list.
- ! Make sure that the device you want to pair your phone with has the Bluetooth™ function activated and Bluetooth™ visibility turned on.


To connect your phone to another Bluetooth™ device

- ! Some Bluetooth™ devices, for example, most Bluetooth™ headsets, require you to first pair and then connect with other Bluetooth™ devices before a successful connection can be established.
- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks > Bluetooth settings**.
 - 3 In the **Bluetooth devices** list, touch and hold the Bluetooth™ device that you want to connect to your phone.
 - 4 Tap **Connect**.

To disconnect a Bluetooth™ device

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks > Bluetooth settings**.
 - 3 In the **Bluetooth devices** list, touch and hold the name of the connected Bluetooth device.
 - 4 Tap **Disconnect**.
- ! Even if you disconnect a Bluetooth™ device, the device is still paired with your phone. To remove the pairing, you need to tap **Disconnect & unpair**.

To unpair a Bluetooth™ device


- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Wireless & networks > Bluetooth settings**.
- 3 In the **Bluetooth devices** list, touch and hold the name of the connected Bluetooth™ device.
- 4 Tap **Unpair**.

Sending and receiving items using Bluetooth™ wireless technology



Share items with other Bluetooth™ compatible devices such as phones or computers. You can send and receive several kinds of items using the Bluetooth™ function, such as:

- Photos and videos
- Music and other audio files
- Contacts
- Web pages

To send items using Bluetooth™

- 1 **Receiving device:** Make sure the Bluetooth™ device you want to send the item to has Bluetooth™ turned on and is in discoverable mode.
- 2 In your phone, open the application which contains the item you want to send and scroll to the item.
- 3 Depending on the application and the item you want to send, you may need to, for example, touch and hold the item, open the item or press . Other ways to send an item may exist.
- 4 Select a share or send menu item.
- 5 In the menu that appears, select **Bluetooth**.
- 6 Turn on Bluetooth™, if you are asked to do so.
- 7 Under **Bluetooth devices**, tap the name of the receiving device.
- 8 **Receiving device:** If asked, accept the connection.
- 9 If asked, enter the same passcode on both devices, or confirm the suggested passcode.
- 10 **Receiving device:** Accept the incoming item.

To receive items using Bluetooth™

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Settings > Wireless & networks**.
 - 3 Mark the **Bluetooth** checkbox.  appears in the status bar.
 - 4 Tap **Bluetooth settings**.
 - 5 Mark the **Discoverable** checkbox. The phone will now be visible to other devices for 120 seconds.
 - 6 **Sending device:** Send one or more items to your phone using Bluetooth™.
 - 7 If asked, enter the same passcode on both devices, or confirm the suggested passcode.
 - 8 When you are notified of an incoming file to your phone, drag the status bar downwards and tap the notification to accept the file transfer.
 - 9 Tap **Accept** to start the file transfer.
 - 10 To view the progress of the transfer, drag the status bar downwards.
 - 11 To open a received item straight away, drag the status bar downwards and tap the relevant notification.
- ! Your phone must have a memory card inserted to be able to receive items using Bluetooth™ wireless technology.

Back up and restore

With the **Back up and restore** application, you can make backups of phone content on your memory card. Such backups can be used to restore your content and some phone settings in cases where your data gets lost or deleted.

Types of content you can back up



The following types of data can be backed up using the **Back up and restore** application:

- Contacts
 - Call log
 - Browser bookmarks
 - Text and multimedia messages
 - System settings (such as alarms, ringer volume, date/time format)
- ! Music files, and photos or videos taken with the phone camera, are automatically saved on the memory card and do not need to be backed up.



To back up phone content manually

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Back up and restore**.
- 3 Tap **Back up**, then tap the  tab.
- 4 If you want to create a new backup file, tap **Add new**, enter a name for the backup file and tap **Continue**. If you want to replace the content of a previous backup file, tap the desired backup file, then tap **Replace**.
- 5 Mark the checkboxes for the content you want to back up and tap **Continue**.


To schedule the automatic backup of phone content

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Back up and restore**.
 - 3 Tap **Back up**, then tap the  tab.
 - 4 Select the desired recurrence frequency and start time for the backup, then tap **Continue**.
 - 5 Mark the checkboxes for the content you want to back up and tap **Continue**.
- ! Every time a scheduled automatic backup file is created, the previous version of the backup file is overwritten.



To disable the scheduled backup of phone content

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Back up and restore**.
- 3 Tap **Back up**, then tap the  tab.
- 4 Select **Never**, then tap **Continue**.


To restore phone content

- ! If you make changes to an item after you have made a backup of it, the changes will be overwritten when you restore the item.
- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Back up and restore**.
 - 3 Tap **Restore**.
 - 4 Tap the backup file you want to restore from.
 - 5 Mark the checkboxes for the content you want to restore and tap **Continue**.
- ! You may be asked to restart the phone for the restore procedure to take effect.

To delete a backup file from the memory card

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Back up and restore**.
- 3 Tap **Back up**.
- 4 Tap the  tab.
- 5 Touch and hold the backup file you want to delete, then tap **Delete**.









Music

Get the most out of your music player. Listen to music, audio books and podcasts, or use the infinite button  and explore more media content about an artist you're listening to.

- 💡 Install the Media Go™ application on your computer and transfer content to and from the memory card in your phone. Media Go™ can be downloaded from www.sonyericsson.com/support. For more information, see *Connecting your phone to a computer* on page 68.

Using the music player

To play audio content









- 1 From the **Home screen** screen, tap . If  does not appear on the **Home screen**, drag  upwards, then find and tap **Music player** .
- 2 Tap .
- 3 Tap  to browse audio by artist. Tap  to use playlists. Tap  to browse audio by track.
- 4 Scroll up or down and browse to a track.
- 5 Tap a track to play it.

Music player overview



- | | |
|---|---|
| 1 | Browse the music on the memory card |
| 2 | Infinite button: find related material online |
| 3 | Cover art (if available) |
| 4 | Go to the previous track in the current play queue, or rewind |
| 5 | Play/Pause button |
| 6 | Progress indicator: fast forward or rewind by dragging or tapping |
| 7 | Time remaining of current track |
| 8 | Go to the next track in the current play queue, or fast forward |
| 9 | View the current play queue |

To browse your audio content

- 1 From the **Home screen**, tap . If  does not appear on the **Home screen**, drag  upwards, then find and tap **Music player** .
- 2 Tap .
- 3 Tap  to browse audio by artist. Tap  to use playlists. Tap  to browse audio by track.
- 4 Scroll up or down and browse to a track.



To change tracks

- In the music player, tap  or .

To pause a track

- In the music player, tap .

To fast forward and rewind music

- In the music player, touch and hold  or .

💡 You can also drag the progress indicator marker right or left.



To adjust the audio volume


- Press the volume key.

To view a current play queue

- In the music player, tap .



To listen to the music player while using other applications

- 1 Press  or  to leave the music player.
- 2 Open and use other applications while the music player is playing in the background.

💡 Alternatively, you can press and hold down  to reach the most recently used applications.

To return to the music player when it is playing in the background

- 1 Drag the status bar downwards to open the Notification panel.
- 2 Tap the track title to open the music player.



💡 Alternatively, if you have recently used the music player, you can press and hold down  and then tap **Music player**  to open it.

To delete a track

- 1 When browsing your tracks in the music player library, touch and hold a track title.
- 2 Tap **Delete**.

💡 You can also delete albums and playlists this way.

To delete one or more tracks at the same time

- 1 In the music player, tap .
- 2 Press .
- 3 Tap **Delete several**.
- 4 Tap one or more tracks that you want to delete.
- 5 Tap **Delete**.


To share a track

- 1 When browsing your tracks in the music player library, touch and hold a track title.
- 2 Tap **Send**.
- 3 Select an available transfer method, and follow the on-screen instructions.

💡 You can also share albums and playlists this way.

! You might not be able to copy, send or transfer copyright-protected items.

To share one or more tracks at the same time





- 1 When browsing your tracks in the music player library, press .
- 2 Tap **Send several**.
- 3 Tap one or more tracks that you want to share.
- 4 Tap **Send**.
- 5 Select an available transfer method, and follow the on-screen instructions.

! You might not be able to copy, send or transfer copyright-protected items.


Playing music in random order

You can play tracks in playlists in random order. A playlist can be, for example, a playlist you have created yourself or an album.

To play tracks in random order



- 1 In the music player, tap .
- 2 Tap  and navigate to an album, or tap  and browse to a playlist.
- 3 Open the album or playlist by tapping its name.
- 4 Tap .

Playlists



The music player automatically creates smart playlists on the playlist tab  in the audio library. The music player also creates a playlist (called **Top tracks**) of the most played songs of each artist in your audio library. You can use the Media Go™ application to maintain your music library, and to create playlists on your computer. For more information, see *Connecting your phone to a computer* on page 68.

! Playlists that you create yourself have to be copied to the memory card in your phone. When you connect the phone to your computer using the USB cable, the memory card appears in the Media Go™ application.



To play smart playlists

- 1 In the music player, tap .
- 2 Tap .
- 3 Under **Smart playlists**, tap a playlist.
- 4 Tap a track to play it.


To play the most played songs of an artist

- 1 In the music player, tap .
- 2 Tap  and tap an artist.
- 3 Tap **Top tracks**. Up to ten tracks by the artist are displayed.
- 4 Tap a track to play it.


To play your own playlists

- 1 In the music player, tap .
- 2 Tap .
- 3 Under **My playlists**, tap a playlist.
- 4 Tap a track to play it.



To copy playlists to your memory card

- 1 **Computer:** Start the Media Go™ application on your computer.
- 2 **Phone:** Connect your phone to a computer using a USB cable. If you are asked to install PC Companion, press . PC Companion can be set up later, to help you manage your phone on your computer.
- 3 **Phone:** Drag the status bar downwards and tap **USB connected > Mount**.
- 4 **Computer:** Locate the memory card in the Media Go™ application.
- 5 **Computer:** Copy existing playlists from your computer to the memory card by dragging and dropping the playlists between the phone and the computer.

Exploring related music content

When using the music player, you can find and explore online media content related to an artist you are listening to by tapping the Infinite button .




To explore related audio content

- 1 In the music player, tap .
- 2 Flick left or right to view results on available online services (operator-dependent).
- 3 To return to the music player, press .

Podcasts

Podcasts consist of media content, for example, radio programs, which you can subscribe to using web feeds (RSS). You can download such content to your computer using the podcast feature in the Media Go™ application. You can then copy the podcast to the memory card in your phone using the Media Go™ application on your computer. If you install an RSS reader in your phone, you can also start a subscription to a site which has audio feeds. For more information, see *Connecting your phone to a computer* on page 68.

To play podcasts in your phone



- 1 Files you have downloaded via audio podcasts, for example, radio programs, can be found in the music player audio library. In the music player, tap .
- 2 Tap  or .
- 3 Scroll up or down and browse to a title.
- 4 Tap a title to play it.

TrackID™ technology

Use the TrackID™ music recognition service to identify a music track you hear playing in your surroundings. Just record a short sample of the song and you'll get artist, title and album info within seconds. You can also purchase tracks identified by TrackID™. For best results, use TrackID™ technology in a quiet area. If you have problems using this application, see *I cannot use Internet-based services* on page 94.

- ! The TrackID™ application and the TrackID™ service are not supported in all countries/ regions, or by all networks and/or service providers in all areas.

To open the TrackID™ application

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **TrackID™** .

To search for track information

- 1 When the **TrackID™** application is open, tap **Record**.
- 2 Hold the phone towards the music source. The results are shown in the result screen.

Using TrackID™ technology results

Track information appears when a track is recognised after a search. When a track has been recognised by TrackID™ technology, you can purchase the track. Previous search results are saved.



To buy a track using TrackID™ technology

- 1 When a track has been recognised by TrackID™ technology after a search, tap **Download**. The available purchase services appear in a list.
 - 2 Tap a service name and follow the instructions on the screen.
- ! The track purchase feature may not be supported in all countries/ regions, or by all networks and/or service providers in all areas.


FM radio

You can browse and listen to FM radio stations, and save them as favourites. You can listen to the radio either through a portable handsfree or headphones, or through the speaker in the phone. You have to connect a portable handsfree or headphones, as they work as the antenna for the FM radio. When you open the FM radio, available channels appear automatically. If a channel has RDS information, it appears a few seconds after you start listening.

To open the FM radio

- 1 Connect a portable handsfree or headphones to the phone.
 - 2 From the **Home screen**, drag  upwards.
 - 3 Find and tap **FM radio** . The available channels appear as you scroll through the frequency band.
- ! You have to connect a portable handsfree or headphones, which work as the antenna.

FM radio overview

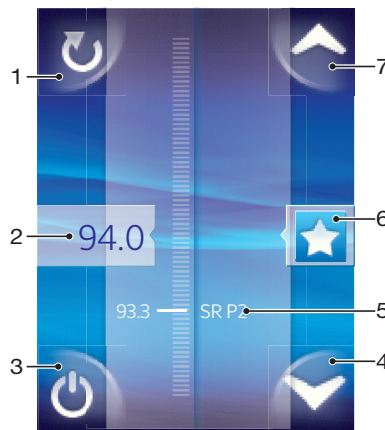

- | | |
|---|--|
| 1 | Scan for new channels |
| 2 | The tuned frequency |
| 3 | Radio on/off key |
| 4 | Move downwards to the next favourite (available when favourites are saved) |
| 5 | RDS (Radio Data System) information – not available in all countries/regions |
| 6 | Assign or unassign a channel as a favourite |
| 7 | Move upwards to the next favourite (available when favourites are saved) |

Moving between radio channels


You can move between radio channels along a frequency band by:

- Flicking up and down.
- Dragging.
- Tapping a channel or, if available, the RDS information (station identification).


Using favourite radio channels

You can save the radio channels you most frequently listen to as favourites. By using favourites you can quickly return to a radio channel.



To save a channel as a favourite

- 1 When the radio is open, navigate to the channel that you want to save as a favourite.
- 2 Tap .

To remove a channel as a favourite

- 1 When the radio is open, navigate to the channel that you want to remove as a favourite.
- 2 Tap .

To move between favourite channels


- When the radio is open, tap  or .
- ! To move between favourites, you need to save at least two channels as favourites.

Making a new search for radio channels

If you have moved to a new location or the reception has improved in your current location, you can start a new scan for radio channels.

- ! Any favourites you have saved are not affected by a new scan.



To start a new search for channels

- When the radio is open, tap . The radio scans the whole frequency band, and all available channels are displayed.

Switching between the speaker and the handsfree

You can choose to listen to the radio either through the portable handsfree or headphones, or through the speaker in the phone.

To switch between the speaker and handsfree




- 1 When the radio is open, press .
- 2 Tap **Play in speaker**.
- 3 To play the sound through the portable handsfree or headphones again, press  and tap **Play in handsfree**.

Videos



You can browse and view your videos using the video player. Videos that you have recorded using the phone camera are found in the camera album. The video player can also play streaming videos. Streaming videos can be started by tapping a link on a web page you are viewing in the web browser. You can also view streaming videos using the YouTube™ application. You can use the Media Go™ application on your computer to transfer content to and from the memory card in your phone. For more information, see *Connecting your phone to a computer* on page 68.

Using the video player


To browse videos

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Video** .
 - 3 Scroll up or down to browse your videos.
- ! You can find videos you recorded using the camera in **Album** .

To play a video

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Video** .
- 3 Scroll up or down to browse your videos.
- 4 Tap a video to play it. The controls disappear after a few seconds. You can tap the screen to make them reappear.



To pause a video

- 1 When a video is playing, tap the screen to display the controls.
- 2 Tap .



To fast forward and rewind a video

- Drag the progress bar marker right or left.

To exit the video player

- Press  or .

To resume playing a video

- 1 If you have recently used the video player, press and hold down .
- 2 Tap **Video** .
- 3 Browse to the video and tap it. The video resumes playing from where you previously stopped the video.


To adjust the volume of a video

- Press the volume key.

To delete a video

- 1 When browsing your videos in the video player library, touch and hold a video title.
- 2 Tap **Delete**.


To delete one or more videos at the same time

- 1 When browsing your videos in the video player library, press .
- 2 Tap **Delete several**.
- 3 Tap one or more videos that you want to delete.
- 4 Tap **Delete**.

To share a video

- 1 When browsing your videos in the video player library, touch and hold a video title.
 - 2 Tap **Send**.
 - 3 Select an available transfer method, and follow the on-screen instructions.
- ! You might not be able to copy, send or transfer copyright-protected items.

To share one or more videos at the same time




- 1 When browsing your videos in the video player library, press .
 - 2 Tap **Send several**.
 - 3 Tap one or more videos that you want to share.
 - 4 Tap **Send**.
 - 5 Select an available transfer method, and follow the on-screen instructions.
- ! You might not be able to copy, send or transfer copyright-protected items.

YouTube™

You can watch videos in your phone by using the YouTube™ application. You can search for videos or upload your own videos.

- ! The YouTube™ application and the YouTube™ service are not supported in all countries/regions, or by all networks and/or service providers in all areas.


To view streaming content in the YouTube™ application

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **YouTube** .
- 3 Press  to view a menu where you can search for videos, handle your account, and upload your own videos.

Camera

You can take a photo or record a video by pressing the camera key. Before taking a photo, you can improve it by using the Scenes feature. You can use the flash or the light when shooting or recording. Share a photo or a video with friends, or upload your photos and videos to a web service. From the viewfinder, you can view an album containing all photos and videos that you have taken using the camera.

Viewfinder and camera controls

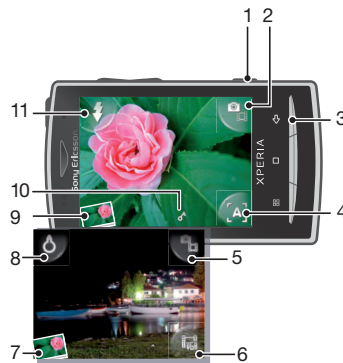

- | | |
|----|--|
| 1 | Camera key: Activate the camera/Take photos/Record video |
| 2 | Switch between still and video camera |
| 3 | Go back one step or exit the camera |
| 4 | Select a scene (still camera) |
| 5 | Switch between still and video camera |
| 6 | Select video format (video camera) |
| 7 | View photos and videos |
| 8 | Turn on/off the light (video camera) |
| 9 | View photos and videos |
| 10 | Geotag icon: Indicates whether geotagging is determined by GPS technology or the wireless network. No icon indicates that geotagging is turned off |
| 11 | Turn on/off the flash (still camera) |

Using the camera

To activate the camera

- Press the camera key.

To switch between the still and video cameras


- In the camera viewfinder, tap  or .

To close the camera

- Press .

Using the still camera


To take a photo

- 1 Activate the camera.
- 2 If the still camera is not selected, tap .
- 3 Point the camera towards the subject and press the camera key halfway down to use auto-focus.
- 4 When the focus frame turns green, press the camera key fully down. The photo is automatically saved on the memory card. The photo appears in review mode.
- 5 Press the camera key to return to the viewfinder to take another photo.


To view previously taken photos

- 1 In the camera viewfinder, tap the photo thumbnails at the bottom left.
- 2 Flick left or right to browse the photos and videos. Videos are identified by .



To delete a photo

- 1 When you are viewing a photo, tap the screen if no controls are displayed.
- 2 Tap .

To share a photo

- 1 When you are viewing a photo, tap the screen if no controls are displayed.
- 2 Tap .
- 3 Select one of the available transfer methods.

Adding the geographical position to your photos

When geotagging is turned on, the approximate geographical location (a geotag) is added to photos when you take them. The geographical location is determined either by using wireless networks (mobile networks or Wi-Fi®) or GPS technology. When  appears in the viewfinder, geotagging is on and the geographical location has been found using GPS technology. When  appears, geotagging is on and the geographical location has been found using the wireless network. When neither of these two symbols appears, geotagging is off.

- ! To use geotagging you must also enable location features in **Settings**. See *Location services* on page 89 for information on how to enable the location features for GPS and wireless networks.

To turn geotagging on or off

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Sony Ericsson > Camera > Geotagging**.
- 3 Tap the checkbox to turn geotagging on or off.




- ! To use geotagging you must also enable location features in **Settings**. See *Location services* on page 89 for information on how to enable the location features for GPS and wireless networks.

Viewing your photos on a map



If a geotag was added to your photo, you can view the photo on a map. Show friends and family where you were, or find your way back to the location another time.

- ! To view a photo taken by the camera on a map, you must turn on geotagging in the camera settings before you take the photo. You must also enable location features in **Settings**.

To view your photos on a map

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Geotags**.
- 3 Drag the map in any direction to locate your photos.
- 4 Tap  to zoom in.
- 5 Tap a thumbnail to view photos. If more photos are at the same location, they are grouped under a thumbnail.
- 6 To close a group of photos, tap .
- 7 Tap a photo to view it in a larger size.

To switch between map and satellite views

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Geotags**.
- 3 Press .
- 4 Tap **Map mode** and select an option.

Improving photos with Scenes

Before you take a photo, you can set up the camera for common situations using pre-programmed scenes. The Scenes feature determines a number of settings for you to fit the selected scene, ensuring the best possible photo.

Scenes settings



Auto

The camera uses settings that fit most conditions



Twilight

Use when taking landscape photos at night or in poorly lit environments (without flash or photo light). Due to longer exposure time, the camera must be held still or placed on a stable surface



Macro



Use for situations when you want to use auto focus for extreme close-up photos



Sports

Use for photos of fast-moving objects. Short exposure time minimises motion blurring

To select scenes

- 1 Activate the camera.
- 2 If the still camera is not selected, tap .
- 3 Tap the active scene key at the bottom right in the viewfinder, for example, .
- 4 Tap a scene and take the photo.

Tips when using the camera

Rule of thirds

Don't place your subject in the middle of the frame. By placing it a third of the way in, you achieve a better result.

Hold it steady

Avoid blurry photos by holding the camera steady. Try to steady your hand by leaning it against a solid object.

Get closer

By getting as close as possible to your subject, you can fill the viewfinder with your subject.

Stay within the flash range

Photos taken beyond the maximum flash range will be too dark. The maximum flash range is about four steps from the subject.

Consider variety

Think about different angles, and move towards the subject. Take some vertical photos. Try different positions.

Use a plain background



A plain background helps highlight your subject.

Keep your lens clean


Mobile phones are used in all kinds of weather and places, and carried in pockets and bags. This results in the camera lens becoming dirty and covered with fingerprints. Use a soft cloth to clean the lens.

Using the video camera



To record a video

- 1 Activate the camera.
- 2 If the video camera is not selected, tap .
- 3 Press the camera key to start recording.
- 4 Press the camera key to stop recording. The video appears in review mode.
- 5 To view the video, tap .
- 6 To record another video, press the camera key.

To view previously recorded videos

- 1 In the camera viewfinder, tap the thumbnails at the bottom left.
- 2 Flick left or right to browse the photos and videos. Videos are identified by .





To record a video suitable for multimedia messages (MMS)

- 1 Activate the camera.
- 2 If the video camera is not selected, tap .
- 3 Tap the video format icon at the bottom right of the viewfinder.
- 4 Tap **For MMS** .
- 5 Press the camera key to start recording. The recording time of this video format is limited and is most suited for sending in multimedia messages. You can monitor the recording time limit in a progress bar in the upper part of the viewfinder.




Camera album

You can browse and view photos and videos recorded by your camera using **Album**. Share photos and videos, and use photos as wallpaper and contact pictures. Use the Media Go™ application on your computer to transfer content to and from the memory card in your phone. For more information, see *Connecting your phone to a computer* on page 68.

To browse your photos and videos

- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Album** .
 - 3 Scroll up or down to browse your photos and videos. Photos and videos are shown in chronological order. Videos are indicated by .
- ! Videos from other sources are placed in **Video** , that is, videos that were not taken by your camera.

To view photos

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Album** .
- 3 Scroll up or down to browse your photos and videos. Videos are indicated by .
- 4 To view a photo in a larger size, tap the thumbnail.
- 5 In the photo viewer, flick left to view the next photo or video. Flick right to view the previous photo or video.





To view the photo viewer controls

- In the photo viewer, tap the screen.



To zoom a photo

- 1 When you are viewing a photo in the photo viewer, touch and hold an area on the screen until the magnifying symbols appear.
 - 2 Drag upwards to zoom in and drag downwards to zoom out.
- 💡 You can also double-tap a photo to zoom it in or out. Then drag the photo to view different parts of it.


To play videos recorded using the camera

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Album** .
- 3 Scroll up or down to browse your videos and photos. Videos are indicated by .
- 4 To play a video, tap a video thumbnail.
- 5 Tap .
- 6 In the viewer, flick left to view the next video or photo. Flick right to view the previous video or photo.

To delete your photos or videos

- 1 When browsing your photos and videos in **Album** , press .
- 2 Tap **Delete several**.
- 3 Tap one or more photos or videos that you want to delete.
- 4 Tap **Delete**.


To use a photo as a contact picture

- 1 When you are viewing a photo in the photo viewer, tap the screen to display the controls.
- 2 Tap .
- 3 Tap **Contact picture**.
- 4 Resize the photo if needed.
- 5 Tap **Save**.
- 6 Tap the contact you want to assign the photo to.

To crop a photo

- 1 When the crop frame appears, touch and hold the edge of the frame to adjust it. When crop arrows appear, drag inward to or outward from the centre of the crop frame to resize it.
- 2 To move the crop frame to another area of the photo, touch and hold inside the frame, then drag it to the desired position.
- 3 To save the cropped photo, tap **Save**.

To use a photo as wallpaper




- 1 When you are viewing a photo in the photo viewer, tap the screen to display the controls.
- 2 Tap .
- 3 Tap **Wallpaper**.
- 4 Resize the photo if needed.
- 5 Tap **Save**.

Sharing photos and videos




You can send photos and videos you have shot using the camera via Bluetooth™ wireless technology, email or MMS (Multimedia Messaging Service), or upload them to web services, for example, Picasa™ or YouTube™.

- ! The YouTube™ application and the YouTube™ service are not supported in all countries/regions, or by all networks and/or service providers in all areas.

To share your photos or videos

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Album** .
- 3 Tap a photo or video thumbnail.
- 4 Tap the screen to display the controls, if needed.
- 5 Tap .
- 6 Select an available transfer method, and follow the on-screen instructions.

To upload a photo to an online web album

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Album** .
- 3 Tap a photo thumbnail.
- 4 Tap the screen to display the controls, if needed.
- 5 Tap .
- 6 Select a photo sharing service and follow the on-screen instructions.

Location services

You can get your location determined either by using wireless networks or GPS technology. Wireless networks technology determines your position fast but accuracy may vary. If you use GPS technology it may take a little longer, but it will find your exact position. You can enable both wireless networks and GPS to benefit from both technologies when trying to find your position.

Using GPS technology

Your phone has a GPS receiver that uses satellite signals to calculate your location. Some GPS features use the Internet. Data rates and charges may apply.


When you use features that require the GPS receiver to find your location, make sure you have a clear view of the sky. If the GPS receiver does not find your location after a few minutes, you should move to another location. To help the search, stand still and do not cover the GPS antenna. The position of the GPS antenna is shown in the image below. The first time you use the GPS receiver it may take up to 10 minutes before your location is found.




💡 If you cannot use some GPS features, see *I cannot use Internet-based services* on page 94.

! Sony Ericsson does not warrant the accuracy of any location services including but not limited to navigational services.

To enable the GPS receiver

- 1 From the **Home screen**, drag  upwards.
- 2 Tap **Settings > Location & security**.
- 3 Mark the **Use GPS satellites** checkbox.

To use wireless networks to find your position

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security**.
- 3 Mark the **Use wireless networks** checkbox.


Google Maps™

The Google Maps™ application lets you view your current location, find other locations and calculate routes. When you start the Google Maps™ application, your approximate location

is shown using information from mobile networks in your vicinity. Your location is updated with a more precise position when the GPS receiver finds your location.

- ! Make sure you enable the location settings before trying to get your position.
- 💡 If the screen orientation does not change automatically when you turn the phone sideways, you can change this in the display settings of your phone.

To use Google Maps™


- 1 From the **Home screen**, drag  upwards.
 - 2 Find and tap **Maps**.
- 💡 The Google Maps™ application may not be available in every market, country or region.

Getting driving directions

The Wisepilot™ application guides you to your destination using voice instructions. A trial version of the Wisepilot application may be included in the phone. Sony Ericsson does not warrant the accuracy of any directional services including but not limited to turn-by-turn navigational services.

- ! Wisepilot may not be available in every market. For more information, go to www.sonyericsson.wisepilot.com. You can also find the Wisepilot User manual on this website.

To start Wisepilot™

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Wisepilot**.

Locking and protecting your phone

IMEI number


Every phone has a unique IMEI (International Mobile Equipment Identity) number. You should keep a copy of this number. If your phone is stolen, your network provider can use your IMEI number to stop the phone from accessing the network in your country.

To view your IMEI number



- You can find the IMEI number under the battery.


To view your IMEI number in the phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > About phone > Status**.
- 3 Scroll to **IMEI** to view the **IMEI** number.


SIM card protection

The SIM card lock only protects your subscription. Your phone will still work with a new SIM card. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number). If you enter your PIN incorrectly more times than the maximum number of attempts allowed, your SIM card will become blocked. You need to enter your PUK (Personal Unblocking Key) and then a new PIN. Your PIN, PIN2 and PUK are supplied by your network operator.


To enable the SIM card PIN lock

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security > Set up SIM card lock > Lock SIM card**.
- 3 Enter the SIM card PIN and tap **OK**.

To change the SIM card PIN

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security > Set up SIM card lock > Change SIM PIN**.
- 3 Enter the old SIM card PIN and tap **OK**.
- 4 Enter the new SIM card PIN and tap **OK**.
- 5 Re-type the new SIM card PIN and tap **OK**.

To change the SIM card PIN2

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Call settings > Fixed Dialing Numbers > Change PIN2**.
- 3 Enter the old SIM card PIN2 and tap **OK**.
- 4 Enter the new SIM card PIN and tap **OK**.
- 5 Confirm the new PIN2 and tap **OK**.

To unblock a locked SIM card


- 1 When **SIM card locked**. Enter the **PUK code provided by your operator** appears, enter the PUK code and tap **OK**.
- 2 Enter a new PIN code and tap **OK**.
- 3 Repeat the new PIN code and tap **OK**.

Screen unlock pattern



You can secure data in your phone with a screen unlock pattern that only you know how to draw. Your phone stores this pattern, and when you start your phone or activate the screen, you are asked to draw it.

- ! It is very important that you remember your screen unlock pattern. If you forget it, it may not be possible to restore important data such as contacts and messages. Please refer to your Sony Ericsson contact centre.


To create a screen unlock pattern

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security > Set unlock pattern**.
- 3 Follow the instructions in your phone. You will be asked to select a security question that will be used to unlock the phone if you forget your screen unlock pattern.


To unlock the screen using a screen unlock pattern

- 1 Press  or  to activate the phone.
- 2 Drag your finger along the path and then draw your screen unlock pattern.

To change the screen unlock pattern

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security > Change unlock pattern**.
- 3 Follow the instructions in your phone.

To disable the screen unlock pattern

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > Location & security**.
- 3 Unmark the **Require pattern** checkbox.
- 4 Draw your screen lock pattern.

Updating your phone

You can update your phone to the most recent software for optimal performance and to get the latest enhancements. Updates can be downloaded wirelessly directly from your phone via the Internet by using a 2G/3G mobile data connection, or by using a Wi-Fi® network connection. By connecting your phone to a computer with a USB cable, you can also download updates from the PC Companion application.

- ! When you are using a 2G/3G mobile data connection to connect to Internet from your phone, data transmission charges may apply. Contact your network operator for more information.
- ! Make sure you back up and save all data contained in your phone before you start updating the phone.

Updating your phone wirelessly


To download software updates wirelessly

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings > About phone > Software update**.
- 3 Tap **Update now**. Follow the on-screen instructions to update your phone.

Updating your phone using a USB cable

You can update your phone using a USB cable with the PC Companion application. The PC Companion application is available when you connect your phone to a computer with a USB cable. See *PC Companion* on page 68 for more information on how to start PC Companion.

To download software updates using a USB cable

-  Do not disconnect the USB cable when updating your phone as this may corrupt the content. Make sure that the hardware is safely removed from your computer when you are finished.
- 1 Connect your phone to a computer using a USB cable. If it is the first time you start PC Companion you have to install it before moving on to the next step. Follow the on-screen instructions in the menu displayed in your phone to install PC Companion.
 - 2 Drag the status bar downwards and tap **USB connected > Mount**.
 - 3 **Computer:** Wait a few seconds for PC Companion to start. You can also start it manually from the start menu of your computer. Click **Support Zone** and follow the on-screen instructions to update your phone.
- ! While using PC Companion, you will also be automatically notified whenever there are available software updates for your phone.

Troubleshooting

Common questions

My phone is not working as expected


If you experience problems with your phone, check these tips before you try anything else:

- Restart your phone.
- Remove and re-insert the battery and SIM card. Then restart your phone.
- Update your phone. Updating your phone ensures optimal performance and provides the latest enhancements. See *Updating your phone* on page 93 for more information.
- Reset your phone.

 Be patient while resetting your phone. Restarting the phone during a reset procedure may damage the phone permanently.

To force stop an application


- When a popup window tells you that an application is not responding, tap **Force stop**.

 If you do not want to force stop an application, you can wait for it to respond by tapping **Cancel**.

Resetting the phone

Resetting the phone deletes all data, including downloaded applications, and resets the phone back to its initial state, the state before you turned on the phone for the first time. Make sure to back up important data you have on the phone before you reset the phone.

To reset the phone

- 1 From the **Home screen**, drag  upwards.
- 2 Find and tap **Settings** > **SD card & phone storage settings** > **Factory data reset** > **Reset phone**.
- 3 Tap **Erase everything**.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 9.

No battery charging icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

I cannot transfer content between my phone and the computer, when using a USB cable

The software or the USB drivers have not been properly installed. Go to www.sonyericsson.com/support for more detailed installation instructions and troubleshooting sections.

I cannot use Internet-based services

Make sure your subscription covers data downloads and that the Internet settings in your phone are correct. See *Internet and messaging settings* on page 25 for more information on how to enable data traffic, data roaming, and download Internet settings. Contact your network operator for more information about your subscription settings.

Error messages

No network coverage

- Your phone is in flight mode. Make sure flight mode is off.
- Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.
- The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. In this case, contact the nearest Sony Ericsson service center.

Emergency calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 28 for more information.

SIM card is locked.

You have entered your PIN incorrectly 3 times in a row. To unlock the phone, you need the PUK provided by your operator.

SIM card is PUK-locked.

You have entered your PUK (Personal Unblocking Key) incorrectly 10 times in a row. Please contact your service provider.

Legal information

Sony Ericsson U20i/U20a

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2010

Publication number: 1238-6569.3

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any third-party websites or offered services.

Remove the battery to see regulatory information such as the CE mark.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity and Liquid Energy logos, Creatouch, PlayNow, Xperia, Timescape and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Sony and "make.believe" are trademarks or registered trademarks of Sony Corporation.

Media Go is a trademark or registered trademark of Sony Electronics Inc.

microSD is a trademark or registered trademark of the SD Card Association.

PictBridge is a trademark or registered trademark of Canon Kabushiki Kaisha Corporation.

Twitter is a trademark or a registered trademark of Twitter, Inc.

Moxier is a trademark or a registered trademark of Emtrance Technologies USA, Inc.

MobiSystems is a trademark or a registered trademark of Mobile Systems, Inc.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

3GPP is a trademark or a registered trademark of ETSI.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

Google, Google Maps™, Gmail, YouTube, the YouTube logo, Picasa and Android are trademarks or registered trademarks of Google, Inc.

PLAYSTATION is a trademark or registered trademark of Sony Computer Entertainment, Inc.

Wisepilot is a trademark of Appello Systems AB and its products are the property of Appello Systems AB and are protected against unauthorized use by trademark laws.

Yahoo! and Flickr are trademarks or registered trademarks of Yahoo! Inc.

Facebook is a trademark or registered trademark of Facebook, Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Dataviz and RoadsSync are trademarks or registered trademarks of Dataviz, Inc.

NeoReader is a trademark or registered trademark of NeoMedia Technologies Inc.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, Windows, Outlook, Windows Vista, Windows Server, Explorer, Windows Media and ActiveSync are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

All illustrations are for illustration only and may not accurately depict the actual phone.

Index

locks	19	Creataouch™ application	11
screen lock	19	cropping	
		photos	88
A		D	
activating the screen	7	data protection	92
adjusting volume	76	data traffic	26
alarm	55	date	
album	87	format	23
Android market	48	deleting	
answering service	29	an alarm	55
applications		tracks	76
managing	50	videos	81
overview	16	widget	10
audio		download	
adjusting volume	76	applications and content	48
playing	75	Internet settings	25
playing music in random order	77	driving directions	90
podcasts	78	DRM	52
audio books	75	settings	52
B		E	
backing up content	73	email	39
battery	9	more than one account	40
Bluetooth™ wireless technology	70	emergency numbers	28
brightness	24	events	
<i>browsing - see web browser</i>		calendar	53
C		exporting contacts to SIM card	35
calendar	53	F	
create an event	54	Facebook™	44
synchronising	55	logging in to	44, 47
calling	21	status update	45
calls	28, 31	favourites	
diverting	30	moving between in the radio	80
emergency	28	removing radio channels as	80
forwarding	30	saving radio channels as	80
log	29	films	81
missed	29	<i>films - see videos</i>	
multiple	29	fixed dialling	31
settings	30	FM radio	
waiting	29	favourites	80
camera	83, 84	G	
album	87	geotagging	
closing	83	of photos	84
geotagging	84	geotags	84
keys	83	Gmail™	42
recording videos	86	Google Maps™	89
scenes	85	Google Sync™ syncing service	59
taking photos	84	Google Talk™	43
video	86	Google™ account setup	42
viewfinder	83	GPS	89
viewing photos	84	H	
viewing videos	86	handsfree	21
caps lock	21	using	21
changing tracks	76	Home screen	10
charging	9	I	
chat	43	importing SIM contacts	32
conference calls	30	infinite button	78
contacts	32	music	78
exporting to SIM card	35	input method	21
favourite	36	instant messaging	43
importing from SIM card	32	Internet	
linking to web service contacts	45	settings	25
picture	36, 88	web browser	64
sending	36		
sharing	36		
copyright protection	52		

K		phonebook	32
keyboard	21	photo sharing services	
		uploading to	88
L		photos	84, 87, 88
language	24	add to contact	36
LCD backlight control	24	adding the geographical position	84
location services	89	cropping	88
locking the screen	7	deleting	87
locks		sharing	84, 88
pattern	92	taking	83, 84
screen unlock pattern	92	taking using scenes	85
		uploading to web album	88
M		using as a contact picture	88
mail See email		using as wallpaper	88
Media Go™	69	viewing	84, 87
messages		viewing on a map	84
in Timescape™	44	zooming in photo viewer	87
multimedia	37	picture messages	37
picture	37	PIN	20, 91
settings	25	playing	
text	37	music	75
Microsoft® Exchange Server synchronisation	59	videos recorded using the camera	87
MMS	37	playlists	
recording videos suitable for	86	copying to memory card	77
settings	25	creating	77
multimedia messages	37	playing your own	77
music	21, 75, 79	smart (auto-generated)	77
adjusting volume	76	top tracks	77
audio books	75	podcasts	78
browsing	76	playing	78
changing tracks	76	power	7
deleting	76	presets	
exploring related content	78	removing radio channels as	80
infinite button	78	saving radio channels as	80
my playlists	77	protecting data	92
pausing a track	76	PUK	91
player overview	75	purchasing	
playing	75	music	78
playing in random order	77		
podcasts	75, 78	R	
related media content	78	radio	79
sharing	76, 77	favourites	80
using handsfree	21	listening through the speaker	80
music mini player	10	moving between channels	79
music player	75, 76	navigating	79
deleting tracks	76	opening	79
infinite button	78	overview	79
minimising	76	searching for channels	80
playlists	77	selecting channel	79
playlists made by you	77	receiving items using Bluetooth™	71
podcasts	78	recently used applications window	10, 17
smart playlists	77	recording videos	86
top tracks	77	reset	94
using in background	76	restoring content	73
		ringtone	55
N			
navigation	10, 17	S	
NeoReader™ application	56	scenes	
notification		in camera	85
panel	14	settings	85
ringtone	23	screen	24
		lock	91
O		lock pattern	91
orientation	24	searching	
overview		music using TrackID™ technology	78
music player	75	track information	78
P		sending	84, 88
pausing a track	76	contacts	36
personal information	32	photos and videos	88
phone		sending items using Bluetooth™	71
update	93	settings	8

call	30	V	
Internet	25	vibration	23, 55
messaging	25	video camera	83, 86
MMS	25	video player	
Timescape™	46	browsing videos	81
setup guide	8	browsing videos	87
sharing		exiting	81
music	76, 77	pausing a video	81
photos	84	playing videos	81
photos and videos	88	videos	81, 88
videos	82	adjusting volume	81
shuffle music	77	browsing	81, 87
silent mode	21	deleting	81, 87
SIM card	91	fast forward and rewind	81
exporting contacts to	35	pausing	81
importing contacts from	32	playing	81, 87
inserting	7	recorded by the camera	87
smart playlists		recording	83, 86
playing	77	recording for MMS	86
SMS	37	sending	82
social networking services	44	sharing	82, 88
social web services		viewing	86
link phone contact to	45	watching on YouTube™	82
Sony Ericsson Sync	58	viewfinder	83
SOS <i>See emergency numbers</i>		viewing	
status bar	12	photos	84
still camera	83, 84	videos recorded using the camera	86
scenes	85	voicemail	29
streaming		volume	
using YouTube™	82	adjusting video	81
switching		key	21
cameras	83	W	
symbols	21	wallpaper	
synchronising	58	using photo as	88
Google Sync™ syncing service	59	Wallpapers	
Sony Ericsson Sync	58	animated	11
Synchronising		web browser	64
Microsoft® Exchange Server	59	managing bookmarks	65
RoadSync™	59	settings	67
T		toolbar	64
telephony <i>See calls</i>		Wi-Fi®	61
text messages	37	widget	
tile	44, 45	Timescape™	47
time	23	WisePilot™	90
time management	53	Y	
Timescape™	44	YouTube™	82
screen overview	44	Z	
settings	46	zooming	
tile icons	45	photos in photo viewer	87
widget	47		
top tracks			
playing	77		
TrackID™ technology	78		
buying a track	78		
opening	78		
searching for track information	78		
using results	78		
troubleshooting	94		
turning off	7		
turning on	7		
Twitter™	44		
logging in to	44, 47		
status update	45		
U			
updating			
status on Facebook™ or Twitter™	45		
updating phone	93		
USB connection	68		